

Revised October 27, 2000

MAINTENANCE SCHEDULE

NORMAL SERVICE INTERVALS

5,000 miles*	A
7,500 miles	A
15,000 miles	A
22,500 miles	A
30,000 miles	A B
37,500 miles	A
45,000 miles	A D
52,500 miles	A
60,000 miles	A B C
67,500 miles	A
75,000 miles	A D
82,500 miles	A
90,000 miles	E
95,000 miles	A B

 **Tip:** For additional service intervals and complete details, see Owner's Manual

Maintenance notes:

Rotate tires every 3,750 miles

- A.** Change: Engine oil/replace oil filter
- B.** Inspect: Drive belts, fuel lines and hoses, brake lines and hoses, disc and drum brakes, steering operation and linkages, front suspension ball joints, driveshaft, dust boots, chassis and body bolts, exhaust system and heat shields
- Replace: Air filter, fuel filter
- C.** Inspect: Engine valve clearance, hoses and tubes for emission system
- D.** Change: Engine coolant
- E.** Replace: Engine timing belt (2.0L)[†]

* Special operating conditions
† See Owner's Manual

This Quick Tips® guide is provided by MazdaTown to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our

Customer Assistance Center at 1-800-222-5500

Monday through Friday,
9 am-4:45 pm, Pacific
9 am-5:45 pm, Eastern/Central



©2000 Calcar. Quick Tips® is a trademark of Calcar, made in USA. 7/00 60M GL. Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations.

2001




TRIBUTE

 
Quick Tips®

Reference
Guide for
Controls and
Functions



Revised October 27, 2000

DRIVER'S VIEW

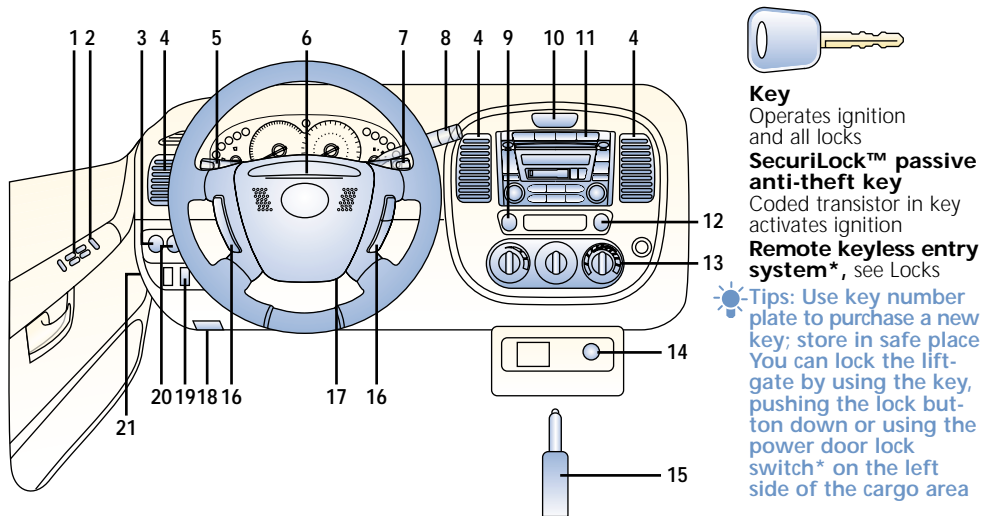

- | | | |
|---|--|---|
| 1. Power window switches,
see Switches | 8. Gearshift lever (A/T), | 16. Cruise control*,
see Driver Controls |
| 2. Power door locks,
see Locks | 9. Rear window defogger
Press on/off; shuts off with ignition or after 10 minutes | 17. Tilt steering wheel lever
Push release lever down, tilt wheel up or down, pull lever up to lock |
| 3. Fog lamp switch*
Press on/off; on with low beams only | 10. Hazard warning switch
Push on/off | 18. Hood release handle
Pull to open partially |
| 4. Air vents | 11. Audio system,
see Audio Systems | 19. Instrument panel lighting
To brighten/dim: Rotate thumb-wheel up/down |
| 5. Turn signals/lighting control lever,
see Driver Controls | 12. 4x4 control*,
see Transmission | 20. Dual power mirrors,
see Switches |
| 6. Horn/Air bag | 13. Climate control panel,
see Climate Controls | 21. Fuse panel |
| 7. Wiper/washer control lever,
see Driver Controls | 14. Auxiliary power point | |
| | 15. Parking brake lever | |

*Denotes optional equipment

 
Always check the Owner's Manual for more operating information and safety features

Driver's
View


Revised October 27, 2000

Instrument
Cluster

 
 
 


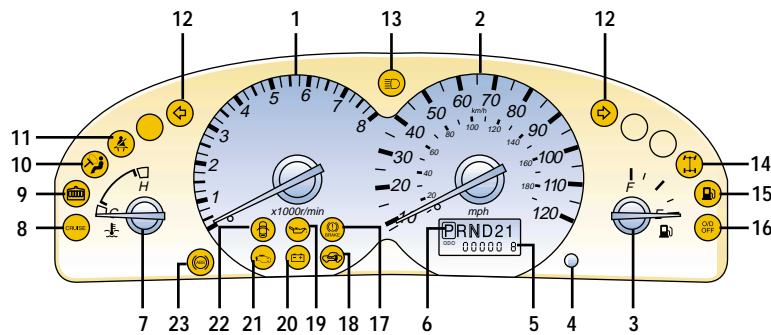

 
 
 



 


INSTRUMENT CLUSTER



GAUGES

1. **Tachometer**
 2. **Speedometer**
 3. **Fuel gauge**
15-gallon/57-liter tank (2.0 I4),
16-gallon/61-liter tank (3.0 V6)
 4. **Odometer/trip odometer selector**
Press to toggle between
odometer and trip odometer
-  **Tip:** Press and hold for more than 1 second to reset trip odometer
5. **Odometer**
 6. **Gearshift indicator (A/T)**
 7. **Coolant temperature gauge**
If above normal range, stop
vehicle and turn off engine,
check coolant level when safe

WARNING LIGHTS

8.  **CRUISE** Cruise control on*
9.  **Coolant level low***
10.  **Air bag readiness**
Air bag malfunction, dealer
inspection required
11.  **Always fasten
safety belts**
12.  **Turn signals/hazard
warning on**
13.  **High beams on**
14.  **4 wheel drive
locked***, see Transmission
15.  **Low fuel**
Refuel as soon as possible
16.  **Overdrive off
indicator***, see Transmission
17.  **Brake system**
Parking brake on/low
brake fluid
18.  **Antitheft on***
19.  **Engine oil pressure
warning light**
20.  **Charging system
warning light**
Dealer inspection required
21.  **Check engine**
Dealer inspection required
22.  **Door ajar**
23.  **Anti-lock Brake
System (ABS)***
ABS malfunction, normal
brakes only, dealer
inspection required

 
*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Instrument
Cluster

Driver Controls

DRIVER CONTROLS

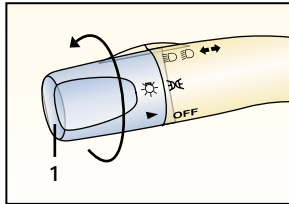

Turn signal/lighting control lever

OFF = Lights off

 
☞☞ = Tail, side marker, instrument, license plate and parking lights on: Rotate knob (1) to first notch

☞☞☞ = Tail, parking, instrument, license plate and head-lights on: Rotate knob (1) to second notch

High beams on/off: Push lever forward to detent/pull back to detent

To flash high beams: Pull lever back slightly and release

Turn signals right/left: Move lever up/down

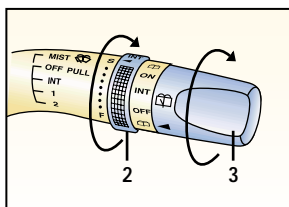

Wiper/washer control lever

Ignition switch must be in ACC or ON position

To activate interval wipers: Push lever down to first detent and rotate knob (2) to desired speed

To activate wiper normal or low speed: Push down to second detent

To activate high speed: Push lever down to third detent

 
To activate washer: Pull lever back

To activate mist: Push lever up and release

To activate rear interval wiper: Rotate knob (3) up to INT

To activate rear normal speed wipe: Rotate knob (3) up to ON

To activate rear wash: Rotate knob (3) to and release

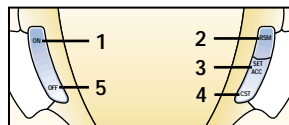

Cruise control*

Operates above 30 mph
Press and release ON (1)

To set speed: Press and release SET ACC (3) at desired speed; hold (3) to accelerate

 
To decelerate: Press and hold CST (4), release at desired speed; or tap brake pedal, press and release (3) at desired speed

Incremental deceleration: Press and release (4), each tap = minus 1 mph

Incremental acceleration: Press and release (3), each tap = plus 1 mph

To cancel: Tap brake/clutch* pedal or press OFF button (5)

Return to preset speed (after braking): Press and release RSM button (2)

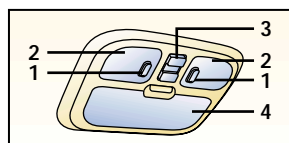

Overhead console*

1. Map/reading light switches

To turn on/off: Press

2. Map/reading light

3. Moonroof switch*
To open: Press and hold rear of switch

To close: Press and hold front of switch

 
To tilt (panel closed): Press and hold front/rear of switch to open/close

4. Storage compartment*

To open: Press button, then pull to full open position

5. Garage door opener button/compartment*

See Owner's Manual for installation

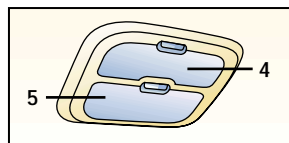

*Denotes optional equipment

 
Always check the Owner's Manual for more operating information and safety features

Overhead Console

Revised October 27, 2000

Switches/
Locks

SWITCHES/LOCKS

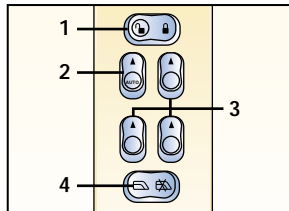**Manual door locks**
Lock tab

To lock: Press lock
To unlock front doors: Pull inside door handle

To unlock rear doors: Press unlock

Power door locks**1. Master front door lock switches**

To lock/unlock all doors: Press / on driver's door switch

To lock doors without key:
With door open, press on driver's door switch, exit vehicle, close doors
Manual locks override power locks

Power windows

Operate only with ignition in ACC or ON position
All windows may be controlled from driver's door; each passenger door has a separate switch

2. Driver's window

 
One-touch-down: Press rear of switch firmly and release, window goes down all the way, tap switch again to stop; press and hold for normal operation; press and hold front of switch to close

3. Passenger window switches

Press rear/front of switch to open/close

 
4. Power window lockout switch

Press right side of switch: only driver's switches control windows; press left side of switch and passenger controls function again

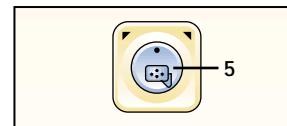**5. Dual power mirrors**

To adjust left/right mirror: Rotate control switch left/right, tilt in direction of desired mirror movement

Tips: To lock mirrors in place, move control switch to center position

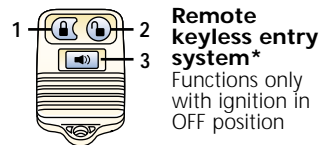**Remote keyless entry system***

Functions only with ignition in OFF position

1. Lock

Press button; pressing again within 3 seconds causes doors to relock, horn to beep

2. Unlock

 
Press to open driver's door; press again within 3 seconds to open other doors

3. Panic alarm

Press horn sounds, press again to stop, or turn ignition to ON or ACC position

Illuminated entry system*

Press UNLOCK or PANIC button on remote entry transmitter, interior lights come on; lights turn off after 25 seconds or with ignition in ON or ACC position

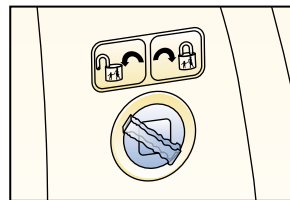**Childproof locks**

Located at the edge of rear doors

To activate: Rotate knob to

 
To cancel: Rotate knob to

Liftgate

To lock/unlock: Put key in lock and turn counterclockwise/clockwise; or press power door lock button

To open liftgate window: Pull up on right side handle

To open liftgate: Pull up on left side handle

**Fuel pump shutoff**

Disables fuel pump after a substantial jolt; located on right side of passenger compartment behind A-pillar lower trim panel (below dash)

To reset: Press down top of exposed red reset button

WARNING: Do not reset shutoff switch if you see or smell fuel

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Locks

Revised October 27, 2000

Seats

SEATS

Manual controls**1. Fore/aft adjustment**

Raise lever and hold, slide seat, release lever

 
2. Seat back angle/tilt slide seats

To adjust seat back: Lift and hold lever, lean forward or backward to tilt seat, release lever

To slide unoccupied seat: Lift lever to unlock, fold seat back down and slide seat forward

To lock seat: Move to desired position and raise seat back to upright position

⚠ WARNINGS: Always wear your safety belt and properly secure children 12 and under in the rear seat
Air bag is supplemental and does not replace safety belt usage
Do not adjust seat while driving

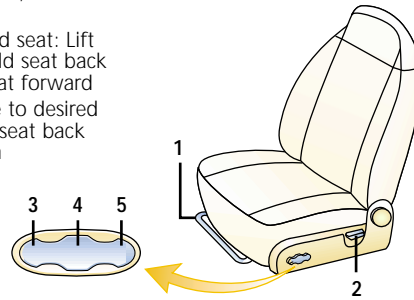**Power driver's seat*****3. Raise/lower front of seat**

Pull/push front of switch up/down

4. Fore/aft adjustment

Slide entire switch horizontally

Raise/lower seat cushion

Pull/push entire switch vertically

 
5. Raise/lower rear of seat

Pull/push back of switch up/down

⚡ Tip: Side-impact air bags* deploy from outboard side of driver and front passenger seat backs

Folding rear seat,
see Owner's Manual

*Denotes optional equipment

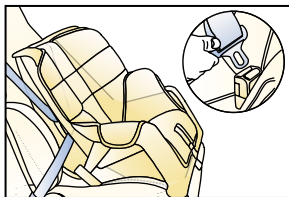**Child safety seat**

To install in rear outboard passenger seat positions using dual-locking mode retractor safety belts; see Owner's Manual for proper installation and seat tether instructions

Rear seat child seat anchors

Anchors located on rear seat cushion for securing child seat (see Owner's Manual)

⚠ WARNINGS: Children less than 4 years old and under 40 pounds should always use a child safety seat
Never place rear-facing child-restraint seat in front of any air bag, air bags can kill or injure a child; if a forward-facing child-restraint seat must be used in front seat, move seat completely back

Dual locking mode lap/shoulder belt retractor

 
(front passenger and rear outboard belts only)

Emergency locking mode: Belt locks only on hard braking/cornering or impacts of about 5 mph or higher

Automatic locking mode must be used when installing child safety seat

To activate: Pull webbing fully out of retractor until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow webbing to retract fully; for complete details see Owner's Manual

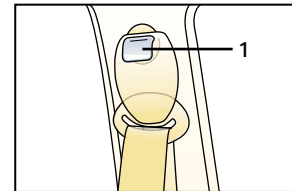**Front seat shoulder belt height adjustment**

To raise/lower belt: Slide up/ push release button (1) and slide down

⚠ WARNING: Make sure adjuster locks in one of its positions

Always check the Owner's Manual for more operating information and safety features

Seats

Revised October 27, 2000





Climate Controls

CLIMATE CONTROLS

1. Fan control

 
To increase speed and flow:
Rotate knob clockwise

2. Air flow selections

-  = air to dash
-  = air to dash and floor
- OFF = system off, no air flow
-  = air to floor
-  = air to floor and windshield
-  = defrost, air to windshield

3. Temperature selection


Cooler/warmer = rotate knob
counterclockwise/clockwise

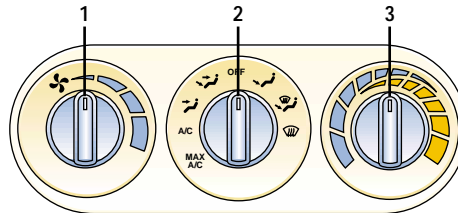

**Air conditioning system**

MAX A/C = cooling with inside air, air to dash only

 
A/C = cooling with outside air, air to dash only

Control positions for maximum defrost

Fan to maximum, temperature to maximum hot, air flow selector knob to 

 **Tips:** To prevent moisture buildup, never drive with system off
To help prevent windshield fogging in humid weather, select DEF  before starting engine

*Denotes optional equipment

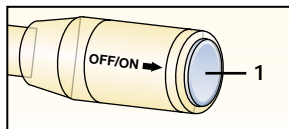**Automatic transmission***

Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key

P = Park

To move gearshift from Park: You must press firmly on the brake pedal and the ignition must be in the ON position

R = Reverse


Never engage Reverse when vehicle is moving

N = Neutral

No gear is engaged; vehicle can roll freely, even on a slight incline, unless the brakes are applied

D (Overdrive)

For normal driving: Transmission shifts through four forward gears

 **Tip:** Torque converter lock-up improves fuel economy and can feel like an additional gear

D (Overdrive Off)

 
Press the overdrive switch (1) to disengage overdrive; an indicator light on the instrument panel will illuminate

2 = Second

Place the gearshift lever in second when accelerating on slippery roads or to provide additional engine braking on downgrades

 
1 = First

Provides maximum engine braking on steep downgrades

**Manual transmission**

Depress clutch pedal completely to start engine and change gears

Stop vehicle completely before shifting into reverse

**4X4 system***

AUTO = Four-wheel drive

Power at normal speed to front/rear axles as required for traction, 4X4 light off

LOCK = Full time power to front/rear axles, 4X4 light on

To shift from 4X4 AUTO to 4X4 LOCK (any forward speed): Press switch

To shift from 4X4 LOCK to 4X4 AUTO high (any forward speed): Press switch

 
Always check the Owner's Manual for more operating information and safety features

Transmission

Revised October 27, 2000

Audio
System

RADIO/COMPACT DISC

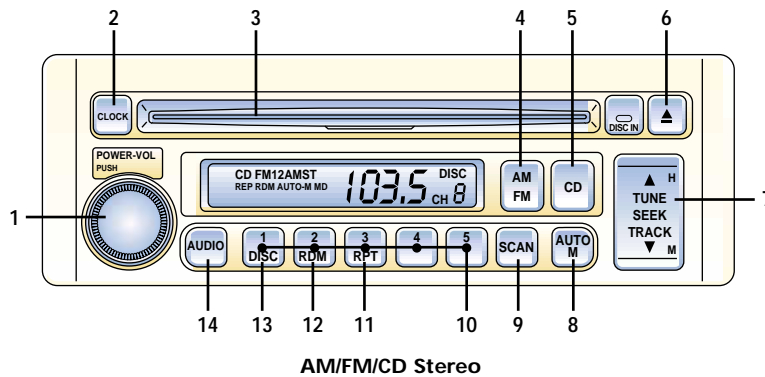

AM/FM/CD Stereo

1. Power/Volume

Press to turn on/off; turn clockwise/counterclockwise to increase/decrease volume

2. Clock

To set: Press CLOCK and hold until beep is heard (time will flash), press (7) up/down to advance hours/minutes, press CLOCK again to set time

3. CD slot**4. AM/FM**

Press to select AM/FM1/FM2 frequency band

5. CD

Press to play CD

6. Eject

Press to eject CD; radio resumes playing

7. Tune/Seek/Track

Tune: Tap ▲ / ▼ to change frequency up/down
Seek: Press ▲ / ▼ until beep is heard, tunes to next listenable station up/down
CD: Tap ▲ / ▼ to select next/previous track
Press and hold ▲ / ▼ to fast forward/rewind

8. Auto memory tuning

Press to set first 5 strong stations into AM, FM1 or FM2 memory buttons (10); press again for original presets

9. Scan

Press to briefly sample next listenable selections, press again to stop; functions in all modes

10. Memory preset buttons

To set: Tune to station, press and hold until beep is heard

11. Repeat

Press to repeat current CD selection, press again to cancel

12. Random


Press to play disc tracks in random order

13. Disc

Disc select (used only with CD changer*)

14. Audio

Press repeatedly until TREB, BASS, FADE, BAL or VOL appears in display, turn (1) clockwise/counterclockwise to increase/decrease selected function

 **Tip: Volume selected automatically after 5 seconds**

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Audio
System

Revised October 27, 2000

Audio System

RADIO/CASSETTE/COMPACT DISC

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

2. Cassette door**3. Tune/Seek/Disk**

 
Radio: Press ▲ / ▼ to select frequency up/down
Press ▲ / ▼ and hold until beep is heard, tunes to next listenable station up/down

CD: Press ▲ / ▼ to select next/previous disc in CD changer

4. Load

Single CD loading: Press button; WAIT will appear, when IN appears and CD door opens; load CD

Multiple CD loading: Press and hold LOAD until beep is heard; when IN is displayed load CD; when IN displays again load next CD

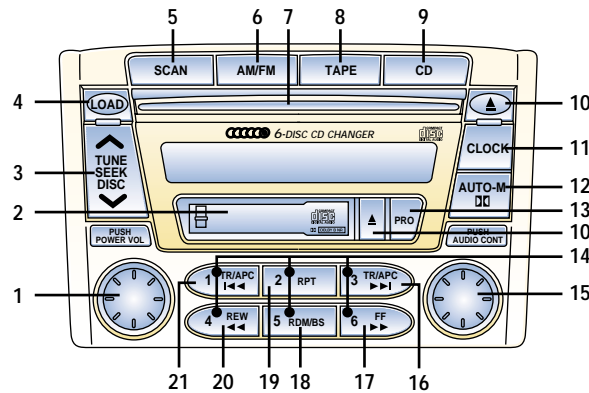

AM/FM/Cassette Tape/CD Player/Changer*

Tip: Clean cassette mechanism after 10-12 hours or less of use with Cassette Cleaning Cartridge

5. Scan

Press to briefly sample next listenable selections, press again to cancel; functions in all modes

6. AM/FM

Press to alternate among AM/FM1/FM2 frequency bands

7. CD slot

Press to play tape or stop a tape during REW/FF

9. CD

Press to play CD

10. Eject: Press to eject tape/CD

Tip: Press and hold (9) until beep to remove all discs

11. Clock

To set: Press (11) and hold until it beeps and then press (3) to adjust hours ▲ /minutes ▼; press (11) again to set

12. Auto-memory

Automatically selects up to 6 strong radio stations

To set: Select AM/FM; press and hold Auto-M until beep is heard; to deactivate, press Auto-M again

13. PRO

Press to play alternate side of tape

14. Memory preset buttons 1-6

To set: Press and hold until beep is heard

15. Audio control

Adjust BASS/TREBLE/FADE/BALANCE: Press AUDIO control (15), 1/2/3/4 times; rotate (15) right/left to increase/decrease BASS/ TREBLE output and front/rear, left/right speaker FADE/BALANCE

16. TR/APC ►►►

Press to automatically advance to next CD track

17. FF ►►

Press to fast forward tape

18. RDM/BS

Press for random CD selection; press again to disengage

19. RPT

Press to replay current CD selection

20. Rewind ◀◀

Press to rewind tape

21. TR/APC ◀◀◀

Press to automatically replay CD track

*Denotes optional equipment

 
Always check the Owner's Manual for more operating information and safety features

Audio System

Revised October 27, 2000

 
Under Hood

UNDER HOOD

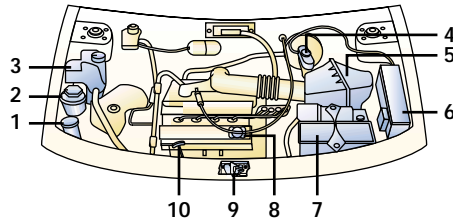

2.0L DOHC I4 Zetec Engine

- 1. Windshield washer reservoir**
Fill with windshield washer fluid, not water
- 2. Power steering fluid reservoir**, Check with engine off and at normal temperature; fluid level should be within MIN and MAX lines
- 3. Engine coolant reservoir**
Level should be at cold fill level or within the cold fill range when cold

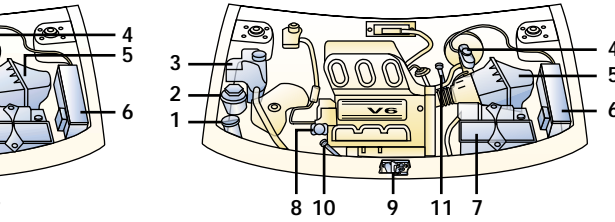

3.0L DOHC V6 Duratec Engine

- 4. Brake/clutch fluid reservoir**
Fill to MAX mark with DOT 3 fluid, check with cap on
- 5. Air filter**
- 6. Power distribution box**
- 7. Battery**
- 8. Engine oil filler cap**
Use SAE 5W-20 oil
- 9. Hood latch**
- 10. Engine oil dipstick**
Check with engine off and at normal temperature; oil level should be within crosshatched area of dipstick
- 11. Automatic transmission fluid dipstick***
Check with engine on at operating temperature; fluid level should be within crosshatched area

Break-in period

First 1,000 miles: Avoid heavy repeated brake use; avoid full throttle, rapid acceleration or kick-down of transmission; drive at varying road and engine speeds
Do not tow a trailer for first 500 miles

Do not use special break-in oils

Tip: Follow the same procedures with newly overhauled engine or when brakes are replaced

Anti-lock Braking System (ABS)*

ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up
You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the

ABS is functioning properly; increase pressure on pedal for maximum braking

Tip: Maintain constant pressure on the brake pedal
Do not pump the brakes

Tire economy and tips

Check pressure monthly when tires are cold
See Owner's Manual for rotation schedule and chart

Tire pressure

Decal on driver's door latch pillar provides tire size and pressure information

Snow chains

 
Use Mazda approved cables and install on front tires only

Spare tire

Stored under cargo area cover

Jack handle

Stored underneath cargo cover

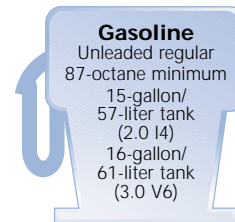

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features