 


## Windshield Defogging

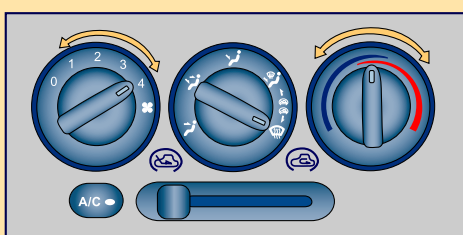

### To remove fog or frost on the windshield:

- Set the airflow control to the defrost (☸) position. (The A/C will turn on automatically and "Fresh" mode will be activated.)
- Set the temperature control to the desired setting.
- Set the fan speed control to position "3" or "4"




## Rear Window Wiper (3-door)




1. When the "☸" position is depressed, the rear window wiper starts to operate continuously.
2. Depressing the "PUSH" button will operate the rear wiper several times after the washer fluid sprays onto the rear window.
3. When the "INT" position is depressed, the interval between wipes is approximately five seconds.

## Seats

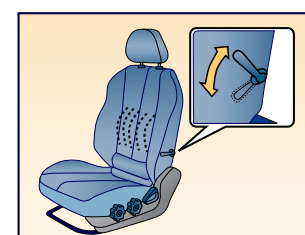

### Lumbar Support Control, Driver's seat only (If Installed)

To adjust the lumbar support, move the lever on the outboard or left side of the seat.

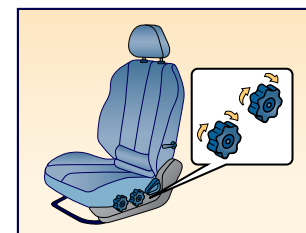


### Seat Cushion Height Adjustment, Driver's Seat only (If Installed)


- To raise or lower the front part of the seat cushion, turn the front knob forward or rearward.
- To raise or lower the rear part of the seat cushion, turn the rear knob forward or rearward.

## Windshield Wiper


### Wipe/Wash

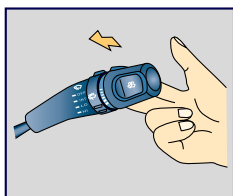

### Wiper Speed

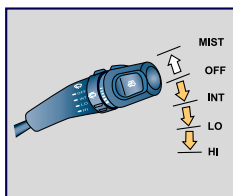


### Intermittent

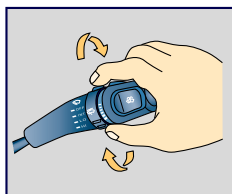

**NOTE:** You can lengthen the life of your wiper blades by gently wiping the rubber inserts with an alcohol soaked rag to remove grime and road debris.




## Power Window Lock Switch

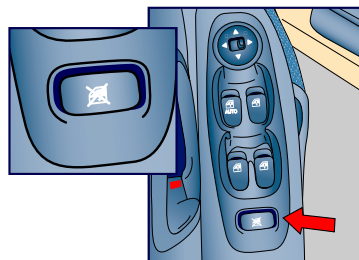


Press the lock switch to deactivate the passenger power window switches (4-door only).

## Bottle Holder (if equipped)

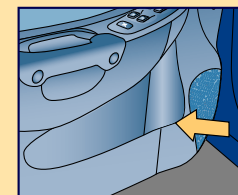


The bottle holder is located on the forward portion of the front door panels on some models and may be used for holding beverage bottles or cans.

## Fuel Cap

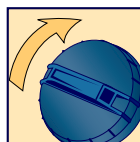

After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.

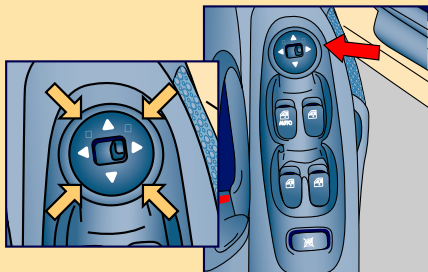

1. Move the select switch to the right or left to activate the corresponding door mirror.
2. Adjust the mirror angle by depressing the appropriate perimeter switch as illustrated.
3. Place the selecting switch in the middle position to deactivate the perimeter switch.

## Tire Inflation

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label located in the glove box for correct pressure.

## Basic Safety Precaution

- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
- Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

## Detailed Information

- This Quick Reference Guide does not replace your vehicle's Owner's Manual.
- If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

	Normal Usage		Severe Usage	
Air cleaner filter	Replace	30K	Replace	More frequently
Automatic transaxle fluid and filter	Inspect Replace	15K 105K	Inspect Replace	30K
Brake pads, calipers and rotors	Inspect	15K	Inspect	More frequently
Driveshafts and boots	Inspect	15K	Inspect	7.5K
Engine oil and Filter	Replace	7.5K	Replace	3K
Manual Transaxle oil	Inspect	30K	Replace	60K
Rear brake drums/linings, parking brake	Inspect	30K	Inspect	More frequently
Timing belt	Inspect Replace	30K 60K	Inspect Replace	20K 40K
Brake fluid	Inspect	30K		
Brake hoses and lines	Inspect	15K		
Drive belt	Inspect	30K		
Fuel lines, fuel hoses and connections	Inspect	30K		
Fuel vapor hoses and fuel filler cap	Inspect	30K		
Power steering pump, belt and hoses	Inspect	30K		
Spark Plugs	Replace	30K		

All units are displayed in miles.

For additional service intervals, severe maintenance schedule, and complete details, see Owner's Manual.



### HYUNDAI ROADSIDE BENEFITS INCLUDE\*:

- Towing to the nearest Hyundai Dealership or authorized Service Facility if your vehicle is inoperable, including non-warrantable related tows such as accidents. Coverage period is 60 months/unlimited miles.
- Emergency Roadside Assistance.
- National Dealer Locator Service.
- Trip Interruption Benefit if Warrantable Mechanical Disablement occurs more than 150 miles from home. Limit to \$100/day, 3 day maximum. (800) 243-7766

\*Please refer to your Owner's Manual Kit for specific coverage and limitations.

2005 Quick Reference Guide

Accent

HYUNDAI