 



Manual Transmission

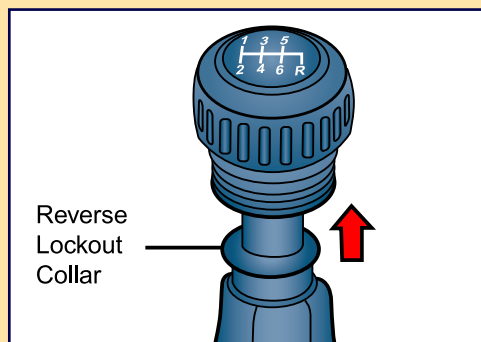


For 6-Speed manual transmission models (if equipped), lift collar tab to shift into reverse.

Refer to Owner's Manual (section 2) for detailed information.

 Cruise Control

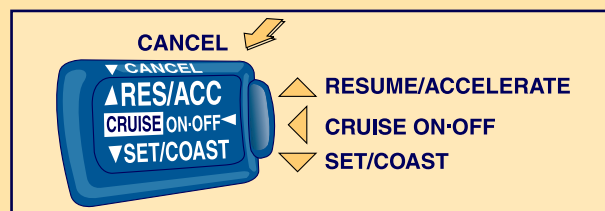

Fuel Cap

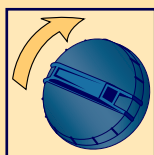


After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.

Tire Inflation

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label located on the driver side center pillar outer panel for correct pressure.

Automatic Transmission

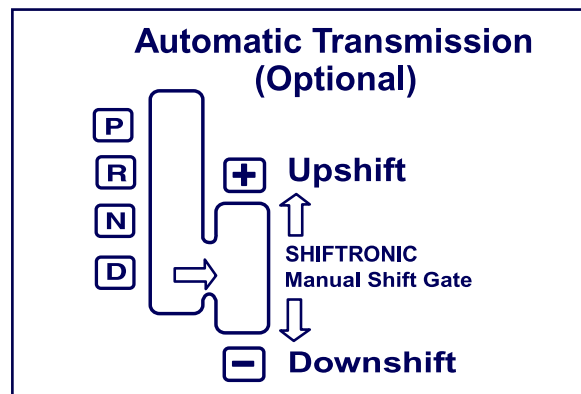

To select automatic mode, shift to **D**.

To select **SHIFTRONIC™** mode move the shift lever right to the manual shift gate from the D (Drive) position. The instrument cluster displays the selected forward gear.

Refer to the Owner's Manual (section 2) for detailed information.

Basic Safety Precautions

- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
- Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

Detailed Information

- This Quick Reference Guide does not replace your vehicle's Owner's Manual.
- If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

Maintenance

		Normal Usage	Severe Usage
Engine Oil and Filter	Replace	7.5K	Replace 3K
Brake Pads, Calipers and Rotors	Inspect	15K	Inspect More frequently
Driveshafts and Boots	Inspect	15K	Inspect 7.5K
Manual Transaxle Oil	Inspect	30K	Replace 60K
Rear Brake Drums/linings, Parking Brake	Inspect	30K	Inspect More frequently
Automatic Transaxle Fluid and Filter	Inspect Replace	15K 105K	Replace 30K
Air Cleaner Filter	Replace	30K	Replace More frequently
Air Conditioning Refrigerant	Inspect	15K	
Ball Joint, Upper Arm Ball Joint Power Steering Pump and Hoses	Inspect	15K	
Brake Fluid	Inspect	30K	
Brake Hoses and Lines	Inspect	30K	
Drive Belt (Alternator, Water Pump, Air Cond.)	Inspect	30K	
Exhaust Pipe and Muffler	Inspect	15K	
Fuel Lines, Fuel Hoses and Connections	Inspect	30K	
Fuel Vapor Hose and Fuel Filler Cap	Inspect	30K	
Power Steering Pump, belt, and hoses	Inspect	30K	
Steering Gear Box, Linkage & Boots/lower Arm	Inspect	15K	
Timing Belt	Inspect Replace	30K 60K	
Coolant	Replace	30K	
Spark Plugs			
Platinum Coated (2.0L CVVT)	Replace	60K	
Iridium Coated (2.0L SULEV)	Replace	100K	

All units are displayed in miles.

For additional service intervals, severe maintenance schedule, and complete details, see Owner's Manual.



HYUNDAI ROADSIDE BENEFITS INCLUDE*:

- Towing to the nearest Hyundai Dealership or authorized Service Facility if your vehicle is inoperable, including non-warrantable related tows such as accidents. Coverage period is 60 months/unlimited miles.
- Emergency Roadside Assistance.
- National Dealer Locator Service.
- Trip Interruption Benefit if Warrantable Mechanical Disablement occurs more than 150 miles from home. Limit to \$100/day, 3 day maximum. (800) 243-7766

*Please refer to your Owner's Manual Kit for specific coverage and limitations.

 
2005 Quick Reference Guide

TIBURON


HYUNDAI

Windshield Defogging

Manual A/C

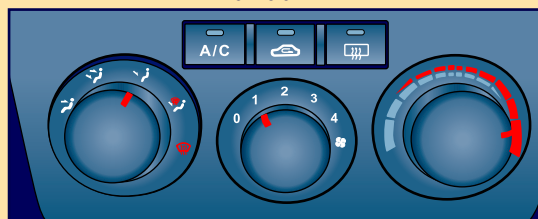


Automatic A/C

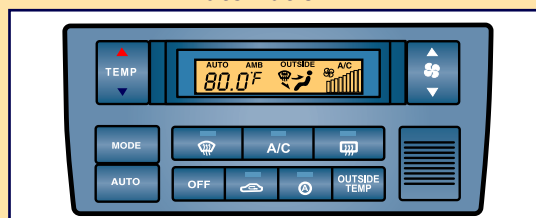

To remove fog or frost on the windshield:

- Set the airflow control to the defrost () position. (The A/C will turn on automatically and "Fresh" mode will be activated.)
- Set the temperature control to the desired setting
- Set the fan speed control to position "3" or "4".


Keyless Remote

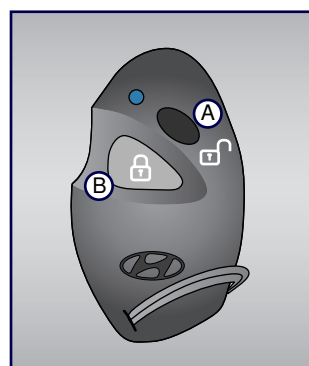

Keyless Remote and Locks (if equipped)


- Press **UNLOCK** on the transmitter to disarm and unlock the driver's door. Press **UNLOCK** again within 4 seconds to unlock all the doors.
- Press **LOCK** on the transmitter to lock all the doors and arm the alarm. Press **LOCK** again within 4 seconds to hear a confirmation chirp.

Height Adjustable Front Seat Shoulder Belt

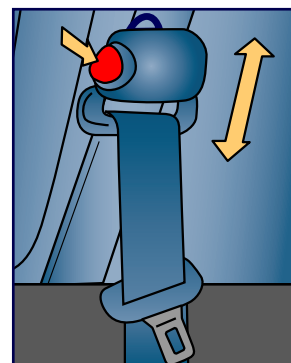


- Push anchor upwards to raise the height adjuster.
- Push anchor downward while pressing the height adjuster button to lower.

Seats

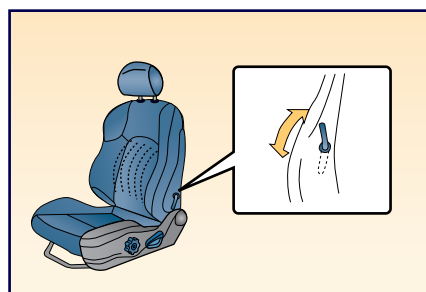

Lumbar Support:


To adjust the lumbar support, move the lever on the outboard or left side of the seat to the desired position.

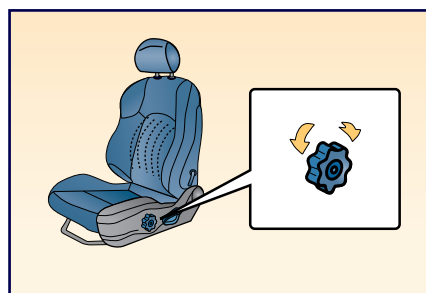

Seat Cushion Height Adjustment (Driver's Seat Only) (if installed):

To raise or lower the front part of the seat cushion, turn the knob forward or rearward.

 
Tilt Steering Wheel

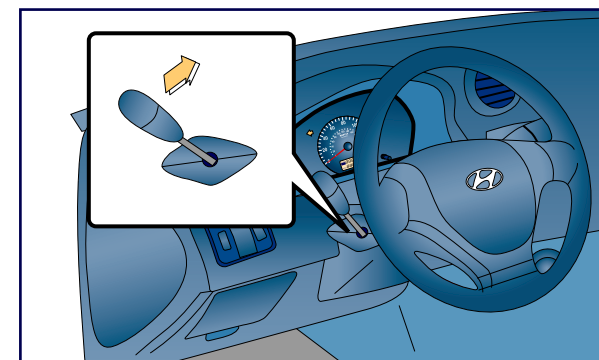

To adjust the steering wheel tilt, pull the lock lever and raise or lower the steering wheel to a comfortable position. Release the lock lever to maintain desired setting.

Note: Do not attempt to adjust the steering wheel while driving.

Mirrors

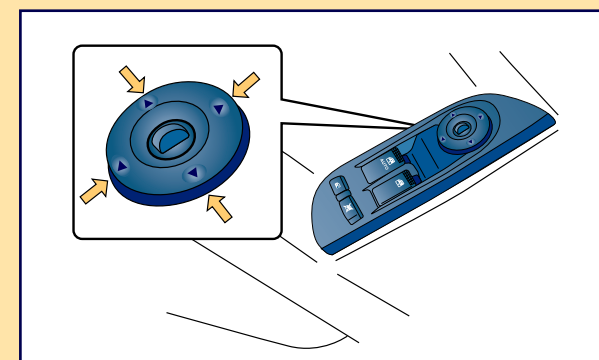


1. Move the select switch to the right or left to activate the corresponding door mirror.
2. Adjust the mirror angle by depressing the appropriate perimeter switch as illustrated.
3. Place the selecting switch in the middle position to deactivate the perimeter switch.

Note: The outside rearview mirror heaters work when the rear window defroster is turned on.

Windshield Wiper Washer

Wiper Modes

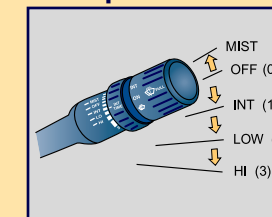


Move the right switch lever up or down to select the following wiper operation modes.


- (Up) Mist
- (0) OFF
- (1) Intermittent*
- (2) Low-speed
- (3) High-speed

* Adjuster barrel controls intermittent interval


Intermittent

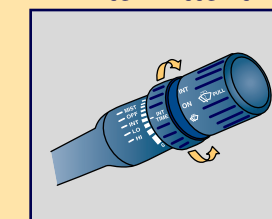

Windshield Washer

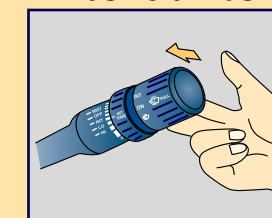

Power Window Lock

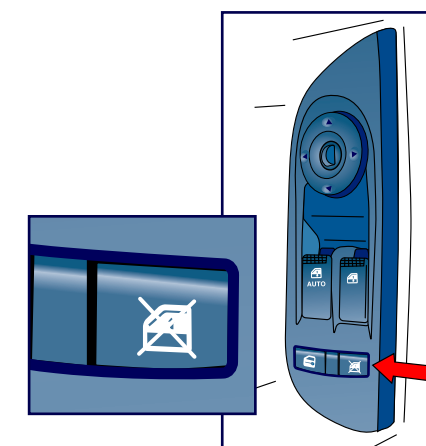

Pressing the lock switch deactivates all of the power window switches except for the driver's window.