 
 


Rear Seat Cup Holders

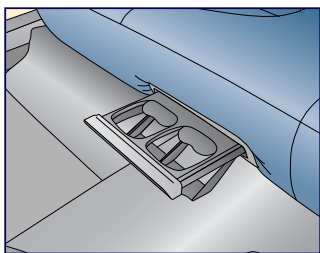


On 4-door models, the rear drink holder is located in the rear seat's bottom cushion. Push in to release and open the drink tray.

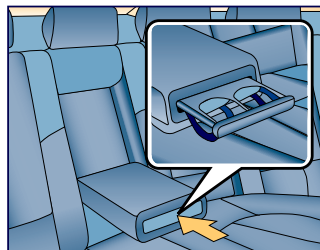


On 5-door models, the rear drink holder is located in the rear seat center arm rest. Push in to release and open the drink tray.

Fuel Cap

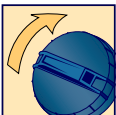

After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.


Trip Odometer / Computer

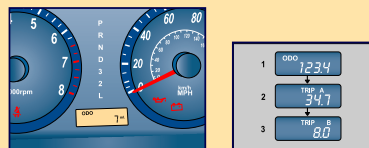

(If equipped with trip odometer only)
With the key on, press and release the reset switch under the right side of the speedometer to toggle through the following display modes:

- (ODO) Records the total driven distance of the vehicle
- (TRIP A) Driven distance since last reset*
- (TRIP B) Driven distance since last reset*

(* To reset the displayed distance to 0 while viewing TRIP A or TRIP B, press and hold the reset switch for a few seconds.

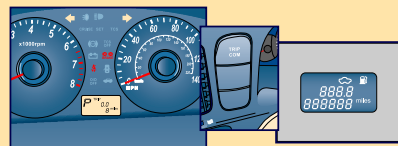


(If equipped with trip odometer and trip computer)
With the key ON, press and release the TRIP COM switch at the upper left corner of the dashboard to toggle through the following display modes:

- (TRIP) Driven distance since last reset*
- (MPG) Calculated average fuel consumption since last reset*
- (Distance to Empty) Estimated range from current fuel level

(* Press and hold the TRIP COM switch for a few seconds to reset the displayed distance while viewing the trip odometer, or to reset the MPG calculation while viewing the average fuel consumption.

Cruise Control

Press to activate the Cruise Control system.

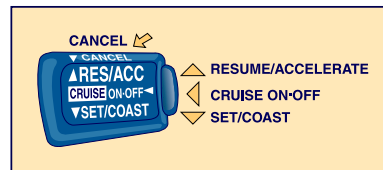

Basic Safety Precautions

- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
- Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

Detailed Information

- This Quick Reference Guide does not replace your vehicle's Owner's Manual.
- If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

Maintenance

		Normal Usage	Severe Usage
Air Cleaner Filter	Replace	30K	Replace More frequently
Automatic Transaxle Fluid and Filter	Inspect Replace	15K 105K	Replace 30K
Brake Pads, Calipers and Rotors	Inspect	15K	Inspect More frequently
Driveshafts and Boots	Inspect	15K	Inspect 7.5K
Engine Oil and Filter	Replace	7.5K	Replace 3K
Manual Transaxle Oil	Inspect	30K	Replace 60K
Rear Brake Drums/linings, Parking Brake	Inspect	30K	Inspect More frequently
Air Conditioning Refrigerant	Inspect	15K	
Ball Joint, Upper Arm Ball Joint Power Steering Pump and Hoses	Inspect	15K	
Brake Fluid	Inspect	30K	
Brake Hoses and Lines	Inspect	30K	
Coolant	Replace	30K	
Drive Belt (Alternator, Water Pump, Air Cond.)	Inspect	30K	
Exhaust Pipe and Muffler	Inspect	15K	
Fuel Lines, Fuel Hoses and Connections	Inspect	30K	
Fuel Vapor Hose and Fuel Filler Cap	Inspect	30K	
Power Steering Pump, belt and hoses	Inspect	30K	
Spark Plugs Platinum Coated (2.0L CVVT) Iridium Coated (2.0L SULEV)	Replace Replace	60K 100K	
Steering Gear Box, Linkage & Boots/lower Arm	Inspect	15K	
Timing Belt	Inspect Replace	30K 60K	

All units are displayed in miles.

For additional service intervals, severe maintenance schedule, and complete details, see Owner's Manual.



HYUNDAI ROADSIDE BENEFITS INCLUDE*:

- Towing to the nearest Hyundai Dealership or authorized Service Facility if your vehicle is inoperable, including non-warrantable related tows such as accidents. Coverage period is 60 months/unlimited miles.
- Emergency Roadside Assistance.
- National Dealer Locator Service.
- Trip Interruption Benefit if Warrantable Mechanical Disablement occurs more than 150 miles from home. Limit to \$100/day, 3 day maximum. (800) 243-7766

 
*Please refer to your Owner's Manual for specific coverage and limitations. Part Number NP150-86000 12/06

Quick Reference Guide

ELANTRA


HYUNDAI

Height Adjustable Front Seat Shoulder Belt

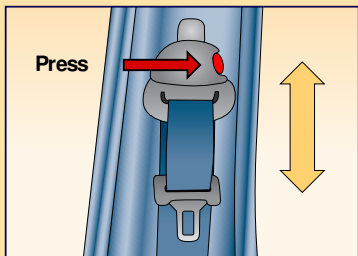

- Push anchor upwards to raise the height adjuster.
- Push anchor downward while pressing the height adjuster button to lower.


Tilt Steering Wheel

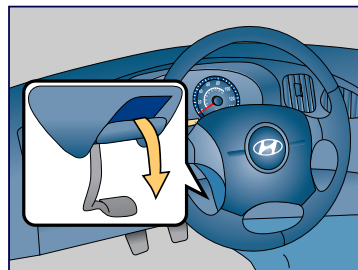

To adjust the steering wheel tilt, lower the lock lever and raise or lower the steering wheel to a comfortable position. Fully raise the lock lever to maintain desired setting.

Note: Do not attempt to adjust the steering wheel while driving.

Power Window Lock

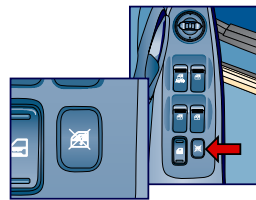

Pressing the lock switch **deactivates all of the power window switches except for the driver's window.**

"PASSENGER AIR BAG OFF" Indicator:




- Will illuminate when the ignition key is in the **START** or **RUN** position.
- The light will not be illuminated when the passenger's airbag is enabled (seat occupied by an adult passenger).

Windshield Wiper Washer


Wiper Speed




Intermittent

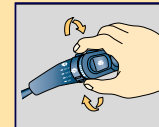

Wipe / Wash

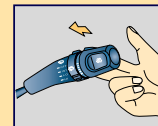


Clear Mist

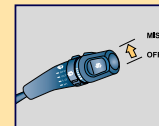



NOTE: You can lengthen the life of your wiper blades by gently wiping the rubber inserts with an alcohol soaked rag to remove grime and road debris.

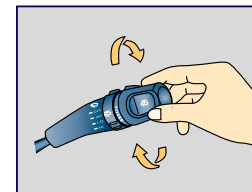
Back Glass Washer Wiper (5-door models)



Rotate the right barrel switch to select the following rear window wiper/washer operation modes.


- () Activates the rear window washer function (OFF)
- (INT) Intermittent mode with fixed interval
- (ON) Continuous wipe mode
- () Activates the rear window wiper function

Keyless Remote and Locks (if equipped)

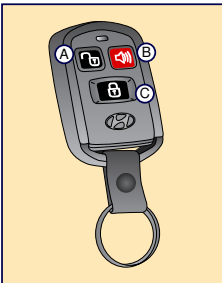

- Press **UNLOCK** to disarm and unlock the driver's door. Press again within four seconds to unlock all doors.
- Press to sound horn and flash lights for thirty seconds. Press **PANIC** again to cancel.
- Press **LOCK** to lock all doors and activate alarm. Press again to receive confirmation chirp.


Outside Door Mirrors

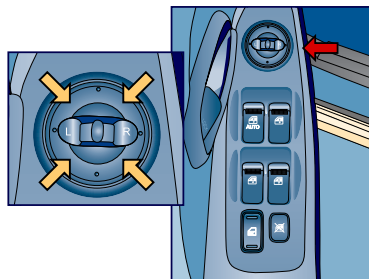

1. Move the select switch to the right or left to activate the corresponding door mirror.
2. Adjust the mirror angle by depressing the appropriate perimeter switch as illustrated.
3. Place the selecting switch in the middle position to deactivate the perimeter switch.

Note: The outside rearview mirror heaters work when the rear window defroster is turned on.


Lumbar Support Control (Driver's seat only)

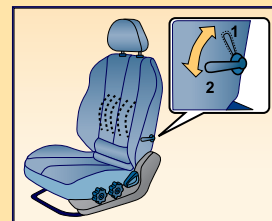


To adjust the lumbar support, move the lever on the outboard or left side of the seat to the desired position.

Defrosting/Defogging


Using The Heating/Ventilation System To Defrost Or Defog The Windshield:

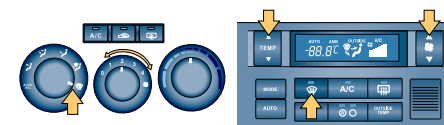

To Remove Interior Fog On The Windshield:

- Set the airflow control to the defrost () position. (The A/C will turn on automatically and "Fresh" mode will be activated).
- Set the temperature control to the desired position.
- Set the fan speed control between "1" and "4" position.

To Remove Frost Or Exterior Fog On The Windshield:

- Set the airflow control to the defrost () position. (The A/C will turn on automatically and "Fresh" mode will be activated).
- Set the temperature control to warm.
- Set the fan speed control to position "3" or "4".

Tire Inflation

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label located on the driver's door opening for correct pressure.