

# MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil & Filter	Replace	7,500	Replace	3,000 or 3 mos.
Tire Rotation	Perform	7,500	Perform	7,500
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Climate Control Air Filter	Replace	every 12 mos. or 10,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Brake Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Drive Shaft & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Steering Gear Box, Linkage & Boots/Lower Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect Replace	15,000 30,000	Inspect Replace	Same As Normal Same As Normal
Automatic Transaxle Fluid	Inspect Replace	15,000 105,000	Inspect Replace	Same As Normal 30,000
Coolant	Replace	every 24 mos. or 30,000*	Replace	Same As Normal
Spark Plugs	Replace	30,000	Replace	More Frequently
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Crankcase Ventilation Hose	Inspect	30,000	Inspect	Same As Normal
Drive Belt (Alt, Water Pump, A/C)	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses & Connections	Inspect	30,000	Inspect	Same As Normal
Manual Transaxle Oil	Inspect	30,000	Replace	60,000
Power Steering Pump, Belt & Hoses	Inspect	30,000	Inspect	Same As Normal
Rear Brake Drums/Linings, Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Timing Belt	Inspect Replace	30,000 60,000	Inspect Replace	25,000 37,500 or 48 mos.
Fuel Filter	Replace	52,500	Replace	Same As Normal

\*For the first time, replace the coolant at 60 months or 60,000.

\*See Owner's Manual for details.

**Looking For More Detailed Information?** This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

## HYUNDAI ACCENT QUICK REFERENCE GUIDE



NP150 - Q8000  
10/07 (rev 10/07)



[www.hyundaiusa.com](http://www.hyundaiusa.com)

Roadside Assistance: 1-800-243-7766  
Consumer Affairs: 1-800-633-5151  
XM Radio: 1-800-967-2346

# DRIVER CONTROLS

Power Windows  
and Auto Up / Down  
Page 4

Front Fog Light  
Switch\*  
Page 5

 
Headlights  
Page 5

Tire Pressure  
Monitoring System  
(TPMS)  
Page 6

Windshield Wiper / Washer  
Page 6-7

Occupant  
Classification  
System  
Page 7

Rear Window  
Defroster Button  
Page 7

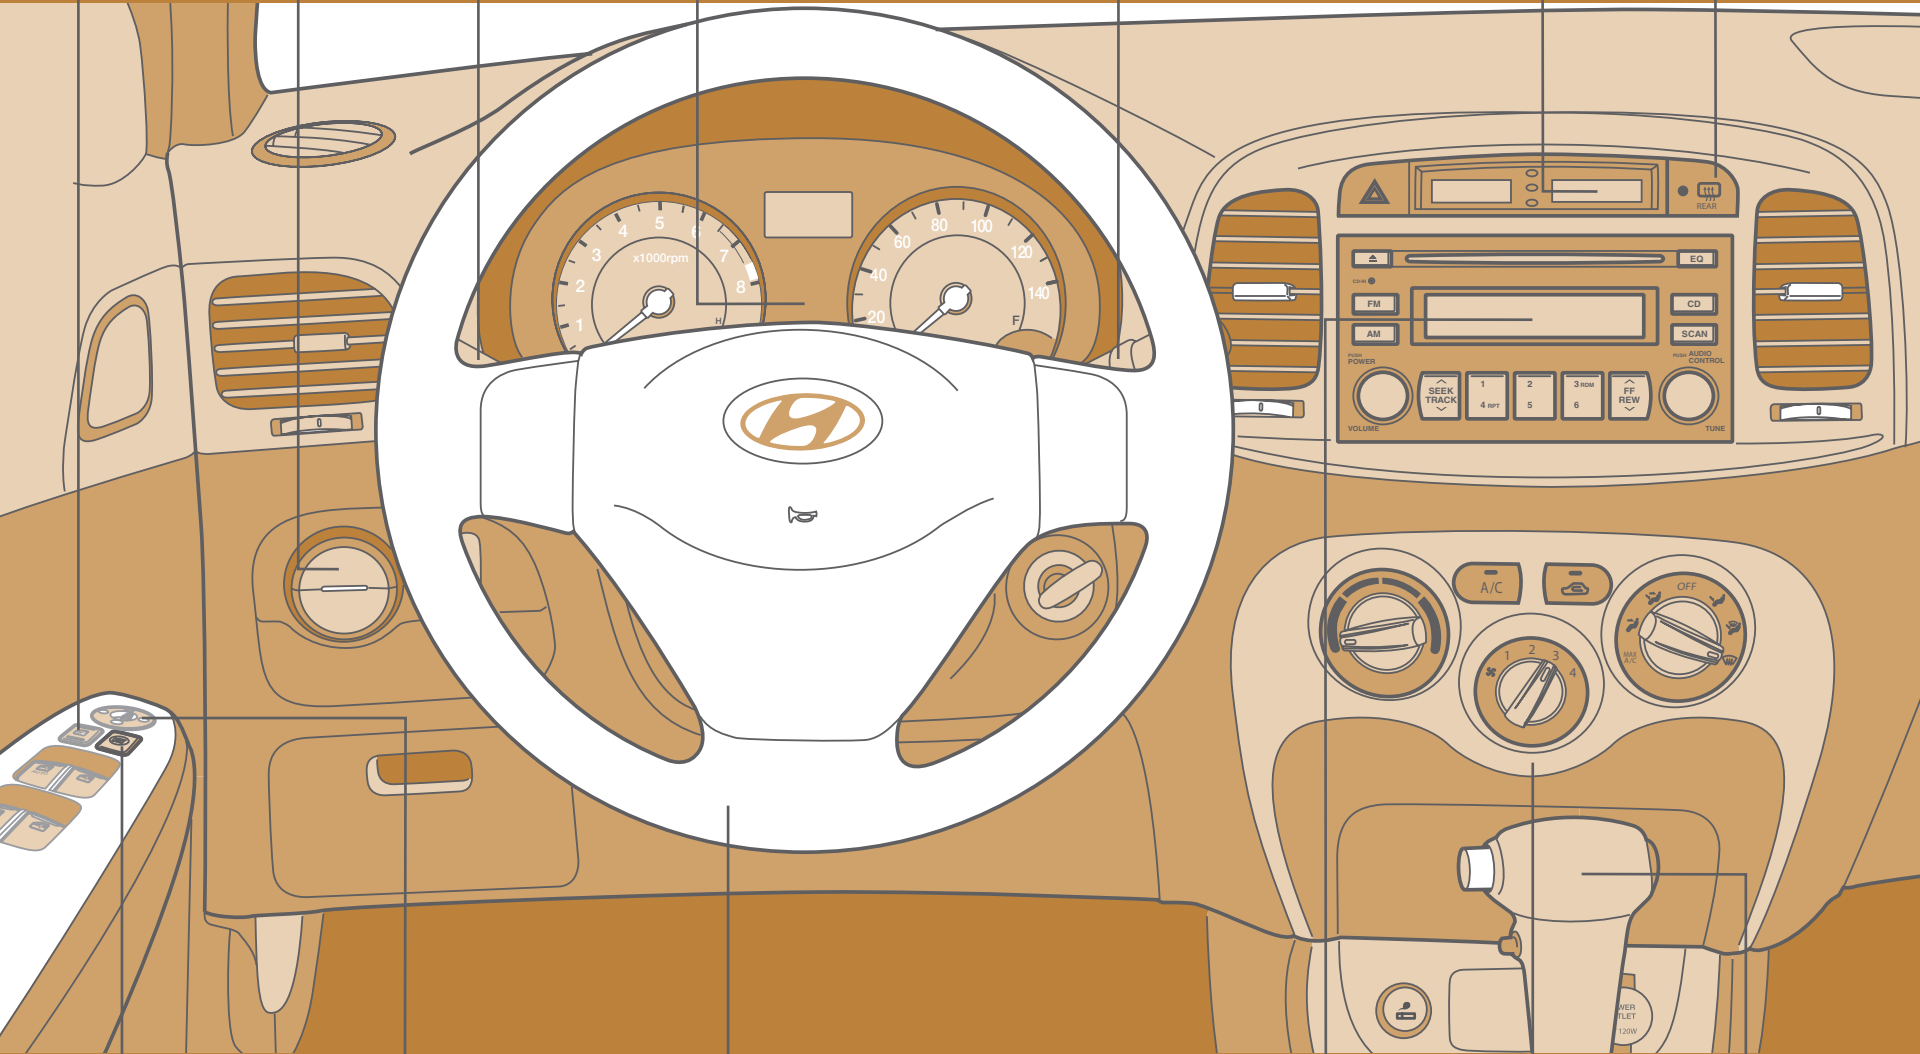

Window Lock Switch\*  
Page 4

Outside Rearview Mirrors  
Page 5

Tilt Steering Wheel  
Page 6

Audio System  
Page 8

Climate Control\*  
Page 9

Transmission  
Page 10

# DRIVER CONTROL FEATURES

## POWER WINDOWS AND AUTO UP / DOWN

### TO OPEN / CLOSE THE WINDOWS

 
 
The main switches are located on the driver's armrest.

- To open, depress the appropriate window switch.
- To close, pull up on the appropriate window switch.

### AUTO UP / DOWN (Driver's Side only)


The auto up/down feature is controlled by the main switches.

- To fully open the driver's window automatically, press the AUTO switch fully down.
- To fully close the driver's window automatically, pull the AUTO switch fully up.
- To stop the window at any desired position while the window is moving, pull up or down then release the AUTO switch.

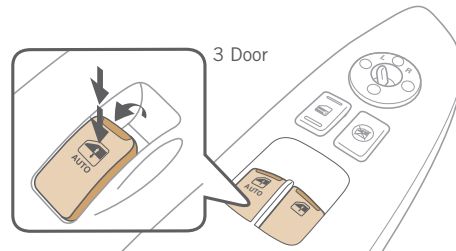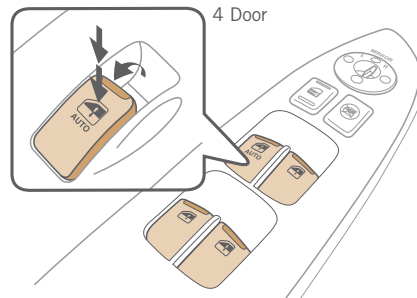

## WINDOW LOCK SWITCH (if equipped)

 To disable all passenger power windows, press the window lock switch located on the driver's armrest. To revert to normal operation, press the window lock switch a second time.


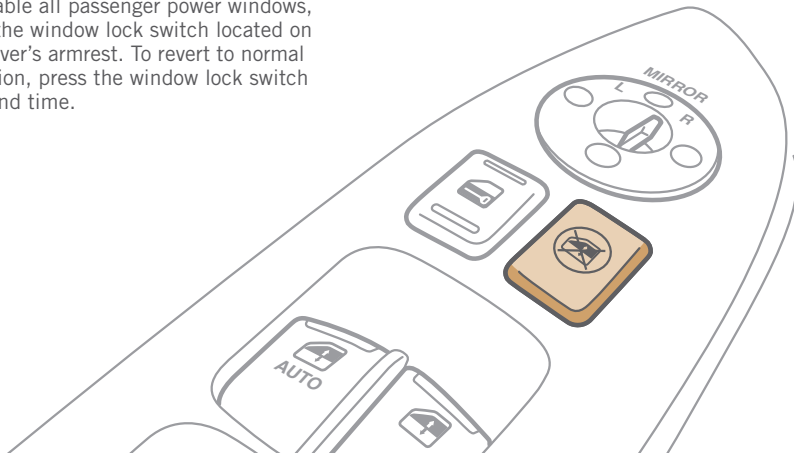


## OUTSIDE REARVIEW MIRRORS


The switch is located on the driver's armrest and can be used to adjust both the left and right outside mirrors.

### TO ADJUST THE POSITION OF EITHER MIRROR:

  1. Move the selecting switch to the R (right) or L (left) to adjust the corresponding mirror.
2. Adjust the mirror angle by depressing the appropriate direction on the perimeter switch.
3. Move the selecting switch back to the middle position to deactivate the perimeter switch.

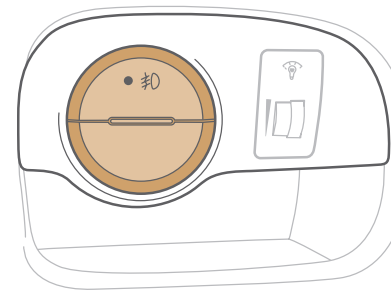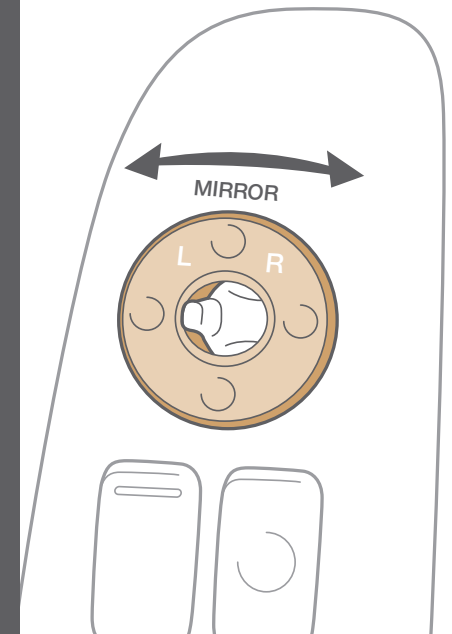



## FRONT FOG LIGHT SWITCH (if equipped)

To turn on the front fog lights, push the switch. The fog lights work when the headlight switch is in the  (low beam only) position and the key is in the ON position.

## HEADLIGHTS

 
To operate the headlights, turn the switch on the end of the lever:

- OFF – Headlights are off
-  – Parking lights
-  – Headlights

**NOTE:** The ignition must be in the ON position to turn on the headlights.

**High Beam Activation:** Push the lever forward.

**Flash-To-Pass Feature:** Pull the lever toward you and release.

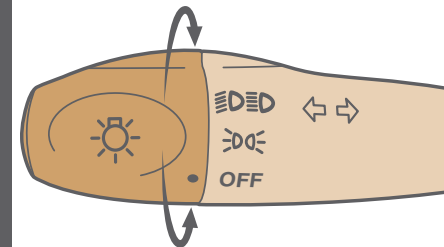


## TILT STEERING WHEEL

### TO ADJUST THE STEERING WHEEL:

1. Push the lever downward to unlock **A**.
2. Raise or lower the steering wheel to the desired position.
3. After adjustment, securely tighten the lever by pulling it upward.

 **NOTE:** Do not adjust while driving.

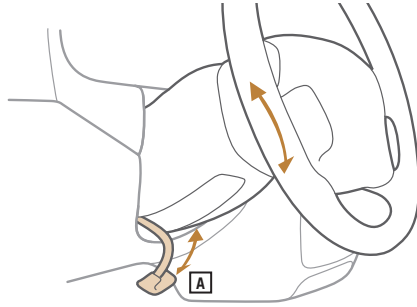

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

**LOW TIRE PRESSURE INDICATOR:** Illuminates if one or more of your tires is significantly under-inflated. Safely park the vehicle and check your tires as soon as possible, and inflate them to the proper pressure.

**TPMS MALFUNCTION INDICATOR:** Illuminates and stays illuminated when there is a problem with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.

**NOTE:** The TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure indicator.



## WINDSHIELD WIPER / WASHER

To activate the windshield wipers, move the wiper / washer switch to one of the four positions:

**MIST** – This feature allows the windshield wipers to make a single wipe to clear any mist on the windshield. Move the windshield wiper / washer switch upward.

 
 
**INT** – Intermittent wiper operation is the first downward position. The wiper speed may be varied by rotating the INT TIME switch. F allows less time between wipes, S allows more time between wipes.

**LO** – Low-speed operation is the second downward position.

**HI** – High-speed operation is the third downward position.

### WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer switch towards you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

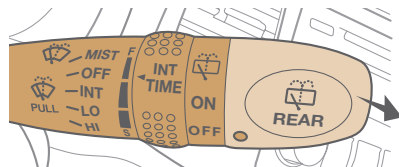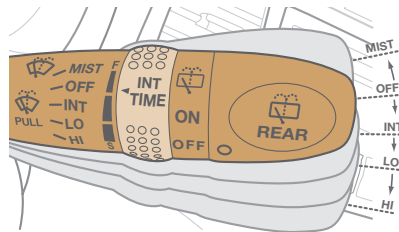


## REAR WINDOW WIPER / WASHER

To operate the rear wipers, rotate the end of the wiper stalk.

To turn ON rotate the wiper stalk up one position. The rear wiper will run continuously.

To use the washer rotate the wiper stalk up two positions.

 To wash with two or three wipes rotate the wiper stalk down one position.

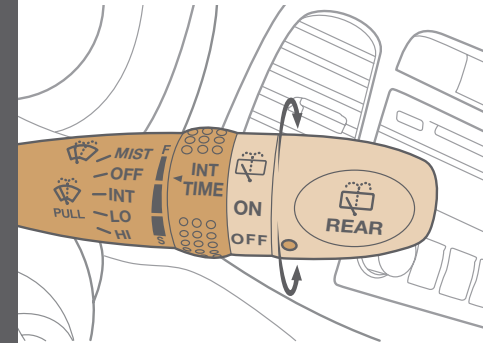

## PASSENGER AIR BAG OFF

## OCCUPANT CLASSIFICATION SYSTEM

 
### PASSENGER AIR BAG OFF INDICATOR

The indicator will illuminate when you turn the ignition key to START or RUN. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bags under certain conditions (light on). Refer to the Owner's Manual for a complete description of this system.


**NOTE:** The driver's front air bag and side impact air bag are not part of the occupant classification system.

## REAR WINDOW DEFROSTER BUTTON

Press to activate / deactivate the rear defroster.

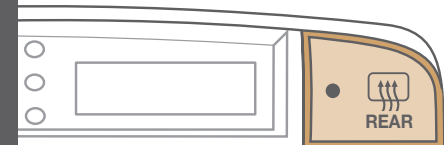

## AUDIO SYSTEM

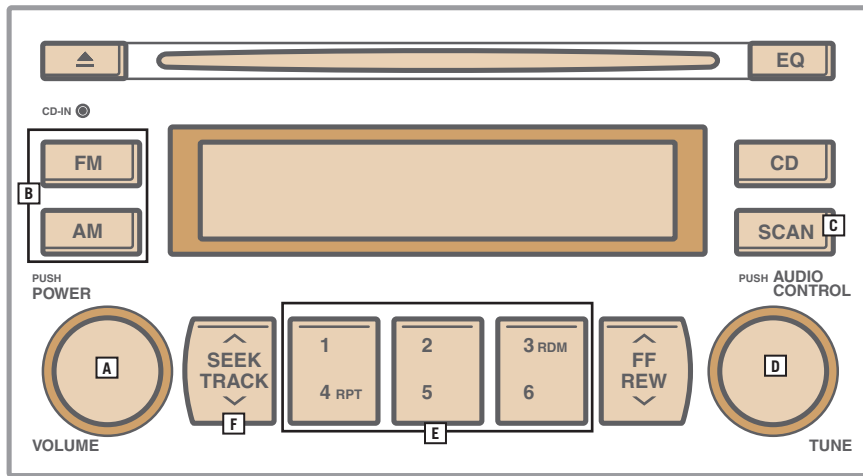 

### SETTING PRESET MEMORY BUTTONS (AM/FM)

1. Turn radio on by pressing the POWER button **A**.
2. Select AM or FM **B**.
3. Tune the AUDIO CONTROL knob **D** to the desired channel.
4. Press and hold any preset button **E** (1-6) until an audible beep is heard to memorize the current channel.

**NOTE:** FM has 2 bands for up to 12 presets.

### SEEKING NEXT AVAILABLE CHANNEL (AM/FM)

Press the SEEK  $\wedge$  or TRACK  $\vee$  button **F** to seek the next available channel.

### SCANNING THROUGH AUDIO CHANNELS (AM/FM OR CD)

1. Press the SCAN button **C** to preview each channel/track.
2. Press the SCAN button **C** again to stop the scan feature.

 
### ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)

1. Press the AUDIO CONTROL knob **D** to select the following sound qualities: Equalizer  $\rightarrow$  Bass  $\rightarrow$  Middle  $\rightarrow$  Treble  $\rightarrow$  Balance  $\rightarrow$  Fader  $\rightarrow$  Current State
2. Turn the AUDIO CONTROL knob **D** to adjust the sound quality.

#### NOTES:

- Please refer to your Owner's Manual for more detailed information on how to use your audio system.

## CLIMATE CONTROL (If Equipped)

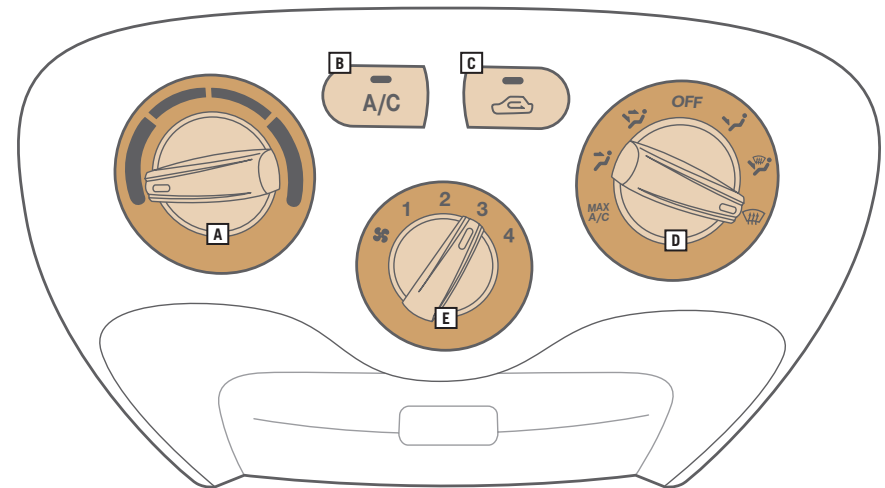

**A TEMPERATURE CONTROL SWITCH** – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

**B A/C** – Push to turn A/C ON or OFF.

**C AIR INTAKE CONTROL SWITCH** – Press to activate/deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

**D AIR FLOW CONTROL** – Use to direct the flow of air.

**E BLOWER FAN CONTROL SWITCH** – Use to select the blower fan speed.

### TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the Mode Selection knob **D** to the defrost  $\text{W}$  position (if equipped).
2. Set the Temperature Control **A** to the desired setting.
3. Set the Fan Speed Control **E** to position 3 or 4.

## TRANSMISSION

 
### AUTOMATIC TRANSMISSION

(if equipped)

- P** – Park
- R** – Reverse
- N** – Neutral
- D** – Drive
- 2** – Second
- L** – Low

#### To activate overdrive:

1. Move the selector lever to D (Drive).
2. Press the overdrive switch **A**.

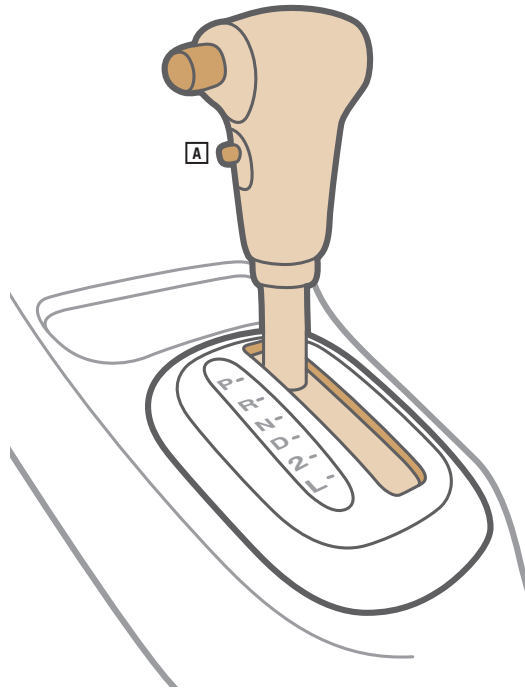


### 5-SPEED MANUAL TRANSMISSION

(if equipped)

#### ENGAGING REVERSE

 When shifting into Reverse gear, lift the collar tab up and then shift into the Reverse gear position.

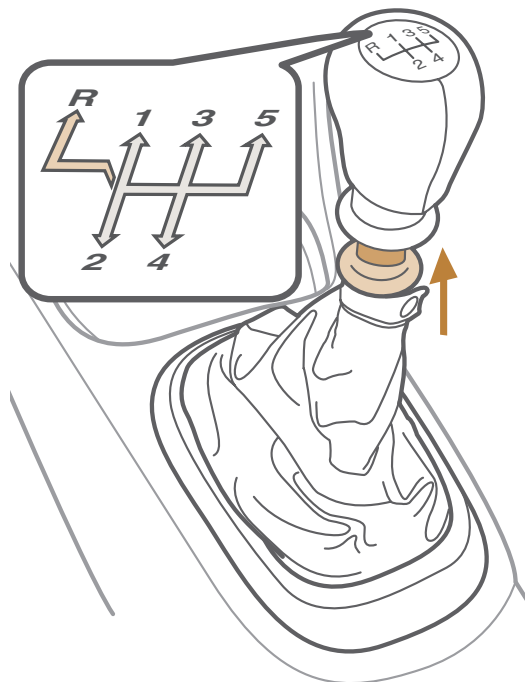

## ADDITIONAL FEATURES

### REMOTE KEYLESS ENTRY

#### LOCK

 
 
Press to lock all doors and arm the alarm. Press again to hear a confirmation chirp.

#### UNLOCK

Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.


#### PANIC


Press and hold to activate the horn and flashing lights for 30 seconds. Press again to turn off panic mode.

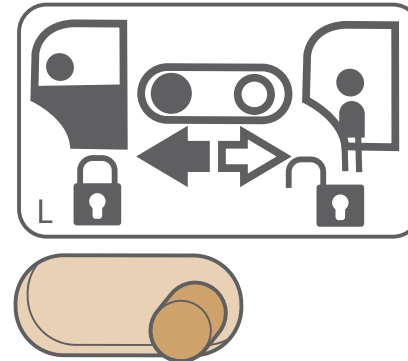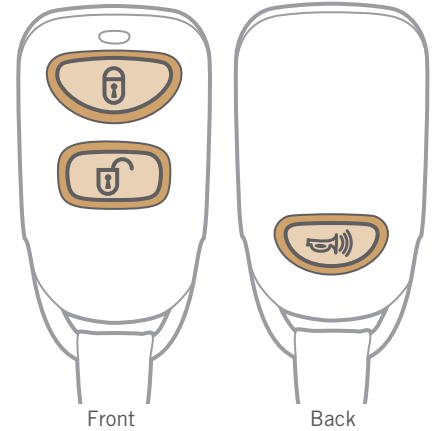


### CHILD-PROTECTOR REAR DOOR LOCK


(4 Door Models)

To engage the child-protector feature so the rear door cannot be opened from inside the vehicle, move the child-protector lever located on the rear edge of the door to the  (LOCK) position and close the door.

To disengage the child-protector feature, move the lever to the  (UNLOCK) position.

To open the door from the outside, pull the outside door handle.

 (LOCK) – Does not allow opening the rear door from inside the vehicle.

 (UNLOCK) – Allows opening the rear door from inside and outside the vehicle.

### BASIC SAFETY PRECAUTIONS

 
- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seatbelts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see the Owner's Manual for child safety details).
- Never place children under 13 years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

## HEIGHT ADJUSTABLE FRONT SEAT SHOULDER BELT

This should be adjusted so that it lies across your chest and midway over your shoulder nearest the door and not your neck.


To raise the height adjuster, pull it up. To lower, push it down while pressing the height adjuster button.

**NOTE:** Moving the height adjuster quickly may cause the seat belt retractor to engage.

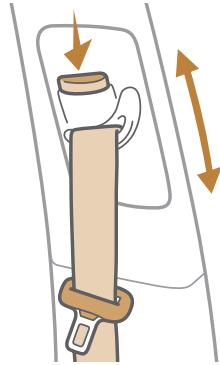

## HEADREST ADJUSTMENT

 To raise or lower the headrest: Pull up on the headrest to raise it. To lower the headrest, press the lock knob while pressing down on the headrest.

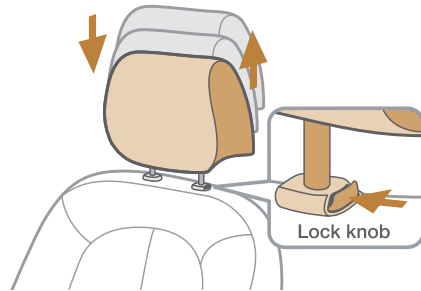

## FRONT SEAT ADJUSTMENT

### **A** ADJUSTING SEAT FORWARD AND REARWARD

To move the seat toward the front or rear, pull the lock release lever upward. This will release the seat on its track so you can move it forward or rearward to the desired position.

 
When you find the position you want, release the lever and slide the seat forward or rearward on its track until it locks into the desired position and cannot be moved.

### **B** FRONT / REAR SEAT CUSHION HEIGHT ADJUSTMENT, DRIVER'S SEAT ONLY

To raise or lower the front/rear part of the seat cushion, turn the front or rear knob clockwise or counterclockwise.

### **C** ADJUSTING SEAT BACK ANGLE

Lift the lever on the side of the seat to adjust your seatback angle. Release the lever when you have found a comfortable position.

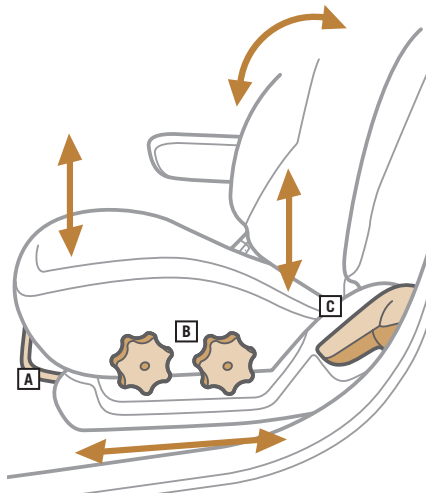



## REAR SEAT ADJUSTMENT

### **ADJUSTING SEATBACK ANGLE** (3 door only)

To adjust the seatback angle, pull up on the lever **A** and move the seatback to the desired position. After adjusting, always check that it is securely locked into place.

### **REAR DOOR ENTRY** (3 door only)

  The front passenger seat can be tilted and moved forward to allow easier access to the rear seats. Pull up on the recliner control lever **A** or from the rear seat, press the foot lever **B**.

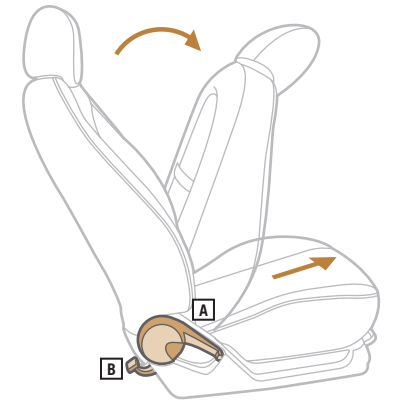
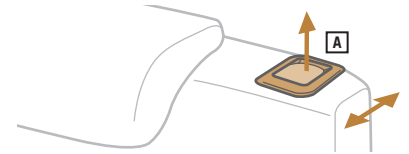


### **FOLDING REAR SEATBACK AND SEAT CUSHION** (3 door only)

1. Pull the strap **A** at the front of the seat cushion upward and fold up lower seat cushion.

2. Remove the headrests **B** and put them in the loops on the backside of the seat cushion.

  
3. Pull up on the lever **C** and fold down the rear seatback.

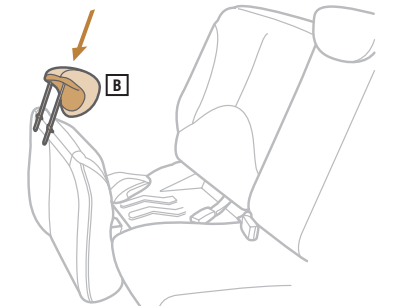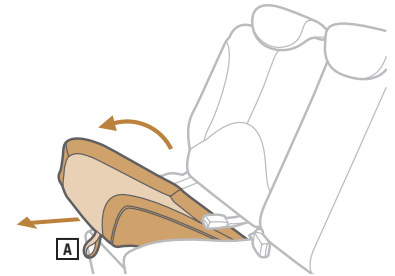

## DRINK HOLDERS


### FRONT DRINK HOLDERS

 Use the two drink holders to securely hold your beverages while driving.

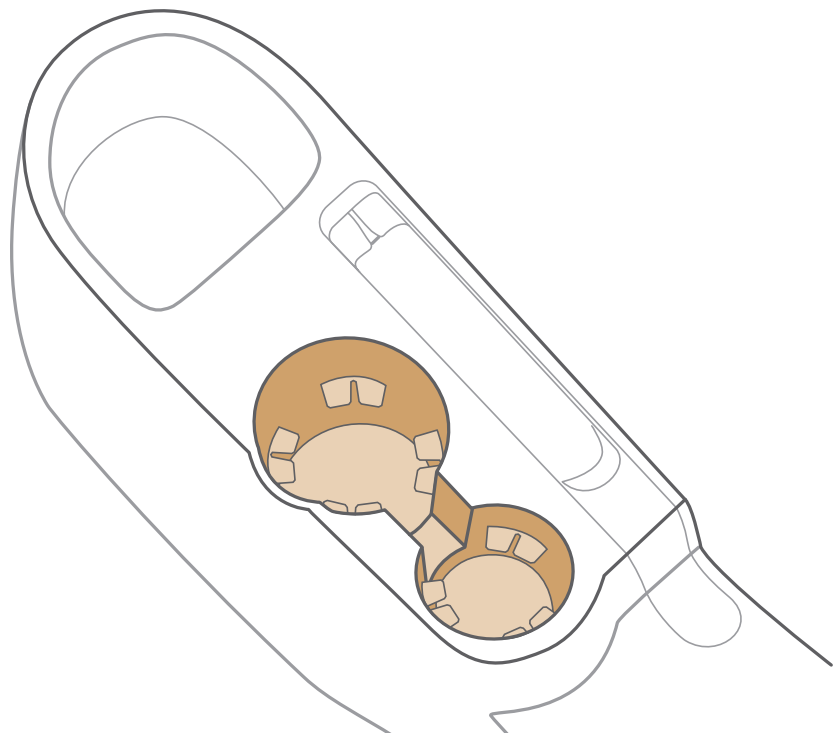

### REAR DRINK HOLDERS (if equipped)


 
The rear passengers can fold down the drink holders located between the rear seats, by firmly pulling down on the tab at the top.

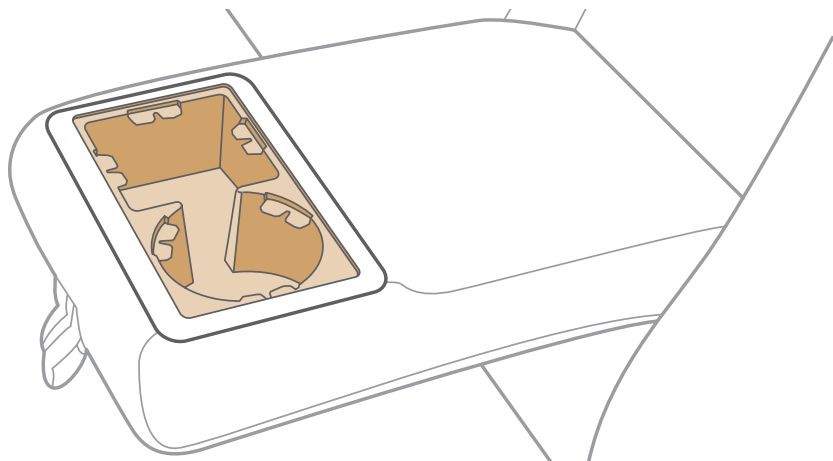

### ILLUMINATED VANITY MIRRORS

(if equipped)

  Access the illuminated vanity mirrors by turning the sun visor down. Slide the mirror cover open, and the light will automatically turn on. When finished, slide the cover back to turn the light off.

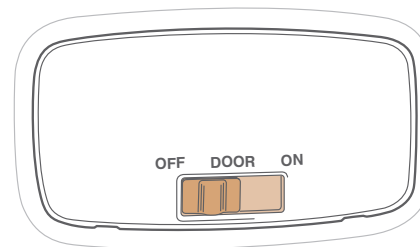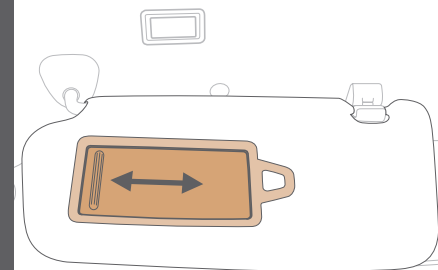

### DOME LIGHT

**OFF** – Dome light is always off.

 
**DOOR** – Dome light comes on when the doors are opened.

**ON** – Turn the dome light on.

### REFUELING

1. Pull fuel release lever.
2. Remove fuel cap.
3. Pump fuel.
4. Replace fuel cap.
5. Close fuel door.

**NOTE:** After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least three times. Failure to do this may result in the Check Engine light illuminating.

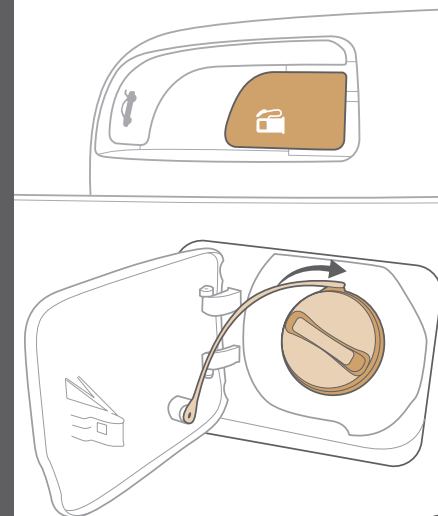



# ACCENT CUSTOMER DELIVERY CHECK LIST

# ACCENT CUSTOMER DELIVERY CHECK LIST (continued)

 
HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

## BEFORE DELIVERY

- VERIFY ALL REMOTE KEYLESS ENTRY LOCK / UNLOCK
- VERIFY VEHICLE IS CLEAN INSIDE AND OUT
- CHECK PAINT FINISH FOR SCRATCHES, DENTS, ETC. (IF PRESENT NOTIFY MANAGER)
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE (IF EQUIPPED)

## WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES


- SEAT ADJUSTMENT – PAGE 12

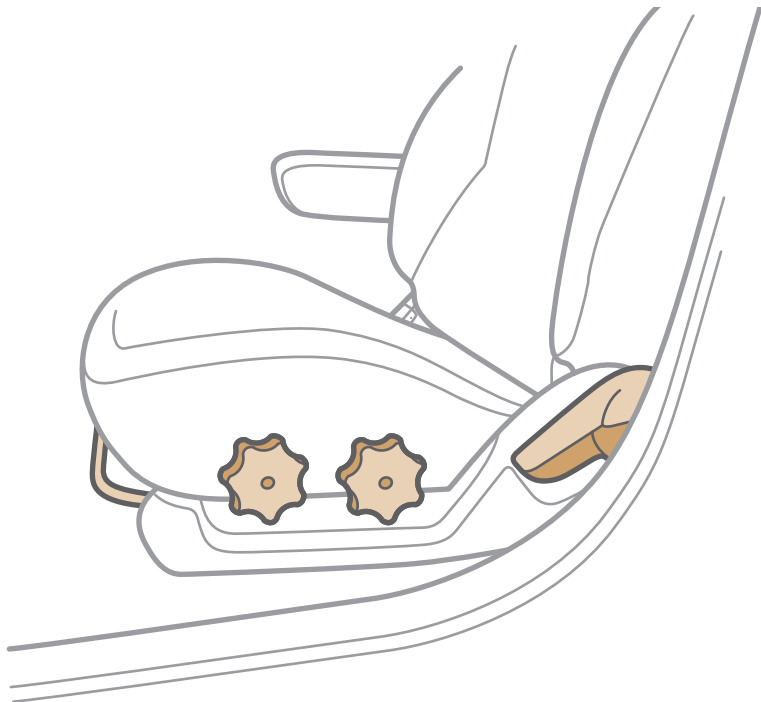

- REAR FOLDING SEATS (3 Door) – PAGE 13



 - WINDSHIELD WIPER / WASHER – PAGE 6-7

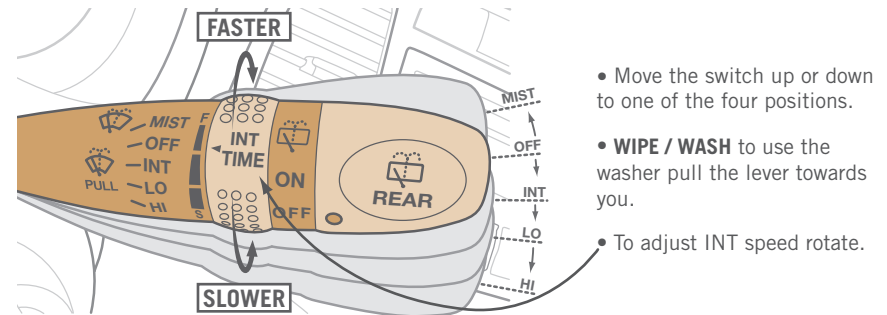

- Move the switch up or down to one of the four positions.
- **WIPE / WASH** to use the washer pull the lever towards you.
- To adjust INT speed rotate.

## DURING DELIVERY

- VERIFY AUDIO AND VIDEO SYSTEMS OPERATION (CONFIRM PRESETS)
- VERIFY CLOCK TIME SETTING AND SET AS NEEDED
- EXPLAIN FIRST SERVICE PROCEDURE - PROVIDE SERVICE MANAGER'S OR SERVICE WRITER'S BUSINESS CARD
- REVIEW AMERICA'S BEST WARRANTY
- ASK IF CUSTOMER HAS ANY QUESTIONS

\_\_\_\_\_  
Sales Consultant

\_\_\_\_\_  
Date

\_\_\_\_\_  
Sales Manager

\_\_\_\_\_  
Date

\_\_\_\_\_  
Customer

\_\_\_\_\_  
Date