

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint	Inspect	7,500	Inspect	More Frequently
Tire Rotation	Perform	7,500	Perform	7,500
Fuel Lines, Fuel Hoses & Connections	Inspect	7,500	Inspect	Same As Normal
Suspension Mounting Bolts	Inspect	7,500	Inspect	Same As Normal
Vapor Hose and Fuel Filler Cap	Inspect	7,500	Inspect	Same As Normal
Engine Oil and Filter	Replace	7,500	Replace	3,000
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Air Cleaner Filter (Engine)	Inspect Replace	7,500 30,000	Inspect	More Frequently
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	Every 12 mos. or 10,000	Inspect Replace	Same As Normal More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses and Lines	Inspect	15,000	Inspect	Same As Normal
Brake Pads, Calipers and Rotors	Inspect	15,000	Inspect	More Frequently
Driveshafts and Boots	Inspect	15,000	Inspect	7,500
Exhaust Pipe and Muffler	Inspect	15,000	Inspect	Same As Normal
Power Steering Pump, Belt and Hoses	Inspect	15,000	Inspect	Same As Normal
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect Replace	15,000 30,000	Inspect Replace	Same As Normal Same As Normal
Automatic Transaxle Fluid	Inspect Replace	15,000 105,000	Inspect Replace	Same As Normal 30,000
Coolant	Replace	every 24 mos. or 30,000	Replace	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Drive Belt (Autotensioner, ALT, P/Str'g, A/C, W/pump)	Inspect	30,000	Inspect	Same As Normal
Rear Disc Brakes / Linings, Parking Brake	Inspect	30,000	Inspect	More Frequently
Crankcase Ventilation Hose	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Replace	37,500	Replace	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	97,500	Inspect	More Frequently

*See Your Owner's Manual for details.

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

HYUNDAI AZERA QUICK REFERENCE GUIDE



NP150 - M8000
10/07 (rev 10/07)



www.hyundaiusa.com

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM Radio: 1-800-967-2346

DRIVER CONTROLS

Central Door Locks
Page 4

IMS (Integrated Memory System)*
Page 5

Outside Rearview Mirrors
Page 5

Headlights and Fog Lights
Page 6


Tire Pressure Monitoring System (TPMS)
Page 7

Windshield Wiper / Washer
Page 8

Clock Adjustment
Page 8

Occupant Classification System
Page 8

Audio System
Page 9

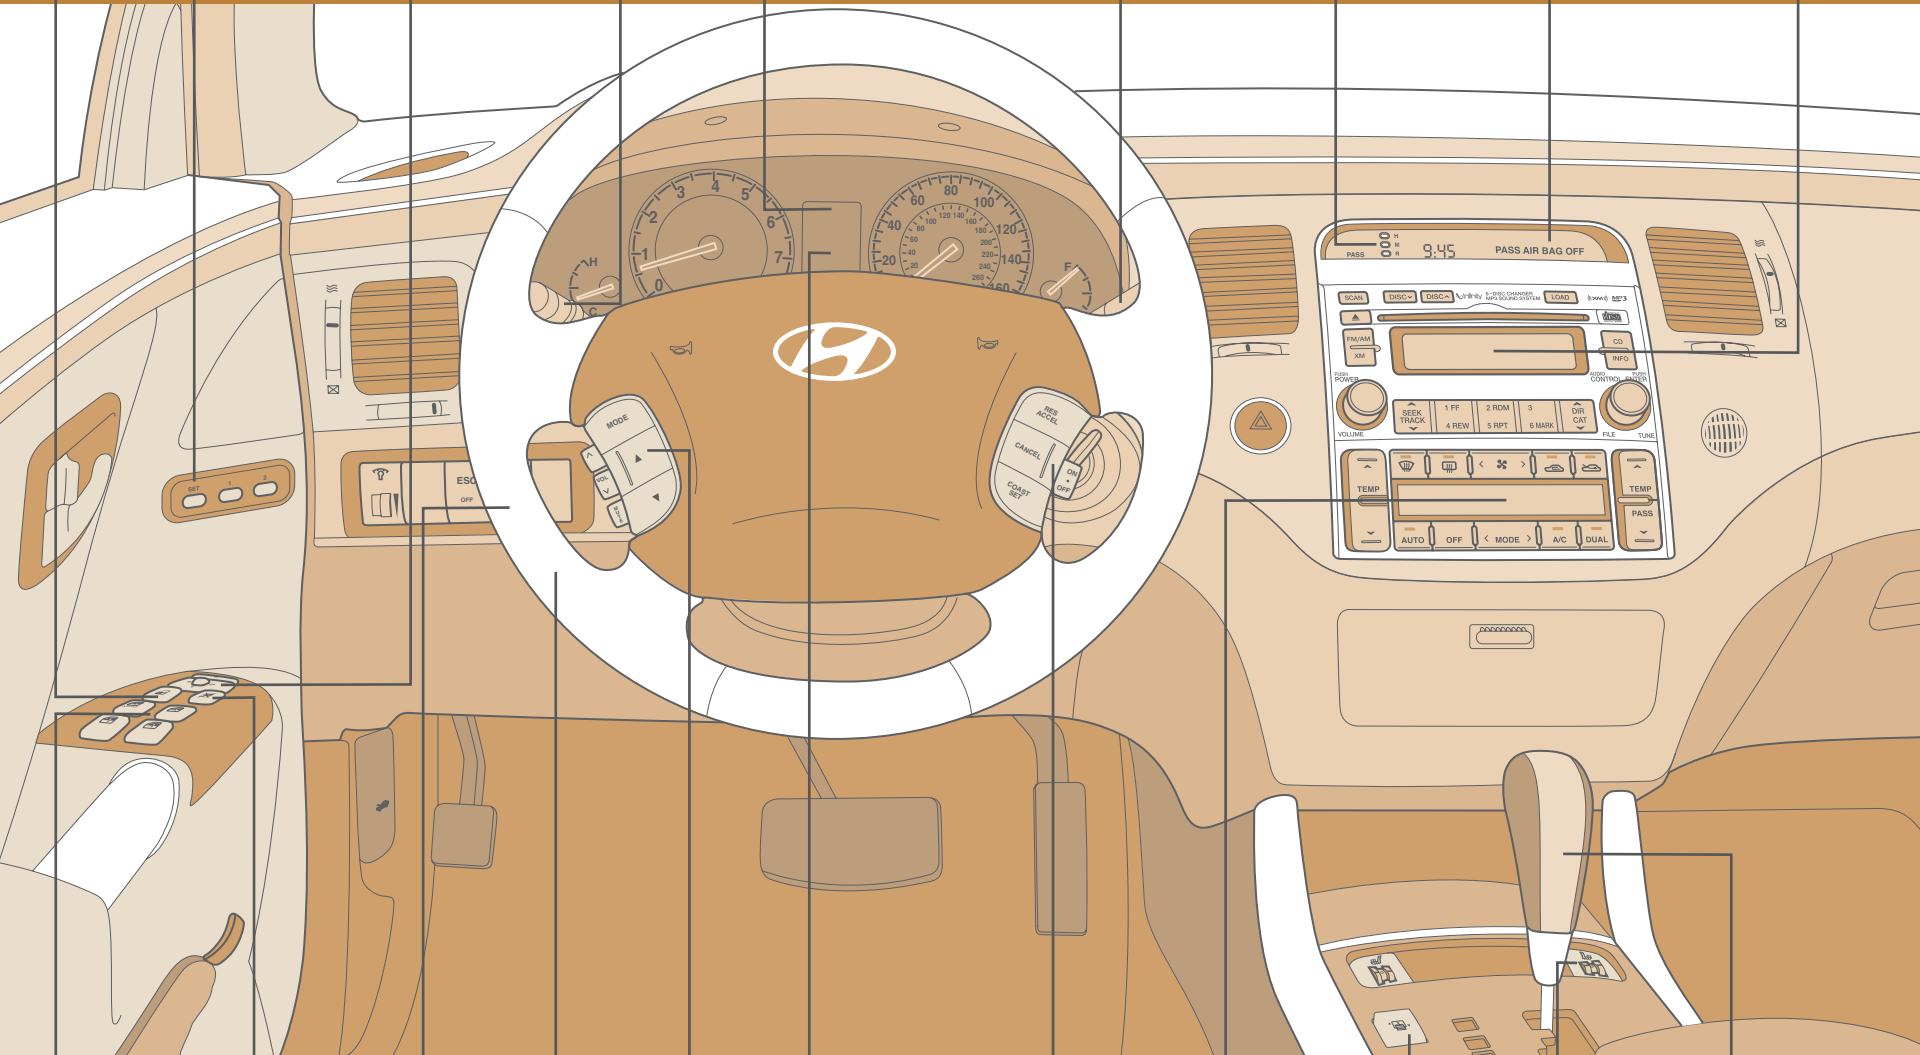

Power Windows and Auto Up / Down
Page 4

Window Lock Switch
Page 4

Adjustable Pedals*
Page 5

Adjustable Steering Wheel
Page 6

Steering Wheel Audio Controls
Page 6

Trip Computer / Odometer*
Page 7

Cruise Control
Page 8

Climate Control
Pages 10

Power Rear Sunshade*
Pages 11

Seat Warmer*
Page 11

Transmission / Shiftonic™
Page 11

DRIVER CONTROLS

POWER WINDOWS AND AUTO UP / DOWN

TO OPEN / CLOSE THE WINDOWS

The main switches are located on the driver's armrest.


- To open, depress the appropriate window switch.
- To close, pull up on the appropriate window switch.

AUTO UP / DOWN (Front windows only)

The auto up / down feature is controlled by the main switches.

- To fully open the window automatically, press the AUTO switch fully down.
- To fully close the window automatically, pull the AUTO switch fully up.
- To stop the window at any desired position while the window is moving, pull up or down then release the AUTO switch.

NOTE: Ignition switch must be ON.

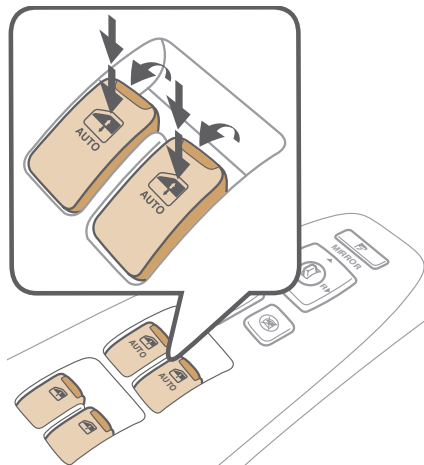

WINDOW LOCK SWITCH

To disable the passenger front and rear power windows, press the window lock switch. To revert to normal operation, press the window lock switch a second time.



CENTRAL DOOR LOCKS

The switch is located on the driver's and front passenger's armrest.

To lock all doors: Push down on the front portion **A** of the switch.

To unlock all doors: Push down on the rear portion **B** of the switch.


AUTOMATIC DOOR LOCKING / UNLOCKING

Your Hyundai is equipped with a feature that will automatically lock / unlock all the doors.

Lock: When the selector lever is shifted out of P (Park) position while the brake pedal is depressed.

Unlock: When the selector is shifted into P (Park) position while the brake pedal is depressed.

NOTE: If the key is in the ignition switch and any front door is open, the doors will not lock.

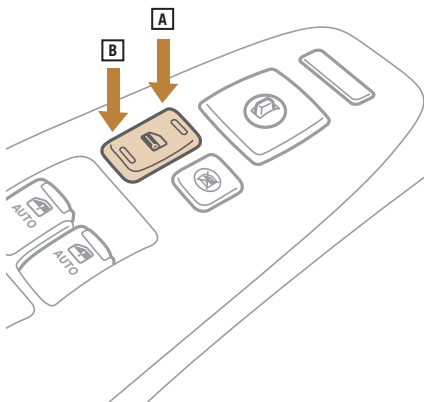

OUTSIDE REARVIEW MIRRORS

The switch is located on the driver's armrest and can be used to adjust both the left and right outside mirrors.

TO ADJUST THE POSITION OF EITHER MIRROR:

1. Move the selecting switch **A** to the R (right) or L (left) to adjust the corresponding mirror.
2. Adjust the mirror angle by depressing the appropriate direction on the perimeter switch.
3. Move the selecting switch back to the middle position to deactivate the perimeter switch.

POWER FOLDING (if equipped)

Both left and right outside rearview mirrors can be folded for parking in narrow areas by pressing the outside rearview mirror folding switch.



IMS (INTEGRATED MEMORY SYSTEM)

(if equipped)


The Integrated Memory System controls are located on the driver's door trim.

MEMORIZING DRIVER POSITION

1. Place the shift lever into Park (P) while the ignition switch is ON.
2. Adjust the driver's seat, outside rearview mirrors and steering wheel column (with electric tilt and telescopic type) to the desired position.
3. Push the SET button on the IMS until the signal beeps.
4. Within five seconds, push button 1 or 2 until the signal beeps twice. The beep confirms that the positions are memorized in the IMS.

TO ACTIVATE THE MEMORIZED POSITION

1. Place the shift lever into Park (P) while the ignition switch is ON.
2. When you push button 1 or 2, the driving position will be automatically adjusted to the position recorded for that button. See Owner's Manual for conditions in which IMS will not operate.

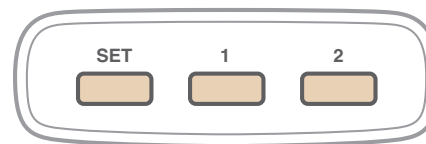


ADJUSTABLE PEDALS (if equipped)

Turn the ignition key to the ON position with the selector lever in the Park (P) position and push the switch.

Push the pedal position switch ▲ to move the pedals toward from you.

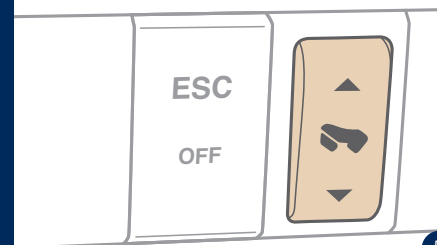

Push the pedal position switch ▼ to move the pedals away you.



HEADLIGHTS AND FOG LIGHTS

HEADLIGHT SWITCH



To operate the headlights, rotate the switch on the end of the lever.

- OFF** – Headlights are off
-  – Parking Lights on
-  – Headlights on
- AUTO** – Auto Light (if equipped)

NOTE: The ignition must be in the ON position to turn the headlights on.

High Beam Activation: Push the lever forward.

Flash Feature: Pull the lever toward you and release.

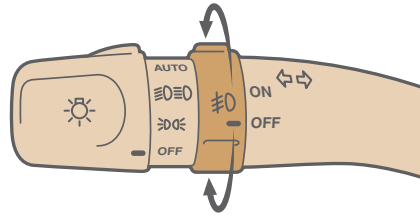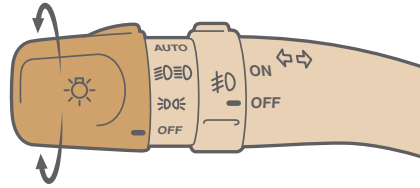

FOG LIGHT SWITCH (if equipped)

Rotate the switch to the ON position.


NOTE: Fog lights will only function on low beam.

ADJUSTABLE STEERING WHEEL

NOTE: Do not adjust while driving.

POWER ADJUSTABLE STEERING COLUMN (if equipped)

1. To tilt: move the adjusting switch **A** upward or downward.
2. To telescopic: move the adjusting switch **A** forward or backward.

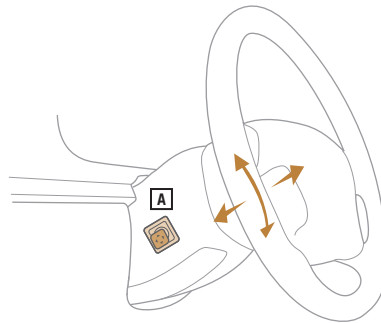

STEERING WHEEL AUDIO CONTROLS

A VOLUME SWITCH

Pull ▲ to increase or ▼ to decrease audio volume.

B MODE SWITCH


Each press of the MODE switch changes the audio mode as follows:
FM → AM → CD/MP3 (if loaded) → XM

C SEEK SWITCH

- Tap once to navigate through radio.
- Hold to quickly scroll through audio frequencies or fast forward / rewind through CD/MP3 tracks.

D MUTE SWITCH

Pull the MUTE switch to turn the sound on or off.

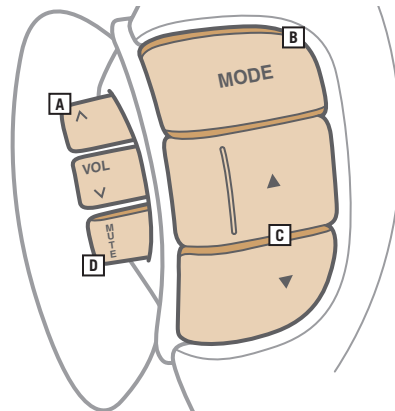

TIRE PRESSURE MONITORING SYSTEM (TPMS)

LOW TIRE PRESSURE INDICATOR:

Illuminates if one or more of your tires is significantly under-inflated. Safely park the vehicle and check your tires as soon as possible, and inflate them to the proper pressure.

TPMS MALFUNCTION INDICATOR:

Illuminates and stays illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.

NOTE: The TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure indicator.



TRIP COMPUTER / ODOMETER

TRIP COMPUTER (if equipped)

With the ignition switch in the ON position, press the MODE switch to change the display:

TRIPMETER ←

↓
DISTANCE TO EMPTY

↓
AVERAGE SPEED

↓
DRIVE TIME

↓
AVERAGE FUEL CONSUMPTION

Push in the RESET switch for more than one second to initialize the displayed information such as tripmeter, average speed, drive time and average fuel consumption.

TRIP ODOMETER (if equipped)



With the key ON, press the MODE switch to toggle through the following display modes:

ODO: Records the total distance traveled in miles.

TRIP A: Total distance traveled since the last tripmeter reset.

TRIP B: Total distance traveled since the last tripmeter reset.

To reset the displayed distance to 0 while viewing TRIP A or TRIP B, press the reset switch for a few seconds.

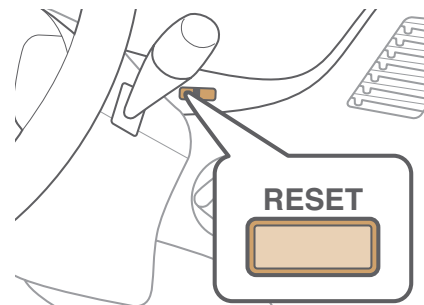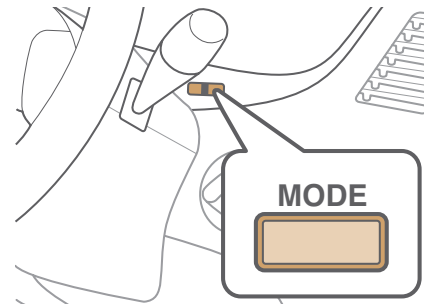

WINDSHIELD WIPER / WASHER

A WIPER SPEED

The windshield wiper switch has four positions: intermittent or AUTO (if equipped), low speed, high speed and mist. For mist (single wipe), move the lever up one position.


B WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer lever toward you. When the washer is operated, the wipers automatically make passes across the windshield. The washer continues to operate until the lever is released.

C AUTO WIPER OPERATION

When the windshield wiper switch is placed in the AUTO position, the windshield sensor will automatically sense rain on the windshield. It senses the amount of rainfall and controls for the appropriate length of the intervals between wipes appropriately.

NOTE: With the switch in the AUTO position, the wipers will perform one sweep when the car is started.

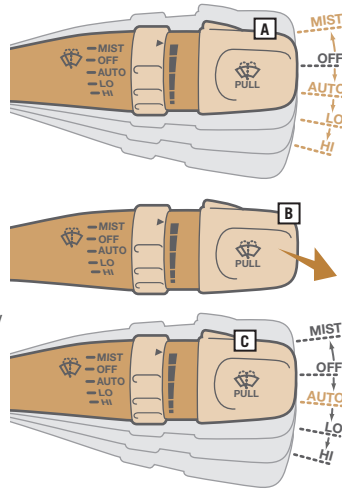

CRUISE CONTROL

To set a cruising speed:


- ON D** – Pull the switch and the CRUISE indicator in the instrument cluster will illuminate. Accelerate to the desired cruising speed (above 25 mph).
- SET C** – Push the switch and remove your foot from the accelerator pedal.

To accelerate or decelerate speed:

- ACCEL A** – Press to accelerate your speed with cruising speed set.
COAST C – Press to slow speed down with cruising speed set.

To cancel the cruising speed:

Press the **CANCEL B** switch, press the brake pedal, depress the clutch pedal, or turn **OFF D** cruise control.

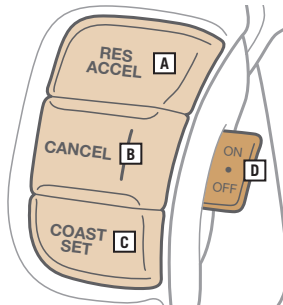

CLOCK ADJUSTMENT

There are three control buttons for the digital clock. Their functions are:

H: Push H to advance the hours.

M: Push M to advance the minutes.

R: Push R to reset minutes to :00 and the hour to the nearest number. Press and hold the R button to toggle between military time and standard time.




OCCUPANT CLASSIFICATION SYSTEM

PASSENGER AIR BAG OFF INDICATOR


The indicator will illuminate when you turn the ignition key to ON or START. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bags under certain conditions (light on). Refer to the Owner's Manual for a complete description of this system.

NOTE: The driver's air bag and the side impact air bag are not part of the occupant classification system.

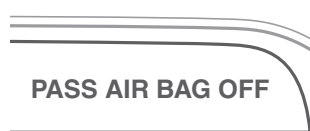

AUDIO SYSTEM

(AM / FM / Cassette / 6-CD / MP3 Audio System Shown)

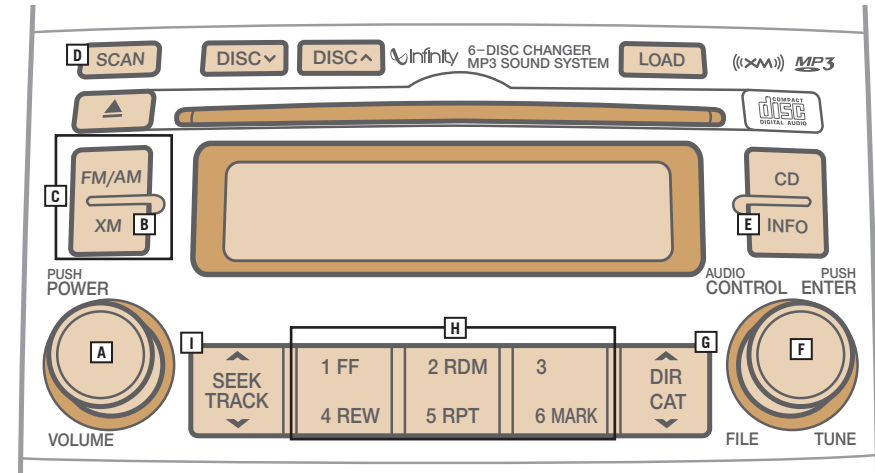

SETTING PRESET MEMORY BUTTONS (AM/FM OR XM®)

- Turn radio on by pressing the POWER button **A**.
- Select AM, FM, or XM radio **C**.
- Turn the Audio Control knob **F** to the desired channel (for XM press the knob to select the desired channel).
- Press and hold any preset button **H** (1-6) until an audible beep is heard to memorize the current channel.

NOTE: FM has 2 bands for up to 12 presets. XM has 3 bands for up to 18 presets.

CATEGORY SEARCH (XM)

- While in XM mode, press the DIR ▲ or CAT ▼ button **G** to scroll through music categories.
- Press the Audio Control knob **F** to select the desired category.

SEEKING NEXT AVAILABLE CHANNEL (AM/FM OR XM)

Press the SEEK ▲ or TRACK ▼ button **I** to seek the next available channel.

NOTES:

- Please refer to your Owner's Manual for more detailed information on how to use your audio system.
- A clear view of the southern sky is recommended to ensure good XM radio reception.

Trial XM subscription ends 3 months following the vehicle date of sale.

Please contact XM Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM subscription.

SCANNING THROUGH AUDIO CHANNELS (AM/FM, XM, OR CD/MP3)

- Press the SCAN button **D** to preview each channel / track.
- Press the SCAN button **D** again to stop the scan feature.
- To scan through the channel presets, for AM/FM/XM only, press and hold the SCAN button **D** until an audible beep is heard.


ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)

- Press the Audio Control knob **F** to select the following sound qualities: Equalizer → Bass → Middle → Treble → Balance → Fader → Current State.
- Turn the Audio Control knob **F** to adjust the sound quality.

DISPLAYING INFORMATION (XM)

Press the INFO button **E** to display the following channel information: Title → Name → Category → Current State.

CLIMATE CONTROL

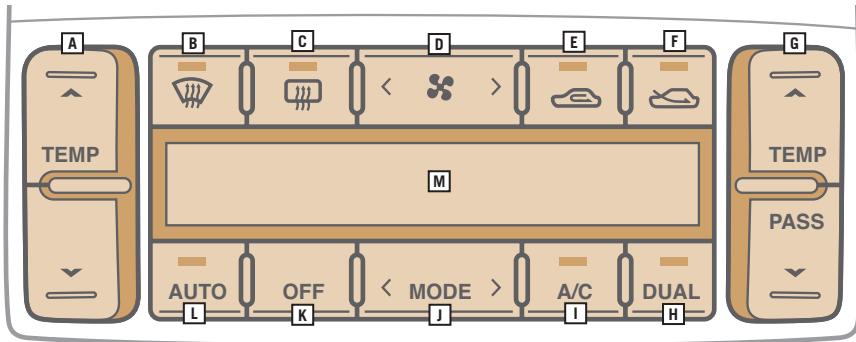

A TEMPERATURE CONTROL SWITCH (DRIVER'S SIDE) – Use to select the degree of heating. Press the \wedge for warmer temperatures. Press the \vee for cooler temperatures.

B FRONT WINDSHIELD DEFROST SWITCH – Press to clear the windshield of fog and / or thin ice.

C REAR WINDOW DEFROST SWITCH – Press to remove moisture from the rear window.

D BLOWER FAN CONTROL SWITCH – Use to select the blower fan speed.

E AIR INTAKE CONTROL SWITCH – Press to activate / deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

F FRESH AIR SYSTEM SWITCH – Push to activate / deactivate. In this mode air enters the vehicle from outside and is heated or cooled according to the other functions selected.

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the air flow control **B** to the defrost position. (The A/C will turn on automatically and the Fresh mode will be activated).
2. Set the fan speed control **D** to the maximum speed.
3. Set the temperature control **A G** to the desired setting.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. This filter is located in the evaporator housing behind the glove box. Your authorized Hyundai dealer can replace this filter for you.

G TEMPERATURE CONTROL SWITCH (PASSENGER'S SIDE) – Use to select the degree of heating. Press the \wedge for warmer temperatures. Press the \vee for cooler temperatures.

H DUAL TEMPERATURE CONTROL SWITCH – Press to operate the driver and passenger side temperatures individually.

I A/C – Press to turn the A/C ON or OFF.

J MODE SWITCH – This controls the flow of air. Air flow can be directed to different levels.

K OFF – Press to turn off the fan.

L AUTO TEMPERATURE SWITCH – Press to allow the system to automatically control the heating and cooling.



M DISPLAY WINDOW – Displays the driver and passenger temperature control settings, the fan speed and the selected air flow.

SEAT WARMER (if equipped)

The front seats can be electrically heated individually when the ignition switch is ON. When the switch is on, a number ranging from

1 to 5 is displayed on the switch (5 = warmest setting). To turn off the seat warmer, set the switch to 0.

NOTE: The seat warmer may not operate if the ambient temperature is warm.

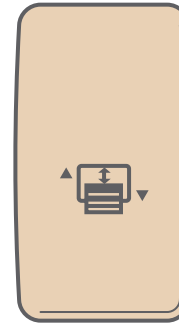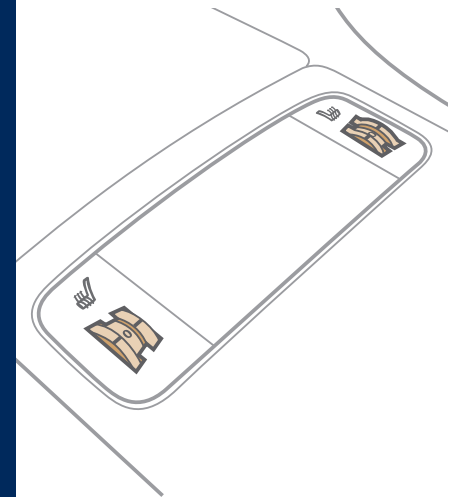

POWER REAR SUNSHADE (if equipped)

The rear window shade switch is located on the center console.

Press the curtain switch to raise or lower the rear window curtain.

NOTE: When the selector lever is shifted into Reverse (R), the rear window curtain will automatically lower if the curtain is in the raised position.

TRANSMISSION / SHIFTRONIC™

P – Park


R – Reverse

N – Neutral

D – Drive

(+/-) – Shiftronic

- Push this lever forward to shift up one gear.
- Pull the lever backwards once to shift down one gear.

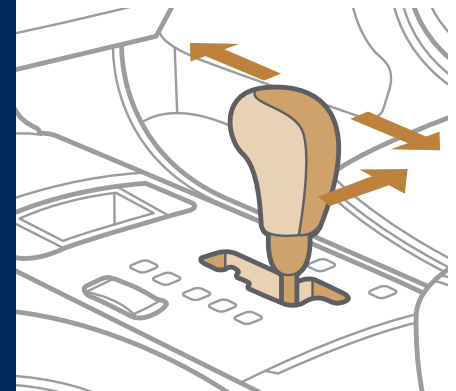

ADDITIONAL FEATURES

REMOTE KEYLESS ENTRY

LOCK

Press to lock all doors and arm the alarm. Press again to hear confirmation chirp.

UNLOCK

Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.

TRUNK UNLOCK

Press and hold for longer than one second to release the trunk lid.

PANIC

Press and hold to activate the horn and flashing lights for 30 seconds. Press again to turn off panic mode.



IMMOBILIZER SYSTEM


The immobilizer system is an anti-theft device, designed to deter automobile theft. Please refer to your Owner's Manual for more information.



TWO TYPES OF KEYS


MASTER KEY (M)

This key is for general use. It will open all locks on your vehicle. One side of the key has the Hyundai logo and the other side has the M symbol.

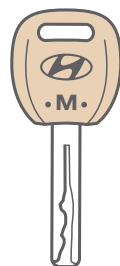


SUB KEY (S)

Similar to the master key, this key will only function in the ignition and the door locks, but it will not operate the trunk and the glove box. One side of the key has the Hyundai logo and the other side has an S symbol. Leaving your sub key with a parking attendant will ensure that your vehicle's trunk, trunk lid release, glove box compartment and rear trunk access may not be unlocked in your absence.

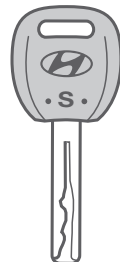

BASIC SAFETY PRECAUTION

Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts. Small children should always ride in the rear seat in the appropriate child restraint system (see the Owner's Manual for child safety details). Never place children under 13 years old in the front seats to avoid injury that may result from air bag deployment. Always refer to the Owner's Manual for complete safety precaution information.

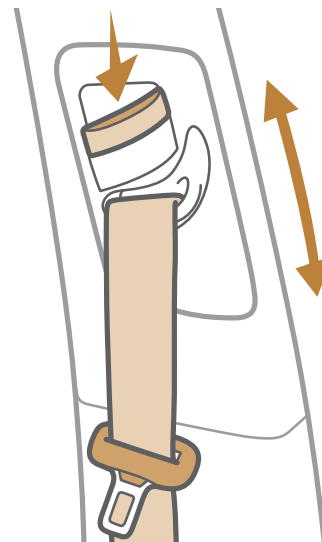

HEIGHT ADJUSTABLE FRONT SEAT SHOULDER BELT

This should be adjusted so that it lies across your chest and midway over your shoulder nearest the door and not your neck.


To raise the height adjuster, pull it up. To lower, push it down while pressing the height adjuster button.

NOTE: Moving the height adjuster quickly may cause the seat belt retractor to engage.

HEADREST ADJUSTMENT

To raise or lower the headrest: Pull up on the headrest to raise it. To lower the headrest, press the lock knob while pressing down on the headrest.

To adjust the headrest forward or backward: Pull the headrest forward to adjust it to one of three positions. To adjust the headrest rearward, pull the headrest all the way forward, then release.

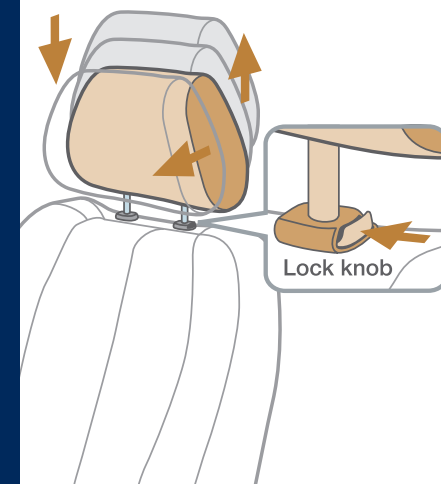

POWER FRONT SEAT (if equipped)

A LUMBAR CONTROL


To adjust the lumbar support, press the switch.

B SEATBACK ANGLE

Move the control forward or backward to recline the seatback.

C SEAT HEIGHT AND FORWARD / BACKWARD

Raising / lowering the front of the control will raise / lower the front part of the cushion. Raising / lowering the back of the control will raise / lower the rear part of the cushion. Move the control forward or rearward to move the seat forward or rearward to the desired position.

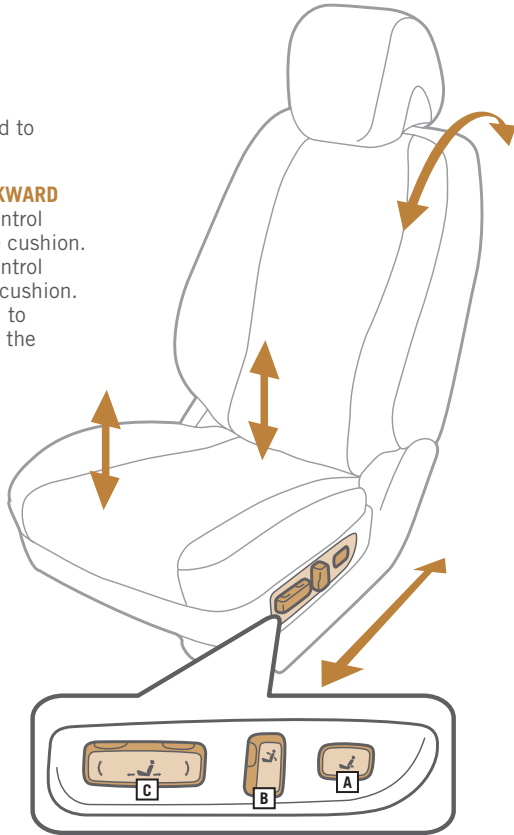

REARVIEW MIRROR / COMPASS / HOMELINK® (if equipped)

D AUTO DIMMING ON / OFF FUNCTION

When turned on, this feature will automatically detect and reduce rearview mirror glare.


HOMELINK® **A** **B** **C**

- Replaces radio frequency (RF) transmitters used by garage door openers, car door locks, and other devices.
- Additional Homelink information can be found at:

www.homelink.com or calling 800-355-3515.

COMPASS FUNCTION **E**

- Press to turn compass on and off.

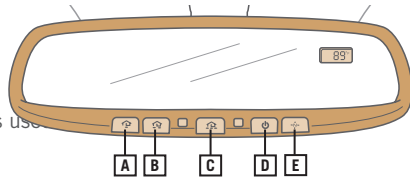

SUNROOF CONTROLS

The sunroof can only be opened, closed, or tilted when the ignition switch is in the ON position.


Opening the sunroof: Press the SLIDE OPEN button **A** for more than one second to activate the one-touch feature.

Closing the sunroof: Press and hold the TILT UP button **B** until the sunroof is closed.

To tilt the sunroof: Press the TILT UP button **B**.

To close the sunroof, press the SLIDE OPEN button **A** and hold it until the sunroof is closed.

NOTE: If you hold either button for more than one second this will activate the one-touch feature.

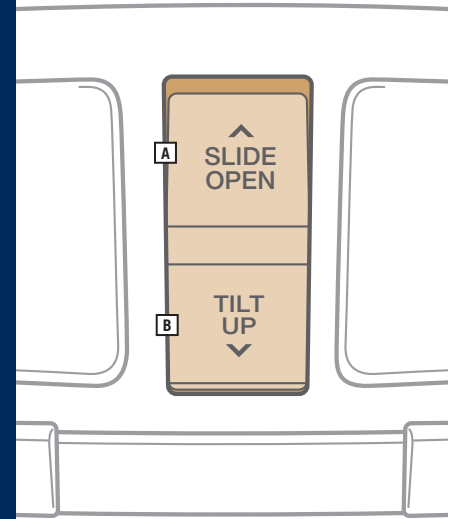

TRUNK LID CONTROL BUTTON

The trunk lid control button, located in the vehicle glove box, is used to prevent unauthorized access to the trunk.

LOCKING

To activate the trunk lock system so that the trunk can only be opened with the master key, perform the following:



1. Open the glove box.
2. Set the trunk lid control button to the OFF position (not depressed). In the OFF position, the trunk cannot be unlocked with the trunk release lever or trunk open button on the transmitter. It can only be opened using the master key.
3. Close and lock the glove box with the master key. When leaving a key with a parking lot attendant or valet, perform steps 1 to 3 above and leave the sub key with the attendant. The sub key can start the engine and operate door locks only. The trunk can never be opened with the sub key.

RELEASING

To release the trunk lock feature, open the glove box with master key and set the trunk lid control button to the ON position (depressed). In this position the trunk will open with the trunk lid release lever or transmitter.

TO UNLOCK USING THE KEY

To open the trunk lid, insert the key into the key slot located on the underside of the trunk lid above the rear license plate and turn it clockwise to unlock. The trunk compartment light illuminates when the trunk lid is opened.

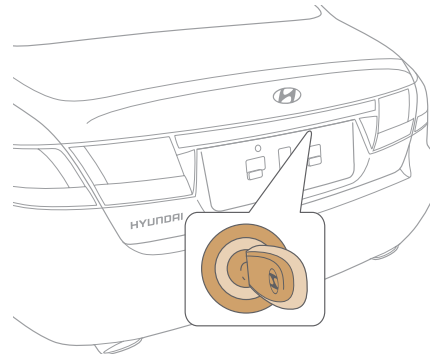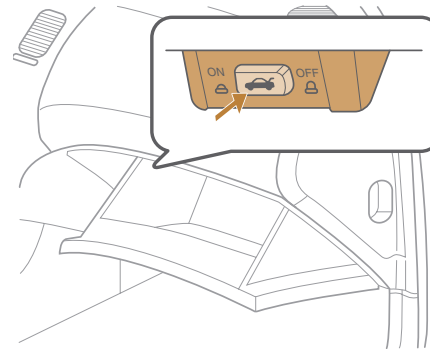

AZERA CUSTOMER DELIVERY CHECK LIST


AZERA CUSTOMER DELIVERY CHECK LIST (continued)

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE


BEFORE DELIVERY

- VERIFY ALL REMOTE KEYLESS ENTRY LOCK / UNLOCK
- VERIFY VEHICLE IS CLEAN INSIDE AND OUT
- CHECK PAINT FINISH FOR SCRATCHES, DENTS, ETC. (IF PRESENT NOTIFY MANAGER)
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE (IF EQUIPPED)
- WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES


CLIMATE CONTROL – PAGE 10

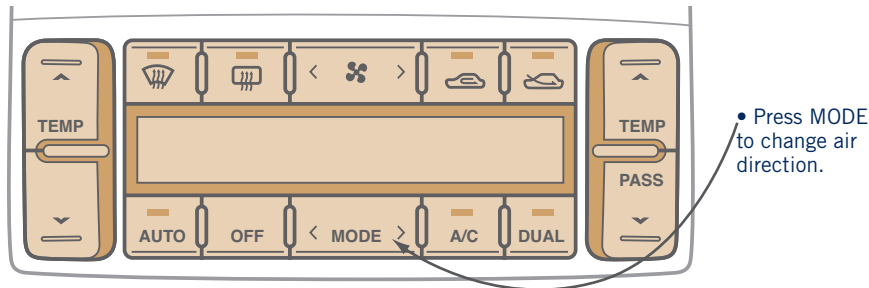

WINDSHIELD WIPER / WASHER – PAGE 8

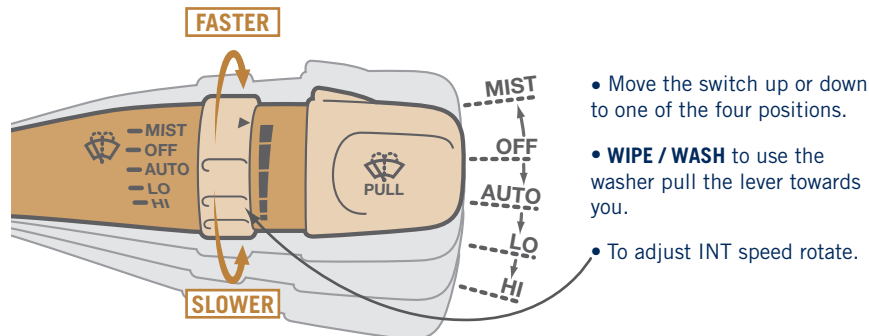

STEERING WHEEL AUDIO CONTROLS – PAGE 6

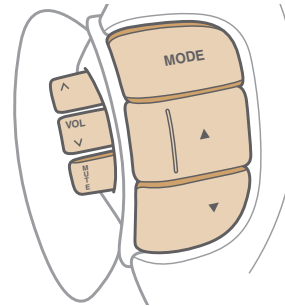

- Mode changes the audio from FM → AM → XM.

UNLOCKING VEHICLE – PAGE 12



- Demonstrate dual stage unlock with the key and Remote Keyless Entry.
- Demonstrate unlocking the trunk with key and Remote Keyless Entry.

DURING DELIVERY

- VERIFY AUDIO AND VIDEO SYSTEMS OPERATION (CONFIRM PRESETS)
- VERIFY CLOCK TIME SETTING AND SET AS NEEDED
- EXPLAIN FIRST SERVICE PROCEDURE - PROVIDE SERVICE MANAGER'S OR SERVICE WRITER'S BUSINESS CARD
- REVIEW AMERICA'S BEST WARRANTY
- ASK IF CUSTOMER HAS ANY QUESTIONS

Sales Consultant

Date

Sales Manager

Date

Customer

Date