

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil & Filter	Replace	7,500	Replace	3,000
Tire Rotation	Perform	7,500	Perform	7,500
Fuel Lines, Fuel Hoses & Connections	Inspect	7,500	Inspect	Same As Normal
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	7,500	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Vapor Hose & Fuel Filler Cap	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator & Blower Unit)	Replace	every 12 mos. or 10,000	Inspect	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Brake Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Drive Shaft & Boots	Inspect	15,000	Inspect	7,500
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Power Steering Pump, Belt & Hoses	Inspect	15,000	Inspect	Same As Normal
Air Cleaner Filter (Engine)	Inspect Replace	7,500 30,000	Inspect	More Frequently
Fuel Tank Air Filter	Inspect Replace	15,000 30,000		
Automatic Transaxle Fluid	Inspect Replace	15,000 105,000	Inspect Replace	Same As Normal 30,000
Coolant	Replace	Every 24 mos. or 30,000	Replace	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Crankcase Ventilation Hose	Inspect	30,000	Inspect	Same As Normal
Drive Belt (Autotensioner, Alt, P/Str'g, A/con, W/Pump)	Inspect	30,000	Inspect	Same As Normal
Rear Disc Brake/Linings, Parking Brake	Inspect	30,000	Inspect	More Frequently
Fuel Filter	Replace	37,500	Replace	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	97,500	Replace	More Frequently

*See Owner's Manual for details.

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

HYUNDAI ENTOURAGE QUICK REFERENCE GUIDE



NP150 - P8000
10/07 (rev 10/07)



www.hyundaiusa.com

Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
XM Radio: **1-800-967-2346**

DRIVER CONTROLS

**Driver Position
Memory System***
Page 4

**Power Mirror
Control**
Page 5

**Headlights and
Fog Lights***
Page 5

 
**Tire Pressure
Monitoring System
(TPMS)**
Page 7

Wiper / Washer
Page 8

**Clock
Adjustment**
Page 9

**Occupant
Classification
System**
Page 9

Audio System*
Page 10-11

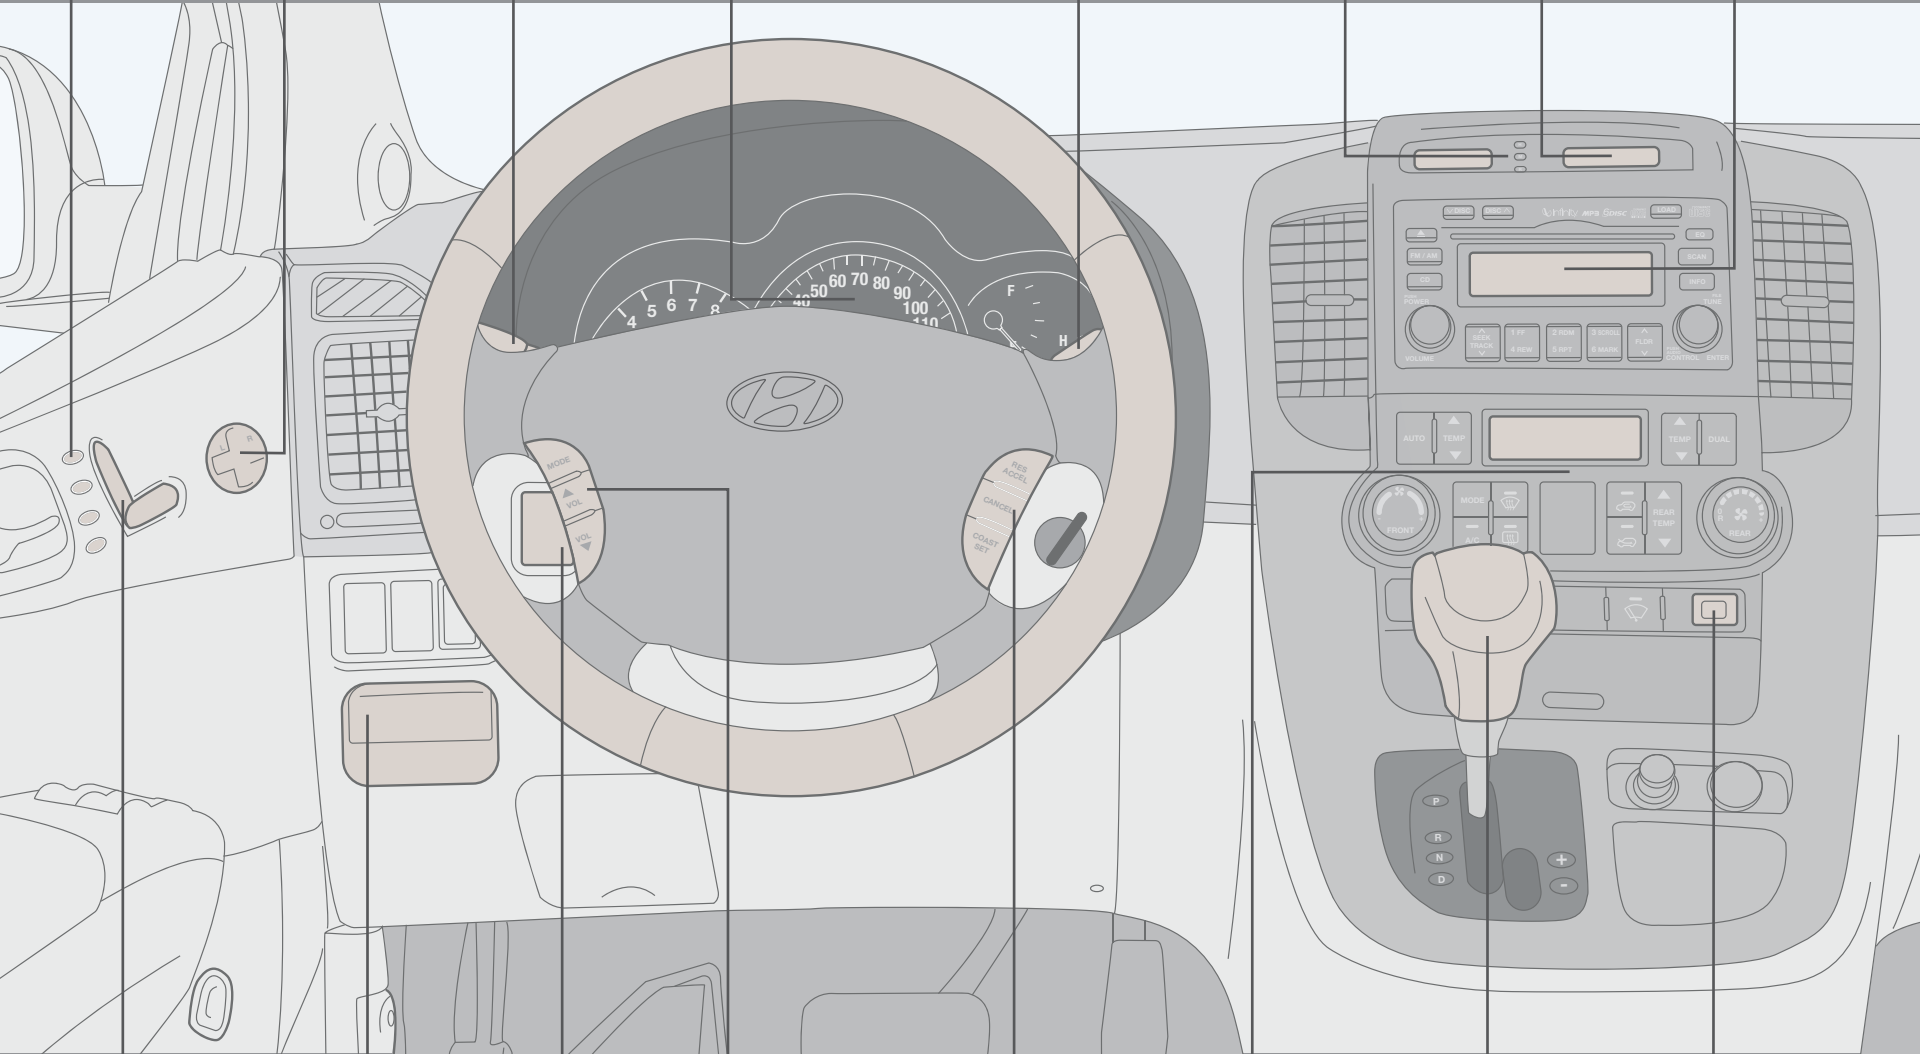

**Power Seat
Adjustment***
Page 4

**Parking Brake
Release**
Page 6

**Adjustable
Pedals***
Page 6

**Steering Wheel
Audio Controls***
Page 6

Cruise Control
Page 7

Climate Control
Page 12-14

**Automatic
Transmission**
Page 14

Heated Seats*
Page 14

 
DRIVER CONTROL FEATURES

DRIVER POSITION MEMORY SYSTEM (if equipped)

The Driver Position Memory System controls are located on the driver's side door trim.

TO SET THE MEMORIZED DRIVER POSITION:

1. Place the shift lever into P (Park) while the ignition switch is ON.
2. Adjust the driver's seat, outside rearview mirrors and adjustable pedal positions to the desired position.
3. Push the M button on the control panel until the signal beeps.

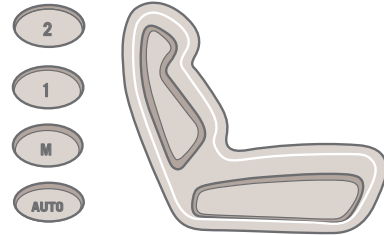

4. Within five seconds, push button 1 or 2 until the signal beeps twice. The beep confirms that the positions are successfully memorized.

TO ACTIVATE THE MEMORIZED POSITION:

1. Place the shift lever into P (Park) while the ignition switch is ON.
2. Press button 1 or 2 to adjust seating position to memorized setting.

EASY ACCESS FUNCTION

When the AUTO button is ON (the indicator light illuminates) and the shift lever is in the P (Park) position, the system will move the driver's seat forward or backward automatically so you can comfortably enter and exit the vehicle.

See the Owner's Manual for conditions in which the Driver Position Memory System will not operate.

POWER SEAT ADJUSTMENT (if equipped)

A LUMBAR CONTROL

To manually adjust the lumbar support, move the lever to the desired position.


B SEATBACK ANGLE

To recline the seatback, tilt the control forward or backward.

C SEAT HEIGHT AND FORWARD / BACKWARD

To adjust seat cushion height, move the control switch according to the desired adjustment. The front and rear sections of the cushion can be adjusted independently.

To move the seat forward or backward, move the control switch C accordingly.


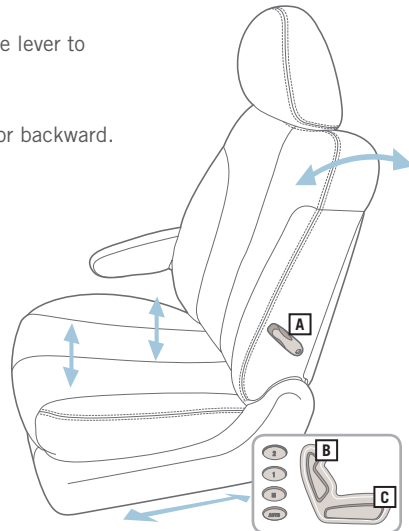


POWER MIRROR CONTROL

The switch is located on the driver's door panel next to the driver position memory system and can be used to adjust both the left and right outside mirrors.

TO ADJUST THE POSITION OF EITHER MIRROR:

1. Move the selecting switch to the R (right) or L (left) to adjust the corresponding mirror.
2. Adjust the mirror angle by depressing the appropriate direction on the perimeter switch.
3. Move the selecting switch to L to tilt down both mirrors while in reverse.
4. Move the selecting switch to R to tilt down only the right mirror.
5. Move the selecting switch back to the middle position to deactivate the perimeter switch.

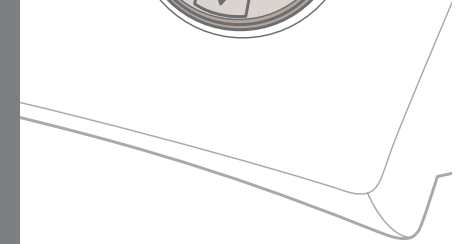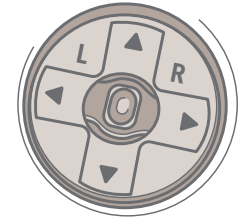

HEADLIGHTS AND FOG LIGHTS

HEADLIGHT SWITCH

To operate the headlights, turn the switch on the end of the lever:

OFF – Headlights are off

☞☞ – Parking Lights



☞☞☞ – Headlights

AUTO – Auto Light (if equipped)

NOTE: The ignition must be in the ON position to turn on the headlights.

High Beam Activation: Push the lever forward.

Flash Feature: Pull the lever toward you and release.

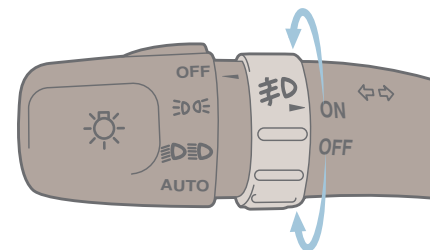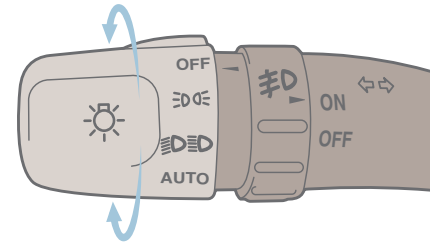


FOG LIGHT SWITCH (if equipped)

Turn the switch to the ON position.

NOTE: Fog lights will only function on low beam.

PARKING BRAKE RELEASE


To release the parking brake, pull the parking brake release lever.

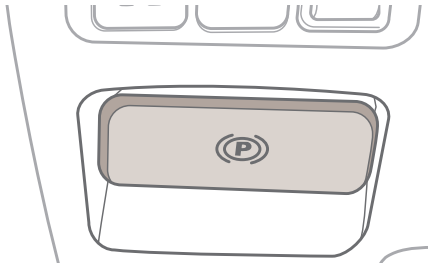

ADJUSTABLE PEDALS (if equipped)

With the transmission shift lever in the P (Park) position, turn the ignition key to ON.

Push the pedal position switch ▲ to move the pedals toward you. Push the switch ▼ to move the pedals away from you.

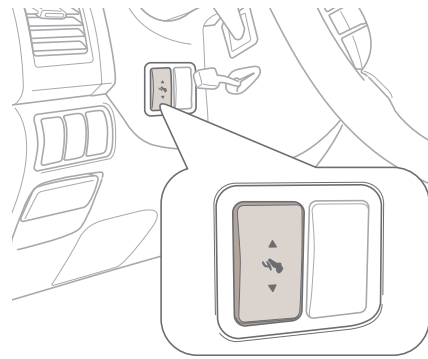

STEERING WHEEL AUDIO CONTROLS (if equipped)

A VOLUME SWITCH

Press ▲ to increase or ▼ to decrease audio volume.

B MODE SWITCH


Each press of the MODE switch changes the audio mode as follows:
FM → AM → XM

C SEEK SWITCH

- Tap once to navigate through radio.
- Hold to quickly scroll through audio frequencies or fast forward / rewind through CD/MP3 tracks.

D MUTE SWITCH

Press the MUTE switch to turn the sound on or off.

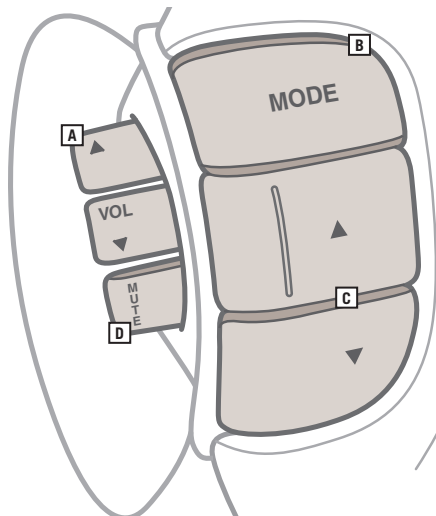

CRUISE CONTROL

To set a cruising speed:

1. **ON D** – Pull switch and the CRUISE indicator in the instrument cluster will illuminate. Accelerate to the desired cruising speed (above 25 mph).

2. **SET C** – Push and remove your foot from the accelerator pedal.


To accelerate or decelerate speed:

ACCEL A – Press to accelerate your speed with cruising speed set.

COAST C – Press to slow speed down with cruising speed set.

To cancel the cruising speed:

Press the **CANCEL B** switch, press the brake pedal, or turn **OFF D** cruise control.

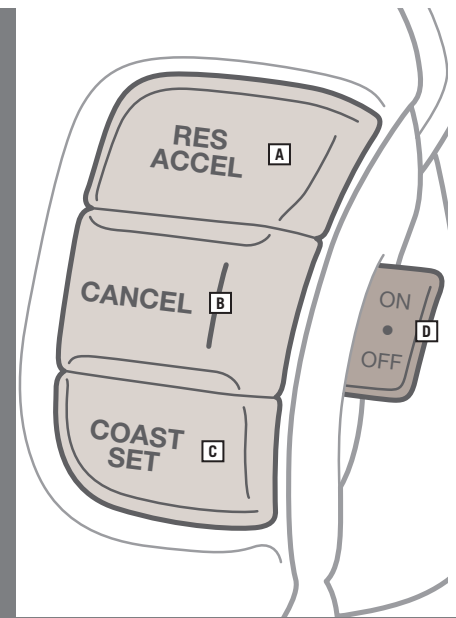

TIRE PRESSURE MONITORING SYSTEM (TPMS)

LOW TIRE PRESSURE INDICATOR:

Illuminates if one or more of your tires is significantly under-inflated. You should stop and check your tires as soon as possible, and inflate them to the proper pressure.


LOW TIRE PRESSURE POSITION INDICATOR:

Indicates which tire is significantly under-inflated by illuminating the corresponding position light.

TPMS MALFUNCTION INDICATOR:

Illuminates and stays illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.

NOTE: The TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure indicator.

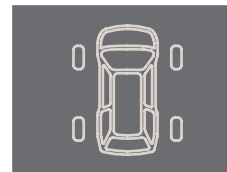

WIPER / WASHER


To activate the windshield wipers, move the wiper / washer switch to one of the four positions:

MIST – This feature allows the windshield wipers to make a single wipe to clear any mist on the windshield. Move the windshield wiper / washer switch upward.

INT – Intermittent wiper operation is the first downward position. The wiper speed may be varied by rotating the INT switch.


LO – Low-speed operation is the second downward position.

HI – High-speed operation is the third downward position.

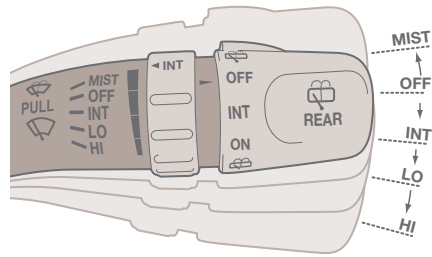

WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer lever towards you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

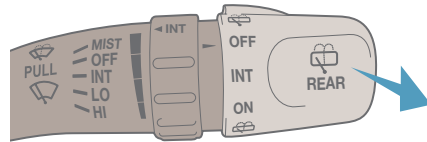


REAR WINDOW WIPER / WASHER

To operate the rear wipers, rotate the end of the wiper stalk.

To turn ON rotate the wiper stalk up one position. The rear wiper will run continuously.

To use the washer rotate the wiper stalk up two positions.

To wash with two or three wipes rotate the wiper stalk down one position.

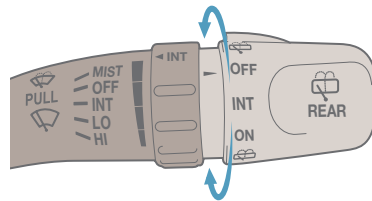

CLOCK ADJUSTMENT

There are two control buttons for the digital clock. Their functions are:

H: Push H to advance the hours.

M: Push M to advance the minutes.

NOTE: Press and hold the **H** and **M** button to toggle between military time and standard time.



OCCUPANT CLASSIFICATION SYSTEM


PASSENGER AIR BAG OFF INDICATOR

The indicator will illuminate when you turn the ignition key to START or ON. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bag under certain conditions (light on). Refer to the Owner's Manual for a complete description of this system.

NOTE: The driver's air bag and the side impact air bag are not part of the occupant classification system.



AUDIO SYSTEM

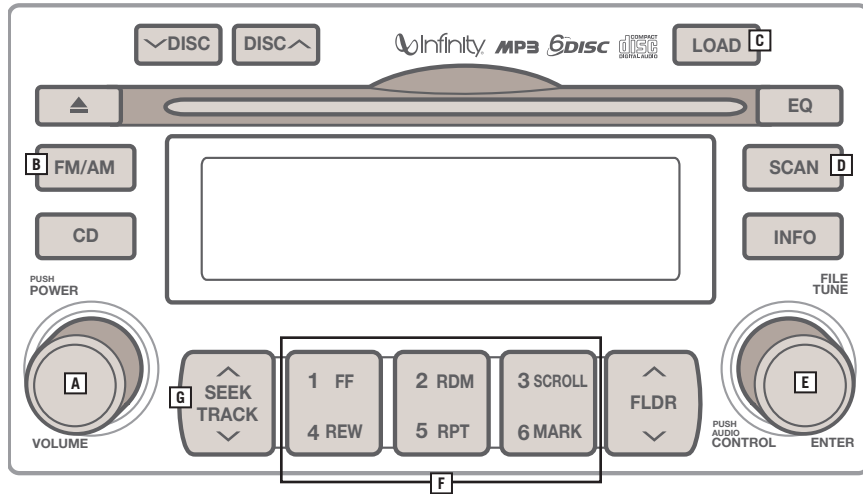

SETTING PRESET MEMORY BUTTONS (AM/FM)

1. Turn the radio on by pressing the POWER button **A**.
2. Select AM or FM **B**.
3. Adjust the Tune knob **E** to the desired channel.
4. Press and hold any preset button **F** (1-6) until an audible beep is heard to memorize the current channel.

SEEKING NEXT AVAILABLE CHANNEL (AM/FM)

Press the SEEK \wedge or TRACK \vee button **G** to seek the next available channel.

LOADING A CD (6-DISC)

1. Press the LOAD button **C**.
2. Insert the CD when the display shows INSERT CD.


SCANNING THROUGH AUDIO CHANNEL (AM/FM OR CD)

1. Press the SCAN button **D** to preview each channel / track.
2. Press the SCAN button **D** again to stop the scan feature.

ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)

1. Press the Tune knob **E** to select the following sound qualities:
Bass \rightarrow Middle \rightarrow Treble \rightarrow Fader \rightarrow Balance \rightarrow Surround \rightarrow Current State
2. Press the Tune knob **E** to adjust the sound quality.

REAR SEAT ENTERTAINMENT SYSTEM (RSE)* (if equipped)

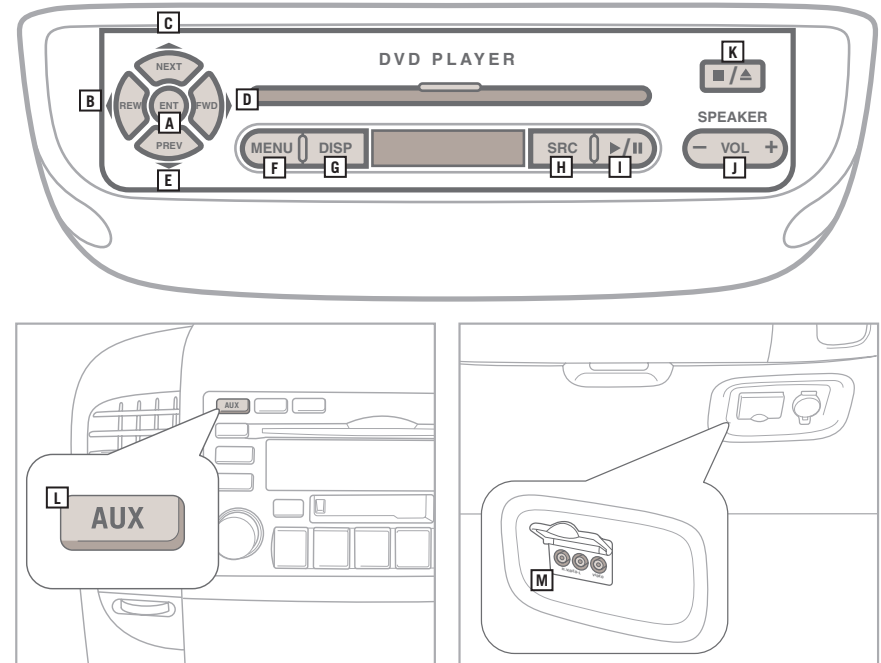

A ENT – Enter Button

B REW – Rewind

C NEXT – Next Chapter

D FWD – Forward Button

E PREV – Previous Chapter

F MENU – Menu Button

G DISP – Display Button

H SRC – Source Button – Power Button

I Play / Pause Button

J Speaker Volume Control

K Stop/Eject Button


L AUX – Auxiliary Button – (Located on front audio controls) Allows you to listen to the played DVD through the vehicle's speakers.

M RCA Jack Inputs – Allows you to play a variety of video games available in the market and also allows you to connect a camcorder or digital camera to the DVD system.

*For more information please refer to the Owner's Manual.

FRONT MANUAL CLIMATE CONTROL

(if equipped)

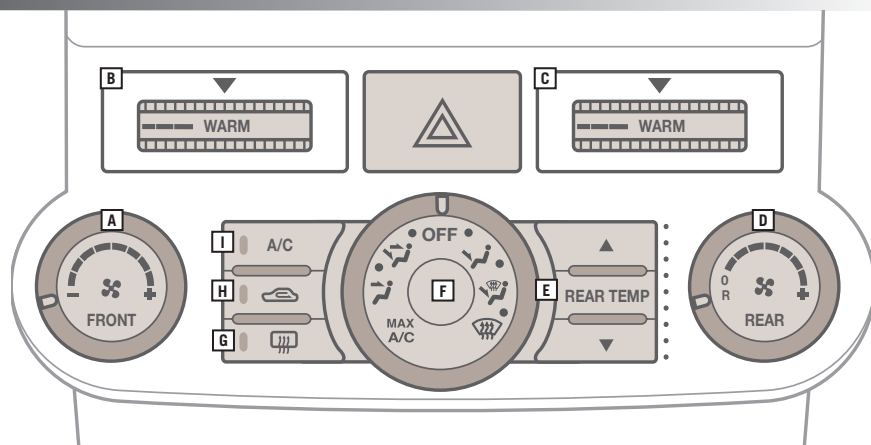

A FRONT FAN SPEED CONTROL – Use to select the blower fan speed. Turn to the right for higher speed or left for lower speed.

B DRIVER'S TEMPERATURE CONTROL – Use to select the degree of heating / cooling. Turn the knob to the WARM position for warmer air or COOL position for cooler air.

C PASSENGER'S TEMPERATURE CONTROL – Use to select the degree of heating / cooling. Turn the knob to the WARM position for warmer air or COOL position for cooler air.

D REAR FAN SPEED CONTROL (front control only) – Use to select the blower fan speed. Turn to the right for higher speed or left for lower speed.

E REAR TEMPERATURE CONTROL – Use to select the rear air temperature. Push the upper part ▲ for warmer air or push the lower part ▼ for cooler air.

F MODE SELECTION CONTROL – Use to select the direction of the air flow.

G REAR WINDOW DEFROST CONTROL – Press to remove moisture from the rear window.

H AIR INTAKE CONTROL:

- **Recirculated Air Position** – When the indicator light on the control is illuminated air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

- **Fresh Air Position** – When the indicator light on the control is not illuminated air enters the vehicle from outside and is heated or cooled according to the other functions selected.

I AIR CONDITIONING CONTROL – Press to turn A/C ON or OFF.

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the temperature control **B C** to the desired setting.
2. Set the fan speed **A** to the highest setting.
3. Set the mode selection control **F** to the defrost position.


NOTE:

- If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. The filter is located in the evaporator housing behind the glove box. Your authorized Hyundai dealer can replace this filter for you.

- To speed up defogging and dehumidifying, the fresh air mode should be selected.

FRONT AUTOMATIC CLIMATE CONTROL

(if equipped)

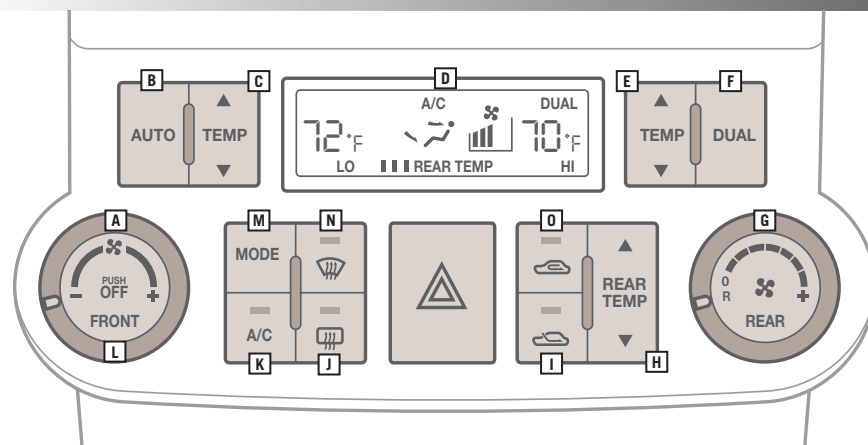

A FRONT FAN SPEED CONTROL – Use to select the blower fan speed. Turn to the right for higher speed or left for lower speed.

B AUTO TEMPERATURE CONTROL – Press to allow the system to automatically control the heating and cooling.

C DRIVER'S TEMPERATURE CONTROL – Use to select the degree of heating. Press the ▲ for warmer temperatures or press the ▼ for cooler temperatures.

D DISPLAY WINDOW – Displays the temperature control setting, the fan speed setting and the selected air flow setting.

E PASSENGER'S TEMPERATURE CONTROL – Use to select the degree of heating. Press the ▲ for warmer temperatures or press the ▼ for cooler temperatures.

F DUAL TEMPERATURE CONTROL SWITCH – Press to operate the driver and passenger side temperature individually.

G REAR FAN SPEED CONTROL (front control only) – Use to select the blower fan speed. Turn to the right for higher speed or left for low speed.

H REAR TEMPERATURE CONTROL – Use to select the rear air temperature. Push the upper ▲ for warmer air or push the lower ▼ for cooler air.

I FRESH AIR SYSTEM CONTROL – Press to activate / deactivate. In this mode air enters the vehicle from outside and is heated or cooled according to the other functions selected.

J REAR WINDOW DEFROST CONTROL – Press to remove moisture from the rear window.

K AIR CONDITIONING CONTROL – Press to turn A/C ON or OFF.

L OFF – Press to turn off the system.

M MODE SELECTION CONTROL – Use to select the direction of the air flow.

N FRONT WINDSHIELD DEFROST CONTROL – Press to activate / deactivate to clear the windshield of fog and / or thin ice.

O AIR INTAKE CONTROL – Press to activate / deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the temperature control **C F** to the desired setting.
2. Set the fan speed **A G** to the highest setting.
3. Press the front windshield defrost control **N**.

NOTE:

- If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. The filter is located in the evaporator housing behind the glove box. Your authorized Hyundai dealer can replace this filter for you.

- To speed up defogging and dehumidifying, the fresh air mode should be selected.


REAR CLIMATE CONTROL

To activate the rear climate control turn the rear fan dial **D** (manual) or **E** (automatic) to R on the front control.

A REAR FAN SPEED CONTROL – Use to select the blower fan speed.

B REAR MODE SELECTION CONTROL – Use to direct the flow of air.

C REAR TEMPERATURE CONTROL – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

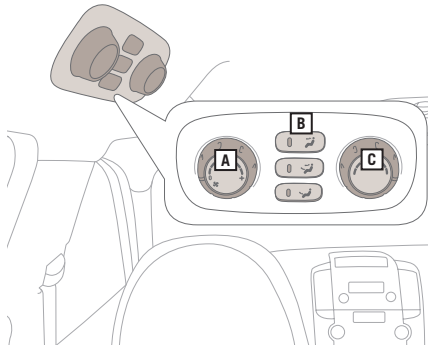

HEATED SEATS (if equipped)

The front seats can be electrically heated individually when the ignition switch is ON. Turn the switch from 0 to 5 to warm the seats. Zero turns the seat warmer off, while 5 is the warmest.



AUTOMATIC TRANSMISSION

P – Park


R – Reverse

N – Neutral

D – Drive

(+/-) – SPORTS Mode

- Push lever forward to shift up one gear.
- Pull lever backwards once to shift down one gear.

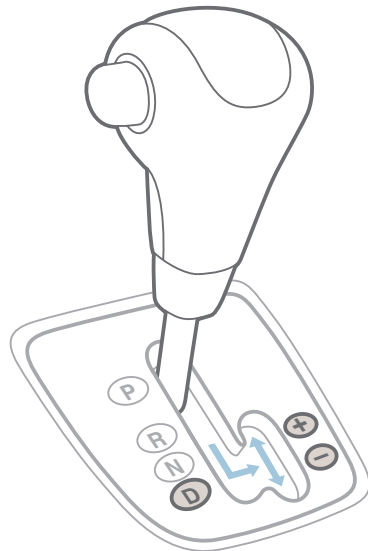

ADDITIONAL FEATURES

REMOTE KEYLESS ENTRY

LOCK
Press to lock all doors and arm the alarm. Press again to hear a confirmation chirp.


UNLOCK
Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.

POWER TAILGATE (if equipped)
Press to open or close the tailgate.

LEFT SLIDING DOOR (if equipped)
Press to open or close the sliding door.

RIGHT SLIDING DOOR (if equipped)
Press to open or close the sliding door.

PANIC
Press and hold for one-half seconds to activate the horn and flashing lights. Press again to turn off panic mode. Panic mode automatically shuts off (resets) after 30 seconds.

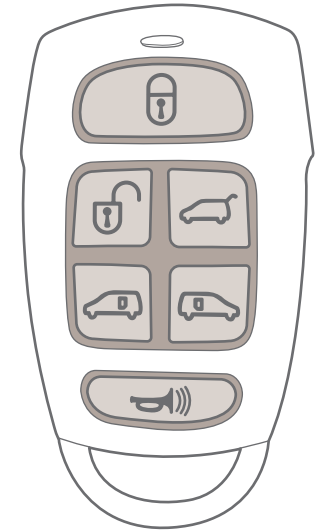

CHILD-PROTECTOR REAR DOOR LOCK


To engage the child-protector feature so the rear door cannot be opened from inside the vehicle, move the child-protector lever located on the rear edge of the door to the **LOCK** position and close the door.

To disengage the child-protector feature, move the lever to the **UNLOCK** position.

To open the door from the outside, pull the outside door.

LOCK – Does not allow opening the rear door from inside the vehicle.

UNLOCK – Allows opening the rear door from inside and outside the vehicle.

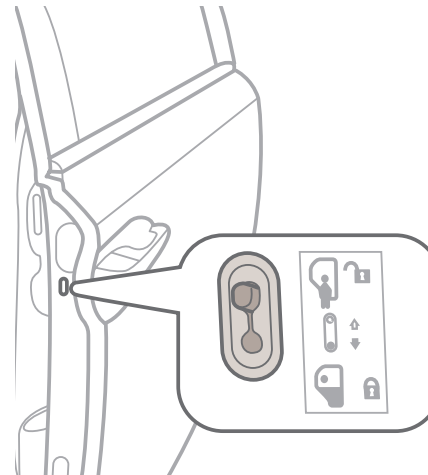


POWER SLIDING DOORS (if equipped)

There are three ways to open and close the sliding doors automatically:

- Overhead console
- Center pillar
- Keyfob



OVERHEAD CONSOLE

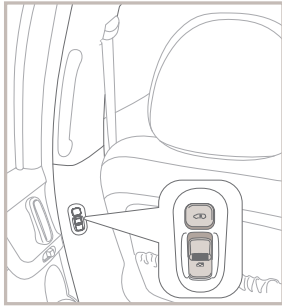

CENTER PILLAR BUTTON




KEYFOB

NOTE: When the power ON / OFF button (PWR) is OFF (not depressed), the power sliding doors cannot be controlled with the subcontrol buttons or door handles. However, the doors can be controlled with the keyfob or the main control buttons on the overhead console. Also, the doors can be opened and closed manually by pulling the inside or outside door handles.

HOMELINK® (if equipped)

The Homelink® Wireless Control System that is integrated into the rearview mirror provides a convenient way to replace up to three hand-held radio-frequency (RF) transmitters used for garage doors, estate gates, home lighting, etc. with a single built-in device.

To set or operate your Homelink®, refer to your Owner's Manual for detailed instructions. Additional Homelink® information can be found at: www.homelink.com or by calling 1-800-355-3515.

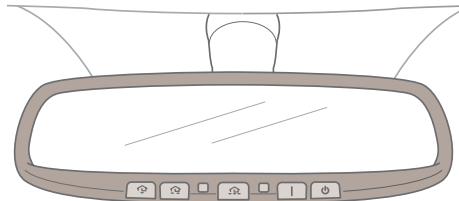


SUNROOF CONTROLS (if equipped)

The sunroof can only be opened, closed, or tilted when the ignition switch is in the ON position.

Opening the sunroof: Press the slide button **A** momentarily to open the sunroof all the way. Press and hold to manually adjust.

To tilt the sunroof: Press the tilt button **B** momentarily to tilt the sunroof all the way. Press and hold to manually adjust.

Closing the sunroof: Press the close button **C** and hold it until the sunroof is closed.

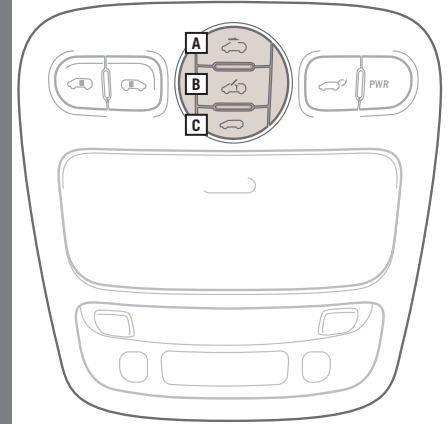


TRIP COMPUTER (if equipped)

With the ignition switch in the ON position, press the MODE button to change the display:

- Distance to empty (RANGE) ←
- ↓
- Driving time (ET)
- ↓
- Average fuel consumption (AVG)
- ↓
- Outside temperature
- ↓
- OFF

Push the RESET button more than one second to initialize the displayed information such as tripmeter, average speed, average fuel consumption and drive time.

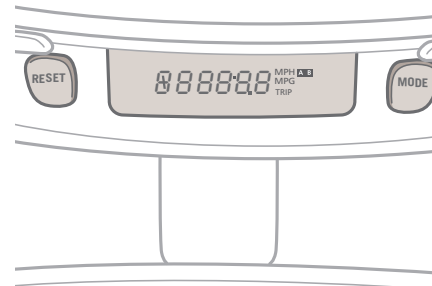


POWER TAILGATE (if equipped)


There are three ways to open and close the tailgate automatically:

- Overhead console
- Tailgate button
- Keyfob

NOTE: When the power ON / OFF button (PWR), located in the overhead console, is OFF (not depressed), the power tailgate cannot be controlled with the subcontrol buttons or trunk lever. However, the power tailgate can be controlled with the keyfob or the main control buttons on the overhead console.

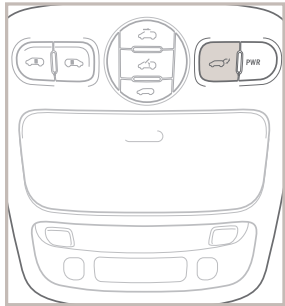

OVERHEAD CONSOLE

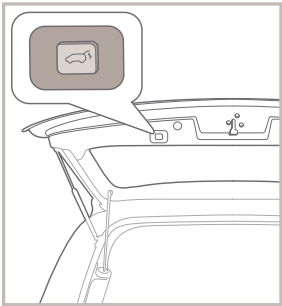

TAILGATE




KEYFOB

HEIGHT ADJUSTABLE SEAT SHOULDER BELT (Front seat and 2nd row)

The height should be adjusted so the seat belt crosses your chest and midway over your shoulder nearest the door and not your neck.



To raise the height adjuster, pull it up.
To lower, push it down while pressing the height adjuster button.

NOTE: Moving the height adjuster quickly may cause the seat belt retractor to engage.

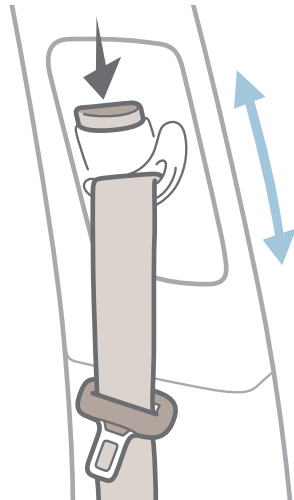

ADJUSTING AND FOLDING THE 2ND ROW SEAT

1. Lower the headrest **A** to the lowest position.
2. Flip up the armrests **B**.
3. Move the seat **C** to rearmost position.
4. Double-fold **D** the rear seat forward by pulling up the seatback recliner lever fully and flip upwards.
5. Pull the folding strap **E** out of the pocket located under the seat cushion. Lift the entire folded seat forward and tie the folded seat to the assist handle using the supplied straps.

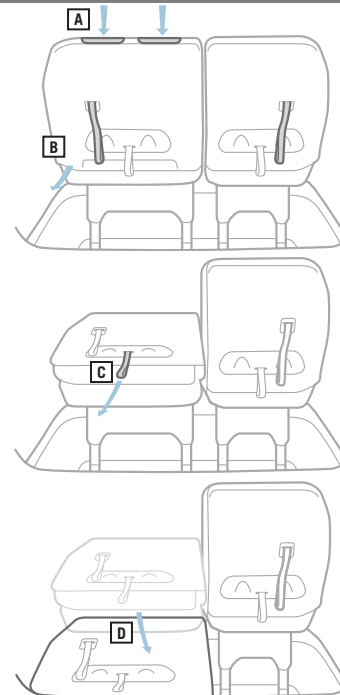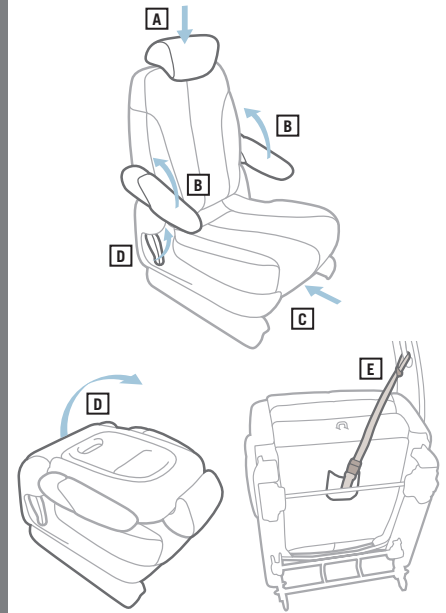

STOWING THE 3RD ROW SEAT

1. Lower the headrest **A** to the lowest position.
2. Fold the seatback **B** by pulling the folding strap.
3. Pull the seat **C** by using the stowing strap.
4. Stow the seat **D** by pushing down firmly, until it clicks into place.

ENTOURAGE CUSTOMER DELIVERY CHECK LIST


HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY


- VERIFY ALL REMOTE KEYLESS ENTRY LOCK / UNLOCK
- VERIFY VEHICLE IS CLEAN INSIDE AND OUT
- CHECK PAINT FINISH FOR SCRATCHES, DENTS, ETC. (IF PRESENT NOTIFY MANAGER)
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE (IF EQUIPPED)
- WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

AUTOMATIC / MANUAL CLIMATE CONTROL – PAGES 12-14

 
MANUAL

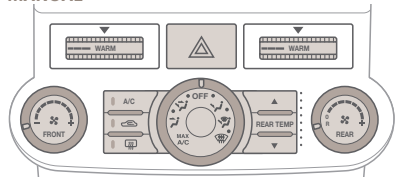


REAR SEAT CONTROLS

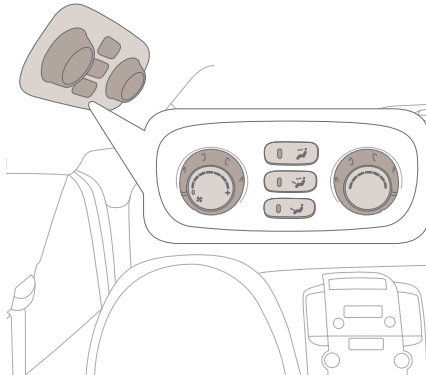 

AUTOMATIC

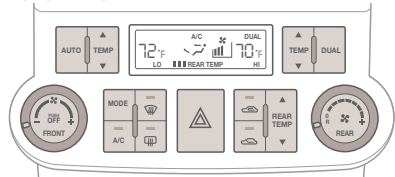 

WIPER / WASHER – PAGE 8

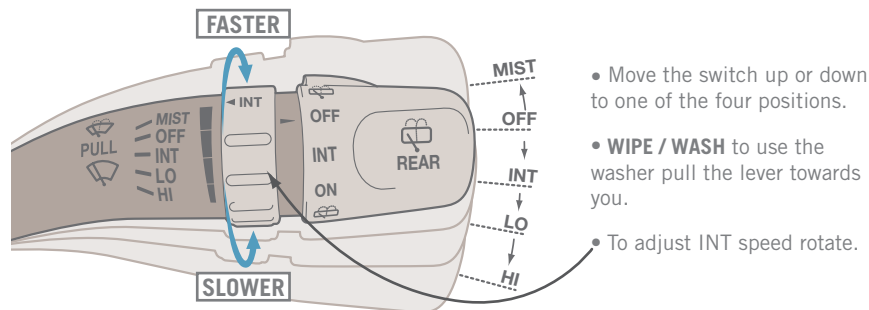 

ENTOURAGE CUSTOMER DELIVERY CHECK LIST

 
(continued)

TIRE PRESSURE MONITORING SYSTEM (TPMS) – PAGE 7



• **LOW TIRE PRESSURE INDICATOR:** Illuminates if one or more of your tires is significantly under-inflated. Safely park and inflate them to the proper pressure.

NOTE: Refer to the driver's side B-Pillar for recommended tire pressure on OEM tires.

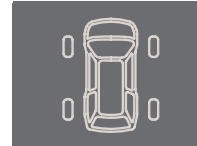

• **LOW TIRE PRESSURE POSITION INDICATOR:** Indicates which tire is under-inflated.



• **TPMS MALFUNCTION INDICATOR:** Have the system checked by an authorized Hyundai dealer as soon as possible.

CLOCK ADJUSTMENT – PAGE 9



- How to adjust the hour.
- How to adjust the minutes.

DURING DELIVERY

- VERIFY AUDIO AND VIDEO SYSTEMS OPERATION (CONFIRM PRESETS)
- VERIFY CLOCK TIME SETTING AND SET AS NEEDED
- EXPLAIN FIRST SERVICE PROCEDURE - PROVIDE SERVICE MANAGER'S OR SERVICE WRITER'S BUSINESS CARD
- REVIEW AMERICA'S BEST WARRANTY
- ASK IF CUSTOMER HAS ANY QUESTIONS

Sales Consultant

Date

Sales Manager

Date

Customer

Date