

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil & Filter	Replace	7,500	Replace	3,000
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Drive Belt 2.0 DOHC (alt, water pump) 2.7 V6 (alt, p/str'g, A/C)	Inspect Inspect	7,500 30,000	Inspect Inspect	Same As Normal Same As Normal
Climate Control Air Filter	Replace	every 12 mos. Or 10,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Propeller Shaft Clean, Bolt Retighten	Inspect	15,000	Inspect	Same As Normal
Manual Transaxle Fluid	Inspect	15,000	Replace	60,000
Brake Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Drive Shaft & Boots	Inspect	15,000	Inspect	7,500
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Steering Gear Box, Linage & Boots/Lower Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Fuel Tank Air Filter	Inspect Replace	15,000 30,000	Inspect Replace	Same As Normal Same As Normal
Automatic Transaxle Fluid & Filter	Inspect Replace	15,000 105,000	Inspect Replace	Same As Normal 30,000
Rear Axle Oil (4WD)	Inspect	25,000	Replace	50,000
Transfer Case Oil (4WD)	Inspect Replace	25,000 62,000	Inspect Replace	Same As Normal 25,000
Fuel Lines, Fuel Hoses & Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Vapor Hose & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Coolant	Replace	30,000	Replace	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Power Steering Pump, Belt & Hoses	Inspect	30,000	Inspect	Same As Normal
Crankcase Ventilation Hose	Inspect	30,000	Inspect	Same As Normal
Rear Brake Drums/Linings, Parking Brake	Inspect	30,000	Inspect	More Frequently
Timing belt (when replacing timing belt, inspect water pump on 2.7L)	Inspect Replace	30,000 60,000	Inspect Replace	20,000 40,000
Vacuum Hoses	Inspect	52,500	Inspect	Same As Normal
Fuel Filter	Replace	52,500	Replace	Same As Normal
Spark Plugs (Platinum Coated)	Replace	60,000	Replace	More Frequently
Valve Clearance (2.0L Only)	Inspect	60,000	Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	100,000	Replace	More Frequently

*For Additional Maintenance Schedule Information See Your Owner's Manual

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

HYUNDAI TUCSON QUICK REFERENCE GUIDE



NP150 - T8000
10/07 (rev 10/07)



www.hyundaiusa.com

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM Radio: 1-800-967-2346

DRIVER CONTROLS

Power Windows
Page 4

**Power Outside
Rearview Mirrors**
Page 4

**Electronic
Stability
Control (ESC)**
Page 5

Headlights
Page 6

 
**Tire Pressure
Monitoring
System (TPMS)***
Page 6

**Windshield
Wiper / Washer**
Page 6

**Clock
Adjustment**
Page 7

**Occupant
Classification
System**
Page 7

**Audio
System**
Page 8

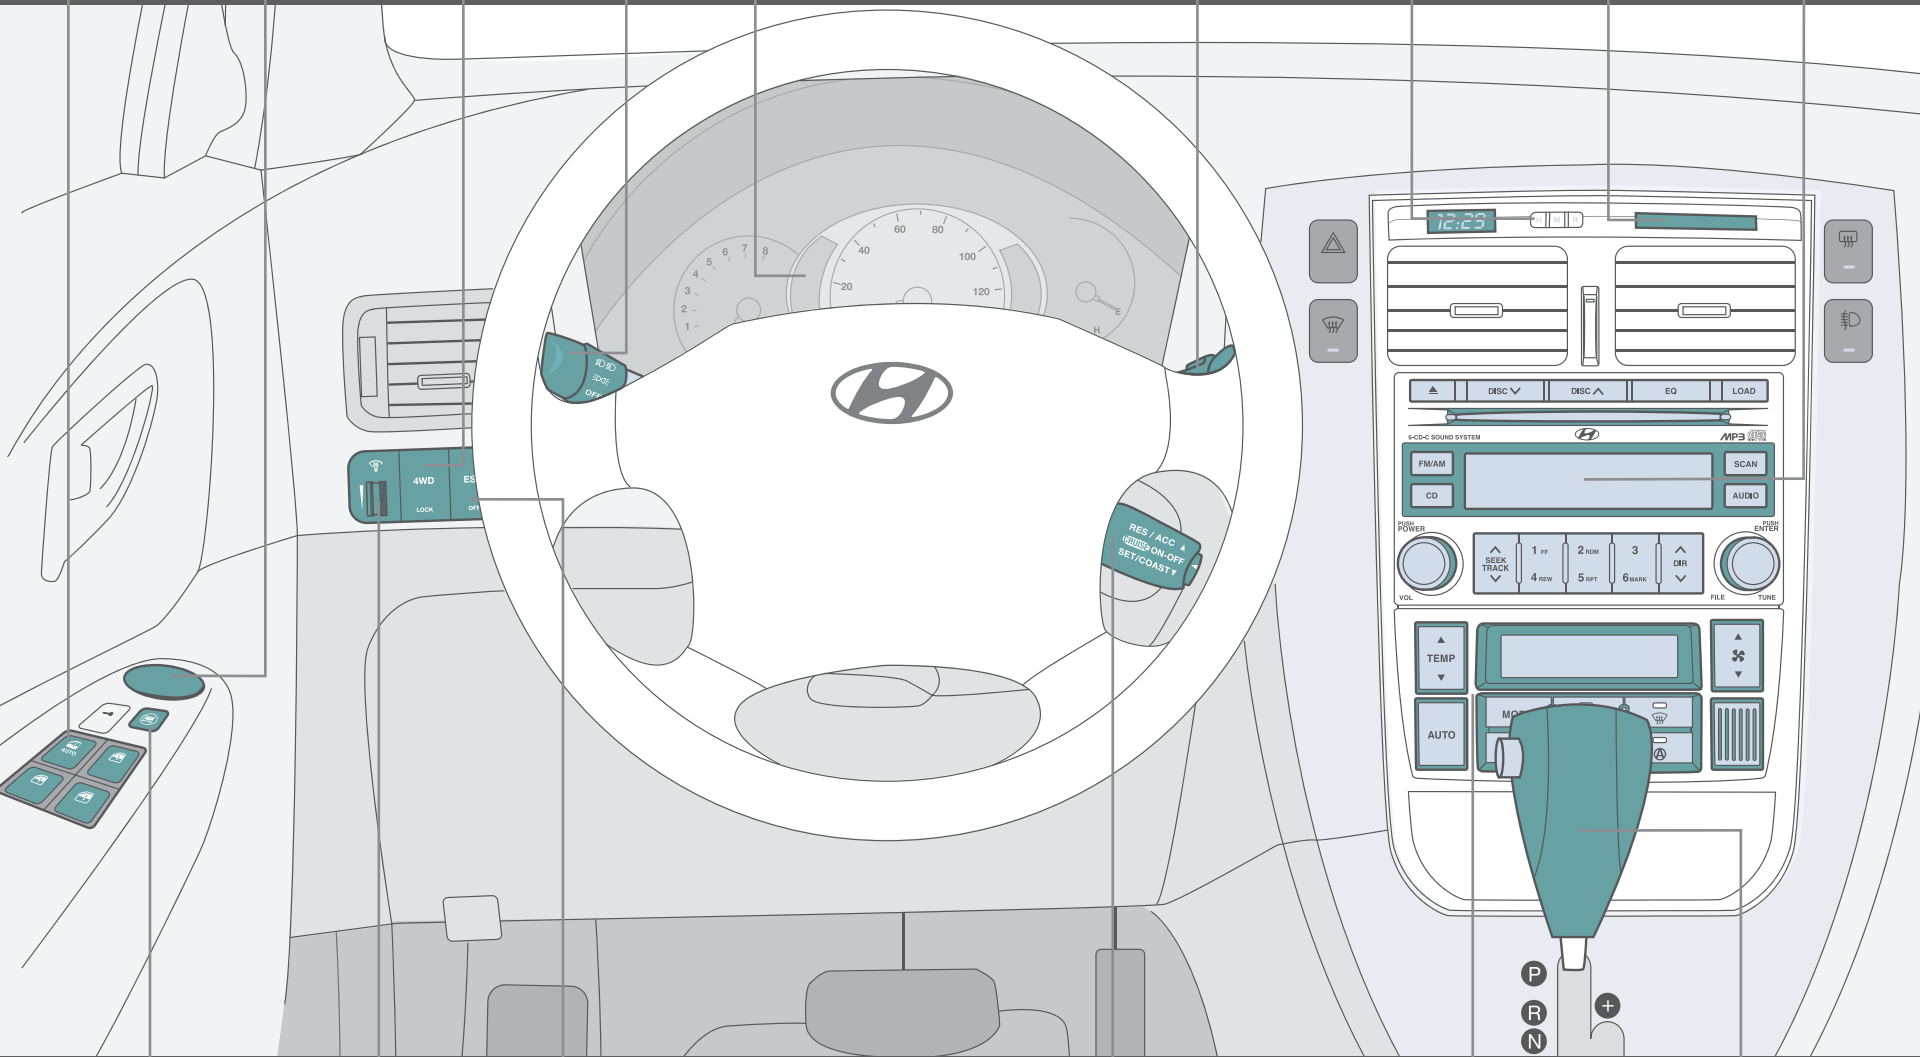

**Window Lock
Switch**
Page 4

**Driver Control
Illumination
(Dimmer)**
Page 5

4WD Lock*
Page 5

Cruise Control*
Page 7

Climate Control
Page 9-10

Transmission
Page 11

DRIVER CONTROL FEATURES

POWER WINDOWS and AUTO UP/DOWN

TO OPEN/CLOSE THE WINDOWS

 
The main switches are located on the driver's armrest.

- To open, depress the appropriate window switch.
- To close, pull up on the appropriate window switch.

AUTO UP/DOWN (Driver's Side only)


The auto up/down feature is controlled by the main switches.

- To fully open the driver's window automatically, press the AUTO switch fully down.
- To fully close the driver's window automatically, pull the AUTO switch fully up.
- To stop the window at any desired position while the window is moving, pull up or down then release the AUTO switch.

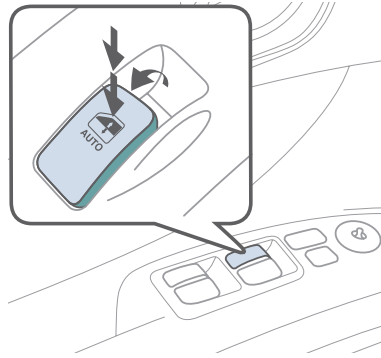

WINDOW LOCK SWITCH

 To disable all passenger power windows, press the window lock switch located on the driver's armrest. To revert to normal operation, press the window lock switch a second time.

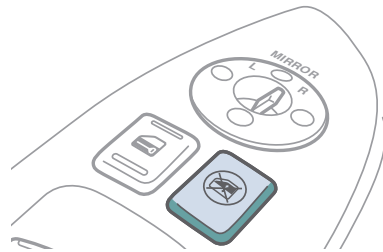


POWER OUTSIDE REARVIEW MIRRORS

The switch is located on the driver's armrest and can be used to adjust both the left and right outside mirrors.



TO ADJUST THE POSITION OF EITHER MIRROR:

 1. Move the selecting switch to the R (right) or L (left) to adjust the corresponding mirror.
2. Adjust the mirror angle by depressing the appropriate direction on the perimeter switch.
3. Move the selecting switch back to the middle position to deactivate the perimeter switch.

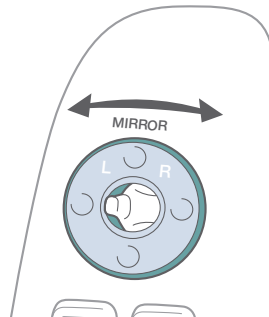

DRIVER CONTROL ILLUMINATION (DIMMER)

  The driver control illumination intensity can be adjusted by rotating the control knob when the parking lights or the headlights are on.

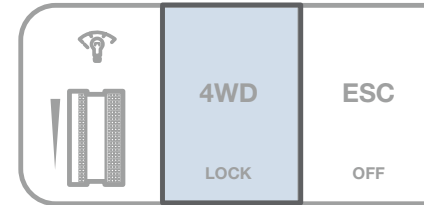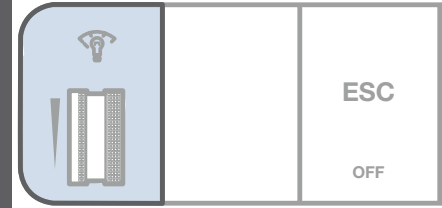

4WD LOCK (if equipped)

During off-road or inclement weather conditions, press the 4WD LOCK switch to drive in full-time 4WD. This will divide the power between the front and rear wheels (only when the vehicle speed is under 25 mph). The 4WD LOCK indicator light on the switch will illuminate.

 
ELECTRONIC STABILITY CONTROL (ESC) SYSTEM OFF

The ESC system is designed to help the driver maintain vehicle control under adverse driving conditions.

ESC ON (Recommended) – ESC OFF light is not lit up on the instrument panel.

ESC OFF – Press the ESC OFF button, ESC OFF will light up on the instrument panel. Press again for ESC ON.

NOTE: When the key is removed from the ignition, ESC is reset to the ON state.

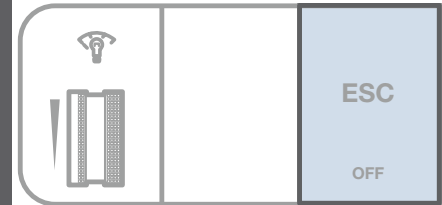

HEADLIGHTS

HEADLIGHT SWITCH

To operate the headlights, rotate the switch on the end of the lever:

OFF – Headlights off

 
 – Parking lights on

 – Headlights on

NOTE: The ignition must be in the ON position to turn on the headlights.

High Beam Activation: Push the lever forward

Flash Feature: Pull the lever toward you and release.

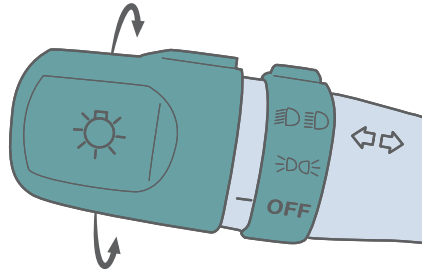

TIRE PRESSURE MONITORING SYSTEM (TPMS) (if equipped)

LOW TIRE PRESSURE INDICATOR: Illuminates if one or more of your tires is significantly under-inflated. Safely park the vehicle and check your tires as soon as possible, and inflate them to the proper pressure.



TPMS MALFUNCTION INDICATOR: Illuminates and stays illuminated when there is a problem with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.



NOTE: The TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure indicator.

WINDSHIELD WIPER / WASHER

To activate the windshield wipers, move the wiper / washer switch to one of the four positions:

MIST – This feature allows the windshield wipers to make a single wipe to clear any mist on the windshield. Move the windshield wiper / washer switch upward.

 
 
INT – Intermittent wiper operation is the first downward position. The wiper speed may be varied by rotating the INT TIME switch. F allows less time between wipes, S allows more time between wipes.

LO – Low-speed operation is the second downward position.

HI – High-speed operation is the third downward position.

WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer lever towards you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

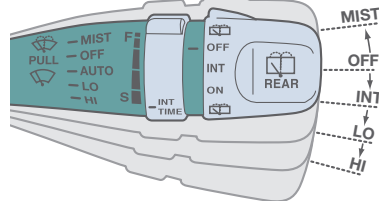

CRUISE CONTROL (if equipped)

To set a cruising speed:

1. **ON C** – Press the button and the CRUISE indicator in the instrument cluster will illuminate. Accelerate to the desired cruising speed (above 25 mph).

2. **SET D** – Move the switch downward and remove your foot from the accelerator pedal.

To accelerate or decelerate speed:

ACC B – Move the switch upward to accelerate your speed with cruising speed set.

COAST D – Move the switch downward to slow set speed down with cruising speed set.

To cancel the cruising speed:

Pull the **CANCEL A** switch towards you, press the brake pedal, depress the clutch pedal, or turn **OFF C** cruise control.



CLOCK ADJUSTMENT

There are three control buttons for the digital clock. Their functions are:

H: Push H to advance the hours.

M: Push M to advance the minutes.

R: Push R to reset minutes to :00 and the hour to the next nearest number.

Press and hold the R button to toggle between military time and standard time.



OCCUPANT CLASSIFICATION SYSTEM

 
PASSENGER AIR BAG OFF INDICATOR

The indicator will illuminate when you turn the ignition key to START or ON. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bag under certain conditions (light on). Refer to the Owner's Manual for a complete description of this system.

NOTE: The driver's air bag and the side impact air bag are not part of the occupant classification system.



AUDIO SYSTEM

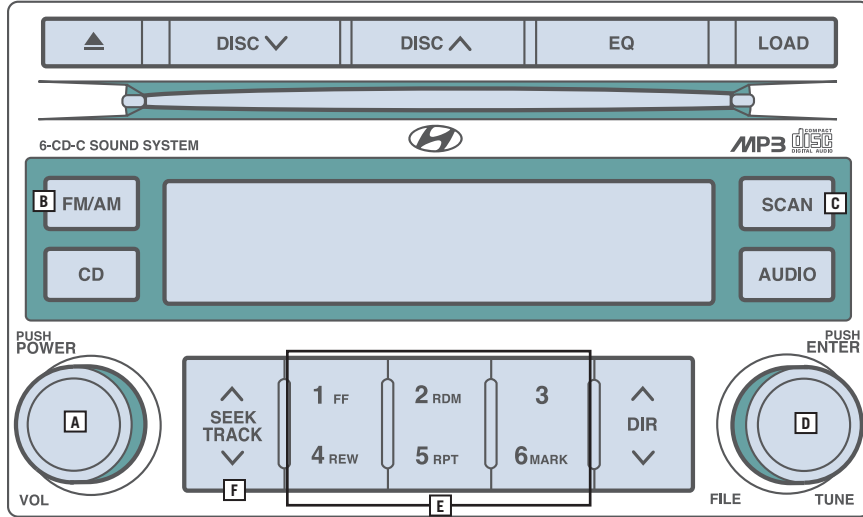

SETTING PRESET MEMORY BUTTONS (AM/FM)

1. Turn radio on by pressing the Power button **A**.
2. Select AM or FM **B**.
3. Adjust the TUNE knob **D** to the desired channel.
4. Press and hold any preset button **E** (1-6) until an audible beep is heard to memorize the current channel.

SEEKING NEXT AVAILABLE CHANNEL (AM/FM)

Press the SEEK \wedge or TRACK \vee button **F** to seek the next available channel.

SCANNING THROUGH AUDIO CHANNELS (AM/FM OR CD)

 
1. Press the SCAN button **C** to preview each channel/track.
2. Press the SCAN button **C** again to stop the scan feature.

ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)

1. Press the TUNE knob **D** to select the following sound qualities: Equalizer \rightarrow Bass \rightarrow Middle \rightarrow Treble \rightarrow Fader \rightarrow Balance \rightarrow Current State
2. Press the TUNE knob **D** to adjust the sound quality.

MANUAL CLIMATE CONTROL SYSTEM

(if equipped)

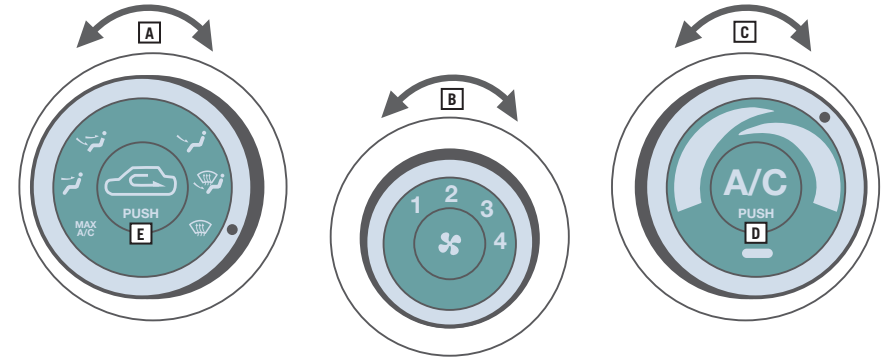

A AIR FLOW CONTROL KNOB – Use to direct the flow of air.

B BLOWER FAN CONTROL KNOB – Use to select the blower fan speed.

C TEMPERATURE CONTROL KNOB – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

D A/C – Push to turn the A/C ON or OFF.

E AIR INTAKE CONTROL – Push to activate/deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

 
TO REMOVE FROST OR FOG ON THE WINDSHIELD

1. Set the temperature control **C** to the desired setting.
2. Set the fan speed **B** to the highest setting.
3. Set the air flow control **A** to the defrost position.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. Your authorized Hyundai dealer can replace this filter for you.

AUTOMATIC CLIMATE CONTROL SYSTEM

(if equipped)

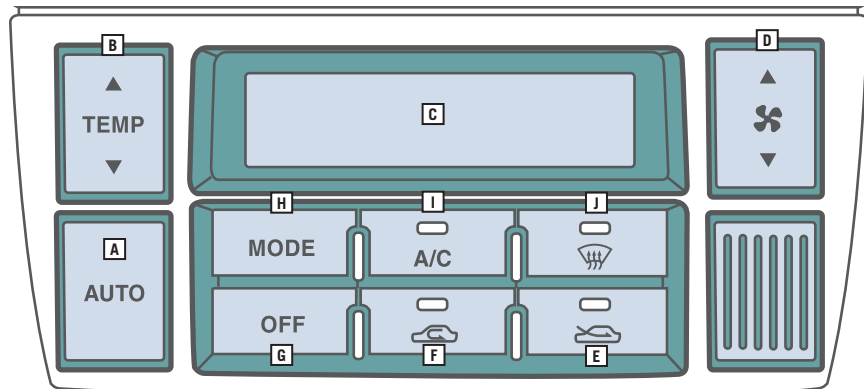

A AUTO TEMPERATURE BUTTON – Press to allow the system to automatically control the heating and cooling.

B TEMPERATURE CONTROL BUTTON – Use to select the degree of heating. Press the ▼ for cooler temperatures, press the ▲ for warmer temperatures.

C DISPLAY WINDOW – Displays the temperature control setting, the fan speed setting, the selected air flow and the outside temperature setting.

D FAN SPEED CONTROL BUTTON – Use to select the blower fan speed. Press the ▼ to decrease the fan speed, press ▲ to increase fan speed.

E FRESH AIR SYSTEM BUTTON – Press to activate/deactivate. In this mode air enters the vehicle from outside and is heated or cooled according to the other functions selected.

F AIR INTAKE CONTROL BUTTON – Press to activate/deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

G OFF BUTTON – Press to turn OFF the climate control system.

H MODE BUTTON – This controls the flow of air. Air can be directed to different levels.

I AIR CONDITIONING BUTTON – Press to activate/deactivate air conditioning.

J FRONT WINDSHIELD DEFROST BUTTON – Press to activate/deactivate to clear the windshield of fog and/or thin ice.

TO REMOVE FROST OR FOG ON THE WINDSHIELD

1. Set the fan speed **D** to the highest position.
2. Set the temperature **B** to the highest position.
3. Press the front windshield defrost button **J**.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. Your authorized Hyundai dealer can replace this filter for you.

TRANSMISSION

AUTOMATIC TRANSMISSION
(if equipped)

To select automatic mode, shift to **D**.

P – Park

R – Reverse

 
N – Neutral

D – Drive

(+/-) – Shiftronic

- Push this lever forward to shift up one gear.
- Pull the lever backwards once to shift down one gear.


Automatic Transmission (Optional)

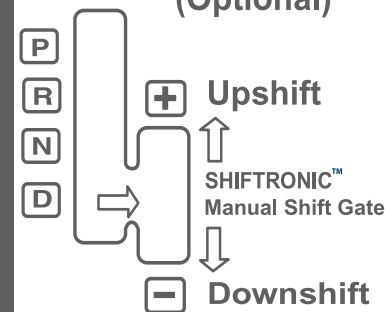

MANUAL TRANSMISSION
(if equipped)

ENGAGING REVERSE

 When shifting into Reverse (R) gear, lift the collar tab up and then shift into the Reverse (R) gear position.

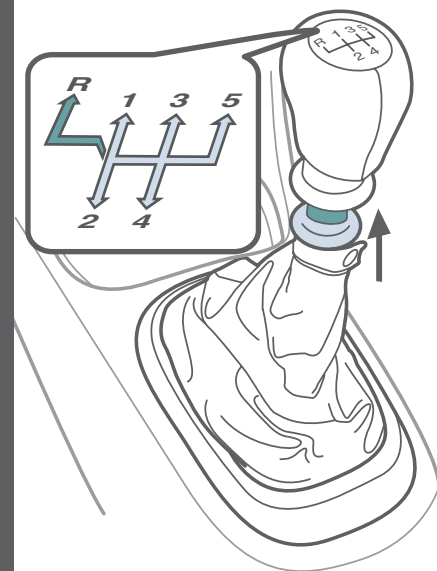

ADDITIONAL FEATURES

REMOTE KEYLESS ENTRY

LOCK

 
Press to lock all doors and arm the alarm. Press again to hear a confirmation chirp.

UNLOCK

Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.

PANIC

Press and hold to activate the horn and flashing lights for 30 seconds. Press again to turn off panic mode.

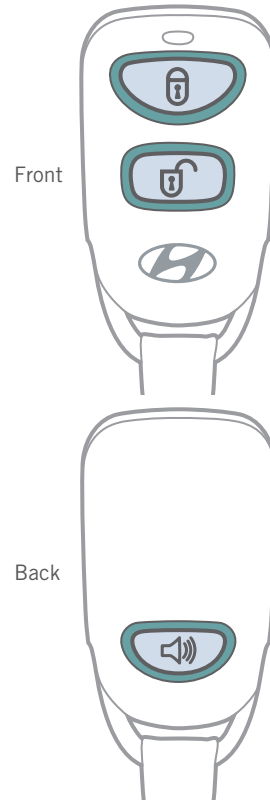

BASIC SAFETY PRECAUTIONS

 
 
- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seatbelts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see the Owner's Manual for child safety details).
- Never place children under 13 years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

HEIGHT ADJUSTABLE FRONT SEAT SHOULDER BELT

This should be adjusted so that it lies across your chest and midway over your shoulder nearest the door and not your neck.

- To raise the height adjuster, pull it up while pressing the height adjuster buttons.
- To lower, push it down while pressing the height adjuster buttons.

NOTE: Moving the height adjuster quickly may cause the seatbelt retractor to engage.

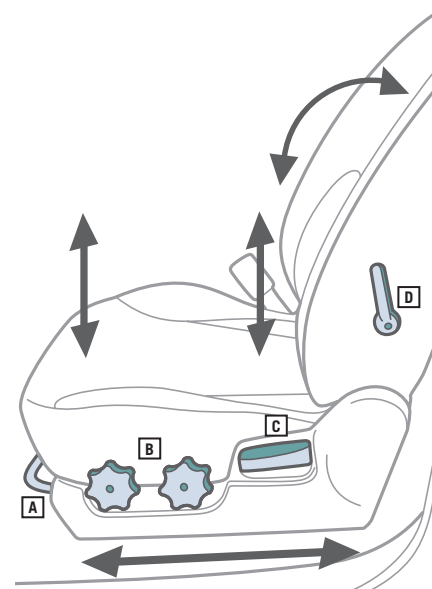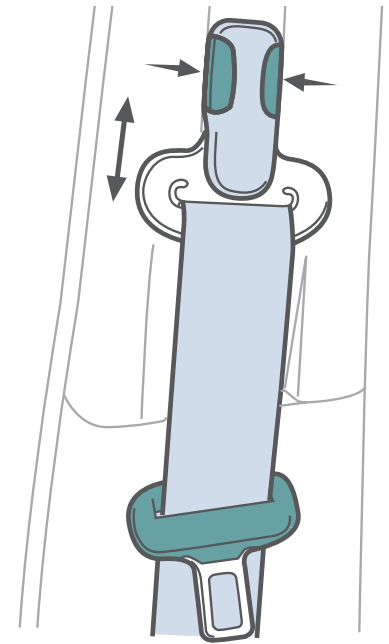

FRONT SEAT ADJUSTMENT

A ADJUSTING SEAT FORWARD AND REARWARD

To move the seat toward the front or rear, pull the lock release lever upward. This will release the seat on its track so you can move it forward or rearward to the desired position.

B FRONT/REAR SEAT CUSHION HEIGHT ADJUSTMENT, DRIVER'S SEAT ONLY

To raise or lower the front/rear part of the seat cushion, turn the front or rear knob clockwise or counterclockwise.

C ADJUSTING SEAT BACK ANGLE

 
Lift the lever on the side of the seat to adjust your seatback angle. Release the lever when you have found a comfortable position.

C LUMBAR CONTROL

To adjust the lumbar support, pull the lever forward to increase or push the lever toward the rear to decrease.

SEAT WARMER (if equipped)

When the ignition key is in the ON position, push the L or R switch to warm the driver's seat or the passenger's seat, respectively.

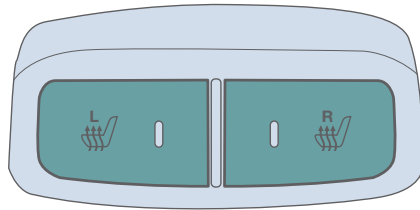


RIGHT FRONT SEATBACK TABLE (if equipped)

SEATBACK TABLE OPERATION:

The front seatback table is made by folding down the front passenger seat.

1. Lower the headrest.
2. Pull the recliner control lever up and push the seatback forward, to the flat position.
3. When returning the seatback to the upright position, make sure the seatback is securely locked into place.

 
NOTE: Do not use the seatback table while driving.

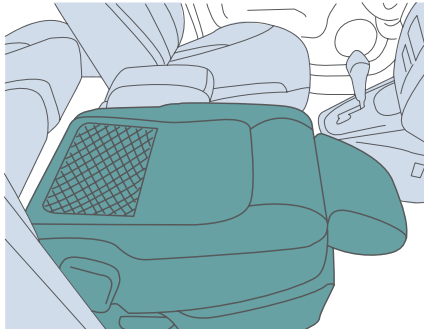

DRINK HOLDERS


FRONT DRINK HOLDERS

 Use the two drink holders to securely hold your beverages while driving.

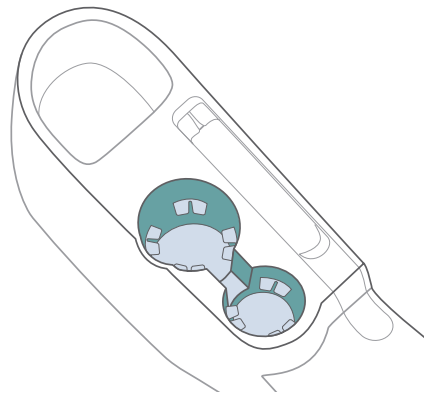

REAR DRINK HOLDERS (if equipped)

 The rear passengers can fold down the drink holders located between the rear seats, by firmly pulling down on the tab at the top.

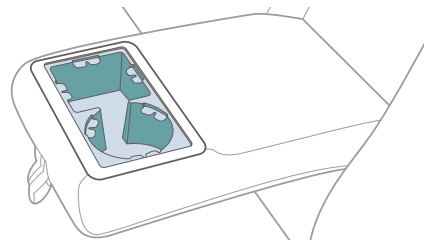




HATCH CONTROLS

TAILGATE OPEN:

Pull and raise the DOOR release lever (left side) **A** to open the tailgate.

TAILGATE WINDOW OPEN:

   1. Pull the GLASS release lever (right side) **B**.
2. Raise the window using the open handle.

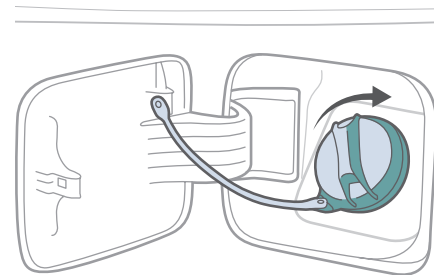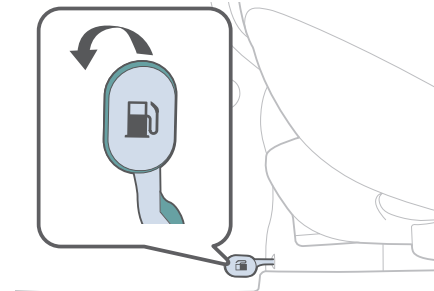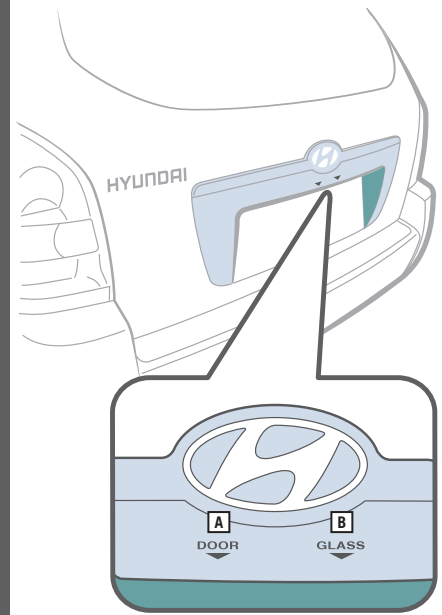

FUEL FILLER DOOR RELEASE

REFUELING

1. Pull fuel release lever.
2. Remove fuel cap.
3. Pump fuel.
4. Replace fuel cap.
5. Close fuel door.

NOTE: After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least three times. Failure to do this may result in the Check Engine light illuminating.

TUCSON CUSTOMER DELIVERY CHECK LIST

TUCSON CUSTOMER DELIVERY CHECK LIST (CONTINUED)

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

 
BEFORE DELIVERY

- VERIFY ALL REMOTE KEYLESS ENTRY LOCK / UNLOCK
- VERIFY VEHICLE IS CLEAN INSIDE AND OUT
- CHECK PAINT FINISH FOR SCRATCHES, DENTS, ETC. (IF PRESENT NOTIFY MANAGER)
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE (IF EQUIPPED)

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- AUTOMATIC / MANUAL CLIMATE CONTROL – PAGES 9-10


AUTOMATIC

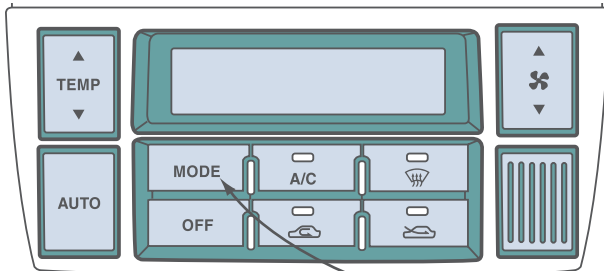

• To speed up front windshield defogging, select defrost and increase the fan speed.

• Press MODE to change air direction.

 MANUAL

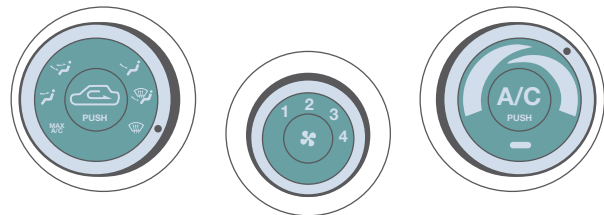

- TIRE PRESSURE MONITORING SYSTEM (TPMS) – PAGE 6



 
• **LOW TIRE PRESSURE INDICATOR:** Illuminates if one or more of your tires is significantly under-inflated. Safely park and inflate them to the proper pressure.

NOTE: Refer to the driver's side B-Pillar for recommended tire pressure on OEM tires.



• **TPMS MALFUNCTION INDICATOR:** Have the system checked by an authorized Hyundai dealer as soon as possible.

- WINDSHIELD WIPER / WASHER – PAGE 6

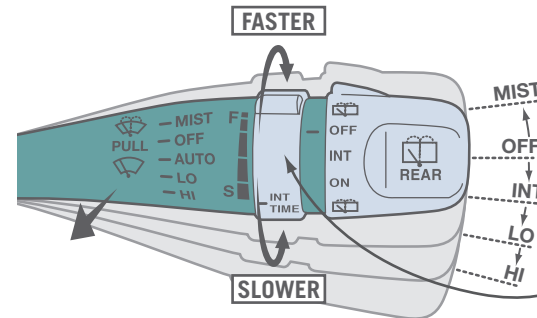

• Move the switch up or down to one of the four positions.

• **WIPE / WASH** to use the washer pull the lever towards you.

• To adjust INT speed rotate.

DURING DELIVERY

- VERIFY AUDIO AND VIDEO SYSTEMS OPERATION (CONFIRM PRESETS)
- VERIFY CLOCK TIME SETTING AND SET AS NEEDED
- EXPLAIN FIRST SERVICE PROCEDURE - PROVIDE SERVICE MANAGER'S OR SERVICE WRITER'S BUSINESS CARD
- REVIEW AMERICA'S BEST WARRANTY
- ASK IF CUSTOMER HAS ANY QUESTIONS

Sales Consultant

Date

Sales Manager

Date

Customer

Date