

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
	Action	Mileage	Action	Mileage
Engine Oil & Filter	Replace	7,500	Replace	3,000
Tire Rotation	Perform	7,500	Perform	7,500
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Air Cleaner Filter (Engine)	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Climate Control Air Filter (for Evaporator & Blower Unit)	Replace	every 12 mos. or 10,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Driveshaft Clean & Bolt Retighten	Inspect	15,000	Inspect	Same As Normal
Drive Shaft & Boots	Inspect	15,000	Inspect	7,500
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Power Steering Fluid	Inspect	15,000		
Power Steering Pump, Belt & Hoses	Inspect	15,000	Inspect	Same As Normal
Propeller Shaft Clean, Bolt Retighten (AWD)	Inspect	15,000		
Front Brake Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/Lower Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect Replace	15,000 30,000	Inspect Replace	Same As Normal Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Crankcase Ventilation Hose	Inspect	30,000	Inspect	Same As Normal
Drive Belt (Alt, P/Str'g, A/C)	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses & Connections	Inspect	30,000	Inspect	Same As Normal
Rear Axle Oil (AWD)	Inspect	30,000	Replace	60,000
Rear Brake Pad, Calipers & Rotors	Inspect	30,000	Inspect	More Frequently
Vapor Hose & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Transfer Case Oil (AWD)	Inspect Replace	30,000 75,000	Inspect Replace	Same As Normal 30,000
Automatic Transaxle Fluid	Inspect	37,500	Inspect	Same As Normal
Fuel Filter	Replace	37,500	Replace	Same As Normal
Coolant	Replace	60,000	Replace	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	100,000	Replace	More Frequently

*See Owner's Manual for details.

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

HYUNDAI VERACRUZ QUICK REFERENCE GUIDE



NP150 - J8000
10/07 (rev 10/07)



www.hyundaiusa.com

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM Radio: 1-800-967-2346

DRIVER CONTROLS

Driver Position Memory System*
Page 5

Driver Control Illumination (Dimmer)
Page 6

Trip Computer**
Page 8

Headlights
Page 8

 
Steering Wheel Audio Controls
Page 9

Tire Pressure Monitoring System (TPMS)
Page 9

Windshield Wiper / Washer
Page 11

Clock Adjustment
Page 16

Occupant Classification System
Page 16

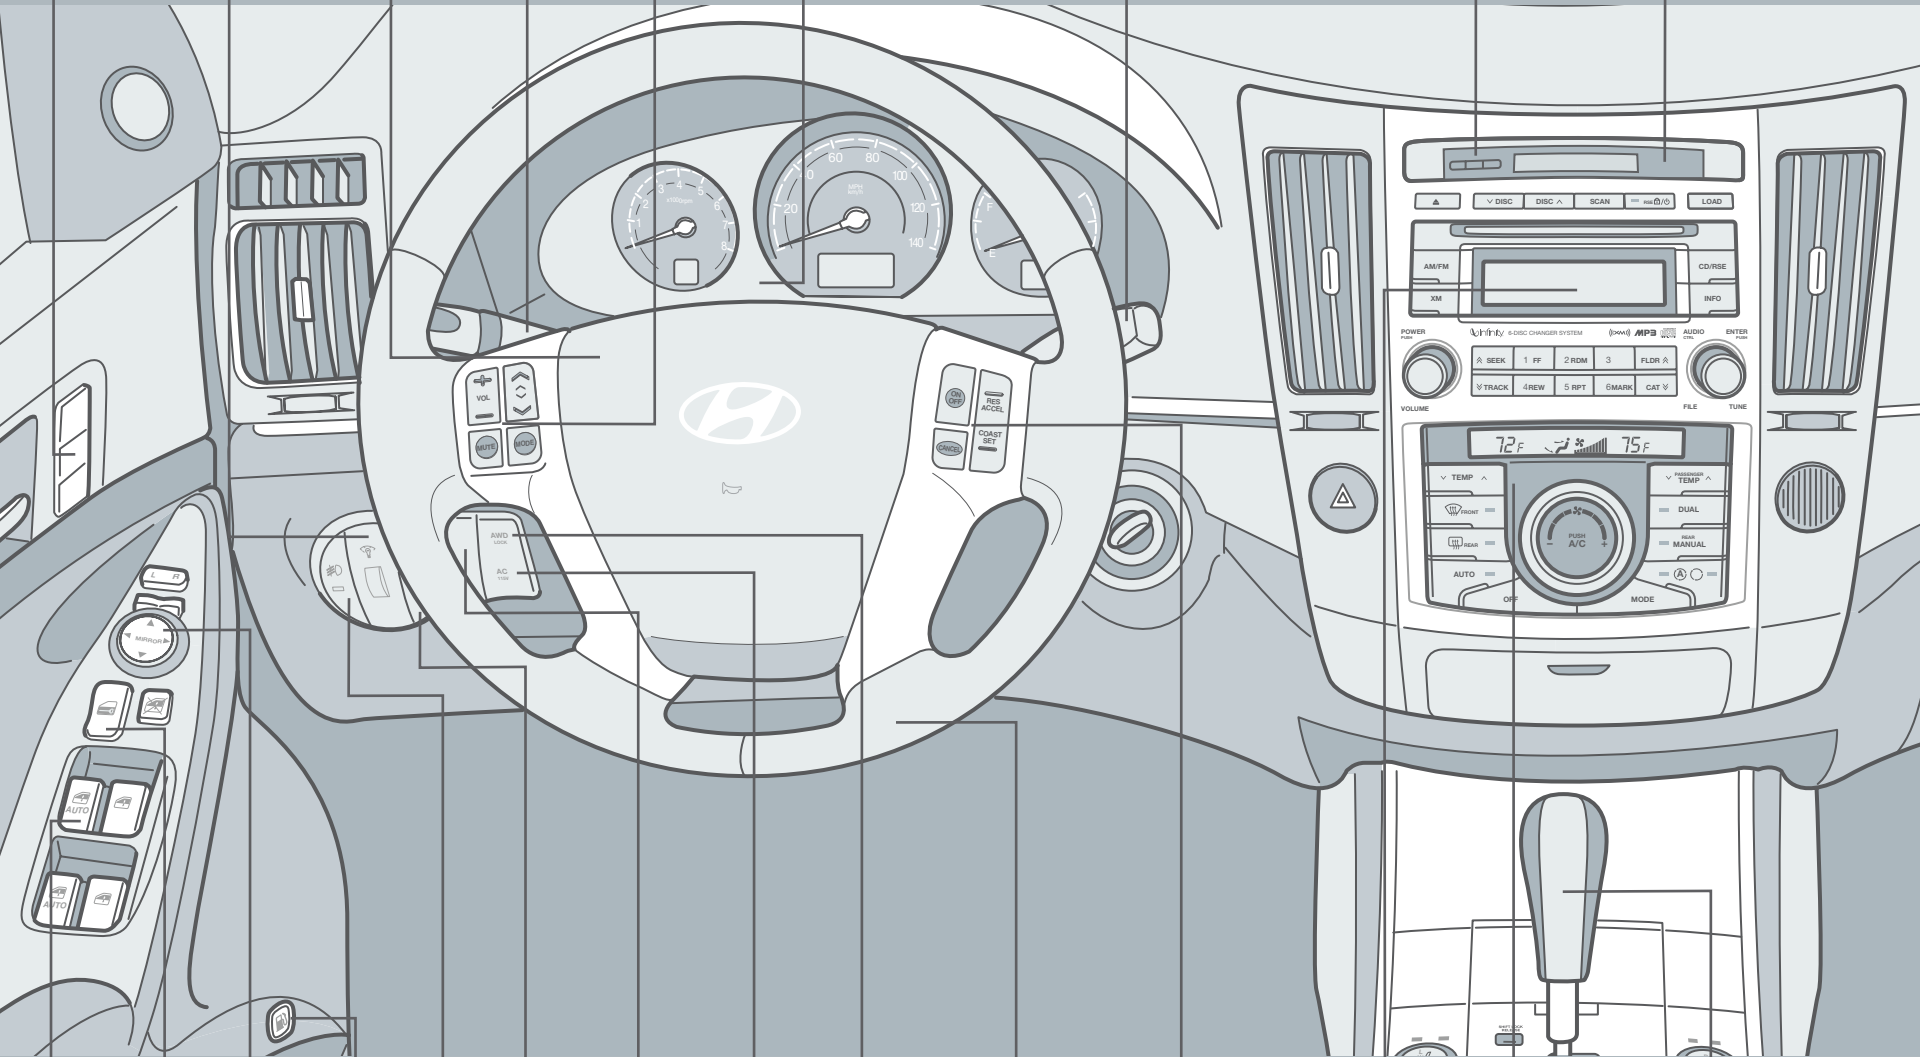

Power Windows and Auto Up / Down
Page 4

Central Door Locks
Page 4

Outside Rearview Mirrors Control
Page 4

Fuel Filler Door Release
Page 5

Fog Lights*
Page 6

Electronic Stability Control (ESC)**
Page 6

Adjustable Pedals*
Page 7

AC Inverter*
Page 7

All-Wheel Drive (AWD) Lock*
Page 7

Tilt and Telescopic Steering Wheel
Page 10

Cruise Control*
Page 10

Audio System*
Page 12-13

Climate Control
Page 14-15

Automatic Transmission
Page 16

*if equipped
**behind steering wheel

DRIVER CONTROL FEATURES

POWER WINDOWS AND AUTO UP / DOWN

TO OPEN / CLOSE THE WINDOWS


The main switches are located on the driver's armrest.

- To open, depress the appropriate window switch.
- To close, pull up on the appropriate window switch.

AUTO UP / DOWN (Driver's Side only)

The auto up/down feature is controlled by the main switches.

- To fully open the driver's window automatically, press the AUTO switch fully down.
- To fully close the driver's window automatically, pull the AUTO switch fully up.
- To stop the window at any desired position while the window is moving, pull up or down then release the AUTO switch.

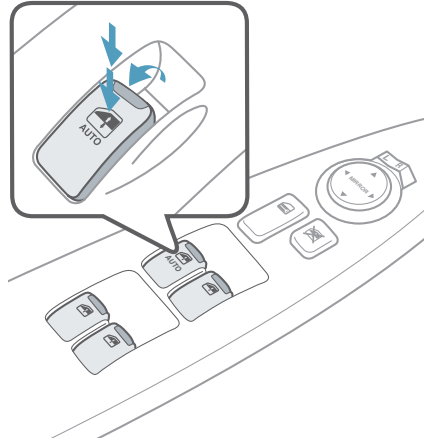


CENTRAL DOOR LOCKS

The switch is located on the driver's and front passenger's armrest.

To lock all doors: Push down on the front portion **A** of the switch.

To unlock all doors: Push down on the rear portion **B** of the switch.

NOTE: If the key is in the ignition switch and any front door is open, the doors will not lock.

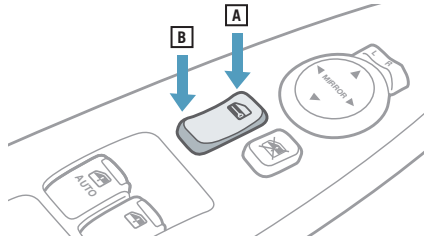


OUTSIDE REARVIEW MIRRORS CONTROL

The switch is located on the driver's armrest and can be used to adjust both the left and right outside mirrors.

TO ADJUST THE POSITION OF EITHER MIRROR:

1. Move the selecting switch to the R (right) or L (left) to adjust the corresponding mirror.
2. Adjust the mirror angle by depressing the appropriate direction on the perimeter switch.
3. Move the selecting switch back to the middle position to deactivate the perimeter switch.

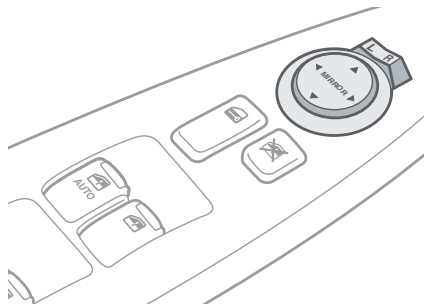


FUEL FILLER DOOR RELEASE

REFUELING

1. Pull fuel release lever.
2. Remove fuel cap.
3. Pump fuel.
4. Replace fuel cap.
5. Close fuel door.

NOTE: After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least three times. Failure to do this may result in the Check Engine light illuminating.

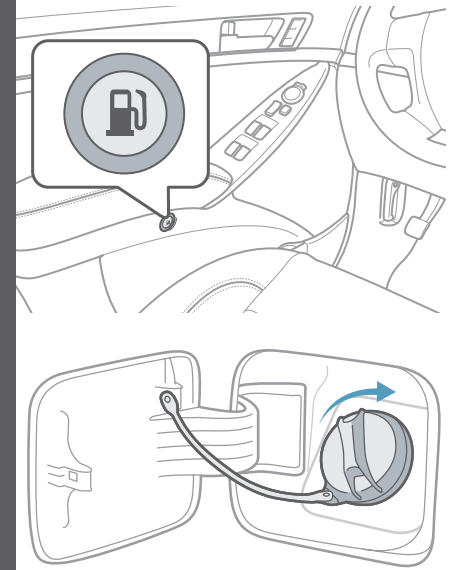

DRIVER POSITION MEMORY SYSTEM


(if equipped)

TO STORE DRIVER'S SEAT POSITIONS:

1. Shift the transmission lever into P (Park) while the ignition switch is ON.
2. Adjust the driver's seat, outside rearview mirror and steering wheel to desired positions.
3. Press the **SET** button on the control panel. The system will beep once.
4. Press one of the memory buttons **1** or **2** within 5 seconds of pressing the **SET** button. The system will beep twice when memory has been successfully stored to that button.

TO RECALL POSITIONS FROM MEMORY:

1. Shift the transaxle lever into P (Park) while the ignition switch is ON.
2. To recall the position in memory, press the desired memory button **1** or **2**. The system will beep once, then the driver's seat, outside rearview mirror and steering wheel will automatically adjust to the stored positions.

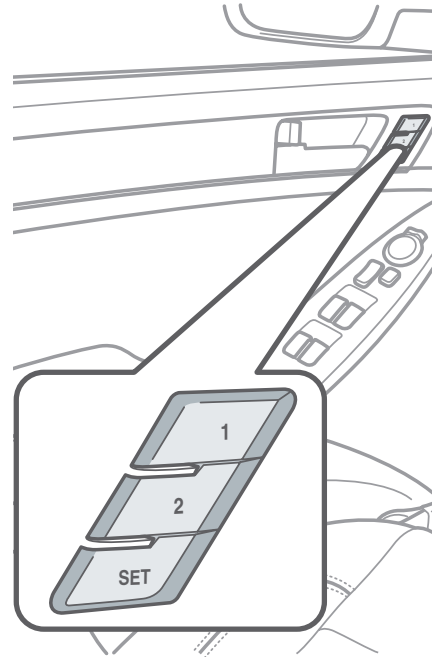


FOG LIGHTS (if equipped)

- To turn on the fog lights, turn the headlights on low beam, then push the fog light switch. The indicator light on the driver controls will illuminate.


- To turn off the fog lights, push the fog light switch again.

NOTE: Fog lights will only function with the headlights on low beam.

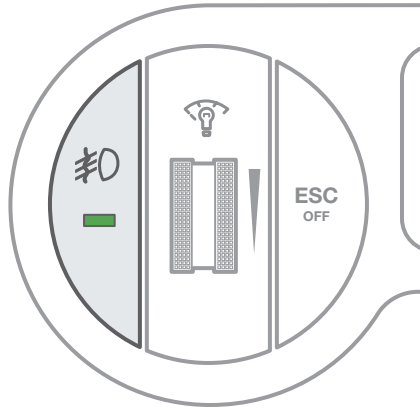

DRIVER CONTROL ILLUMINATION (DIMMER)

The driver control illumination intensity can be adjusted by rotating the control knob when the parking lights or the headlights are on.

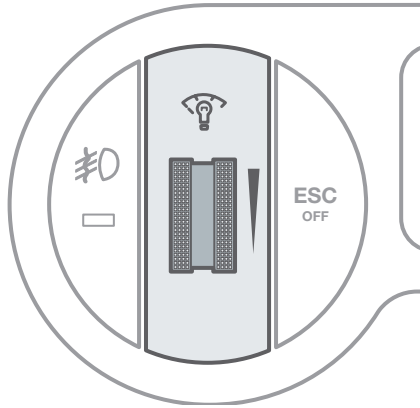


ELECTRONIC STABILITY CONTROL (ESC) SYSTEM OFF

The ESC system is designed to help the driver maintain vehicle control under adverse driving conditions.

ESC ON (Recommended) – ESC OFF light is not lit up on the instrument panel.

ESC OFF – Press the ESC OFF button, ESC OFF will light up on the instrument panel. Press again for ESC ON.


NOTE: When the key is removed from the ignition, ESC is reset to the ON state.

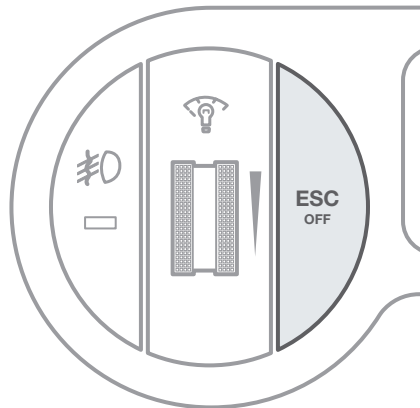

ADJUSTABLE PEDALS (if equipped)


With the transmission selector lever in the P (Park) position, turn the ignition key to ON.

Push the pedal position switch ^ to move the pedals toward you. Push the switch v to move the pedals away from you.

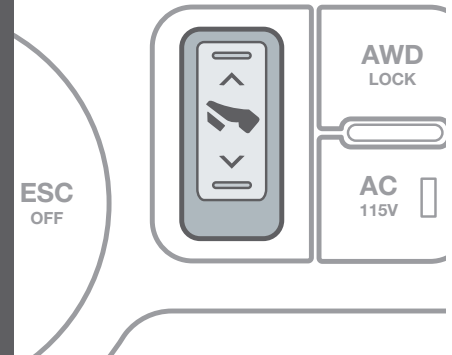

ALL-WHEEL DRIVE (AWD) LOCK (if equipped)

During off-road or inclement weather conditions, press the AWD LOCK switch to drive in full-time AWD. This will divide the power between the front and rear wheels (only when the vehicle speed is under 25 mph). The AWD LOCK indicator light in the instrument cluster will illuminate.

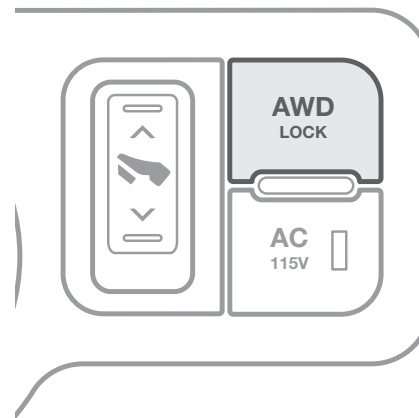


AC INVERTER (if equipped)

The AC inverter supplies 150W of 115VAC electric power to operate electronic accessories when the ignition switch is in the ON position or the engine is running. The AC inverter is turned on by pushing the switch. The indicator light will illuminate.

To turn the AC inverter off, push the switch a second time.

NOTE: The plug is located in the trunk area.

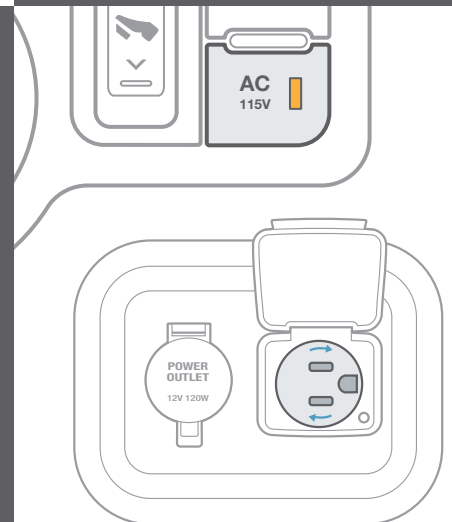


TRIP COMPUTER

With the ignition switch in the ON position, press the TRIP switch to change the display:

TRIPMETER A ←
↓
TRIPMETER B
↓
RANGE – Distance to Empty
↓
AVG MPG – Average Fuel Consumption
↓
AVG MPH – Average Speed
↓
E/T – Elapsed driving time

Push in the RESET switch for more than one second to initialize the displayed information such as tripmeter, average speed, average fuel consumption and drive time.

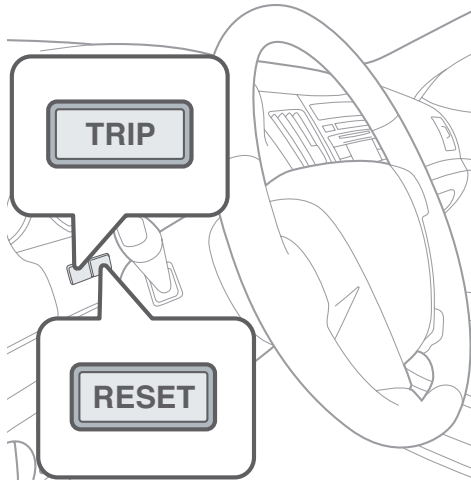

STEERING WHEEL AUDIO CONTROLS

A VOLUME SWITCH

Press + to increase or – to decrease audio volume.

B SEEK SWITCH

- Tap once to navigate through radio presets or CD/MP3/DVD* tracks.
- Hold to quickly scroll through radio frequencies or fast forward/rewind through CD/MP3/DVD* tracks.


C MUTE SWITCH

Press the MUTE switch to turn the sound on or off.

D MODE SWITCH

Each press of the MODE switch changes the audio mode as follows:
FM → AM → (CD → RSE* when disc is present) → XM

*if equipped

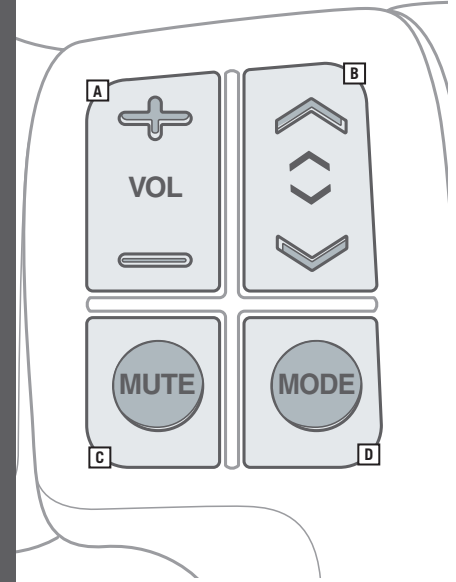

HEADLIGHTS

HEADLIGHT SWITCH

To operate the headlights, rotate the switch on the end of the lever:

OFF – Headlights are off

 – Parking lights on

 
 
 – Headlights on

AUTO – Auto Light (if equipped)

NOTE: The ignition must be in the ON position to turn the headlights on.

High Beam Activation: Push the lever forward.

Flash Feature: Pull the lever toward you and release.

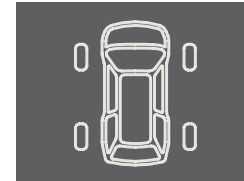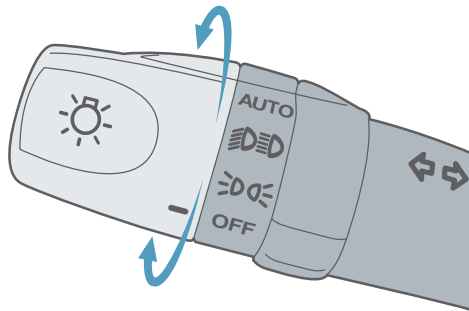

TPMS

TIRE PRESSURE MONITORING SYSTEM (TPMS)

LOW TIRE PRESSURE INDICATOR:

Illuminates if one or more of your tires is significantly under-inflated. Safely park the vehicle and check your tires as soon as possible, and inflate them to the proper pressure.

LOW TIRE PRESSURE POSITION INDICATOR:

Indicates which tire is significantly under-inflated by illuminating the corresponding position light.

TPMS MALFUNCTION INDICATOR:

Illuminates and stays illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.

NOTE: The TPMS is not a substitute for proper tire maintenance. It is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure indicator.

TILT AND TELESCOPIC STEERING WHEEL

NOTE: Do not adjust while driving.

POWER ADJUSTABLE STEERING COLUMN


(if equipped)

1. To tilt: move the adjusting switch **A** upward or downward.
2. To telescopic: move the adjusting switch **A** forward or backward.

MANUAL ADJUSTABLE TILT AND TELESCOPIC STEERING COLUMN (if equipped)

Push lever **B** downward to unlock the steering wheel.

1. To unlock: push lever **B** downward.
2. To tilt **C**: move the steering wheel upwards or downwards.
3. To telescope **D** (if equipped): pull forward or push backward.
4. To lock: after any adjustment, securely tighten the lever **B** by pulling it upward.

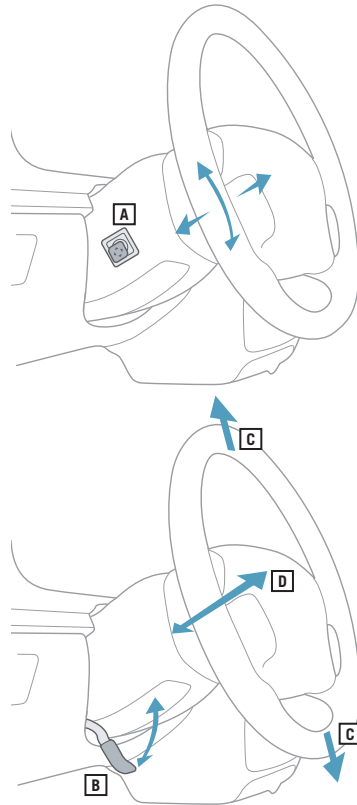

WINDSHIELD WIPER / WASHER

To activate the windshield wipers, move the wiper / washer switch to one of the four positions:

MIST – This feature allows the windshield wipers to make a single wipe to clear any mist on the windshield. Move the windshield wiper / washer switch upward.


INT – Intermittent wiper operation is the first downward position. The wiper speed may be varied by rotating the INT switch.

LO – Low-speed operation is the second downward position.

HI – High-speed operation is the third downward position.

WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer lever towards you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

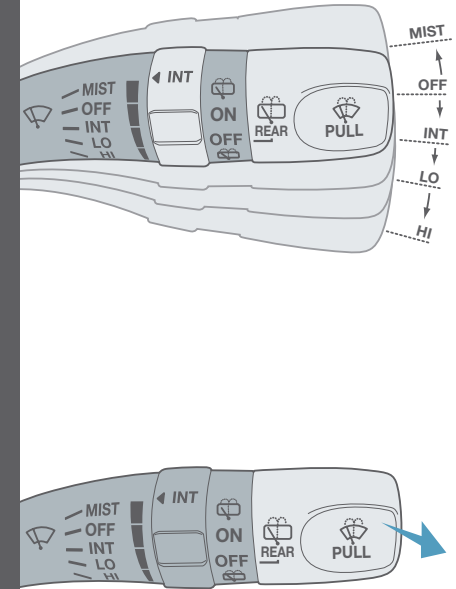

CRUISE CONTROL (if equipped)

To set a cruising speed:

1. **ON** **A** – Press the switch and the CRUISE indicator in the instrument cluster will illuminate. Accelerate to the desired cruising speed (above 25 mph).

2. **SET** **B** – Press the switch and remove your foot from the accelerator pedal.


To accelerate or decelerate speed:

ACCEL **B** – Press the switch to accelerate your speed with cruising speed set.

COAST **C** – Press the switch to slow speed down with cruising speed set.

To cancel the cruising speed:

Press the **CANCEL** **D** switch, press the brake pedal, depress the clutch pedal, or turn **OFF** **A** the cruise control.

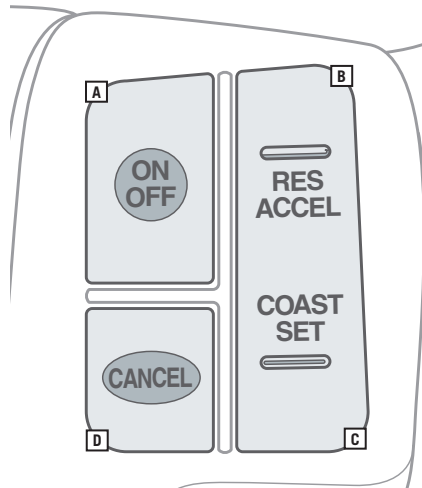


REAR WINDOW WIPER / WASHER


To operate the rear wipers, rotate the end of the wiper lever.

To turn ON rotate the wiper lever up one position. The rear wiper will run continuously.

To use the washer rotate the wiper lever up two positions.

To wash with two or three wipes rotate the wiper lever down one position.

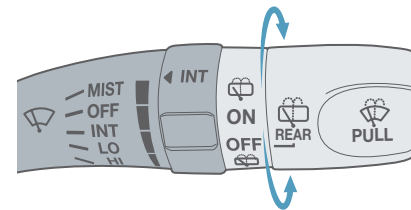

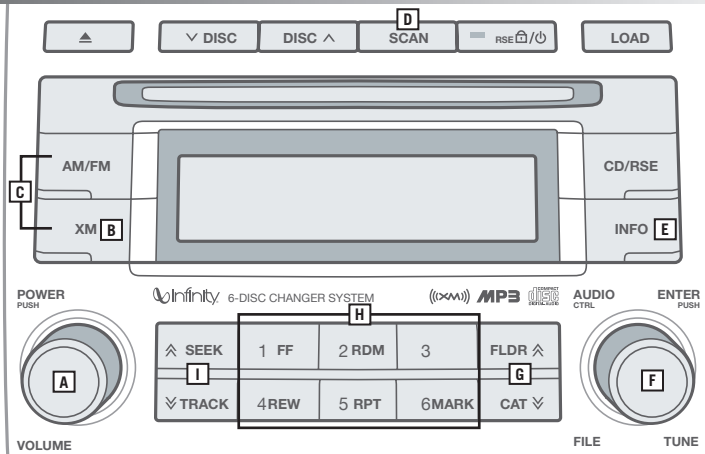

SETTING PRESET MEMORY BUTTONS (AM/FM OR XM®)

1. Turn the radio on by pressing the VOLUME button **A**.
2. Select AM, FM, or XM radio **C**.
3. Turn the Audio Control knob **F** to the desired channel.
4. Press and hold any preset button **H** (1-6) until an audible beep is heard to memorize the current channel.

NOTE: FM has 2 bands for up to 12 presets. XM has 3 bands and up to 18 presets.

TUNING AND LISTENING TO XM CHANNELS

1. Press the XM button **B**.
2. Select an XM channel by turning the Audio Control knob **F** to scroll through the XM channels.
3. Press the Audio Control knob **F** to select the desired XM channel.

NOTE: The current channel will continue to play while you are searching for other channels.

CATEGORY SEARCH (XM)

1. While in XM mode, press FLDR **G** or CAT **G** button **G** to scroll through music categories.
2. Press the Audio Control knob **F** to select the desired category.

NOTE:

- Please refer to your Owner's Manual for more detailed information on how to use your audio system.
- A clear view of the southern sky is recommended to ensure good XM radio reception.

SEEKING NEXT AVAILABLE CHANNEL (AM/FM OR XM)

Press the SEEK **I** or TRACK **I** button **I** to seek the next available channel.

SCANNING THROUGH AUDIO CHANNELS (AM/FM, XM, OR CD/MP3)

1. Press the SCAN button **D** to preview each channel/track.
2. Press the SCAN button **D** again to stop the scan feature.
3. To scan through the channel presets, for AM/FM/XM only, press and hold the SCAN button **D** until an audible beep is heard to scan through the channel presets.

ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)


1. Press the Audio Control knob **F** to select the following sound qualities: Bass → Middle → Treble → Balance → Equalizer → Surround → Current State
2. Turn the Audio Control knob **F** to adjust the sound quality.

DISPLAYING INFORMATION

In XM:
Press the INFO button **E** to cycle through the following information:
Title → Artist → Category → Current State

In CD/MP3:
Press the INFO button **E** to cycle through the display options.

NOTE: Information displayed is dependent on CD format.

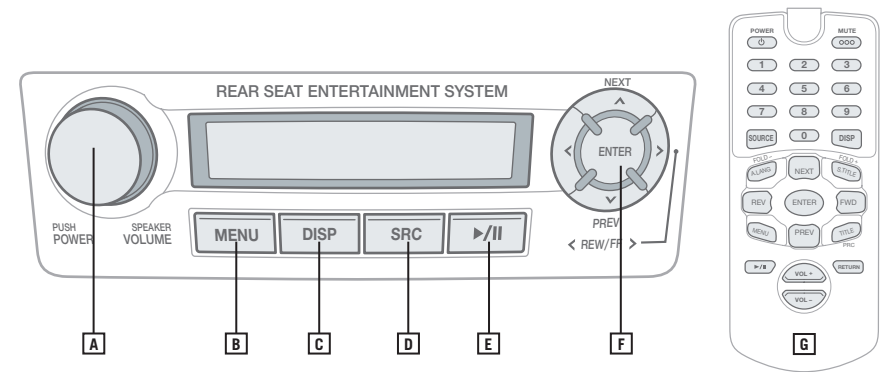

A POWER / VOLUME

- Press to turn RSE system power ON / OFF.
- Turn knob for volume control.

B MENU

- Go to DVD root menu screen.

C DISP

- Adjust LCD screen display.

D SRC

- Change RSE source (as viewed on the display screen).

E ▶/||

- Play or pause disc.

F ARROW BUTTONS

- Press **▲** to skip to next track / chapter.
- Press **▼** to skip to previous track / chapter.
- Press **◀▶** to rewind / fast forward.

G REMOTE CONTROL

- Remote control may also be used for the Rear Controls.

REAR SEAT ENTERTAINMENT SYSTEM

Insert disc into rear CD / DVD slot (the front CD slot does NOT support DVD playback).

Open the overhead LCD display.

To enable audio:

- Press CD / RSE until RSE MODE appears on the front audio display screen.
- OR press the MODE button on the steering wheel controls until RSE MODE is displayed.

To disable the rear controls, press and hold CD / RSE for two seconds.

To re-enable the rear controls, press and hold CD / RSE for an additional two seconds.

Eject disc by pressing **▲** next to the rear CD / DVD slot.


Other audio options:

- To listen to the regular car stereo while simultaneously using RSE, use the front controls to change to the desired audio mode. Alternatively, press MODE on the steering wheel controls.
- Use the headsets to listen to RSE audio at any time (Note that headsets will not function when used from the front seats).

NOTE: For more information on using the RSE system, please refer to your Owner's Manual.

Trial XM subscription ends 3 months following the vehicle date of sale. Please contact XM Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM subscription.

AUTOMATIC CLIMATE CONTROL (if equipped)

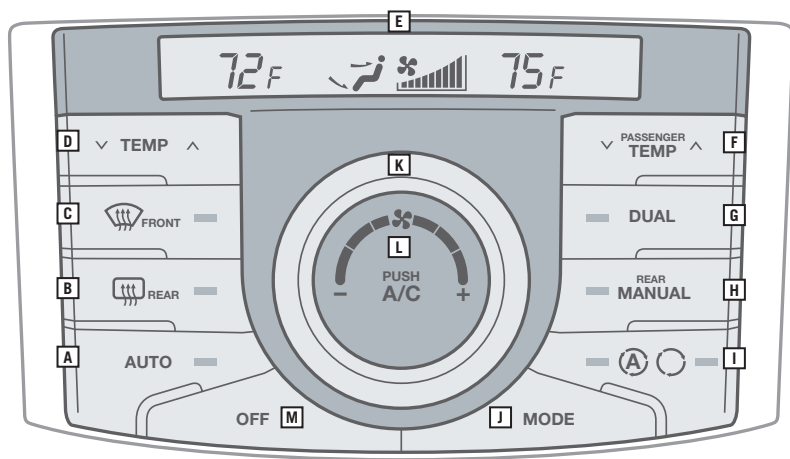

A AUTO TEMPERATURE SWITCH – Press to allow the system to automatically control the heating and cooling.

B REAR WINDOW DEFROST SWITCH – Press to remove moisture from the rear window.

C FRONT WINDOW DEFROST SWITCH – Press to clear the windshield of fog and/or thin ice.

D TEMPERATURE CONTROL SWITCH (DRIVER SIDE) – Use to select the degree of heating. Press the ∇ for cooler temperatures, press the \blacktriangle for warmer temperatures.

E DISPLAY WINDOW – Displays the driver and passenger temperature control settings, the fan speed and the selected air flow.

F TEMPERATURE CONTROL SWITCH (PASSENGER SIDE) – Use to select the degree of heating. Press the ∇ for cooler temperatures, press the \blacktriangle for warmer temperatures.

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the temperature **D** to the highest position.
2. Set the fan speed **K** to the highest position.
3. Press the front windshield defrost button **C**.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. Your authorized Hyundai dealer can replace this filter for you.

G DUAL TEMPERATURE CONTROL SWITCH – Press to operate the driver and passenger side temperature individually.

H REAR CLIMATE CONTROL SWITCH – Press (the indicator light is illuminated) to set the rear temperature, fan speed and mode.

I AIR QUALITY CONTROL (if equipped) – Press to activate/deactivate. In this mode air enters the vehicle from outside and automatically senses outdoor pollutants and minimizes them from entering the vehicle.


J MODE SWITCH – This controls the flow of air. Air flow can be directed to different levels.

K BLOWER FAN CONTROL SWITCH – Use to select the blower fan speed.

L A/C – Press to turn A/C ON or OFF.

M OFF – Press to turn off the fan.

MANUAL CLIMATE CONTROL (if equipped)

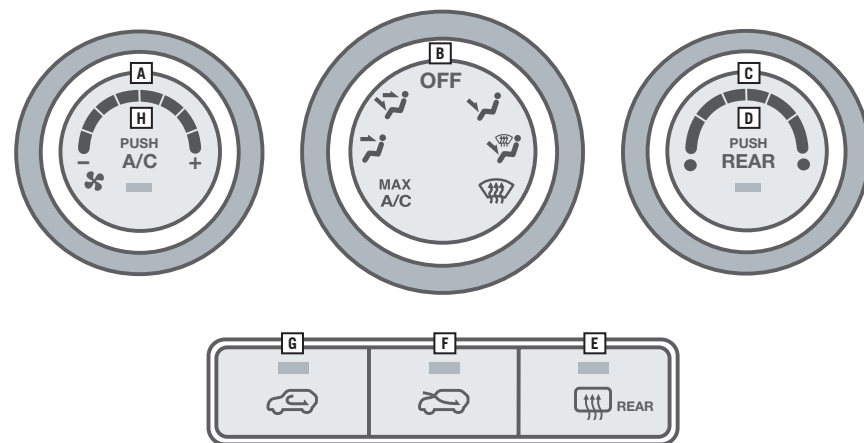

A BLOWER FAN CONTROL SWITCH – Use to select the blower fan speed.

B AIR FLOW CONTROL SWITCH – Use to direct the flow of air.

C TEMPERATURE CONTROL SWITCH – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

D REAR CLIMATE CONTROL SWITCH – Press (the indicator light is illuminated) to set the rear temperature, fan speed and mode.

E REAR WINDOW DEFROST SWITCH – Press to remove moisture from the rear window.

F FRESH AIR SYSTEM SWITCH – Press to activate/deactivate. In this mode air enters the vehicle from outside and is heated or cooled according to the other functions selected.

G AIR INTAKE CONTROL SWITCH – Press to activate/deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

H A/C – Press to turn A/C ON or OFF.

TO REMOVE FROST OR FOG ON THE WINDSHIELD:

1. Set the temperature **C** to the highest position.
2. Set the fan speed **A** to the highest position.
3. Set the air flow **B** to the defrost position.

NOTE: If the air conditioner filter for the evaporator blower is not replaced per the scheduled maintenance section, excessive window fogging may result. Your authorized Hyundai dealer can replace this filter for you.


REAR CLIMATE CONTROL (if equipped)

Located on the rear of the center console.

A REAR FAN CONTROL SWITCH – Use to select the blower fan speed.

B REAR AIR FLOW CONTROL SWITCH – Use to direct the flow of air.

C REAR TEMPERATURE CONTROL SWITCH – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

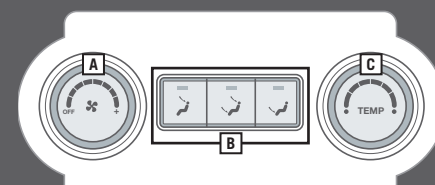

CLOCK ADJUSTMENT

R: Push R to reset minutes to :00 and the hour to the next nearest number. Press and hold the R button to toggle between military time and standard time.

H: Push H to advance the hours.

M: Push M to advance the minutes.



OCCUPANT CLASSIFICATION SYSTEM

PASSENGER AIR BAG OFF INDICATOR

The indicator will illuminate for approximately four seconds when you turn the ignition key to ON or START. The light will not illuminate when the passenger's air bag is enabled. The occupant classification system will disable the right front passenger's air bag under certain conditions (light on). Refer to the Owners' Manual for a complete description of this system.

NOTE: The driver's air bag and the driver's side impact air bag are not part of the occupant classification system.



AUTOMATIC TRANSMISSION

P – Park


R – Reverse

N – Neutral

D – Drive

(+/-) – Shiftronic

- Push this lever forward to shift up one gear.
- Pull this lever backwards once to shift down one gear.

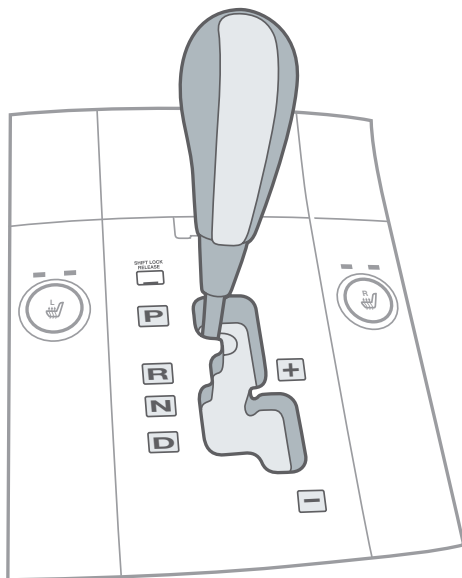

ADDITIONAL FEATURES

REMOTE KEYLESS ENTRY

LOCK

Press to lock all doors (including tailgate) and arm the alarm. Press again for confirmation; the hazard warning lights blink and the chime sounds.

UNLOCK

Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all doors.

TAILGATE

Manual: Press to unlock the tailgate.
Power: Press and hold for one second to open or close the tailgate.


PANIC

Press and hold for 0.5 seconds to activate the horn and flashing lights. Press again to turn off the panic mode. Panic mode automatically shuts off (resets) after 30 seconds.


SMART KEY (if equipped), allows you to unlock the vehicle and start the engine without inserting the key. With the smart key in your possession, press the exterior door handle button to unlock the driver's door. Once inside the vehicle, press in and turn the ignition switch to start the vehicle.




SMART KEY

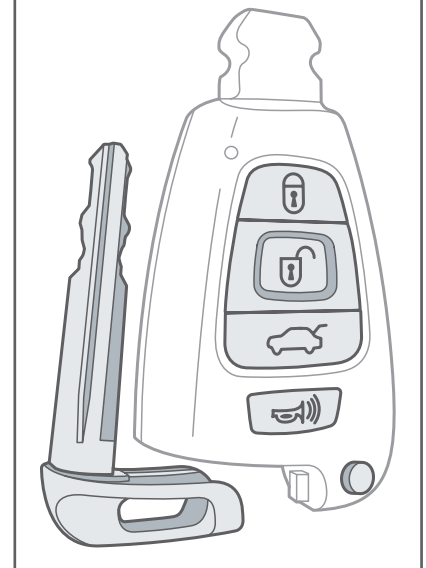



CHILD-PROTECTOR REAR DOOR LOCK


To engage the child-protector feature so the rear door cannot be opened from inside the vehicle, move the child-protector lever located on the rear edge of the door to the  (LOCK) position and close the door.

To disengage the child-protector feature, move the lever to the  (UNLOCK) position.

To open the door from the outside, pull the outside door handle.


 (LOCK) – Does not allow opening the rear door handle from inside the vehicle.

 (UNLOCK) – Allows opening the rear door handle from inside and outside the vehicle.

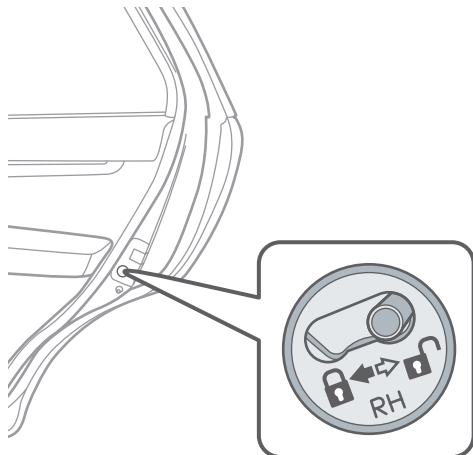


HEIGHT ADJUSTABLE SHOULDER BELT

 To adjust, press the button and raise or lower the height adjuster to an appropriate position.

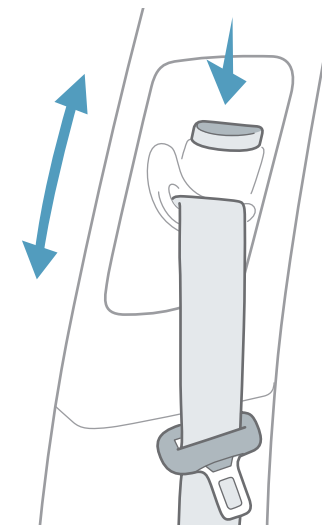

HOOD RELEASE



To unlatch the hood, pull the release lever. The hood should pop up slightly.

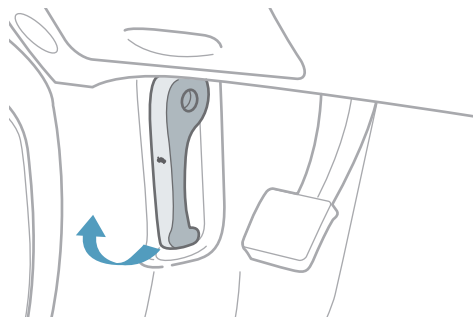

PARKING BRAKE

• To engage the parking brake, depress the parking brake pedal.

• To release the parking brake, depress the parking brake pedal a second time.

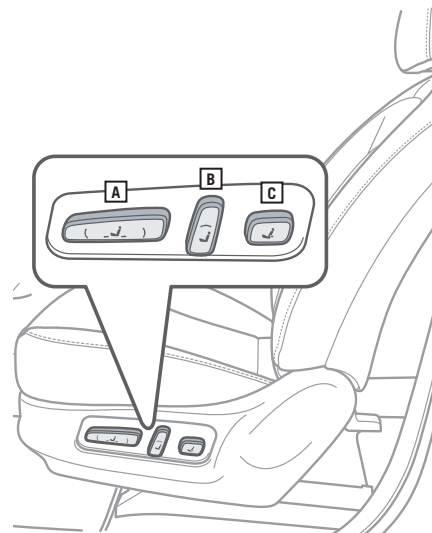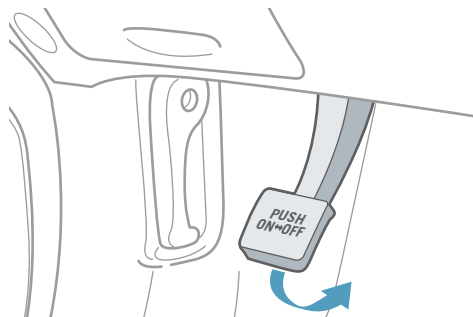

POWER SEAT ADJUSTMENT (if equipped)

A SEAT HEIGHT AND FORWARD / BACKWARD

To adjust seat height:

- Push downward or pull upward on the control switch to adjust seat height.

To adjust seat bottom angle:

- Tilt the control switch to the desired angle.

To move the seat forward / backward:

- Move the control switch forward or backward to the desired position.

B SEATBACK ANGLE

To recline the seatback:

- Tilt the control switch forward or backward to the desired position.

C LUMBAR CONTROL

To adjust the lumbar support:


- Move the control switch forward or backward to the desired support.

2ND ROW WALK-IN SEAT

TO GET IN OR OUT OF THE 3RD ROW SEAT:

1. Pull up on the walk-in lever **A** located on the 2nd row seatback.
2. The 2nd row seatback will fold over and the seat will slide forward **B**.

NOTE: When returning the seatback to its upright position, make sure that it has locked into position by pushing/pulling on the top of the seatback.

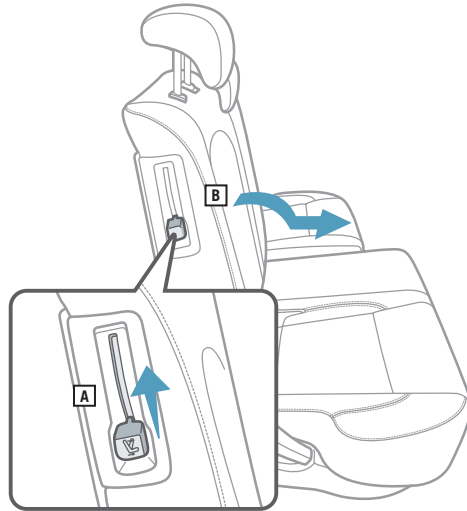

FOLDING REAR SEATS


TO FOLD DOWN THE 2ND ROW SEATBACK:

1. Stow the rear seat belt buckle in the pocket.
2. Set the rear seatback in the upright position. If necessary, slide the seat forward.
3. Lower the headrest to the lowest position **A**.
4. Pull the seatback folding lever **B**, then fold the seatback towards the front of the vehicle.

TO FOLD DOWN THE 3RD ROW SEATBACK:

1. Pull the folding lever while folding the seatback **A** towards the front of the vehicle.
2. To return the seatback to its upright position, lift and pull the seatback backward by pulling on the folding lever **A**.

NOTE: When returning the seatback to its upright position, make sure that it has locked into position by pushing / pulling on the top of the seatback.

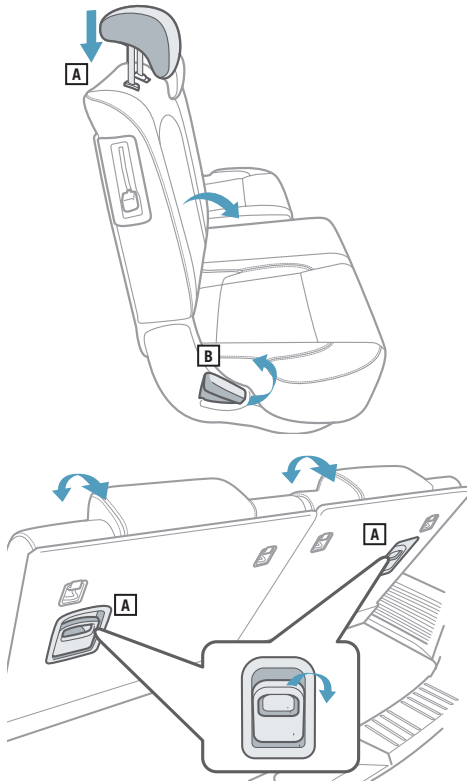

REARVIEW MIRROR / COMPASS / HOMELINK® (if equipped)

AUTO DIMMING ON/OFF FUNCTION **D**


When turned on, this feature will automatically detect and reduce rearview mirror glare.

HOMELINK® **A B C**

- Replaces radio frequency (RF) transmitters used for garage doors, etc.
- Additional Homelink information can be found at: www.homelink.com or calling 800-355-3515.

COMPASS FUNCTION **E**

- Press to turn compass on and off.

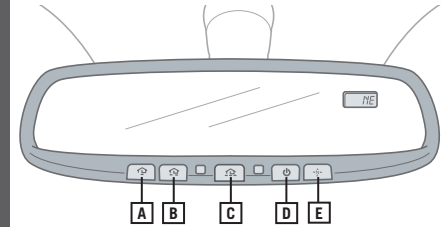


SUNROOF CONTROLS (if equipped)

The sunroof can only be opened, closed or tilted when the ignition switch is in the ON position.

Opening the sunroof: Move the control backward to the first detent position. Move it to the second detent to open completely.

To tilt the sunroof: Push or pull the control up or down.

Closing the sunroof: Move the control forward to the first detent position. Move it to the second detent to close completely.

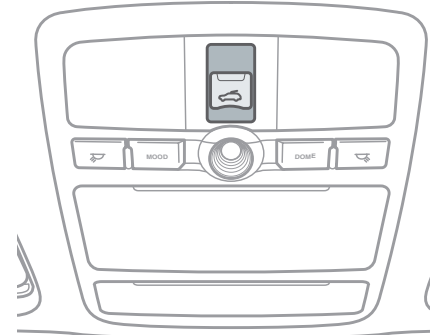


INTERIOR LIGHT

A Push to turn the driver or passenger map light on or off.


B Push to turn the mood light on or off.

C Push to turn the dome light (2nd row) on or off.

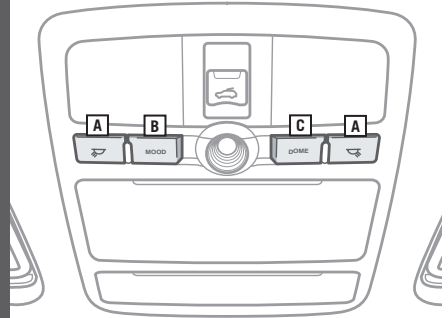


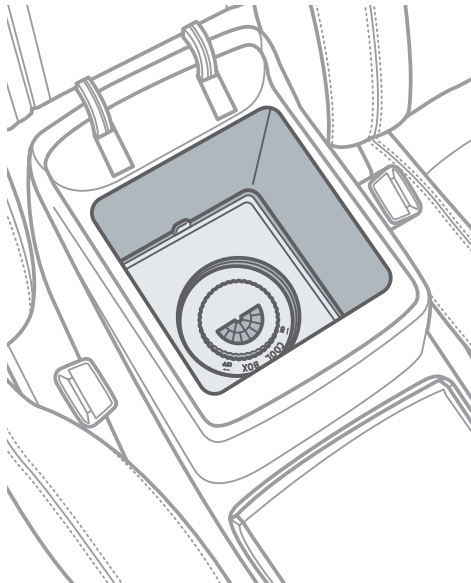
SEAT WARMER (if equipped)

With the ignition key in the ON position, push the appropriate switch to warm the driver's seat or the passenger's seat.

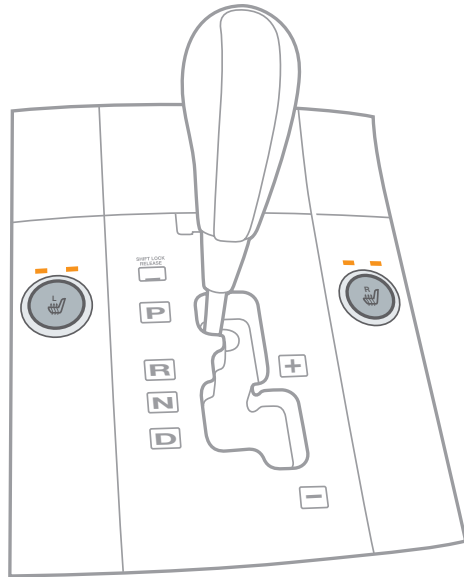

COOL BOX (if equipped)

Located in the center console, the cool box can keep items warm or cool by using the open/close knob of the vent installed in the center console box. When in use, turn the open/close knob to the "open" position and set the climate control mode to the  position. When the cool box is not in use, turn the knob to its "closed" position.








POWER TAILGATE (if equipped)

There are four ways to open and close the power tailgate:

- A** MAIN CONTROL BUTTON
- B** TAILGATE BUTTON
- C** TAILGATE HANDLE SWITCH
- D** KEYFOB (Press and hold button for 1 second)

NOTE: When the power ON/OFF button (PWR), located to the left of the glove box (upon opening), is OFF (not depressed), the power tailgate cannot be controlled with the tailgate button or tailgate handle switch. However, the tailgate can be controlled with the keyfob or the main control button on the driver controls even when the power ON/OFF button (PWR) is OFF.

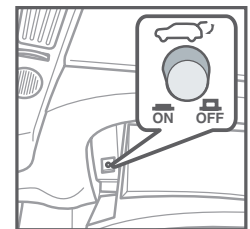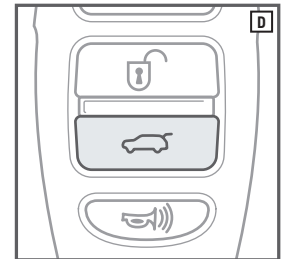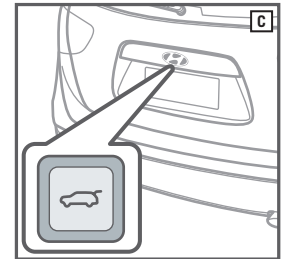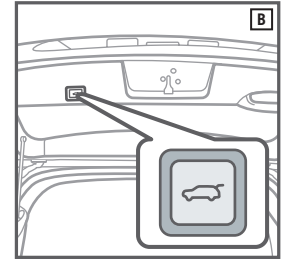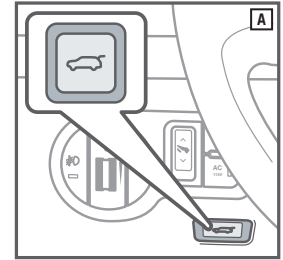


VERACRUZ CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE


BEFORE DELIVERY

- VERIFY ALL REMOTE KEYLESS ENTRY LOCK / UNLOCK
- VERIFY VEHICLE IS CLEAN INSIDE AND OUT
- CHECK PAINT FINISH FOR SCRATCHES, DENTS, ETC. (IF PRESENT NOTIFY MANAGER)
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE (IF EQUIPPED)
- WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES


CLIMATE CONTROL – PAGES 14-15

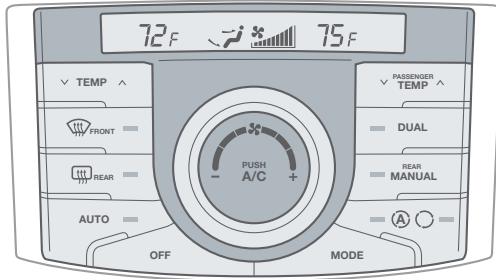

AUTOMATIC

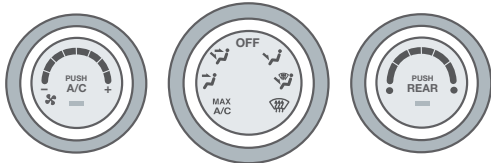

MANUAL

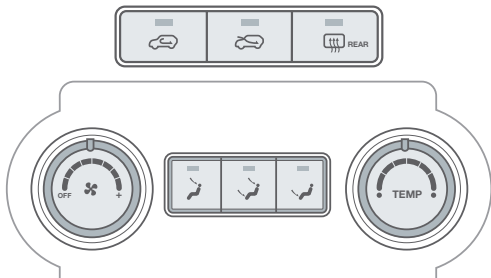

REAR

VERACRUZ CUSTOMER DELIVERY CHECK LIST

(CONTINUED)

TIRE PRESSURE MONITORING SYSTEM (TPMS) – PAGE 9



• **LOW TIRE PRESSURE INDICATOR:** Illuminates if one or more of your tires is significantly under-inflated. Safely park and inflate them to the proper pressure.

NOTE: Refer to the driver's side B-Pillar for recommended tire pressure on OEM tires.




• **LOW TIRE PRESSURE POSITION INDICATOR:** Indicates which tire is under-inflated.



• **TPMS MALFUNCTION INDICATOR:** Have the system checked by an authorized Hyundai dealer as soon as possible.

FRONT / REAR WINDSHIELD WIPER / WASHER – PAGE 11

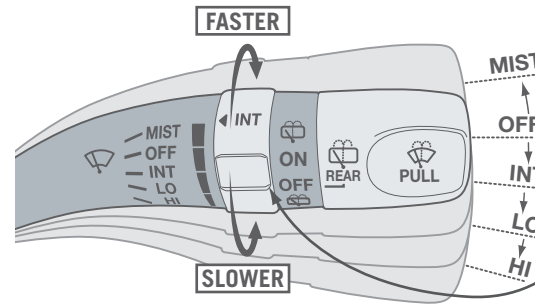

• Move the switch up or down to one of the four positions.

• **WIPE / WASH** to use the washer pull the lever towards you.

• To adjust INT speed rotate.

• **REAR WINDSHIELD WIPER / WASHER**

DURING DELIVERY

- VERIFY AUDIO AND VIDEO SYSTEMS OPERATION (CONFIRM PRESETS)
- VERIFY CLOCK TIME SETTING AND SET AS NEEDED
- EXPLAIN FIRST SERVICE PROCEDURE - PROVIDE SERVICE MANAGER'S OR SERVICE WRITER'S BUSINESS CARD
- REVIEW AMERICA'S BEST WARRANTY
- ASK IF CUSTOMER HAS ANY QUESTIONS

Sales Consultant

Date

Sales Manager

Date

Customer

Date