

## WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES


### HOW TO DEFROST - page 18- 21

- 1 Press the front defrost button.
- 2 Set to warmest temperature setting.
- 3 Set to highest fan speed.

 
### TIRE PRESSURE MONITORING SYSTEM (TPMS) - page 39



#### LOW TIRE PRESSURE INDICATOR / TPMS MALFUNCTION INDICATOR


NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure indicator  to illuminate. Inflate tires according to the Tire Pressure Label located on the driver's side door pillar.

### WINDSHIELD WIPER / WASHER - page 09

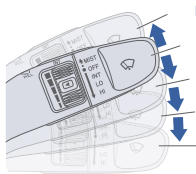


- MIST** • To activate wipers move the switch down to one of the three positions (INT, LO, HI)
- OFF** • To adjust "INT" speed move switch
- INT** • To spray washer fluid pull lever toward you
- LO** • To spray washer fluid pull lever toward you
- HI** • Push lever up for a single wiper pass

### UNLOCKING VEHICLE - page 02

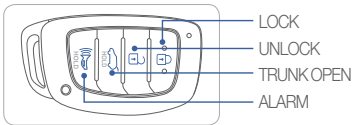 

### BLUE LINK - pages 25-27

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link Users Manual & tear out Voice Commands/Quick Tip Card
- Encourage customers to press the Blue link button 

## MAINTENANCE

Scheduled Maintenance	Normal Usage	Severe Usage*
Engine Oil and Filter (2.4 GDI)*	Replace 7,500 or 12 mos.	Replace 3,750 or 6 mos.
Engine Oil and Filter (1.6TGD/2.0TGD)*	1st Replace 3,000 or 6 mos. Add'l Replace 5,000 or 6 mos.	Replace 3,000 or 3 mos.
Fuel Additive (2.4 GDI) *1	Add 7,500 or 12 mos.	Add Same as Normal
Fuel Additive (2.0 TGD) *1	1st Add 3,000 or 6 mos. Add'l Add 5,000 or 6 mos.	Add Same as Normal
Tire Rotation	Perform 7,500	Perform 7,500
Air Cleaner Filter	Inspect 7,500 Replace 30,000	Inspect Same As Normal Replace More Frequently
Vacuum Hose	Inspect 7,500	Inspect Same As Normal
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace 15,000	Replace More Frequently
Air Conditioning Refrigerant	Inspect 15,000	Inspect Same As Normal
Brake Hoses & Lines	Inspect 15,000	Inspect Same As Normal
Drive Shafts & Boots	Inspect 15,000	Inspect 7,500
Exhaust Pipe & Muffler	Inspect 15,000	Inspect Same As Normal
Front Disc Brake/Pads, Callipers & Rotors	Inspect 15,000	Inspect More Frequently
Steering Gear Box, Linkage & Boots/Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect 15,000	Inspect More Frequently
Suspension Mounting Bolts	Inspect 15,000	Inspect Same As Normal
Brake fluid	Inspect 30,000	Inspect Same As Normal
Crankcase Ventilation Hose	Inspect 30,000	Inspect Same As Normal
Fuel Filter	Inspect 30,000	Inspect Same As Normal
Fuel Lines, Fuel Hoses and Connections	Inspect 30,000	Inspect Same As Normal
Fuel Tank Air Filter	Inspect 30,000	Inspect Same As Normal
Rear Disc Brake/Pads, Parking Brake	Inspect 30,000	Replace More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect 30,000	Replace Same As Normal
Valve Clearance (if equipped)	Inspect 60,000	Inspect Same As Normal
Spark Plugs (2.4GDI)	Replace 105,000	Replace More Frequently
Spark Plugs (1.6TGD/2.0TGD)	Replace 45,000	Replace More Frequently
Drive Belt (Alt, A/C)	1st Inspect 60,000 or 72 mos. Add'l Inspect 15,000 or 24 mos.	Inspect Same As Normal
Coolant	1st Replace 60,000 or 60 mos. Add'l Replace 30,000 or 24 mos.	Replace Same As Normal
Automatic Transmission Fluid	No check, No service required	Replace 60,000
Dual Clutch Transmission Fluid	Inspect 37,500	Replace 75,000

\*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.  
\*1 If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Hyundai dealer along with information on how to use them. Do not mix other additives.

\*See Owner's Manual for details.

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, We recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

NP150-C2017  
(Rev 01/26/17)  
Printing 01/29/17



**HYUNDAI SONATA**  
Quick Reference Guide

[www.hyundai.com](http://www.hyundai.com)

 **HYUNDAI**  
NEW THINKING.  
NEW POSSIBILITIES.

Roadside Assistance: **1-800-243-7766**  
 Consumer Affairs: **1-800-633-5151**  
 Sirius XM® Radio: **1-800-967-2346**  
 Blue Link: **1-855-2BLUELINK**  
**(1-855-225-8354)**

# Table of contents

## GETTING STARTED

Driver position memory system	05
Engine start / stop button	05
Front seat adjustment	03
Headrest adjustment	04
Seat belt adjustment	04
Smart key	02

## FEATURES AND CONTROLS

Child - protector rear door lock	12
Climate control	18-21
Clock Adjustment	06
Driver's main controls	07
Fuel filler lid	07
Headlights	08
Homelink wireless control system	13
Instrument cluster	14-15
Instrument panel illumination	17
Interior lights	10
LCD display control	16
LCD display modes	16
Rear parking assist system	12
Rear seat folding	12
Smart trunk	11
Steering wheel adjustment	06
Sunroof	10
Trunk opening	11
Wipers and washer	09

## MULTIMEDIA

Android Auto	32-33
Apple carplay™	34-37
Blue Link Telematics system	25-27
Bluetooth operational tips	22
Bluetooth phone operation	24
Bluetooth phone pairing	24
Navigation	29-31
Standard Audio	28
Steering wheel audio control	22

## DRIVING

 
AUX, USB and iPod port	31
Auto Hold	38
Automatic transmission	40
Blind Spot Detection (BSD) system	44
Cruise control / Smart cruise control	46
Drive mode integrated control system	45
Dual clutch transmission	41-42
Electric Parking Brake [EPB]	38
Electronic Stability Control (ESC)	43
Lane Departure Warning System (LDWS)	43
Paddle shifter	40
Tire Pressure Monitoring System (TPMS)	39

## Frequently Asked Questions

- Pair phone to your vehicle. Refer to page 24.




Driver position memory system  
Page05



Head lights  
Page08



 Instrument cluster  
Page14-15




Cruise control/  
smart cruise control  
Page46



Engine start/  
stop button  
Page05



 Navigation  
Page29-31

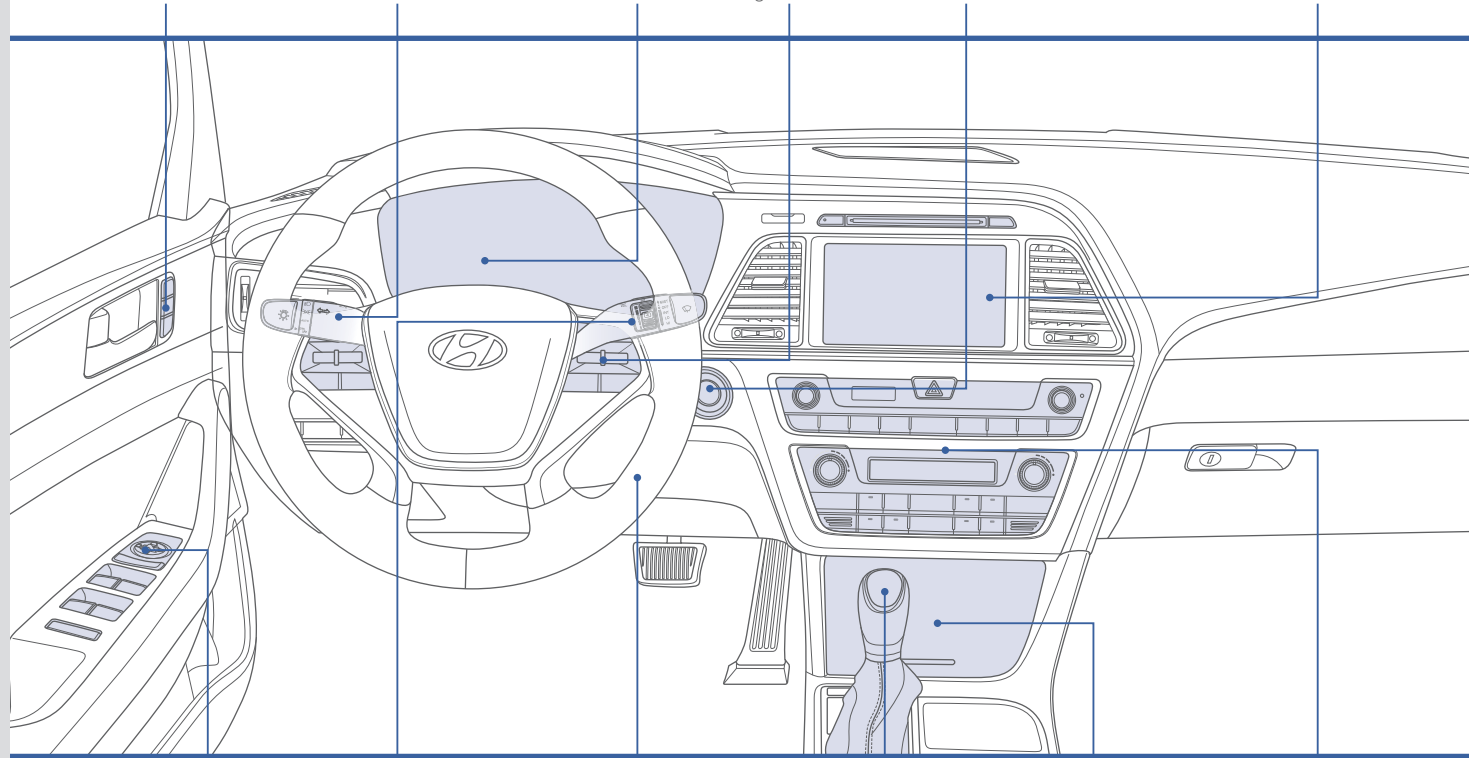

Driver's main controls  
Page07



Wiper and washer  
Page09



Steering wheel adjustment  
Page06



Transmission  
Page40



AUX,USB and iPod  
Page31



Climate control  
Page18-21


Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

\* Some vehicles may not be equipped with all the listed features.


## WARNING!

 To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

## SMART KEY

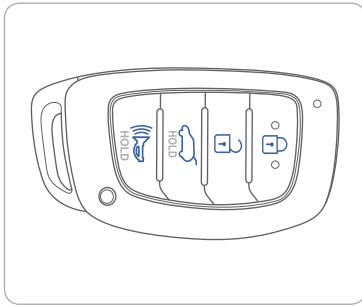


- Lock
- Unlock
- Trunk open
- Panic

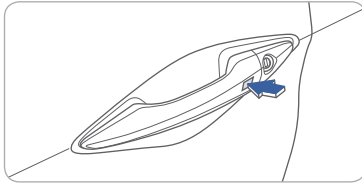 

**Driver's door Lock / Unlock**  
 Smart key must be within 28~40 in.  
 from the outside door handle.  
**Press:** Once – Unlock driver door  
 Twice – Unlock all doors  
 Third – Lock all doors

 **NOTE:**  
 User selectable option see  
 Owner's Manual for more detail.

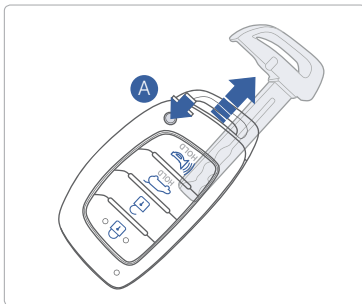

**Remove mechanical key.**  
 Press and hold the release button **A** to  
 remove the mechanical key


## FRONT SEAT ADJUSTMENT (Manual)



 Forward and backward **1**



Seat cushion height **2**




Seatback angle **3**




## FRONT SEAT ADJUSTMENT (Power)



 
Forward and backward **1**




Seat cushion height

 


Seatback angle **2**

 

 Lumbar support (for driver's seat) **3**




## HEADREST ADJUSTMENT

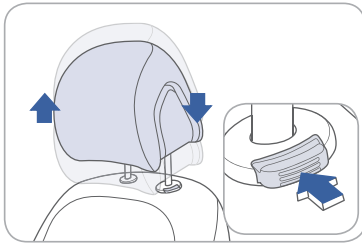 

**To Raise Headrest:**  
Pull headrest up.

**To Lower Headrest:**  
Press lock button while pressing down on headrest.

## ENGINE START/STOP BUTTON

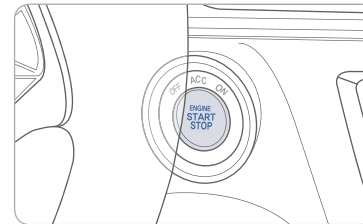 

With the ignition OFF and foot OFF of brake pedal, press the Engine Start/Stop button.

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine in any mode (including OFF), press the Engine Start/Stop button while pressing the brake pedal.

To shut the engine OFF, place shift lever in P (Park) and press the Engine Start/Stop button again.

### Emergency situations

 
 
#### Shut off engine while driving

Press engine start/stop button for more than 2 seconds or 3 times consecutively within 3 seconds.


#### Restart engine while driving

Press engine start/stop button with shift lever in N (Neutral).

## SEAT BELT ADJUSTMENT (Front seat)

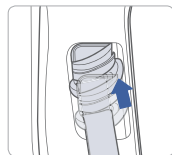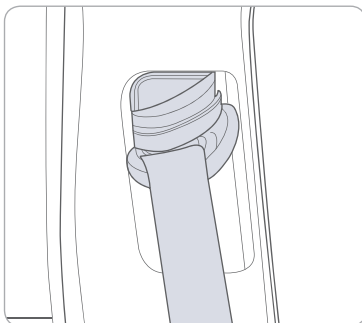


Pull up to raise.

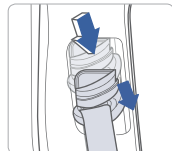 

Press button and push down to lower.

## DRIVER POSITION MEMORY SYSTEM

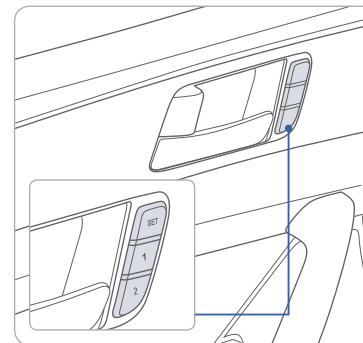 

### Storing

 
 
 
1. Adjust the driver's seat position, outside rearview mirror position and instrument panel illumination intensity.
2. Press the SET button. The system will beep once.
3. Press one of the memory buttons (1 or 2) within 5 seconds. The system will beep twice.

**NOTE:** Transmission must be in P (Park).

### Recalling

Press the desired memory button (1 or 2). The system will beep once.

## STEERING WHEEL ADJUSTMENTS

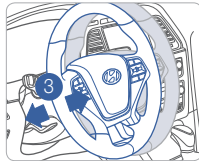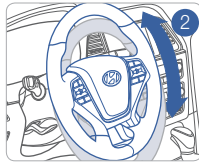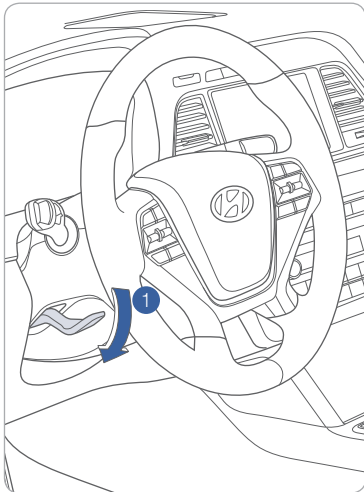

**NOTE:** Do not adjust while driving.

1. Pull the lever ① down.
2. Set the angle ② and distance ③.
3. Pull the lever ① up to lock position.

## CLOCK ADJUSTMENT

 
### With Standard Radio



1. Hour  
Press the ① button to adjust the Hour.
2. Minute  
Press the ② button to adjust the Minute.




**NOTE:** Press and hold ① and ② to switch between 12 or 24 hours.

### With Navigation

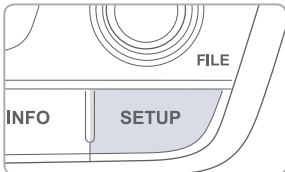


1. Press the SETUP button.
2. Touch the "Clock" button on screen.
3. Select GPS Time to On.

## FUEL FILLER LID

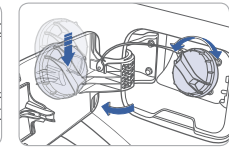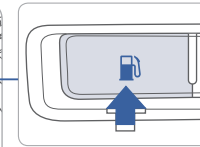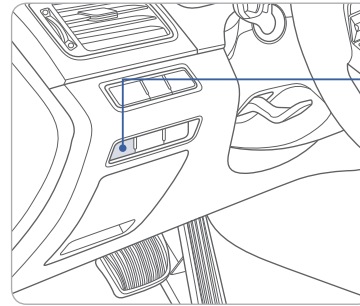   

 **NOTE:** Tighten the fuel filler cap until one click is heard.

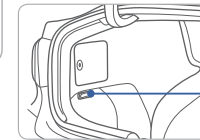


### Emergency fuel filler door release

Pull the handle of the release located on the left side of the trunk.

Check the engine oil regularly between recommended oil changes.
 
## DRIVER'S MAIN CONTROLS

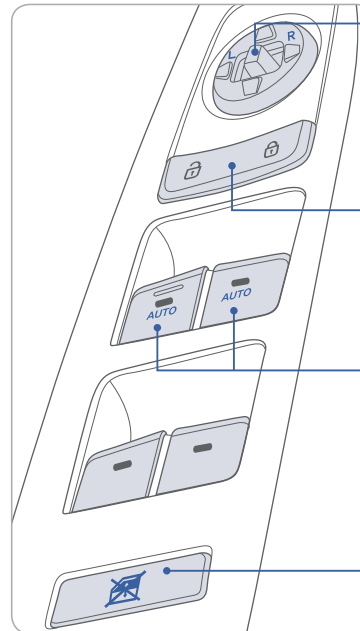

### Outside Rearview Mirror

- Move the lever towards L (left) or R (right) on the switch. Then adjust the mirror by using the mirror adjustment control switch.

### Door Lock

Locks/unlocks all doors.

 
### Window Auto down/up (if equipped)

Press past detent to fully open/close window.

### Power window lock button

Disables the power window switches on the rear passenger doors.

## HEADLIGHTS

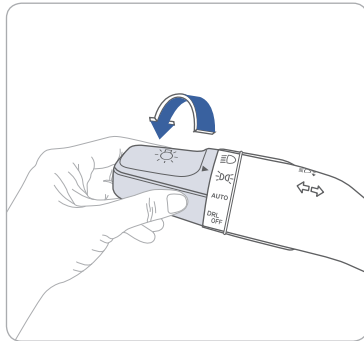


- ▶ | Headlight position
- ▶ | Parking light position
- ▶ | **AUTO** Auto light position
- ▶ | DRL OFF position


### Headlight Delay

 Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off.


### Turn signals and lane change signals

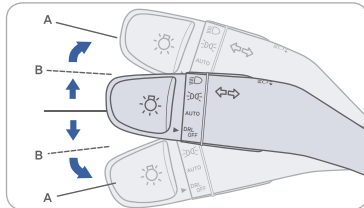


### Flashing headlights

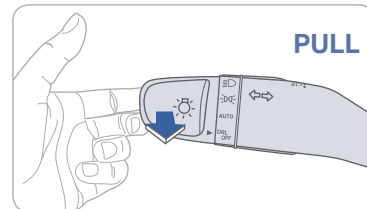 

### High beam

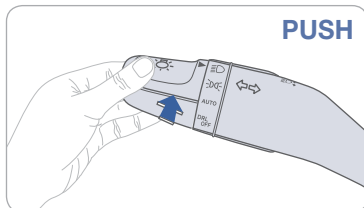 

### Smart high beam

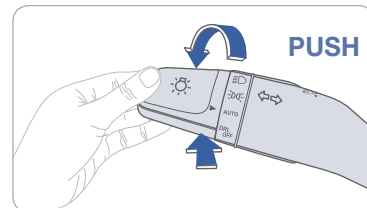 


### NOTE:

To turn off high beam, pull the lever towards you.

### Smart High Beam Function

1. Select auto position on stalk.
2. Push lever forward to engage Auto High beam.
3. Push lever forward again to disengage.

 
## WIPERS AND WASHER

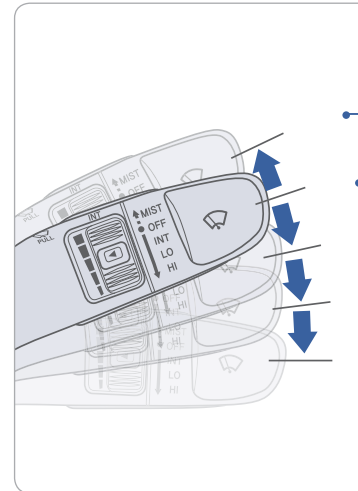

- **MIST** - Single wipe
- **OFF**
- **INT** - Intermittent wipe
- **LO** - Low wiper speed
- **HI** - High wiper speed

### Intermittent Wipe Time Adjustment

 
Move the control switch.

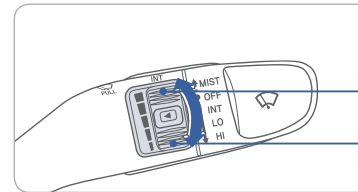

- Fast wiper speed
- Slow wiper speed

### Windshield Washer

 
Pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

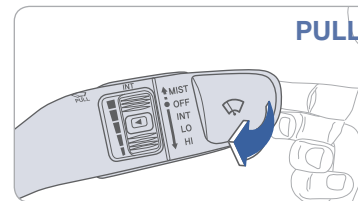



## FEATURES AND CONTROLS
 
### SUNROOF

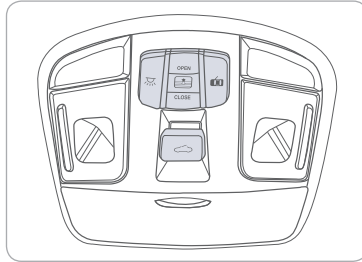


#### Sunshade




Press Rear Button to open Sunshade. Press Forward Button to close Sunshade (This operation will also close Sunroof if open or vented position.)
 
#### Sliding the sunroof




Slide the Sunroof Button rearward to open sunroof. (This operation will also open the Sunshade, if it is not in the open position.) Slide the Sunroof Button forward to close the Sunroof.

#### Tilting the sunroof

 

Press the Sunroof Button to tilt the Sunroof to the vented position. (This operation will also open the Sunshade, if it is not in the open position.) Pull the Sunroof Button downward to close the Sunroof.

### INTERIOR LIGHTS

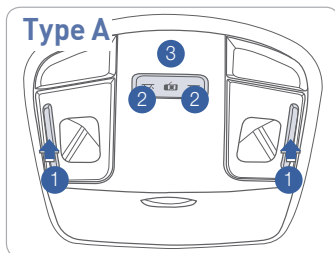 

#### Type A

#### Front Map Lamp ①

Push the switch to turn the map lamp on or off.

#### Front Room Lamp (☀️) ② (Type A)

 
Push the switch to turn the room lamp (overhead lamp) on or off.

#### Front Room Lamp (☀️) ② (Type B)

Push the switch to turn the room lamp (overhead lamp) on or off.

#### Front Door Lamp (🚪) ③



Lights will turn on when any door is open.

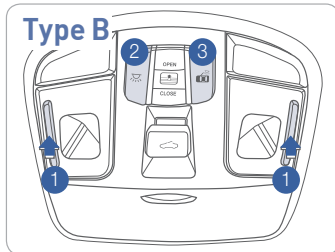


#### Type B


  
### TRUNK OPENING

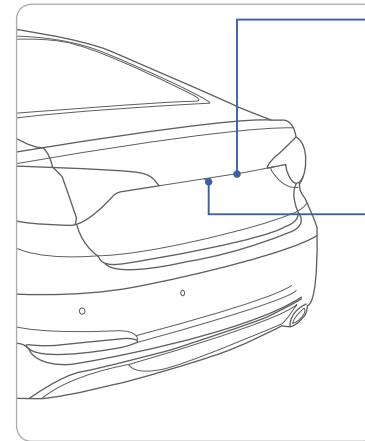


Use the mechanical key.

 



Press to open. Smart key needs to be within range.

#### NOTE:

 If vehicle is unlocked, the trunk can be opened without the smart key.




Press and hold.

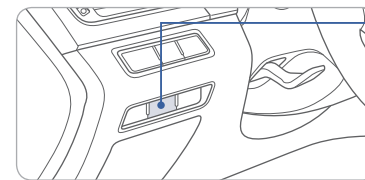  

Press the release button in the vehicle.

### SMART TRUNK

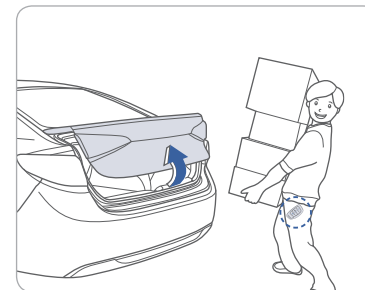 

#### Smart Trunk

Trunk will open automatically when detecting smart key within range near the trunk for more than 3 seconds.

#### To enable Smart Trunk function:

 
Vehicle must be in P (Park) to adjust settings in the User Setting mode.

1. Select "Door/Trunk" in the User Settings in the instrument cluster.
2. Check "Smart Trunk".


#### NOTE:

Function is active after 15 seconds when all doors are closed and locked and key is not detected. The vehicle will also provide an audible and visual alarm while activating. For more details, refer to Owner's Manual.


## CHILD-PROTECTOR REAR DOOR LOCK

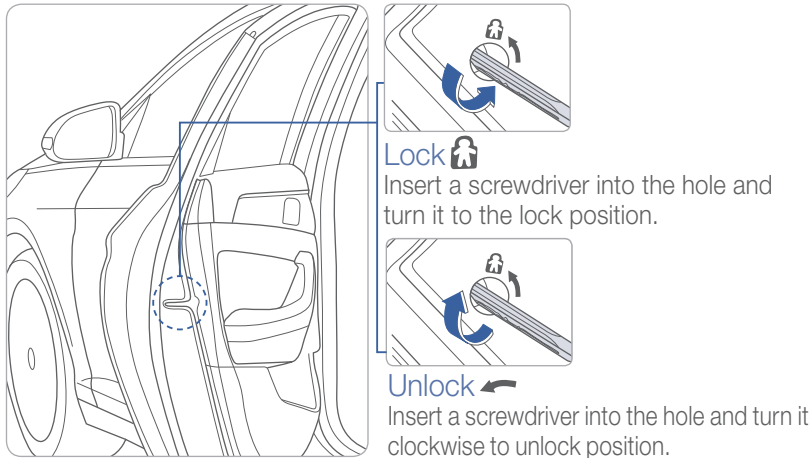

## REAR SEAT FOLDING

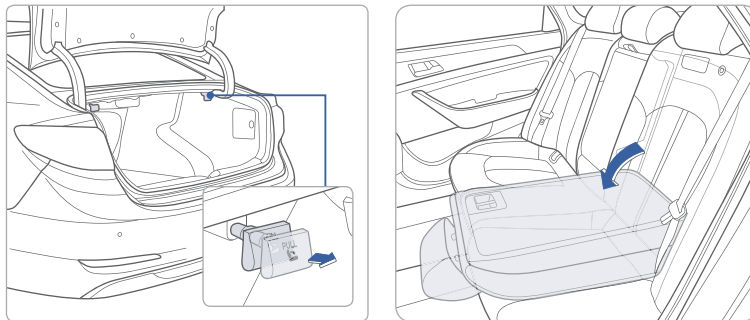 


## REAR PARKING ASSIST SYSTEM

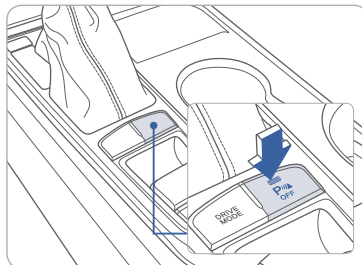 

The rear parking assist system assists the driver during reverse movement of the vehicle by chiming if any object is sensed within the distance of 47 inch behind the vehicle.

Push the button to turn off the rear parking assist system. The indicator light on the button will turn on.

## HOMELINK WIRELESS CONTROL SYSTEM

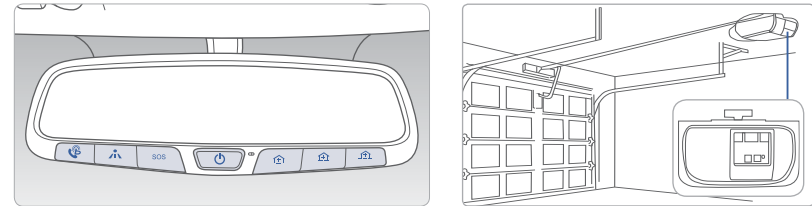 

### Standard Programming

To train most devices, follow these instructions:

1. For first-time programming, press and hold the two outside buttons, HomeLink<sup>®</sup> Channel 1 and Channel 3 Buttons, until the indicator light begins to flash (after 10 seconds). Release both buttons. Do not hold the buttons for longer than 20 seconds.
2. Position the end of your hand-held transmitter 1-3 inches (2-8 cm) away from the HomeLink<sup>®</sup> buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink<sup>®</sup> and hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons the red indicator Status LED will flash slowly and then rapidly after HomeLink<sup>®</sup> successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For detail instructions, refer to your Owner's Manual or visit [www.homelink.com](http://www.homelink.com) or call (800) 355-3515.

 





# INSTRUMENT CLUSTER




### Type A

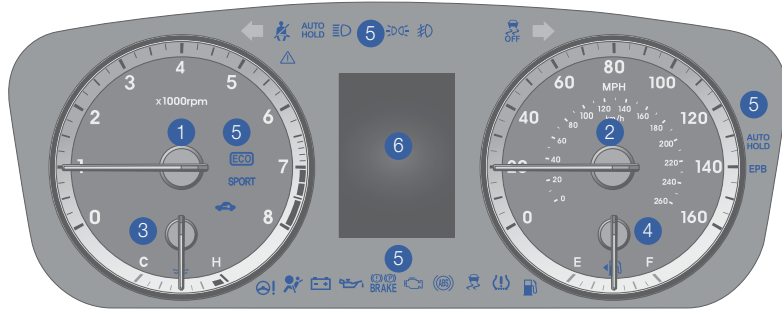


### Type C

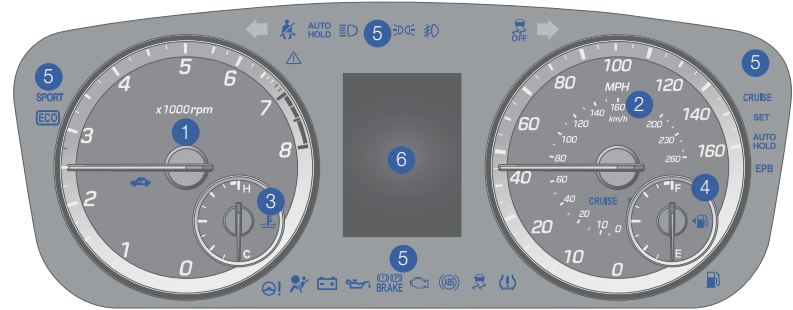 

### Type B (colored display)

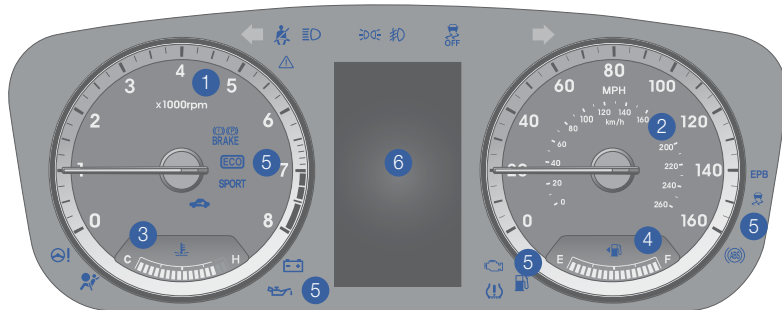 

### Type D (colored display)

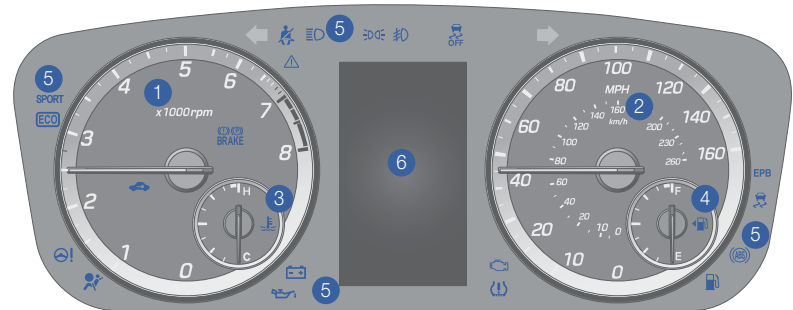 

- 1 Tachometer
- 2 Speedometer
- 3 Engine coolant temperature gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 LCD display (including Trip computer)




## INSTRUMENT CLUSTER
 
### LCD DISPLAY MODES


Modes	Symbol	Explanation
Trip Computer		This mode displays driving information like the tripmeter, fuel economy, and so on.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
SCC/LDWS (if equipped)		This mode displays the state of the Smart Cruise Control (SCC) and Lane Departure Warning System (LDWS).
AV		This mode displays the state of the AV (Audio Visual) system.
Information		Displays service interval and warning messages.
User Settings		Changes settings.

### LCD DISPLAY CONTROL

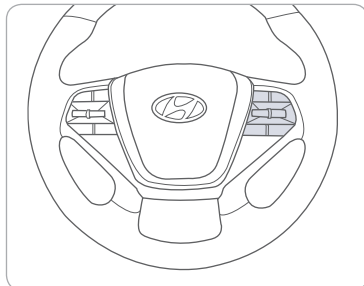


- : MODE button for changing modes
- : MOVE switch for changing items
- : SELECT/RESET button for setting or resetting the selected item

#### Type A

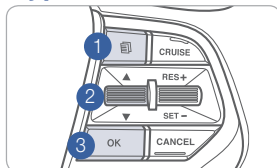 


#### Type B

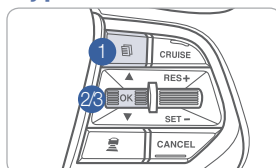 


### WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake Force Distribution (EBD) system warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine coolant temperature warning light	Engine oil pressure warning light	Low fuel level warning light
Low tire pressure warning indicator/TPMS malfunction lamp	Electric Parking Brake (EPB) warning light	Master warning light
Electronic Stability Control (ESC) indicator	Electronic Stability Control (ESC) OFF indicator	Immobilizer indicator
Turn signal indicator	Low beam indicator	High beam indicator
Light ON indicator	Smart high beam indicator	Cruise indicator
Cruise SET indicator	AUTO HOLD indicator	SPORT mode indicator
ECO mode indicator	Lane Departure Warning System (LDWS) indicator	
Autonomous Emergency Braking (AEB)	Icy Road Warning Light	

 
### INSTRUMENT PANEL ILLUMINATION

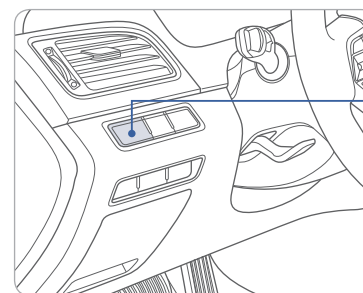

 Press - or + to adjust instrument cluster illumination brightness.




## MANUAL CLIMATE CONTROL

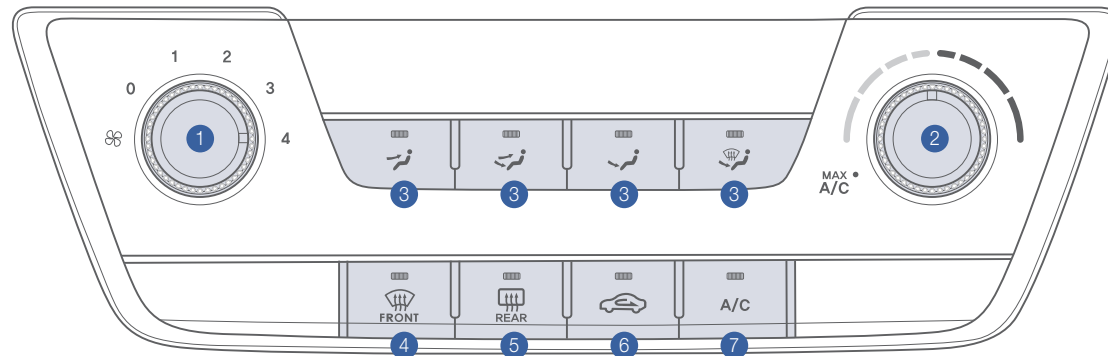 


- 1 Fan speed control knob
- 2 Temperature control knob
- 3 Mode selection buttons
- 4 Front windshield defroster button

- 5 Rear window defroster button
- 6 Air intake control button
- 7 A/C (Air Conditioning) button


### DEFOGGING/DEFROSTING

 

 1. Press the defrost button.



 2. Select warmest temperature.



3. Set the fan speed to the highest speed.

### AIR INTAKE CONTROL



Recirculated air position



Outside (fresh) air position

### MODE SELECTION

Changing the direction of the air flow as follow.



Face-Level



Bi-Level



 
Floor-Level



Floor & Defrost-Level



Defrost-Level



Press to activate/deactivate the rear defroster.

### MAX A/C MODE

 
MAX A/C Mode automatically engages Recirculated air position and air conditioning. Return to normal A/C mode after the vehicle interior has cooled sufficiently.

### NOTE:

To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

# CLIMATE CONTROL

## AUTOMATIC CLIMATE CONTROL

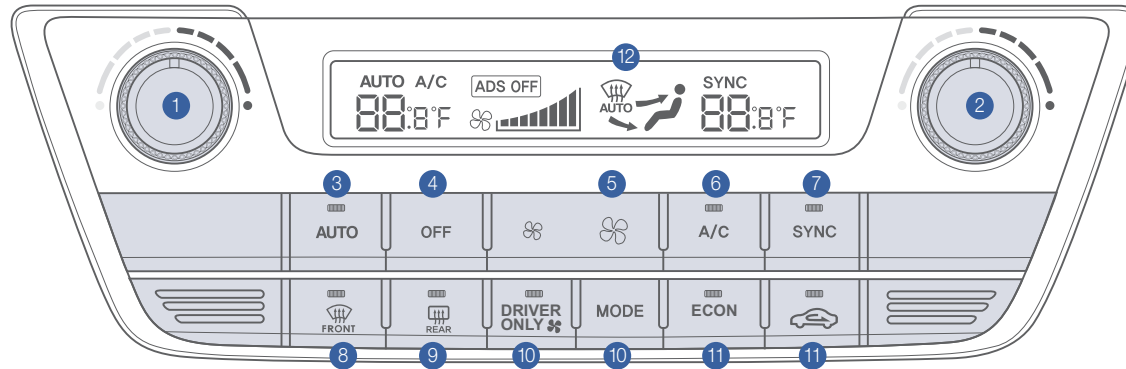

- 1 Driver's temperature control knob
- 2 Passenger's temperature control knob
- 3 AUTO (automatic control) button
- 4 OFF button
- 5 Fan speed control button
- 6 Air conditioning button
- 7 SYNC button
- 8 Front windshield defroster button
- 9 Rear window defroster button
- 10 Mode selection button
- 11 Air intake control button
- 12 Climate control information screen

### DEFOGGING/DEFROSTING

1. Press the defrost button.
2. Select warmest temperature.
3. Set the fan speed to the highest speed.

#### NOTE:

To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

### SYSTEM OFF

Pressing the OFF button will place the system in the OFF mode.

- Climate control fan will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

### AIR INTAKE CONTROL

- Recirculated air position
- Outside (fresh) air position (Type A)
- Outside (fresh) air position (Type B)

### AUTOMATIC HEATING / AIR CONDITIONING

 
The modes, fan speeds, air intake and air conditioning will be controlled automatically by the temperature setting you select.

### MODE SELECTION

Changing the direction of the air flow as follow.



## STEERING WHEEL AUDIO CONTROL

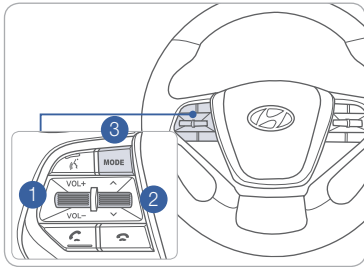


- 1 VOLUME**  
Raises or lowers speaker volume.
- 2 SEEK/PRESET**  
Change station.
- 3 MODE**  
Change the audio source.

## BLUETOOTH® OPERATIONAL TIPS

 In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

### Steering wheel bluetooth® control

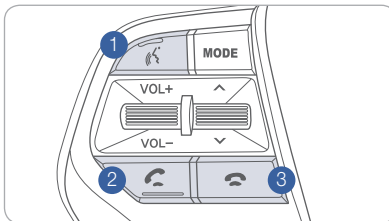

- 1 TALK**  
Activates voice recognition.
- 2 CALL**  
Places and transfers calls.
- 3 END**  
Ends calls or cancels functions.

#### To Answer a Call:

- Press button on the steering wheel.

#### To Reject a Call:

- Press button on the steering wheel.

#### To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

#### To Transfer a Call to the Phone

##### (Private call on handset – do not use while driving):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

#### To Finish a Call:

- Press button on the steering wheel.

#### Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

##### Calling by Name:

1. Press button.
2. Say the following command:
  - “Call <John Smith>”: Connects the call to John.
  - “Call <John Smith> on <on Mobile/in Office/at Home>”: Connects the call to John’s Mobile, Home, or Office phone number.

##### Dialing by Number:

1. Press button.
2. Say “Dial Number”.
3. Say desired phone number. For complete list of commands, refer to your Owner’s Manual.



## MULTIMEDIA


### BLUETOOTH PHONE PAIRING

 
 
Pairing tutorials, phone compatibility and operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



### BLUETOOTH PHONE OPERATION

#### Phone setup (pairing phone) with Audio

1. Press the PHONE button in the head unit or  button in the steering wheel remote control.




2. Press <YES> to search for Bluetooth phones.
3. Pair your car after your mobile phone detects the Bluetooth device.
4. Enter the passkey or accept the authorization popup. (The default passkey is 0000.)
5. Connect Bluetooth.



**NOTE:** Vehicle must be parked to complete pairing process.



### BLUE LINK TELEMATICS SYSTEM

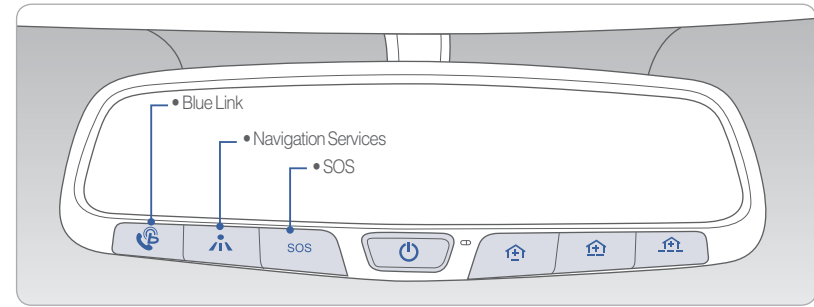 

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the  button for access to the voice-response menu of services.

- You can say:
  - Service Link
  - Roadside Assistance
  - Blue Link Account Services
  - Help
  - Cancel

Press the  button for Destination Search Powered by Google™.

- For vehicle equipped with factory-installed navigation systems.
- For non-navigation, this button functions with Android Auto or Apple Carplay.

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User's Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google™ is a registered trademark of Google, Inc.

## Blue Link Mobile App



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android™ — Google Play™

Visit [HyundaiBlueLink.com](http://HyundaiBlueLink.com) FAQs to see a list of compatible devices.



Scan to see list of compatible devices and to download the app.

## Remote Start

Remote Start enables you to remotely start your vehicle from virtually anywhere. For vehicles equipped with full-automatic temperature control, you can also enable climate control remotely and turn on the front window defroster, ensuring a warm or cool car is ready to go when you are.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to [www.MyHyundai.com](http://www.MyHyundai.com).

### Remember:

- Remote Start will automatically shut off after 10 minutes or after selected engine timer runs out in navigation vehicles.
- While this feature is active, the parking lights will blink until vehicle is turned off or when vehicle is in operation.
- To continue operation of the vehicle, the proximity key must be inside the vehicle with the driver prior to pressing the brake and being able to move the gearshift from the P (Park) position.

**NOTE:** Remote Start is not available on all models. Remote Start is only available for Push Start equipped vehicle with an Automatic Transmission or Dual Clutch Transmission (DCT). Remote Start with Climate Control additionally requires Fully Automatic Temperature Control.

## Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security/panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

## Remote Start will terminate:

- After 10 minutes or after selected engine timer runs out in navigation vehicles
- Brake is pressed without proximity key inside vehicle
- Alarm is triggered without proximity key inside vehicle
- Door/trunk is opened from inside the vehicle

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.

### **WARNING!**

Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

### **CAUTION!**

If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

 


## MULTIMEDIA



### STANDARD AUDIO

#### Audio mode

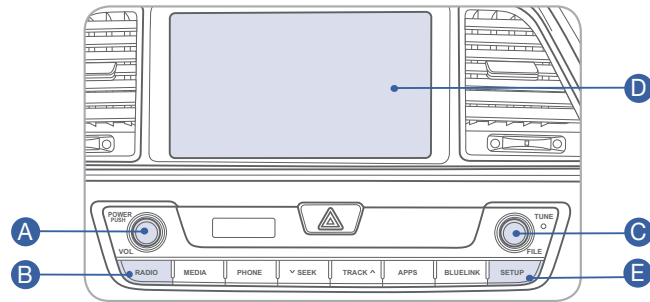

Press POWER button **A** to turn radio on.

- TUNING/LISTENING TO CHANNELS
  1. Press RADIO button **B** to select FM/AM/XM.
  2. Rotate TUNE knob **C** to desired channel.

#### NOTE:

 
A clear view of the southern sky is recommended to ensure XM<sup>®</sup> radio reception.

- SETTING PRESET MEMORY BUTTONS (FM/AM/XM<sup>®</sup>)
 

Press and hold any preset button **D** on screen.
- ADJUSTING THE SOUND CONTROL
  1. Press the SETUP button **E**.
  2. Press the "Sound" button on the screen.
  3. Press "Sound Setting" button on the screen.

### NAVIGATION

#### Audio mode

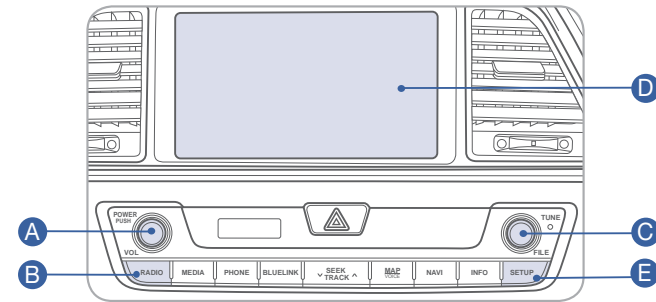

Press POWER button **A** to turn radio on.

- TUNING/LISTENING TO CHANNELS
  1. Press RADIO button **B**.
  2. Rotate TUNE knob **C** to desired channel.

#### NOTE:

A clear view of the southern sky is recommended to ensure XM<sup>®</sup> radio reception.

- SETTING PRESET MEMORY BUTTONS (FM/AM/XM<sup>®</sup>)
 

Press and hold any preset button **D** until an audible beep is heard to store current channel.
- ADJUSTING THE SOUND CONTROL
  1. Press SETUP button **E**.
  2. Select Sound button on screen.
  3. Touch on-screen arrows to adjust desired setting.



Please refer to your Owner's Manual for more detailed information on how to use your audio system.  
Complimentary XM subscription ends three months following the vehicle date of sale. Please contact XM Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM subscription.

 


## NAVIGATION

### Basic features on the map screen



- 1 Move to the Home Screen
- 2 Change the map view mode
- 3 Voice Guidance On/Off
- 4 Zoom in the map
- 5 Set the zoom level automatically according to the guidance
- 6 Zoom out the map
- 7 Quick and easy selection of a destination and options

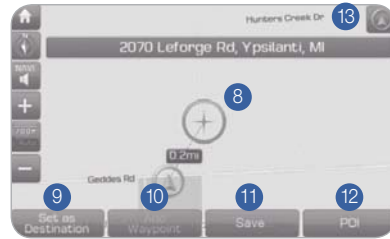

- 8 Touch to scroll the map
- 9 Quick and easy selection of a destination from the map screen
- 10 Set a waypoint to the current route
- 11 Save frequently used address to address book
- 12 Find a POI (Point Of Interest) around the current position
- 13 View the vehicle's current position on the map screen

### Basic features on the map screen

 


- 1 Set destination by address search.
- 2 Select from previously inputted addresses and POI's.
- 3 Search POI Name to search the destination.
- 4 Runs Google Local Search.
- 5 Select the desired item in the sub-categories.
- 6 Search and select the desired destination among the searched items.
- 7 Search and select the desired destination among the searched items.



- 8 Search and select the desired destination among the searched items.
- 9 Search the destination with the address book.
- 10 Search destination by phone number.
- 11 Type freeway name and exit/entrance to search.
- 12 Type the Street name, the State, and city name to search.
- 13 Type coordinates to search.

## AUX, USB AND iPod PORT

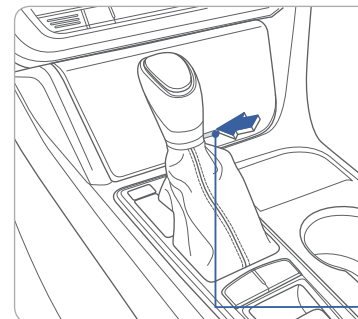

Use the input jack to connect an external audio device and listen to it through the audio system in your vehicle.



## ANDROID AUTO™

### REQUIREMENTS:

- Micro USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

### BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them or
  - Disconnect and then reconnect your phone
- Using the micro USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

### ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

## PHONE SETUP

Turn on Bluetooth® on your phone and connect the micro USB cable to your phone and the USB port on the vehicle.

 
Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

**NOTE:** Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

## CAR SETUP

1. Press the SETUP button.
2. Touch the “Connectivity” icon on screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

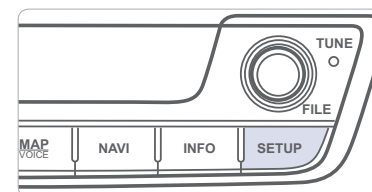

For more detailed information on how to operate Android Auto, please refer to your navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website  
<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.



## MULTIMEDIA

### APPLE CARPLAY™

#### REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features

 
#### BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them or
  - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

#### PHONE SETUP


On your phone, go to Settings > General > Restrictions > CarPlay to allow CarPlay access.

On your phone, go to Settings > General > Siri and ensure Siri is turned ON.

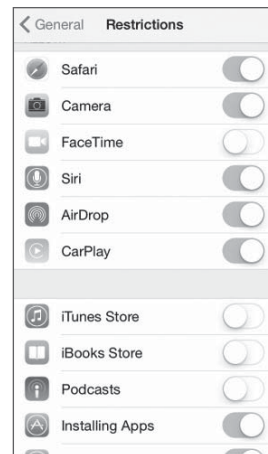


### CAR SETUP

 1. Press the SETUP button.
2. Touch the “Connectivity” icon on the screen.
3. Touch “iOS” on the Connectivity Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

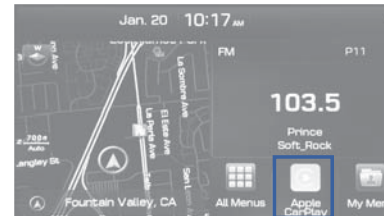

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

## CarPlay Home Screen

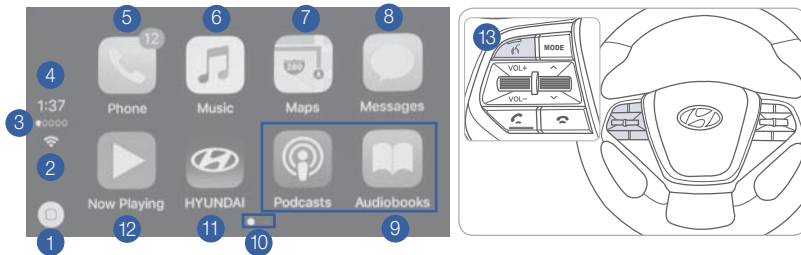 

- |                         |                                  |
|-------------------------|----------------------------------|
| 1 HOME ICON             | 7 APPLE MAPS                     |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES                       |
| 3 CELLULAR SIGNAL       | 9 3RD PARTY APPS                 |
| 4 PHONE TIME            | 10 SCREEN PAGE INDICATOR         |
| 5 PHONE                 | 11 EXIT TO HYUNDAI               |
| 6 APPLE MUSIC™          | 12 CURRENT CARPLAY AUDIO PLAYING |

## SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
  - “Text <John Smith> ‘Call you later’” to send a text message.
  - “Read text messages” to read available text message.
  - “Call <John Smith>” to make a phone call.
  - “Find <POI/Destination>” to locate a POI/Destination.

## PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically asks ‘Who you would like to call’ when the PHONE 5 icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

## APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

## APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

## MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically asks ‘To hear unread messages or create a new one’ when the MESSAGE icon is selected.

 
## 3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

## ELECTRIC PARKING BRAKE (EPB)

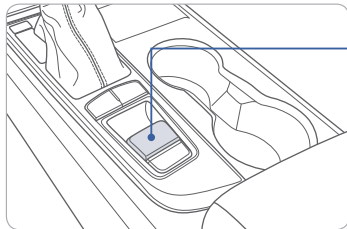
**Applying**

Stop the vehicle, then pull upwards on the EPB switch.



**Releasing**

 Move shift lever from P to R or D while depressing the brake pedal.

or




Press the EPB switch while depressing the brake pedal.

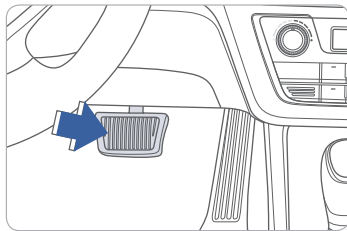
**NOTE:**

If necessary, emergency braking is possible by pulling and holding the EPB switch.

## AUTO HOLD

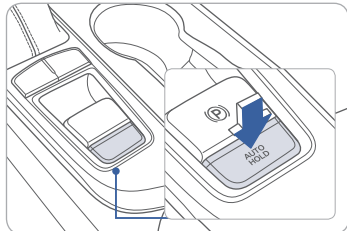 

The Auto Hold function keeps the brakes applied after the vehicle has to come to a stop. This prevents the vehicle from moving forward without the need for the driver to apply brake pedal pressure. The brakes are released automatically when the accelerator pedal is pressed.

**WHITE  
AUTO  
HOLD**

1. Press the AUTO HOLD switch.

**GREEN  
AUTO  
HOLD**


2. Stop the vehicle by pressing the brake pedal. The brakes will remain engaged even if the brake pedal is released.

**WHITE  
AUTO  
HOLD**


3. The brakes will release when the accelerator pedal is pressed with transmission in D, R or manual mode.

To cancel the AUTO HOLD operation, press the AUTO HOLD switch again.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

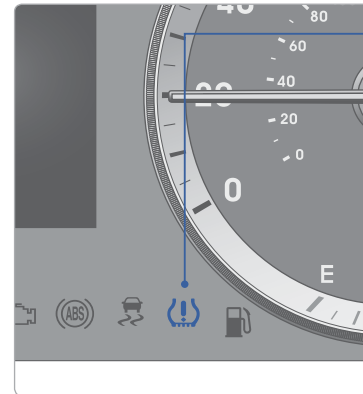 

 Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Position Indicator and Tire Pressure Indicator (Shown on the LCD display)

### LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires is significantly under-inflated.

 
 
### TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized Hyundai dealer as soon as possible.

### LOW TIRE PRESSURE POSITION INDICATOR AND TIRE PRESSURE INDICATOR (LCD DISPLAY)


Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator (⚠️) will illuminate and the LCD (📊) display will indicate tire(s) requiring air.

## AUTOMATIC TRANSMISSION

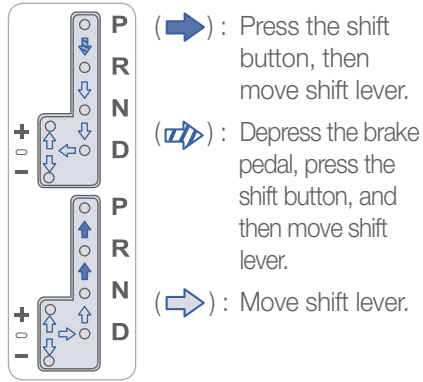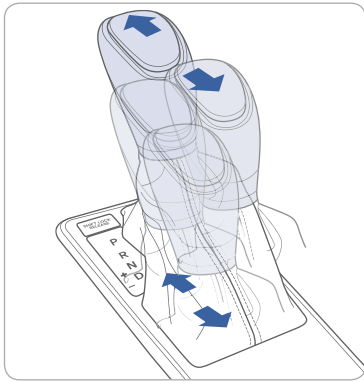


### Sport mode

 Move the shift lever from D (Drive) into the manual gate to select. Move the shift lever forward (+) to up shift or rearward (-) to downshift.

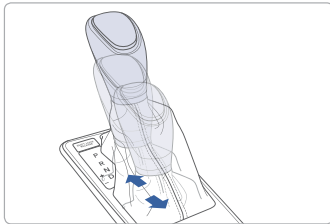


Shift the lever from D into the manual gate to activate Sport Mode. Sport Mode is a recalibrated automatic mode that will hold gears longer and downshift at higher RPM for a more dynamic driving style.


## PADDLE SHIFTER

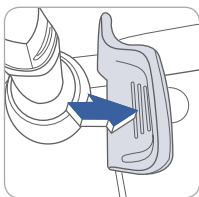 

Press (-) to downshift

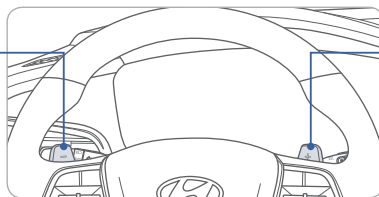 

 The Paddle shifter is available when the shift lever is in the D (Drive) position or Sport mode.

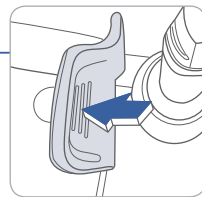

Press (+) to upshift

Pull the [+] or [-] paddle shifter once to shift up or down one gear.

## DUAL CLUTCH TRANSMISSION

### NOTE- EcoShift® Dual Clutch Transmission Characteristics

The EcoShift Dual Clutch Transmission behaves just like a manual transmission, but with the added convenience of an automatic transmission.

- The dual clutch transmission eliminates the need for a torque converter. This direct drive structure and the ability to pre-select the upshift gear allows shifts to be quick and responsive with constant power through the shifts.
- The EcoShift Dual Clutch Transmission comes equipped with Hillstart Assist Control. If you remove your foot from the brake pedal while you are stopped on a hill, the vehicle will remain stationary for approximately 2 seconds to prevent the vehicle from rolling backwards. If you press the accelerator pedal during the two-second period, the vehicle will accelerate. If you wait for over two seconds, the vehicle will enter into creep mode and may roll backwards if the hill is steep.
- Always come to a complete stop before shifting into Park (P), Drive (D), or Reverse (R).

### Caution

A few common conditions that may make the transmission susceptible to overheating include:

- Holding the vehicle on an incline with just your foot on the accelerator pedal  
*TIP: When holding the vehicle on a hill, use the foot brake rather than trying to hold the vehicle by keeping your foot on the accelerator pedal.*
- Driving in stop-and-go traffic with frequent accelerating and decelerating at low speed  
*TIP: Allow a gap to form ahead of you before moving the vehicle forward.*

Under certain conditions, such as stop-and-go driving, launching the vehicle on a steep grade, or backing the vehicle up a long inclined driveway, the transmission clutch temperatures may increase excessively. When the clutch temperature is elevated above the normal operating condition, the high temperature warning message is displayed. If this occurs, stop the vehicle as soon as safely possible and allow the transmission to cool with the engine running and the shift lever in Park (P). After the warning message clears, you can continue to drive the vehicle with caution.

### What is the Transmission High Temperature Warning Message?

- Under certain driving conditions such as stop-and-go driving or driving slowly up a hill, the clutches tend to have more slip. This condition tends to heat up the transmission.
- If the transmission temperature gets too high, a chime will sound and a warning message will appear in the instrument cluster LCD display.



 
- If this occurs, stop the vehicle as soon as safely possible and allow the transmission to cool with the engine running. After the transmission cools, the vehicle may be driven normally.

### What if I'm Driving in Stop-and-Go Traffic?

- Whenever possible, come to a complete stop with your vehicle and allow a gap to form in front of you. Then accelerate and move forward.

Refer to your Owner's Manual for additional info on the DCT.

## ELECTRONIC STABILITY CONTROL (ESC)

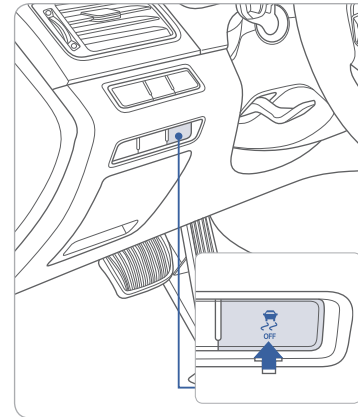

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

ESC automatically selects the ON position when the engine is started.


### To turn off Traction Control

 Press the ESC OFF button.

### To turn off Traction and Stability Control

Press and hold the ESC OFF button for more than 3 seconds.


## LANE DEPARTURE WARNING SYSTEM (LDWS)

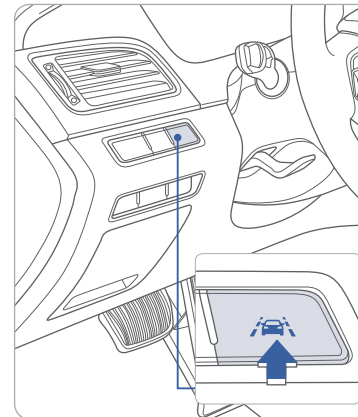

The Lane Departure Warning System detects the lane on the road and warns the driver if the vehicle leaves the lane when the vehicle speed is over 37mph.

- To turn LDWS on, press the LDWS switch
- To turn LDWS off, press the switch again.

## BLIND SPOT DETECTION SYSTEM (BSD)

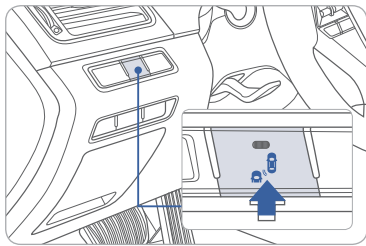 

The BSD (Blind Spot Detection) system uses a radar sensor to alert the driver while driving. It senses the rear side territory of the vehicle and provides information to the driver.

- ① Blind Spot Detection
- ② Lane Change Assist
- ③ Rear Cross Traffic Alert


- To turn the BSD on, press the BSD button. (indicator illuminated)
- To turn the BSD off, press the BSD button again.

The system will activate if vehicle speed exceeds 20 mph.

### Rear Cross Traffic Alert

 When the transmission is put in R (Reverse), the system provides an alert if a vehicle is approaching from the sides.

## DRIVE MODE INTEGRATED CONTROL SYSTEM

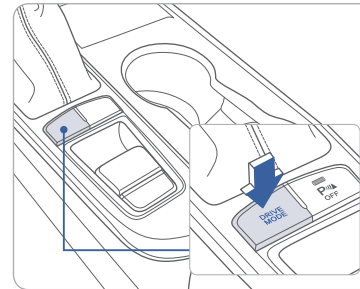

You can select the drive mode according to your preference or the road condition. The system initializes to the NORMAL mode (except ECO mode) after the engine has been turned off and on.

Each time you press the button, the drive mode is changed as follows :



Normal mode is not displayed on the instrument cluster.

### Normal mode

Normal mode provides regular daily driving performance with some fuel efficiency.

### ECO mode

Eco mode system helps to improve fuel efficiency. When the Eco mode system is activated, the vehicle acceleration, gear shift points and air conditioning performance will be reduced to conserve the fuel consumption.

### Sport mode

Sport mode focuses on engaging driving dynamics by adjusting the steering feel along with the responsiveness of the engine and transmission.

#### To improve your fuel efficiency:

- Drive smoothly and accelerate at a moderate rate.
- Avoid heavy accelerations.
- Maintain steady cruising speed.
- Adjust the vehicle speed to the traffic condition and avoid speed changes.
- Avoid unnecessary braking.
- Keep the tires inflated to the recommended tire pressure.
- Don't idle the engine longer than necessary.





**HYUNDAI VEHICLE OWNER PRIVACY POLICY**

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America  
 Hyundai Customer Connect Center  
 P.O. Box 20850  
 Fountain Valley, CA 92728-0850  
 800-633-5151 consumeraffairs@hmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

**SONATA CUSTOMER DELIVERY CHECK LIST**

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

**BEFORE DELIVERY**

- SET TIRE PRESURE LF \_\_\_ RF \_\_\_ RR \_\_\_ LR \_\_\_
- VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE

_____ Sales Consultant	_____ Date	_____ Sales Manager	_____ Date
_____ Customer		_____ Date	
_____ Email			