

**VOICE RECOGNITION TIPS** (If equipped)

**BLUETOOTH®**

**Command** Example  
Dial <Phone #> — “Dial 7-1-4-9-6-5-3-0-0-0”

Call <Name> — “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:  
• Use full names instead of short or single-syllable names (“John or Dad”)  
• Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

**NAVIGATION**

**Command** Example  
Find Address — “1-2-3-4-5 1st Street, <House #, Street, City, State>  
Fountain Valley”  
Find <POI Name> — “Find McDonald’s®”


Located on Overhead Console  
**DESTINATION SEARCH BY VOICE**

**Command** Example  
Find <POI Name> — “Find Lowe’s® near me”  
<POI Name> — “Starbucks®”

BLUE LINK


- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link User's Manual
- Encourage customer to download the MyHyundai with Blue Link app

WINDSHIELD WIPER / WASHER - page 08

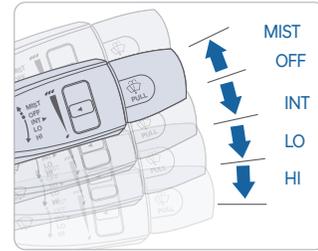

- To activate wipers move the switch down to one of the three positions (INT, LO, HI)
- To adjust "INT" speed move switch
- To spray washer fluid pull lever toward you
- Push lever up for a single wiper pass

OPENING THE TRUNK - page 05

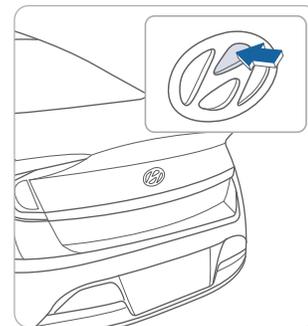

The trunk can be opened using the key FOB, or the Smart Key, or by pressing the trunk release button inside the vehicle.

To open the trunk, perform one of the following:

- Unlock all doors using the remote key FOB, then press the trunk emblem button
- Press and hold the trunk unlock button on the remote key FOB for about 1.5 seconds

- With the Smart Key in your possession, stand next to the car for 3 seconds (if equipped w/Smart Key)
- From inside the vehicle, press the trunk release button located on the driver side dash panel

INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT

SET FIRST SERVICE APPOINTMENT

REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE

WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

Sales Consultant \_\_\_\_\_ Date \_\_\_\_\_ Sales Manager \_\_\_\_\_ Date \_\_\_\_\_

Customer \_\_\_\_\_ Date \_\_\_\_\_

Email \_\_\_\_\_

**MAINTENANCE**

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil and Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Fuel Additive	Add	7,500 or 12 mos.	Inspect	Same as Normal
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Vacuum Hose	Inspect	Every 12 mos.	Inspect	Same As Normal
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Disc Brake/Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake fluid	Inspect	30,000	Inspect	Same As Normal
Crankcase Ventilation Hose	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses and Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Rear Disc Brake/Pads, Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Spark Plugs	Replace	105,000	Replace	More Frequently
Coolant	1st Replace	120,000 or 120 mos.	Replace	Same As Normal
	Add'l Replace	30,000 or 24 mos.		
Automatic Transmission Fluid	No check, No service required		Replace	60,000

\*See Owner's Manual for details.

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, We recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.



# The Hyundai SONATA HYBRID

Quick Reference Guide

Roadside Assistance: 1-800-243-7766

Consumer Affairs: 1-800-633-5151

Sirius XM® Radio: 1-800-967-2346

Blue Link: 1-855-2BLUELINK (1-855-225-8354)

NP150-L52020  
(Rev 02/17/20)  
Printing 02/20/20




## HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America  
Hyundai Customer Connect Center  
P.O. Box 83835  
Phoenix, AZ 85071-3835  
800-633-5151  
[consumeraffairs@hmausa.com](mailto:consumeraffairs@hmausa.com)

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

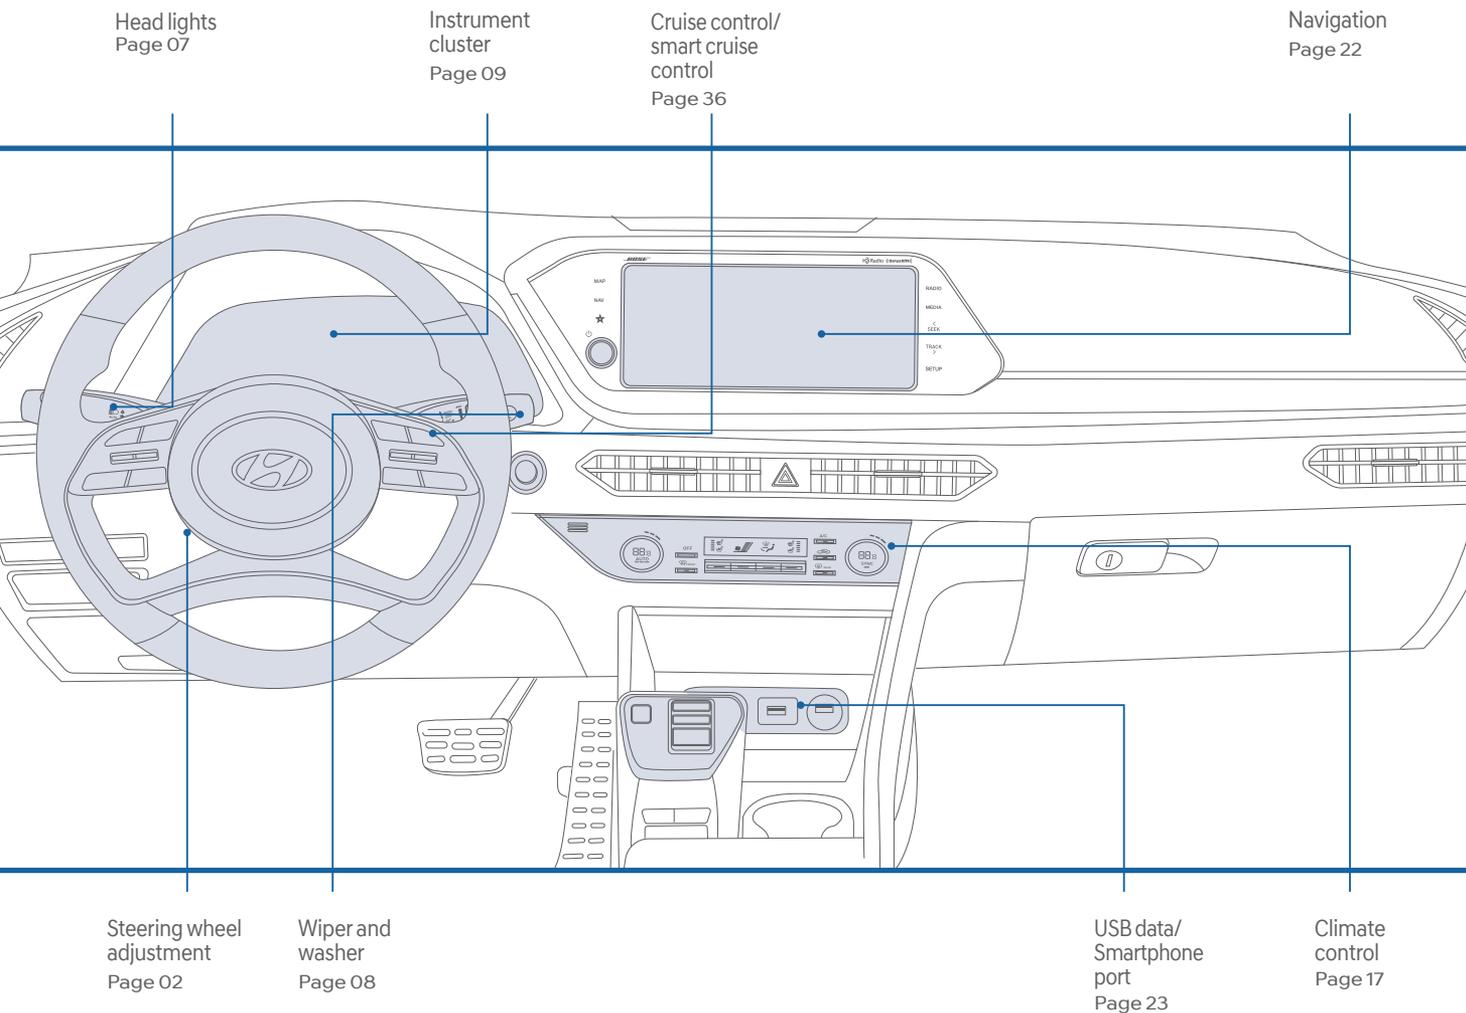

**FEATURES AND CONTROLS**

12 volt battery reset switch	15
Climate control	17
Driver's main controls	02
Fuel filler door	06
Headlights	07
Hybrid Battery SOC (State of charge) gauge	13
Hybrid system modes	14
Instrument cluster	09
Instrument panel illumination	12
Interior lights	06
LCD display control	11
LCD display modes	11
Remote & Smart key	01
Seat-Front seat adjustment	03
Seat-Headrest adjustment	04
Seat-Seat belt adjustment	04
Seat-Seat warmer & ventilated seat	04
Steering wheel adjustment	02
Trunk-Smart trunk	05
Trunk-Trunk opening	05
Vehicle power gauge	13
Warnings and indicators	12
Wipers and washer	08

**INFOTAINMENT**

Android Auto™	25
Apple CarPlay™	27
Audio mode	21
Bluetooth operational tips	20
Bluetooth phone operation	19
Bluetooth phone pairing	19
Clock Adjustment	23
Homelink wireless control system	24
Navigation	22
Steering wheel audio control	21
USB data/Smartphone port	23
Wireless cellular phone charging system	23

**DRIVING**


Auto Hold	39
Blind Spot Collision Avoidance Assist (BCA)	32
Cruise control / Smart cruise control	36
Digital key pairing	42
Drive mode	34
Electric Parking Brake (EPB)	39
Forward Collision-Avoidance Assist (FCA)	32
Highway Driving Assist (HDA)	37
Lane Following Assist (LFA)	31
Lane Keeping Assist System (LKAS)	31
Leading vehicle departure alert	37
Near field communication (NFC)	43
Push button drive selector	38
Rear Cross-traffic Collision-Avoidance Assist (RCCA)	38
Rear Occupant Alert (ROA)	33
Tire mobility kit	40
Tire Pressure Monitoring System (TPMS)	35

**WARNING!**  
 To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.


\* Some vehicles may not be equipped with all the listed features.

## REMOTE & SMART KEY

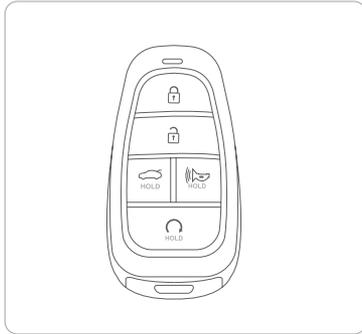


- Lock
- Unlock
- Engine remote start button
- Trunk Unlock
- Panic

**NOTE:** To start the vehicle remotely, press and hold the remote start button for over 2 seconds within 4 seconds after locking the doors.”

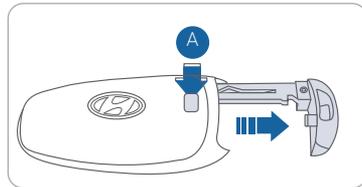




**Removing the mechanical key**  
Slide and hold the release button **A** to remove the mechanical key.

**NOTE:** User selectable option : Please see section 5 from Owner’s Manual for more details.

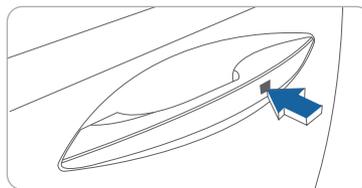

**Driver’s door Lock / Unlock**  
Smart key must be within 28~40in. from the outside door handle.  
**Press:** One time - Unlock driver door  
Two times - Unlock all doors  
Three times - Lock all doors


## STEERING WHEEL ADJUSTMENTS

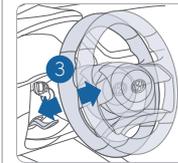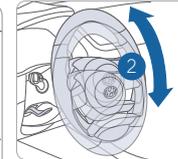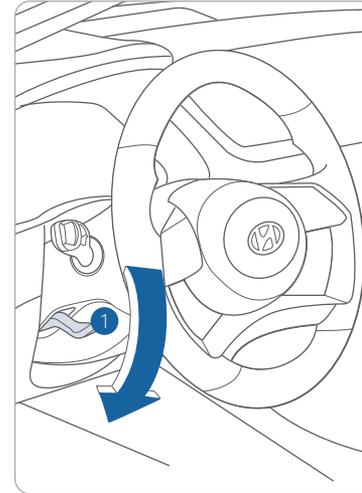

**NOTE:** Do not adjust while driving.

1. Pull the lever **1** down.
2. Set the angle **2** and distance **3**.
3. Pull the lever **1** up to lock position.

## DRIVER'S MAIN CONTROLS

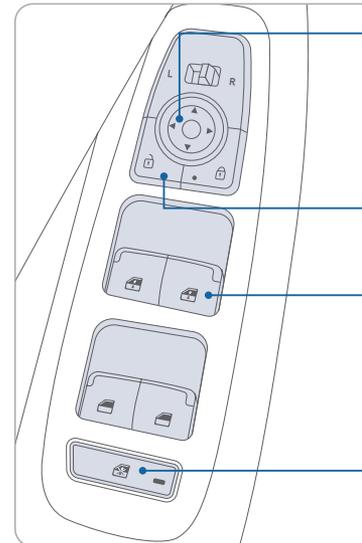

**Outside Rearview Mirror**  
Move the lever towards L (left) or R (right) on the switch. Then adjust the mirror by using the mirror adjustment control switch.

**Door Lock**  
Locks/unlocks all doors.

**Window Auto down/up (if equipped)**  
Press past detent to fully open/close window.

**Power window lock button**  
Disables the power window switches on the rear passenger doors.


## FRONT SEAT ADJUSTMENT (Manual)



Forward and backward ①



Seat cushion height ②

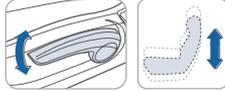


Seatback angle ③




## FRONT SEAT ADJUSTMENT (POWER)



Forward and backward ①

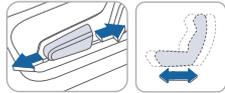

Seat cushion height

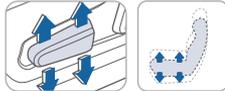


Seatback angle ②



Lumbar support (for driver's seat) ③





## HEADREST ADJUSTMENT

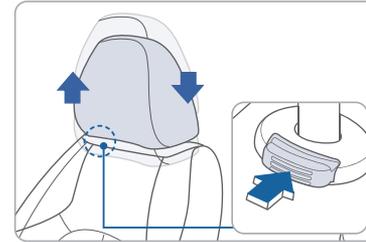


To Raise Headrest:  
Pull headrest up.

To Lower Headrest:  
Press lock button while pressing down on headrest.

## SEAT BELT ADJUSTMENT (Front seat)

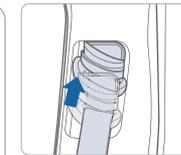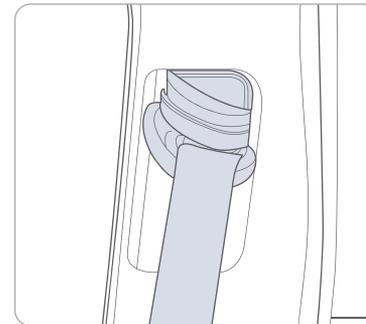


Pull up to raise.

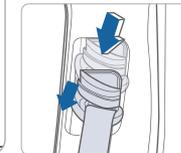

Press button and push down to lower.

## SEAT WARMER AND VENTILATED SEAT


### Seat Warmer

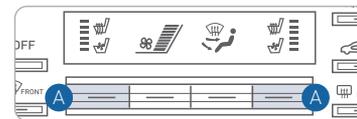

Toggle the switch **A** upward to increase heat.

OFF → LOW (☰) → MED (☷) → HIGH (☳)


### Seat Warmer and Ventilation

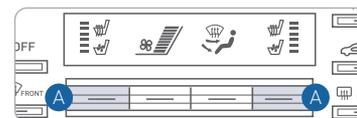

For vehicles equipped with both heated and ventilated seats, toggle the switch **A** downward to increase cooling.

OFF → LOW (☰) → MED (☷) → HIGH (☳)

## TRUNK OPENING

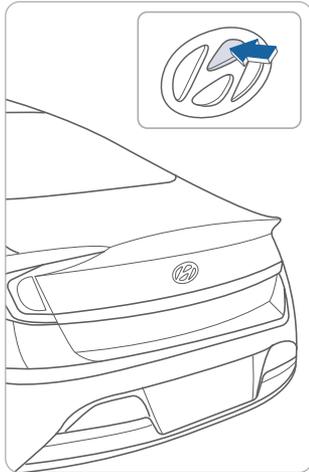

### Opening the trunk

The trunk can be opened using the key FOB or Smart Key, by pressing the trunk emblem, or by pressing the trunk release button inside the vehicle.

### Trunk Emblem Button

To open the trunk, perform one of the following:

- Unlock all doors using the remote key FOB or Smart Key, then press the trunk emblem button
- With the Smart Key in your possession, press the button on the trunk emblem




### Key FOB / Smart Key

Press and hold the trunk unlock button on the remote key FOB or Smart Key for about 1.5 seconds




### Trunk Release Button

From inside the vehicle, press the trunk release button located on the driver side dash panel

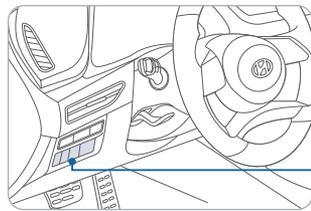

## SMART TRUNK

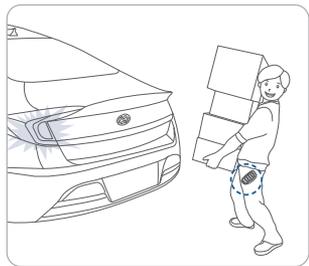

### Smart Trunk

Trunk will slightly open automatically when detecting smart key within range near the trunk for more than 3 seconds.

### To enable Smart Trunk function:


Vehicle must be in P (Park) to adjust settings in the User Setting mode.

1. Select "Door/Trunk" in the User Settings in the instrument cluster.
2. Check "Smart Trunk".


### NOTE:

Function is active after 15 seconds when all doors are closed and locked and key is not detected. The vehicle will also provide an audible and visual alarm while activating. For more details, refer to Owner's Manual.

## FUEL FILLER DOOR

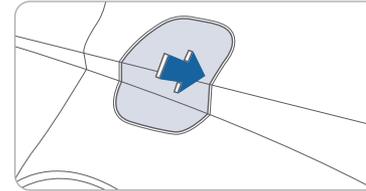

1. Push the fuel filler door opener button.

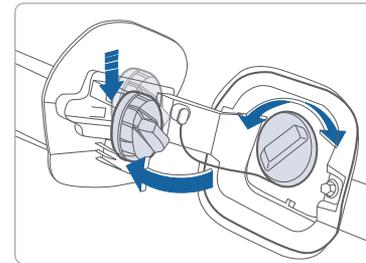


2. Remove the fuel tank cap.

### NOTE:

Tighten the fuel filler cap until one click is heard.

## INTERIOR LIGHTS

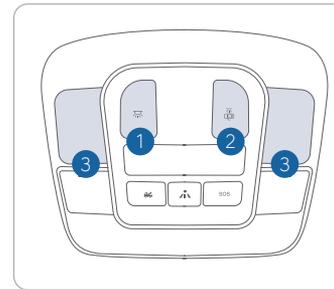

### Front Map Lamp ①

Push the switch to turn the map lamp on or off.

### Front Room Lamp (Type A) ②

Push the switch to turn the room lamp (overhead lamp) on or off.


### Front Room Lamp (Type B) ②

Push the switch to turn the room lamp (overhead lamp) on or off.

### Front Door Lamp ③

Lights will turn on when any door is open.

## HEADLIGHTS

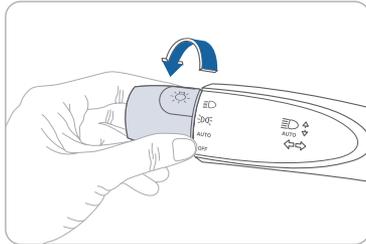


- ▶ | Headlight
- ▶ | Parking light
- ▶ | **AUTO** Auto light
- ▶ | **OFF** OFF


### Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off.


### Turn signals and lane change signals

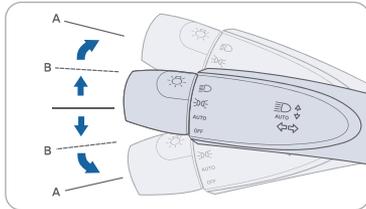


### Flashing headlights

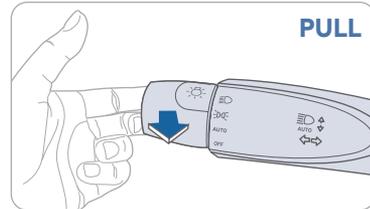

### High beam

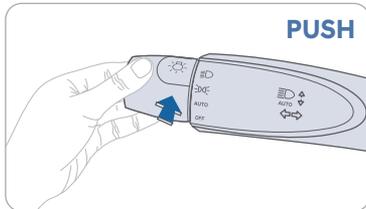

### High Beam Assist

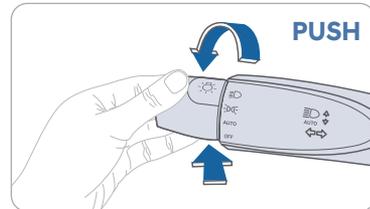


### NOTE:

To turn off high beam, pull the lever towards you.


### High Beam Assist

1. Select AUTO position on lever.
2. Turn on the high beam by pushing the lever away from you. High Beam Assist Indicator will illuminate
3. High Beam Assist system will turn on when vehicle speed is above 25 mph.
4. To turn off high beam assist, push the lever forward.

## WIPERS AND WASHER

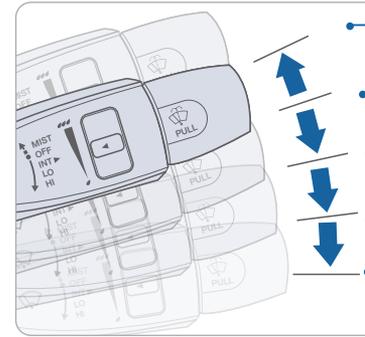


- **MIST** - Single wipe
- **OFF**
- **INT** - Intermittent wipe
- **LO** - Low wiper speed
- **HI** - High wiper speed

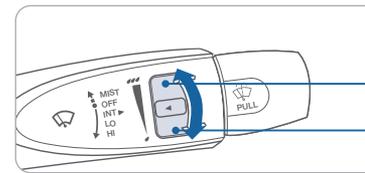

**Intermittent Wipe Time Adjustment**  
Move the control switch.

- Fastest wiper speed
- Slowest wiper speed

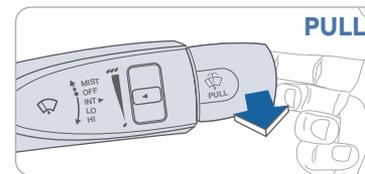

### Windshield Washer


Pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

## INSTRUMENT CLUSTER

Type A



Type C

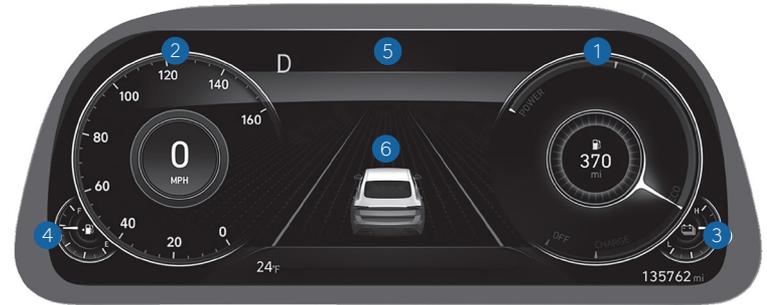

Type B




- 1 Tachometer
- 2 Speedometer
- 3 Battery SOC (State of Charge) gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 LCD display (including Trip computer)

## LCD DISPLAY MODES

Modes	Symbol	Explanation
Trip Computer		This mode displays driving information like the tripmeter, fuel economy, and so on.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist		<ul style="list-style-type: none"> <li>- Smart Cruise Control (SCC)</li> <li>- Lane Keeping Assist (LKA)</li> <li>- Lane Following Assist (LFA)</li> <li>- Driver Attention Warning (DAW)</li> <li>- Tire pressure</li> </ul>
Drive Assist (if equipped)		This mode displays the state of: <ul style="list-style-type: none"> <li>- Smart Cruise Control system</li> <li>- Lane Keeping Assist</li> <li>- Lane Following Assist</li> <li>- Driver Attention Warning</li> <li>- Tire pressure</li> </ul>
User Settings		Displays service interval and warning messages. Changes settings.
Warning		Displays service interval and warning messages.

## LCD DISPLAY CONTROL

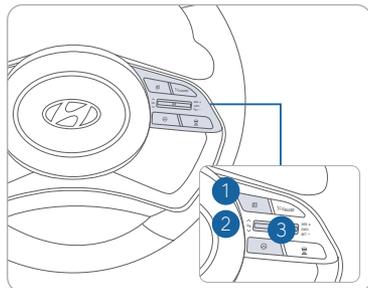


- : MODE button for changing modes
- : MOVE switch for changing items
- : SELECT/RESET button for setting or resetting the selected item

## WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake Force Distribution (EBD) system warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine coolant temperature warning light	Engine oil pressure warning light	Low fuel level warning light
Low tire pressure warning indicator/TPMS malfunction lamp	Electric Parking Brake (EPB) warning light	Master warning light
Electronic Stability Control (ESC) indicator	Electronic Stability Control (ESC) OFF indicator	Immobilizer indicator
Turn signal indicator	Low beam indicator	High beam indicator
Light ON indicator	Smart high beam indicator	CRUISE Cruise indicator
AUTO HOLD indicator	SPORT mode indicator	Lane Keep Assist Indicator
Forward Collision-Avoidance Assist	Icy Road Warning Light	Headlamp Warning Light
Lane Follow Assist	EV EV mode indicator	

## INSTRUMENT PANEL ILLUMINATION

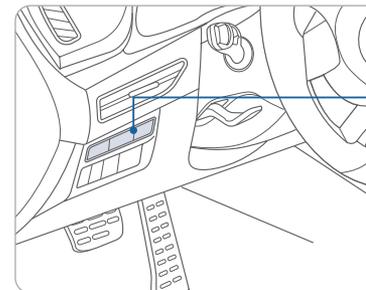

Press - or + to adjust instrument cluster illumination brightness.



### Main indicators in cluster for Hybrid Vehicle



#### Ready indicator

When the vehicle is ready to be driven, this indicator is illuminated. When the ready indicator goes off or blinks, we recommend the vehicle be checked by an authorized HYUNDAI dealer.



#### EV mode indicator

This indicator illuminates when the vehicle is driven by the electric motor.



#### Service warning light

If a problem with the hybrid vehicle control system occurs, the service warning light will illuminate. We recommend the vehicle be checked by an authorized HYUNDAI dealer.

### VEHICLE POWER GAUGE



The power gauge indicates whether the current driving condition is fuel efficient or not.

#### CHARGE

Shows that the energy made by the vehicle is being converted to electrical energy. (Regenerated energy)

#### ECO

Shows that the vehicle is being driven in an Eco-friendly manner.

#### POWER


Shows that the vehicle is exceeding the Eco-friendly range.

### HYBRID BATTERY SOC (STATE OF CHARGE) GAUGE



This gauge indicates the remaining hybrid battery power. If the SOC is near the "L (Low)" level, the vehicle automatically operates the engine to charge the battery.

### HYBRID SYSTEM MODES

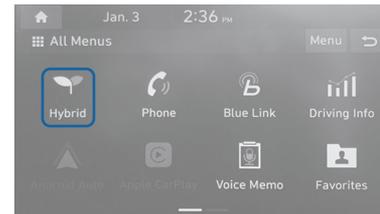

Select the Hybrid Icon on the home screen.



#### Energy Flow Mode


This screen displays the energy flow from the engine and battery.




#### Fuel Economy Mode

This screen displays average fuel economy. The graph shows fuel economy for the last 30 minutes and it is updated every 2 minutes and 30 seconds.


## 12 VOLT BATTERY RESET SWITCH

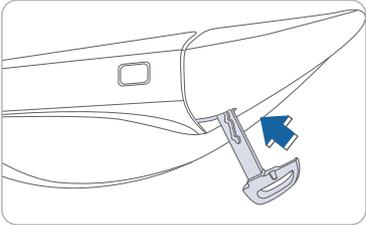

If the door is locked you will need to use the manual key to enter the vehicle after removing the lock access cover.

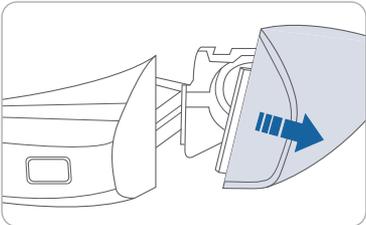


a) Use the manual key from the FOB to push up the under the driver's side handle as shown. Make sure the tab stays up. If it does not you will need to keep it pressed up while performing the next step.

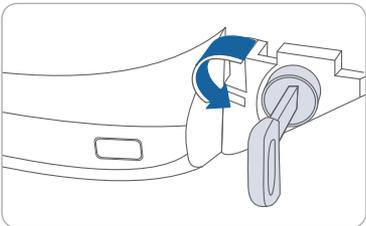

b) While holding the handle out, pull off the access cover to expose the manual lock cylinder.

c) Open the door with the manual key.

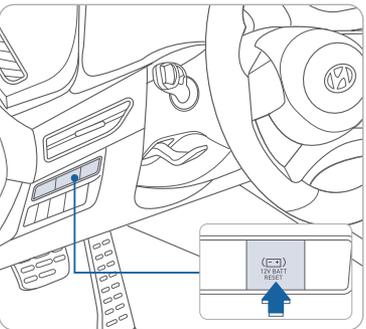


This vehicle does not have a replaceable 12V flooded lead acid battery. The 12V battery is integrated into the lithium high voltage battery assembly. As it automatically protected against vehicle current draw when a minimum level of 12.8V 10% SOC level is reached. The 12V Battery Reset Switch has to be activated in order to start the vehicle. This should negate the need to jump start the car.

If the vehicle Start/Stop button does not respond (it has no indicator light) and the dash does not illuminate, the vehicle may be operated after the 12V Battery Reset Switch is activated per the instructions below.

1. Press the 12V Battery Reset switch to reconnect the 12V battery.
2. Start the vehicle within 15 seconds of pressing the 12V Battery Reset switch.
3. After starting vehicle (indicator on), operate the vehicle safely outdoors stopped and/or drive it for 30 minutes total to charge the 12V battery fully.


If the reset does not work due to over discharge of the 12V battery, try to jump-start the vehicle. For more detailed information, please refer to your Owner's Manual.

## AUTOMATIC CLIMATE CONTROL

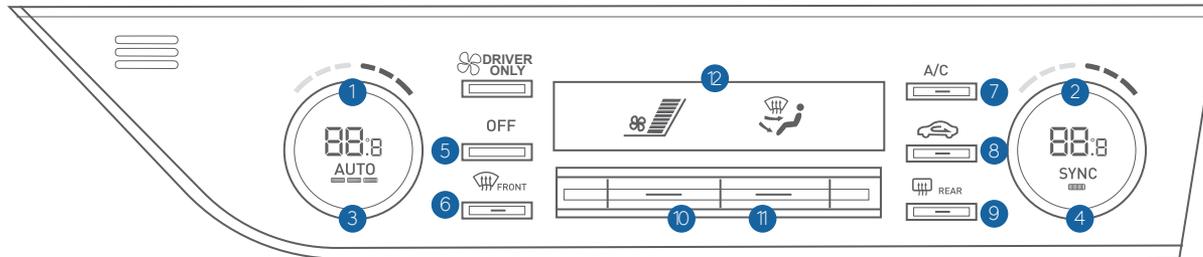

- 1 Driver's temperature control knob
- 2 Passenger's temperature control knob
- 3 AUTO (automatic control) button
- 4 SYNC button
- 5 OFF button
- 6 Front windshield defroster button
- 7 Air conditioning button
- 8 Air intake control button
- 9 Rear window defroster button
- 10 Fan speed control toggle switch
- 11 Mode selection toggle switch
- 12 Climate control information screen

### Defogging / Defrosting

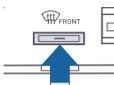1. Press the defrost button. 
2. Select warmest temperature. 
3. Set the fan speed to the highest speed. 

### NOTE:

To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

### System off

- Pressing the OFF button will place the system in the OFF mode.
- Climate control fan will turn off.
  - Outside (fresh) air position will be selected.
  - Vented air will be at last set temperature.

### Air intake control

-  Recirculated air position (LED ON)
-  Outside (fresh) air position (LED OFF)

### Automatic heating / Air conditioning



### Mode selection

- Changing the direction of the air flow as follow.
- 

### Auto fan speed control



1. The fan speed is controlled automatically in 3 available settings.
2. Pressing the AUTO button will activate the AUTO function and change the AUTO fan speed setting
3. Settings: HIGH → MEDIUM → LOW
4. If the temperature is set to either 'HI' or 'LO', the fan speed setting will be 'HIGH'.

\* For detailed precautions and instructions, see the Owner's Manual.

## BLUETOOTH PHONE PAIRING


Pairing tutorials, phone compatibility and operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



## BLUETOOTH PHONE OPERATION

### Phone setup (pairing phone)

1. Turn Bluetooth® on from your mobile phone. : Setup > Device Connections > Bluetooth > Bluetooth Connections > Add New.

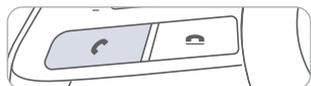

2. Select the car name shown on your mobile phone to pair.
3. Enter the passkey or accept the authorization popup on your phone. (The default passkey is 0000.)



4. Bluetooth is connected.


**NOTE:** Vehicle must be parked to complete pairing process.

## BLUETOOTH® OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

### Steering wheel bluetooth® control

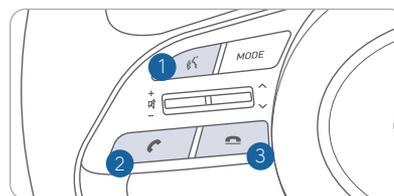

- 1 **TALK**  
Activates voice recognition.
- 2 **CALL**  
Places and transfers calls.
- 3 **END**  
Ends calls or cancels functions.

### To Answer a Call:

- Press button on the steering wheel.

### To Reject a Call:

- Press button on the steering wheel.

### To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

### To Transfer a Call to the Phone

#### (Private call on handset – do not use while driving):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

### To Finish a Call:

- Press button on the steering wheel.

### Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

### Calling by Name:

1. Press button.
2. Say the following command:
  - “Call <John Smith>”: Connects the call to John.
  - “Call <John Smith> on <on Mobile/at Work/at Home>”: Connects the call to John’s Mobile, Home, or Work phone number.

### Dialing by Number:

1. Press button.
2. Say “Dial Number”.
3. Say desired phone number.

For complete list of commands, refer to your Owner’s Manual.

## AUDIO MODE



Press **POWER** button **A** to turn radio on.

### • TUNING/LISTENING TO CHANNELS

1. Press the **RADIO** button **B**.
2. Press the search backward button **SEEK** **C** or the search forward button **TRACK** to desired channel.

**NOTE:** A clear view of the southern sky is recommended to ensure SXM® radio reception.

### • SETTING PRESET MEMORY BUTTONS (FM/AM/SXM®)


Press and hold any preset button **D** until an audible beep is heard to store current channel.

### • ADJUSTING THE SOUND CONTROL

1. Press **SETUP** button **E**.
2. Select **Sound** button on screen.
3. Touch on-screen arrows to adjust desired setting.




## STEERING WHEEL AUDIO CONTROL

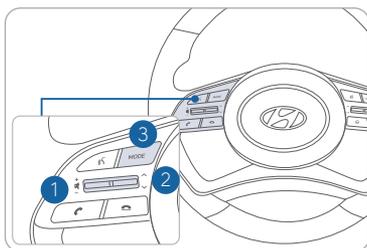

- 1 VOLUME**  
Raises or lowers speaker volume.
- 2 SEEK/PRESET**  
Change station.
- 3 MODE**  
Change the audio source.

## NAVIGATION

### Basic features on the map screen

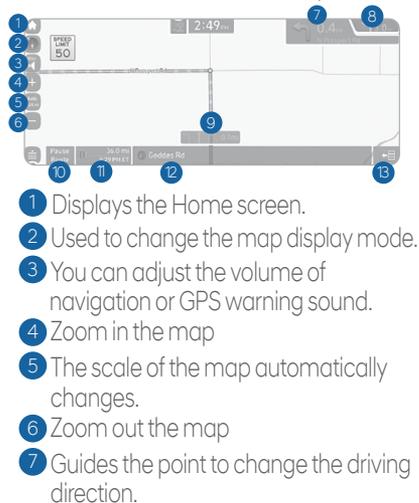

- 1 Displays the Home screen.
- 2 Used to change the map display mode.
- 3 You can adjust the volume of navigation or GPS warning sound.
- 4 Zoom in the map
- 5 The scale of the map automatically changes.
- 6 Zoom out the map
- 7 Guides the point to change the driving direction.
- 8 Guides the next point to change the driving direction.
- 9 Displays the lanes in different colors.
- 10 Displays quick menu items that can be used during a guidance.
- 11 Displays the remaining distance to the destination and the estimated time of arrival. For more details, touch the information item.
- 12 Pause route button to temporarily pause route guidance.

- NOTE:** Press and hold button to CANCEL route guidance.
- 13 Displays or hides the detailed guidance.

### Destination search screen




Press [**NAV**] button in the navigation head unit, and find a destination by using the [**Destination**] menu.

- 1 Returns to the previous step.
- 2 Search for a location by entering various types of keywords such as place name and address.
- 3 Select any of previous destinations to set as a destination.
- 4 Register the location or use the address book for setting a destination.
- 5 Search for POIs by category, and set as a destination.

- 6 You can cancel guidance to the destination.
- 7 You can edit the current route so that you can travel via waypoints on the way to the destination.
- 8 You can easily search for restaurants.
- 9 You can set a destination after searching for EV charging stations.
- 10 You can easily search for emergency services.
- 11 You can change the route search criteria to resume routing.
- 12 You can see the entire route information to the destination.
- 13 You can register your home, office, or other frequently visited place as a favorite for ease of search.
- 14 The list of menu items appears.

## WIRELESS CELLULAR PHONE CHARGING SYSTEM

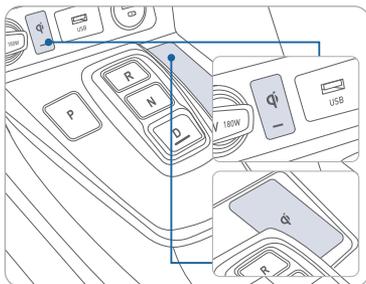

There is a wireless cellular phone charging system inside the front console. The system will operate when all doors are closed, and the ignition switch is in the ACC/ON position. The wireless charging pad is equipped with a cooling fan to help prevent overheating while charging.


### NOTE:

The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).

### NOTE:

Do not place any metallic items such as coins, keys on the charger. Avoid putting credit cards, etc. on the charger as they might get damaged by the magnetic field.


## USB DATA/SMARTPHONE PORT

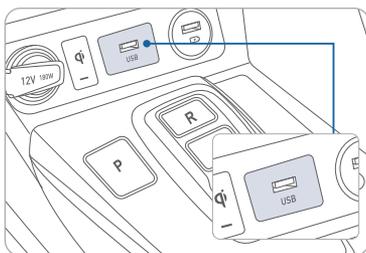

The USB data port can be used to connect an external audio device and listen to it through the audio system in your vehicle.


The USB data port can also be used to access Android Auto or Apple Car Play with your compatible phone.

## CLOCK ADJUSTMENT

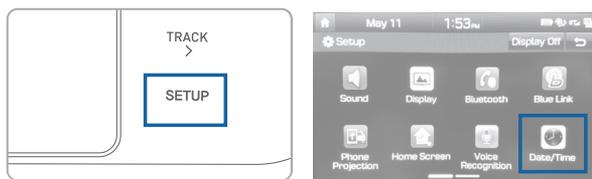

1. Press the SETUP button.
2. Touch the "Date/Time" button on screen.

## HOMELINK WIRELESS CONTROL SYSTEM

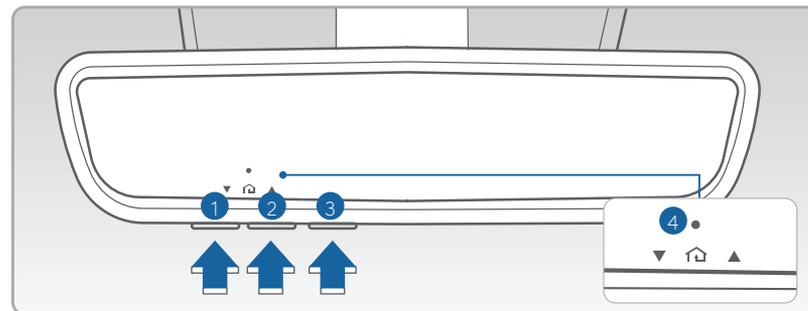

1. Press and release 1, 2 or 3 button.
  - If the indicator 4 is turned ON in Orange, go to Step 3
  - If the indicator 4 is continuously turned ON or flashes in Green rapidly several times, go to Step 2
2. Press and hold the button you wish to program for approximately 15- 25 seconds until the LED flashes in Orange for several times.
3. Hold the Garage Door Opener Original Transmitter near the HomeLink Mirror.
4. Press the Original Transmitter button until the indicator 4 is turned continuously ON or flashes in Green for approximately 10 seconds and it indicates the programming is completed.

**NOTE:** If the indicator 4 flashes in Green continuously, but if the garage door opener does not operate, please continue to follow Rolling Code Programming steps below.

### Rolling Code Programming

1. Firmly press and release the "Learn," "Smart," or "Program" button while the indicator 4 flashes in Green. Once the button is pressed, you have approximately 30 seconds to initiate the next step.
2. Return to the vehicle and firmly press the HomeLink button, hold for two seconds and release the button up to three times. Do not press the HomeLink button rapidly. At this point programming is complete and your device should operate.

For more detailed information, please refer to your Owner's manual or visit [www.homelink.com](http://www.homelink.com) or call (800) 355-3515

## ANDROID AUTO™

### REQUIREMENTS:

- USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

### BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them
  - Disconnect and then reconnect your phone
- Using the USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

### ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

### PHONE SETUP

Turn on Bluetooth® on your phone and connect the micro USB cable to your phone and the USB port on the vehicle.

Phone will prompt you to download the Android Auto app and update other needed apps (e.g. Google Maps™, Google Play Music™, Google Now™).

**NOTE:** Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

### CAR SETUP

1. Press the SETUP button on the radio.
2. Touch the “Device Connections” icon on screen.
3. Select Android Auto
4. Select Enable Android Auto
5. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

For more detailed information on how to operate Android Auto, please refer to your display audio or navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website  
<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

## APPLE CARPLAY™

### REQUIREMENTS

- Apple Lightning® cable (Apple-certified cable)
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


### BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them
  - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

### PHONE SETUP


On your phone, go to Settings > General > CarPlay to allow CarPlay access.

On your phone, go to Settings > Siri and ensure Siri is turned ON.

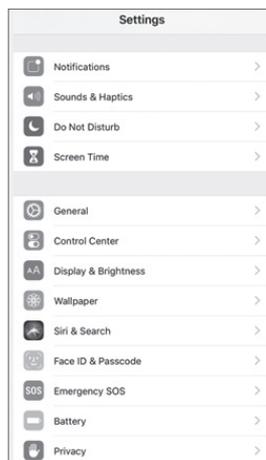


### CAR SETUP

1. Press the SETUP button.
2. Touch the “Device Connections” icon on the screen.
3. Touch “iOS” on the Phone Projection Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

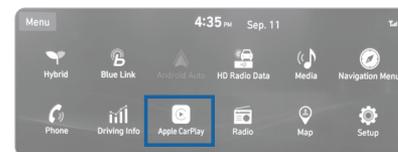

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

## CarPlay Home Screen

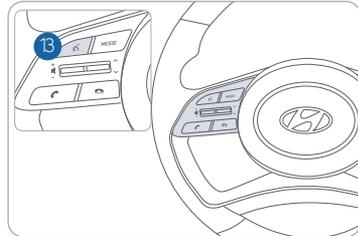

- |                         |                                  |
|-------------------------|----------------------------------|
| 1 HOME ICON             | 7 APPLE MAPS                     |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES                       |
| 3 CELLULAR SIGNAL       | 9 3RD PARTY APPS                 |
| 4 PHONE TIME            | 10 SCREEN PAGE INDICATOR         |
| 5 PHONE                 | 11 EXIT TO HYUNDAI               |
| 6 APPLE MUSIC™          | 12 CURRENT CARPLAY AUDIO PLAYING |
|                         | 13 VOICE RECOGNITION TIPS        |

## SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
  - “Text <John Smith> ‘Call you later’” to send a text message.
  - “Read text messages” to read available text message.
  - “Call <John Smith>” to make a phone call.
  - “Find <POI/Destination>” to locate a POI/Destination.

## PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically ask ‘Who would you like to call’ when the PHONE 5 icon is selected.

**NOTE:** Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

## APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

## APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

## MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically ask ‘To hear unread messages or create a new one’ when the MESSAGE icon is selected.


## 3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

**NOTE:** A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

## LANE KEEPING ASSIST SYSTEM (LKAS)

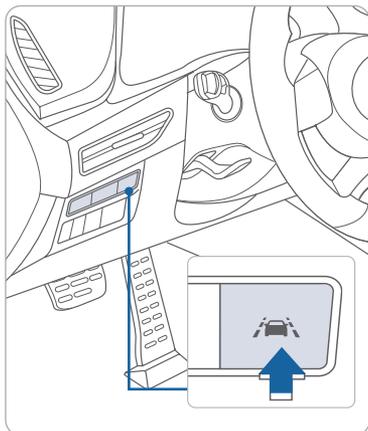


When the Lane Keeping Assist System detects the vehicle straying from its lane, it alerts the driver with a visual and audible warning, while applying a counter-steering torque to help prevent the vehicle from departing from its lane.

- To turn LKAS on, press the LKAS switch.
- To turn LKAS off, press the switch again.
- LKAS settings may be adjusted in the Vehicle Settings menu under Driver Assistance > Lane Safety

**NOTE:** LKAS Settings can be adjusted in the User Settings page of the instrument cluster under Driving Assist.

For LKAS to operate, vehicle speed must be at least approximately 40 mph to enable the LKA system. The indicator in the cluster display will illuminate green when all the conditions have been met. Refer to the Owner's Manual for more detailed information.

## LANE FOLLOWING ASSIST (LFA)

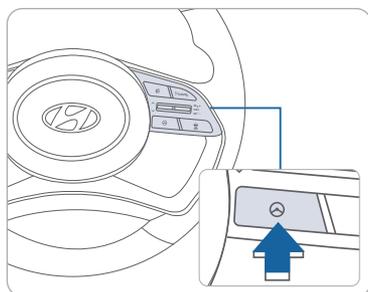

The Lane Following Assist (LFA) system detects lane markers on the road using a multi-function camera mounted on the front windshield. The system helps to assist the driver steering to help keep the vehicle centered in the lane.

To enable the LFA system while driving, press the LFA ON/OFF button on the steering wheel.

### Operating conditions

When the system is activated, the indicator (Ⓢ) on the cluster will illuminate. The color of the indicator will change depending on the condition of LFA system.

- Green: Steering assist mode is ON
- White: Steering assist mode is OFF

## FORWARD COLLISION-AVOIDANCE ASSIST (FCA)




The Forward Collision Avoidance (FCA) system is designed to detect and monitor the vehicle ahead and warn the driver if a collision is imminent. This feature also allows pedestrian detection.

To operate the system, select the Forward Safety Active Assist sub menu in the LCD cluster display under User Settings.


Setup > Vehicle Settings > Driver Assistance > Forward Safety

Please refer to your Owner's Manual for further information.

## BLIND-SPOT COLLISION-AVOIDANCE ASSIST (BCA)

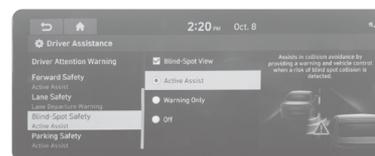

The Blind-Spot Collision-Avoidance Assist (BCA) system may apply braking power, when an approaching vehicle is detected within a certain distance next to or behind your vehicle. The instrument cluster will inform the driver of activation. If vehicle speed exceeds 40 mph the system will activate. Press the switch again to deactivate the system.

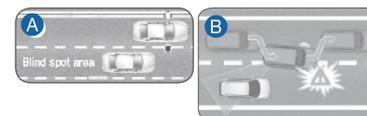


### A Blind spot collision warning (BCW)

Warning range is dependent on your vehicle speed. Example, if your vehicle speed is 20 mph greater than other vehicles, the warning is not active.

### B Blind spot collision avoidance (BCA)

When changing lanes, the system detects the front lane through the camera installed on the windshield and detects the side/rear areas through radar sensors.

## REAR OCCUPANT ALERT (ROA)

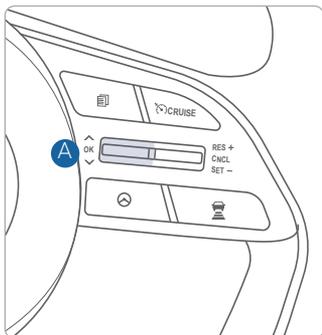

The Rear Occupant Alert system helps prevent exiting the vehicle with the rear passengers left in the vehicle.


### 1st Alert

When you open the front door after opening and closing the rear door and the engine is off, a “check rear seats” warning message appears.

### 2nd Alert

When any movement in the vehicle is detected after the driver’s door is closed and all doors are locked, the horn will activate for 25 seconds. To stop this alert, unlock the door with the remote key or smart key.

**NOTE:** After the first alert, press the OK **A** button on the steering wheel to deactivate the second alert. If the system continues to detect movement, the horn activates up to 8 times. The system detects movement in the vehicle for 24 hours after the doors are locked.

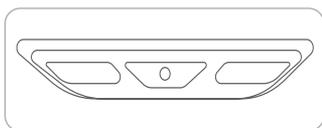


**NOTE:** The overhead sensor is located above the rear passenger seats.

### Activate/Deactivate

Select the following items on the instrument cluster in order:

1. Select User Settings on the cluster LCD display
2. Select Convenience
3. Select Rear Occupant Alert

## DRIVE MODE

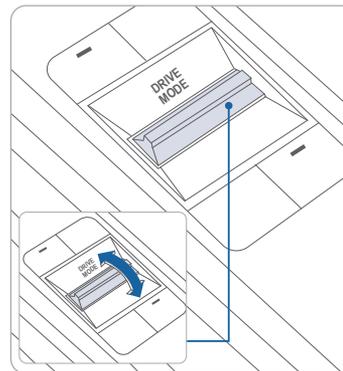

The mode changes, as below, whenever the DRIVE MODE selection switch is toggled up and down. An indicator will illuminate on the instrument cluster when the vehicle is in sport mode or smart mode. When the vehicle is in normal mode, it is not displayed on the instrument cluster.



### ECO mode:

In ECO mode, the engine and transmission control logic are changed to maximize fuel efficiency.

### SPORT mode:

Sport mode manages the driving dynamics by automatically adjusting the steering effort, and the engine and transmission control logic for enhanced driving performance. When sport mode is activated, the engine RPM will be a little higher than normal.

### SMART mode:


Smart mode selects the proper driving mode between normal and sport by judging the driver’s driving habits.

**NOTE:** Whenever the engine is restarted, the drive mode will revert back to the default normal mode

### CUSTOM mode:

In custom mode, the driver can select separate modes and combine them on the infotainment screen. When custom mode is selected, the custom mode indicator will illuminate.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

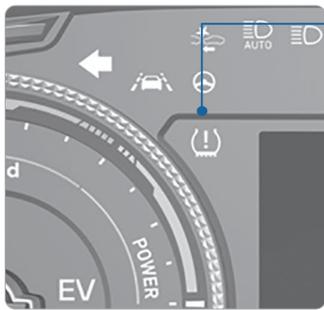

Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure / Tire Pressure Monitor / TPMS Malfunction Display (shown on the cluster LCD display)


### LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires are significantly under-inflated.

### TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, it is recommended that the vehicle be checked by an authorized HYUNDAI dealer.

### LOW TIRE PRESSURE / TIRE PRESSURE MONITOR / TPMS MALFUNCTION DISPLAY(LCD DISPLAY)

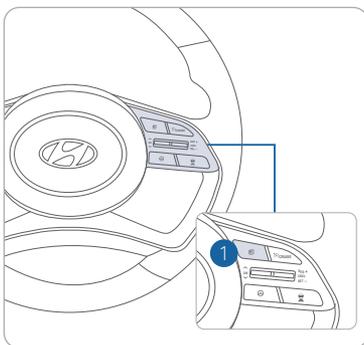


Select the Assist mode by pressing the MODE (1) button on the steering wheel to display tire pressure.

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator will illuminate and the cluster display will indicate which tire requires air.

**NOTE:** Environmental factors can affect the tire pressure. The two main environmental factors are ambient air temperature and elevation. Colder ambient air will reduce tire pressure, while hotter ambient air will increase tire pressure. High elevation may also increase tire pressure.


## CRUISE CONTROL/SMART CRUISE CONTROL

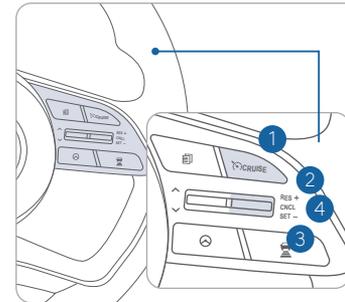


The Cruise Control system allows you to program the vehicle to maintain a constant speed without holding the accelerator pedal.

- 1 To turn On/Off cruise control.
- 2 Toggle switch UP to Resume or Increase the cruise control speed.
- 3 Toggle switch DOWN to Set or Decrease the cruise control speed.
- 4 To Cancel the Cruise Control.

### Setting Vehicle Distance (Smart Cruise Control only)

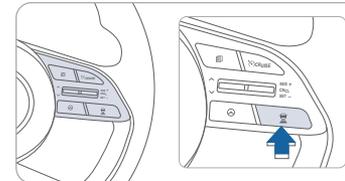

This system assist you in setting the distance from the vehicle ahead and will maintain the selected distance without you depressing the accelerator or the brake pedal.

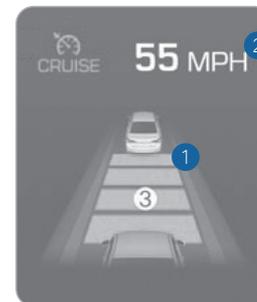

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal. The vehicle-to-vehicle distance (1) will automatically activate when you set the cruise speed (2). Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:



### Setting Cruise Control

1. Press the "CRUISE" button (1) to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle "-SET" switch (3) DOWN to set cruising speed.

### Adjusting the vehicle speed

1. Toggle "+RES" switch (2) UP to increase cruising speed.
2. Toggle "-SET" switch (3) DOWN to decrease cruising speed.

**NOTE:** Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 5 mph.


### To Cancel Cruise Control

Press the "CANCEL" button (4) or depress the brake pedal.

Please refer to your Owner's Manual for more information.



## ELECTRIC PARKING BRAKE (EPB)

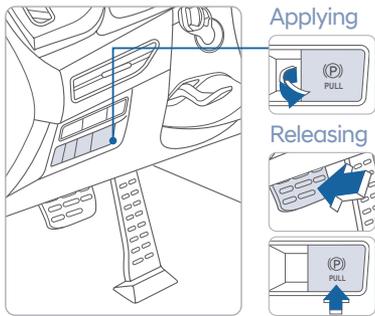


**Applying**  
Stop the vehicle then pull the EPB switch.

**Releasing**  
Press the EPB switch while depressing the brake pedal.

**NOTE:** If necessary, emergency braking is possible by pulling and holding the EPB switch.

## AUTO HOLD

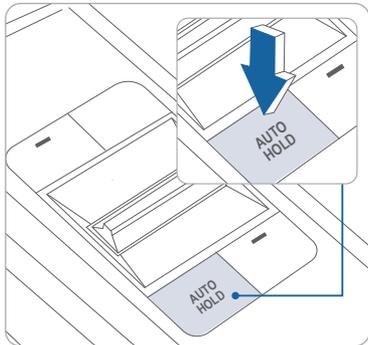

The Auto Hold feature assists in steep hill areas. It holds the brake until the accelerator pedal is pressed.


**WHITE AUTO HOLD** 1. Press the AUTO HOLD switch.

**GREEN AUTO HOLD** 2. Stop the vehicle by pressing the brake pedal. The brakes will remain engaged even if the brake pedal is released.

**WHITE AUTO HOLD** 3. The brakes will release when the accelerator pedal is pressed with transmission in D, R or manual mode.



To cancel the AUTO HOLD operation, press the AUTO HOLD switch again.

## TIRE MOBILITY KIT

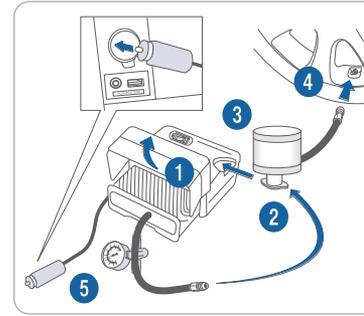

### Setup


1. Remove the speed restriction label from the sealant bottle and place it on the center of the steering wheel.
2. Ensure that the compressor is switched to OFF.
3. Lift the cable cover **1** and screw the compressor hose **2** on to the connector of the sealant bottle.
4. Insert the sealant bottle into the housing slot **3** of the compressor. Immediately drive 4-6 miles to evenly distribute the sealant in the tire.
5. Screw the filling hose **4** of the sealant bottle onto the tire's valve stem.
6. Insert the compressor power plug **5** into the vehicle's power outlet.
7. Turn the ignition switch to the ON position or press the Engine Start/Stop button twice.

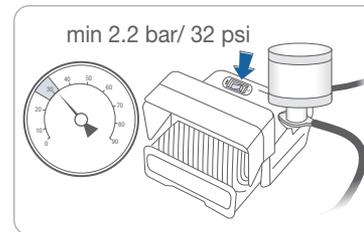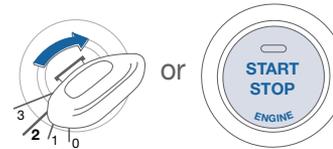

Scan to view a video of:  
Tire Mobility Kit

### Inflate Tire

1. Switch ON the compressor and let it run for approximately 5 minutes.
2. Switch OFF the compressor and check to ensure that inflation pressure is over 32 psi. If not, the puncture is too large to repair. Contact Hyundai Roadside Assistance.
3. Remove the filling hose **4**, compressor hose **2**, and compressor power plug **5**.

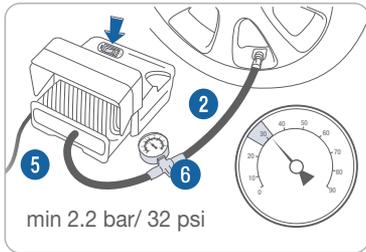

**NOTE:**

A compact spare tire accessory may be available. Please consult your nearest authorized Hyundai dealer.

**Recheck Tire Pressure**

1. Screw the compressor hose **2** directly to the tire valve.
2. Insert the compressor power plug **5** into the vehicle's power outlet.
3. Adjust to the recommended tire pressure located on the driver side door jamb placard.



**To increase the tire pressure:**

1. Switch ON the compressor.
2. To check the current tire pressure, briefly switch OFF the compressor.

**To reduce the tire pressure:**

1. Loosen the knob **6** on the gauge. Tighten the knob **6** to set tire pressure.

**DIGITAL KEY PAIRING (if equipped)**

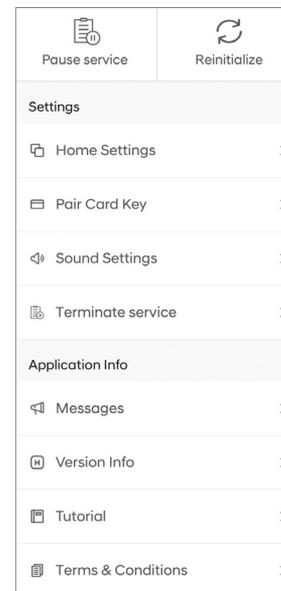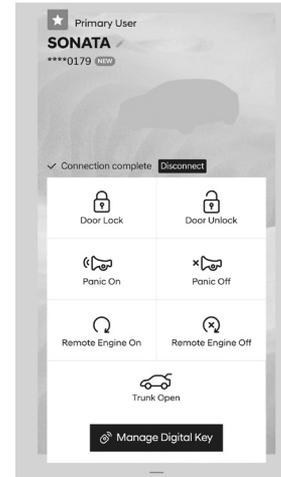

Hyundai Digital Key allows drivers to start the engine of their car using a smartphone app and Near-Field Communication (NFC). Hyundai Digital Key provides many of the same functions as your physical key. To pair your smartphone, complete the following steps:

1. Login to the Hyundai Digital Key Application using your MyHyundai username and password
2. Start the vehicle with the proximity key
3. Pair the phone to the vehicle as follows:
  - Navigation Vehicles: Settings → Vehicle → Digital Key → Smartphone Key → Save
  - Display Audio: Instrument Cluster User Settings Mode → Digital Key → Smartphone Key → Save
4. Open the Hyundai Digital Key Application on the primary user's smartphone. Select the + Icon on the main screen of the smartphone app.
5. Place the smartphone on the Wireless Phone Charger in the vehicle and the process will begin automatically
6. Once the screen in the vehicle says saved, your Digital Key is ready to use.

**NOTE:** This application is only available for Android users.

If the NFC card is lost or stolen, please contact your local Hyundai dealer for replacement.



