



CADENZA

FEATURES & FUNCTIONS GUIDE

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Cover for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

GETTING TO KNOW YOUR **CADENZA**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This **Features & Functions Guide** and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact, and assumes no liability in connection with such changes.

ESSENTIAL FEATURES

Air Conditioning / Climate Control	20
Audio System - Navigation System*	18
Aux/USB/iPod® Port & Power Outlets	19
Bluetooth ® Wireless Technology	14
Cruise Control*	17
Clock	19
PASSENGER AIRBAG OFF Indicator	34
Smart Key	28
Tire Pressure Monitoring System (TPMS)	05
Windshield Wipers & Washers	12

Driving while drowsy or distracted is dangerous and should be avoided. Drivers should remain attentive to driving and exercise caution when using vehicle systems while driving.

VIDEOS & QR CODES	02
INSTRUMENT CLUSTER	
Instrument Cluster Overview / Indicators & Warning Lights	03
Trip Computer / Tripmeter	04
Fuel Efficiency	04
Tire Pressure Monitoring System (TPMS)	05
DRIVER'S PANEL	
Driver Position Memory System*	05
Electronic Stability Control (ESC)	06
Blind Spot Detection (BSD) System*	06
Hill-Start Assist Control (HAC)	06
Hood Release Lever and Latch	07
Lane Departure Warning System (LDWS)*	07
Instrument Panel Dimmer	07
Power Windows, Window Lock & Central Door Lock	08
Power Folding Outside Mirrors	08
Heated Outside Mirrors*	08
Automatic Door Lock/Unlock	08
Reverse Parking Aid Function*	09
Fuel Door and Trunk Release Buttons	09
Engine Start/Stop Button	10
STEERING WHEEL CONTROLS	
Headlights & High Beams	11
Turn Signals & Fog Lights	11
Windshield Wipers & Washers	12
LCD Display Controls and Modes*	12
Manual Tilt/Telescopic Steering Wheel*	13
Electric Tilt/Telescopic Steering Wheel*	13
Bluetooth ® Wireless Technology	14
Advanced Smart Cruise Control (ASCC)*	16
Audio Controls	17
Cruise Control	17
AUDIO SYSTEM	
Navigation System	18

CENTER PANEL	
Clock	19
Aux/USB/iPod® Port & Power Outlets	19
Automatic Climate Control	20
Automatic Gear Shift/Sportmatic® Shifting	21
Paddle Shifters*	21
Electric Parking Brake (EPB)*	22
Auto Hold*	23
Heated Steering Wheel*	24
Power Rear Sunshade*	24
Seat Warmers / Ventilated Seats*	25
SEATING	
Power Adjustable Driver's Seat	26
Front Seat Headrest Adjustment	27
OTHER KEY FEATURES	
Smart Key	28
HomeLink® with Auto-Dimming Rearview Mirror*	29
Map/Room Lamps	30
Panoramic Sunroof Operation*	31
Sunvisor	31
Rear-Camera Display	32
Backup Warning System (Rear Parking Assist System)*	32
Trunk Release Button	33
Fuel Cap / Malfunction Indicator (Check Engine Light)	33
SAFETY FEATURES	
Occupant Detection System (ODS) / PASSENGER AIRBAG OFF Indicator	34
Child Safety Locks	34
Seatbelts	35
Seatbelts Retractor Inertia Locks	35
NOTES	36
LEGAL DISCLAIMERS (See Back Inside Cover Page)	
MAINTENANCE (See Back Cover)	



Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.KuTechVideos.com/vg13/2014. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional Bar Code that can be read by mobile devices loaded with an appropriate Bar Code or QR Code Reader app. The app reads the Bar Code image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Kia One Click Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

📌 QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning. Try another QR Code Reader app; not all apps are created equal
2. After scanning, a "connecting" message appears and then nothing happens or there's a "connection error" message. These messages typically indicate that your device is having trouble connecting to the Internet

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

📱 QR CODE

Kia One Click Fuel Cap Video

To view a video on your mobile device, snap this QR code or visit the listed website.



www.KuTechVideos.com/vg13/2014

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an App Store or Marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader app

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

Instrument Cluster Overview / Indicators & Warning Lights

A Tachometer

B Turn Signal Indicators

C Speedometer

D Engine Temperature Gauge

 
E Indicators & Warning Lights

F Gear Shift Position Indicator*


G Odometer/Tripmeter*

H Trip Computer*

I Fuel Gauge

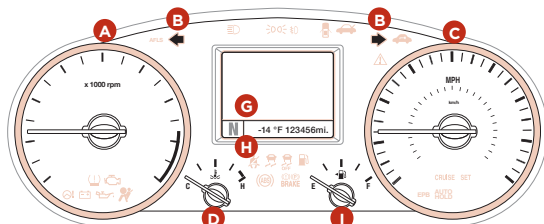

(Type A Cluster)

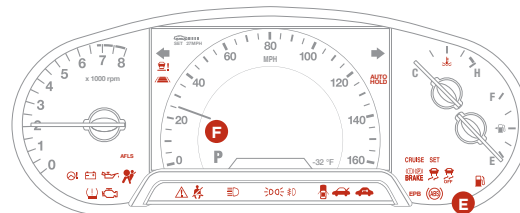 

(Type B Cluster)

AFLS Adaptive Front Lighting System Warning Light

☞☞ Light on Indicator

! Advanced Smart Cruise Control Warning Light

! Lane Departure Warning Light

! Master Warning Light

EPB Electric Parking Brake

! Immobilizer Indicator*

! High Beam Indicator

! Electronic Stability Control (ESC) Warning Indicator*

OFF Electronic Stability Control (ESC) OFF Indicator*

! Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator

! Malfunction Indicator

! Trunk Open Warning Light

! Front Fog Light Indicator

! Seat Belt Warning Light

! Parking Brake & Brake Fluid Warning Light

! Door Ajar Warning Light

! Airbag Warning Light

! Anti-lock Braking System (ABS) Warning Light

AUTO HOLD Auto Hold Indicator

! Charging System Warning Light

SET Cruise SET Indicator

CRUISE Cruise Indicator

! Engine Oil Pressure Warning Light

! Low Fuel Level Warning Light

! Electronic Brake Force Distribution (EBD) System Warning Light

! Electronic Power Steering Warning Light

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.


QUICK TIPS

 
For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

Trip Computer / Tripmeter

The Trip Computer is a driver information system that displays information related to driving when the Engine Start/Stop button is in the ON position.




To cycle through the LCD Display modes, press the MODE/SELECT button **A**.

When in the TRIP COMPUTER mode , press the MOVE/RESET button **B** to cycle through the screens. When displaying TRIP A or TRIP B screens, press and hold the MOVE/RESET button **B** to reset the Tripmeter to zero.

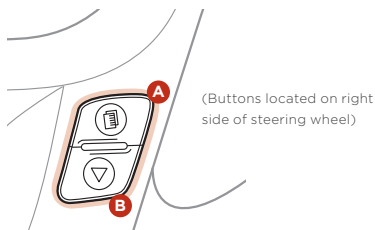

REMINDER: Appearance of Tripmeter display may differ as equipped.

   REMINDER: All stored driving information (except Odometer and Range) is reset if the battery is disconnected.

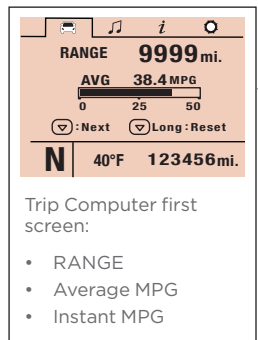

(Type A Cluster)

Fuel Efficiency

Several factors contribute to your vehicle's fuel efficiency, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel efficiency:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range will vary depending on your vehicle's fuel tank size, e.g. 12-gal. vs. 24-gal., even though the MPG may be the same.

For more information on Fuel Economy, you can snap the QR code above to view a video or refer to the brochure "GETTING MORE OUT OF EVERY GALLON, FUEL-SAVING TIPS TO DRIVE BY" available at your local dealership.

 **QR CODE**

Fuel Economy Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.





www.KuTechVideos.com/vg13/2014

Tire Pressure Monitoring System (TPMS)

 The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly colder.

- Inflate tire(s) to specifications to turn off Low Tire Pressure Light  by using an accurate **digital** tire pressure gauge. See front driver's door jamb for PSI specification
- The TPMS Malfunction Indicator  will illuminate after it blinks for approximately one minute when there is a problem with the TPMS. See dealer for service

Ⓢ QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance, safety, and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat, Outside Rearview Mirrors and the Steering Wheel.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

1. Adjust the Driver's Seat, Outside Mirrors and the Steering Wheel
2. Press the Memory button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored

QR CODE

 
Kia Tire Pressure Monitoring System Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KiaTechVideos.com/vg13/2014

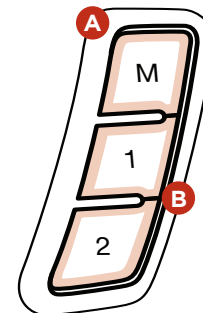

Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press ESC button **A** to turn Traction Control OFF/ON.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press again to turn ON.

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

REMINDER: ESC is turned ON at vehicle start-up.

REMINDER: The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active.

Blind Spot Detection (BSD) System*

The system uses radar sensors to help alert the driver while changing lanes. The BSD indicator on the button **B** will illuminate when turned ON.

The system will become active when the vehicle is traveling more than 9 mph and will alert the driver if another vehicle is detected by the radar sensor.

1st-stage alert: When another vehicle is detected within the BSD System boundary, a yellow light will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st stage alert is on and a turn signal is turned on, an alarm will sound.

Hill-Start Assist Control (HAC)

 
HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.


REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

ⓘ QUICK TIPS

When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.

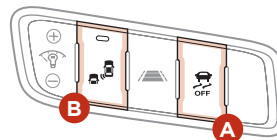

 (button panel located left of Steering Wheel)

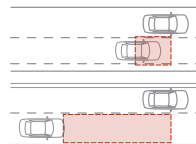

QR CODE

Blind Spot Detection System Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/vg13/2014


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood

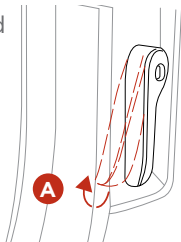

 
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood


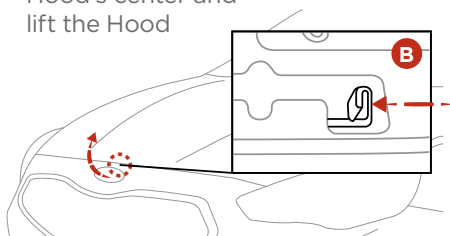


Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Lane Departure Warning System (LDWS)*

  If an unintentional lane change is detected, LDWS may issue a warning on the LCD screen.* With the Engine Start/Stop button in the ON position, press the LDWS button **C** to turn system ON. The instrument cluster indicator  will illuminate green. When vehicle exceeds approximately 43 mph and the LDWS system recognizes the lane the vehicle is traveling in, the icon on will illuminate green.

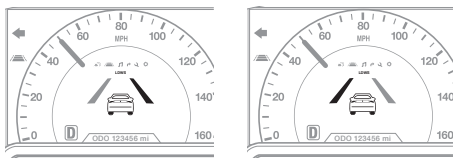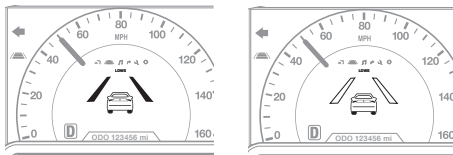

Instrument Panel Dimmer

With parking lights/headlights ON, press button **D** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDER: The Instrument Panel Dimmer does not adjust brightness on the Navigation System screen. Use Navigation setup to adjust brightness on the Navigation System.

QR CODE

Lane Departure Warning System Video

 
To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

REMINDER: LDWS will not issue a warning if the turn signal is activated.

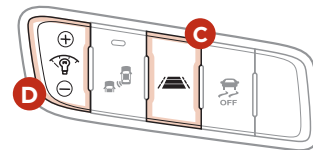

Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's Window Auto Up/Down*
- B** Press to Unlock/Lock All Doors
- C** Press to disable all Passenger Windows

REMINDER: When pressed **C**, window controls for the Rear Passenger Windows are disabled.

ⓘ QUICK TIPS

Auto Door Lock/Unlock* will engage when gear shift is moved in to or out of the P (Park) position.

Power Folding Outside Mirrors

Toggle switch **D** left or right to select mirror. Then press arrows to adjust Power Folding Outside Mirror position.

Toggle button **E** left/right to unfold/fold the outside rearview mirrors.

Toggle button **E** to center to automatically fold/unfold mirrors when:

 
- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed

ⓘ QUICK TIPS

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMINDER: To automatically fold mirrors when exiting vehicle, press the LOCK button twice on the Smart Key.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

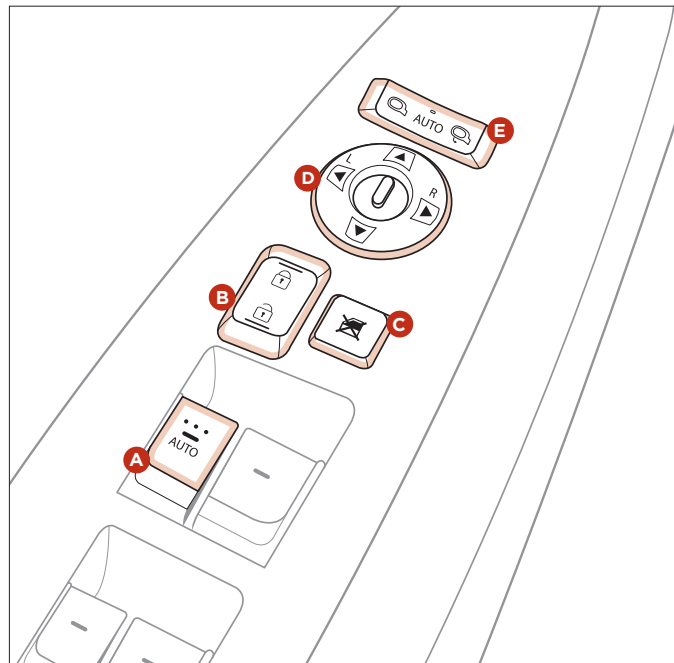

Heated Outside Mirrors*

Mirror heaters controlled with Rear Defroster.

Automatic Door Lock/Unlock

When the gear shift is moved in to or out of P (PARK), all doors will Lock/Unlock.

Reverse Parking Aid Function*

 
When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backwards, the outside rearview mirrors **B** will rotate downward to aid in reverse parking.

To turn ON the Reverse Parking Aid Function, the outside mirror switch **A** needs to be in the left or right position.

To turn OFF, place outside mirror switch in the center position.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror switch is in the middle position

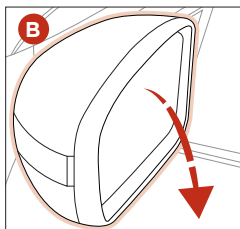


REMINDER: When the outside rearview mirror switch **A** is in the middle position, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Fuel Door and Trunk Release Buttons

Press the **C** button to release the fuel door.

 Press the **D** button to open the trunk.

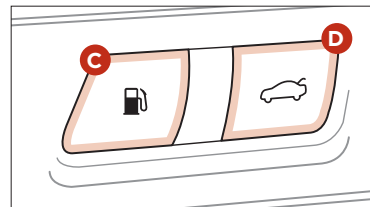

Engine Start/Stop Button

To start the engine:

 
 
1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in Park

To turn the vehicle OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or in the vehicle.

REMINDER:

- If Smart Key fob battery is dead, hold the fob up against the Engine Start/Stop button
- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/ STOP button for more than 2 seconds or 3 times successively within 3 seconds.

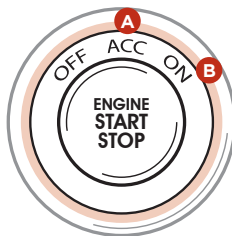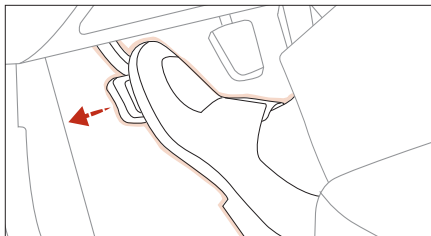

QR CODE

Kia Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

ⓘ QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **A**)

 
ON position

- When already in the ACC position (Orange light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (Reddish Orange light **B**)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (Reddish Orange light **B**)


Keeping the vehicle in ACC or ON position too long can discharge the vehicle's battery

Headlights & High Beams

AUTO Light* function — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

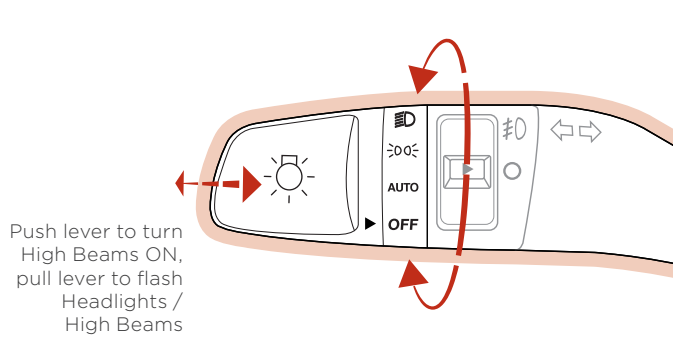

Rotate lever to change the Headlight function:

 
-  : Headlight position
-  : Parking light position
- AUTO*** : Automatic Headlights position
- OFF** : OFF position

Turn Signals & Fog Lights

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Display.

For more information on the User Settings Mode, please refer to your Owner's Manual.

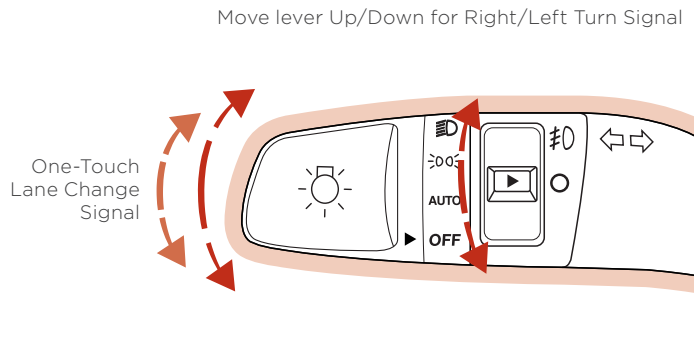

REMINDER: Headlights must be ON for Fog Light operation.

 
Windshield Wipers & Washers

Auto Rain Sensing*

The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To adjust the Auto Rain Sensing speed setting, move the speed control switch **A** up/down.

Move lever Up/Down to change Wiper modes.

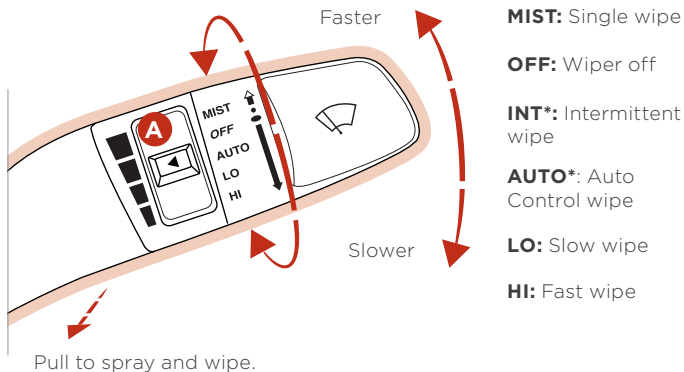

🕒 QUICK TIPS

- With the Engine Start/Stop button in the ON position and the wiper switch is in AUTO mode, the wiper will operate once to perform a self-check of the system
- Set the wiper to OFF position when the wiper is not in use

LCD Display Controls and Modes*

Press Mode/Select button **A** to scroll through different LCD Modes:



(LCD Display Control button located on Steering Wheel)


LCD display modes:

Type A	Type B	
		Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.
-		Smart Cruise Control (SCC) / Lane Departure Warning System (LDWS)*: Displays the state of the SCC and LDWS
		A/V Mode: Displays the state of the A/V System
-		Turn-by-Turn Mode*: Displays the state of the Navigation system
		Information Modes: Informs on upcoming service intervals
		User Settings Mode: Change settings of the doors, lamps and other features

Manual Tilt/Telescopic Steering Wheel*

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust **B** to desired angle and **C** distance.

 
When finished, pull the Lock-Release Lever **A** up to lock Steering Wheel in place.

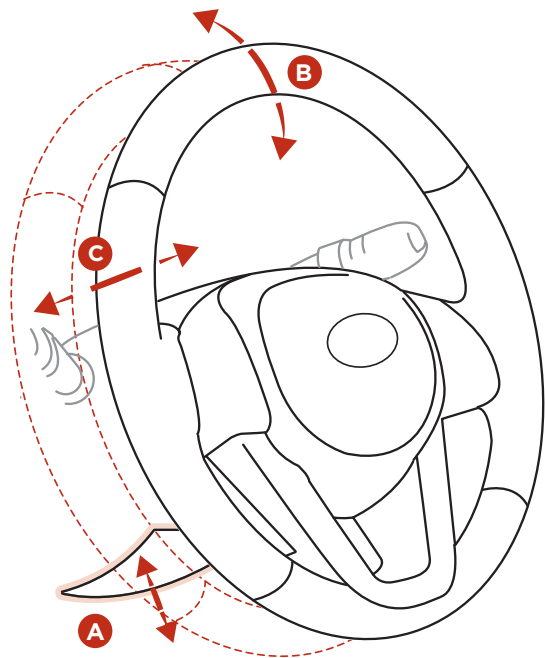


Electric Tilt/Telescopic Steering Wheel*

To adjust the Steering Wheel angle **D**, move the switch **E** up or down.

 To adjust the Steering Wheel distance **F**, move the switch **E** forward or backward.

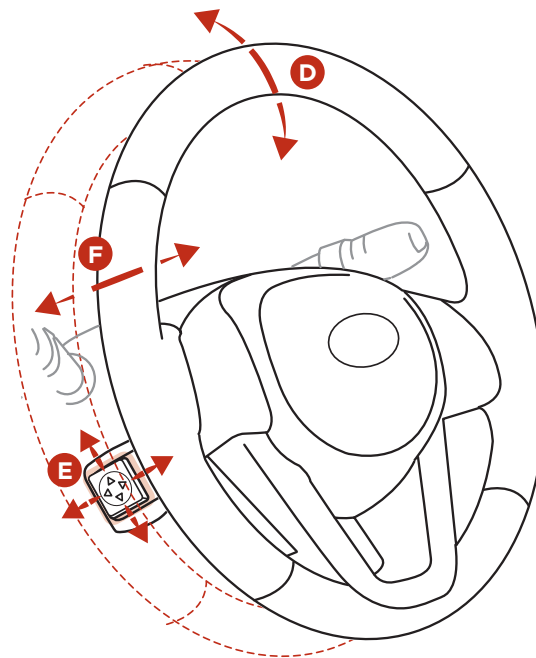

Bluetooth® Wireless Technology

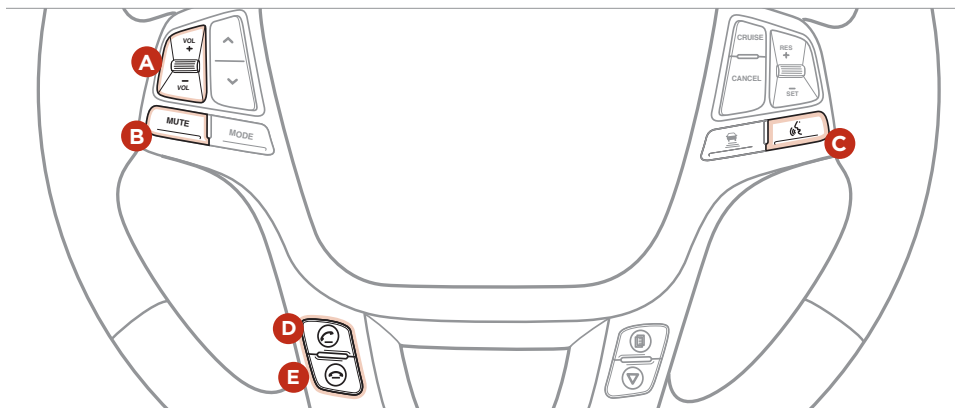 

- A Volume button:** Press up/down to raise/lower speaker volume
- B Mute button:** Press to mute the microphone during a call
- C Talk button:** Press to activate voice recognition / bring up menus / place calls with minimal voice command prompts from the system

ⓘ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

- D Receive/Place Call button:** Press to receive/transfer calls. Press to place a call using vocal command prompts from the system, or to answer an incoming call
- E End Call button:** Press to end a call or cancel a function

ⓘ QUICK TIPS

- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language may delete paired phones

For more information, refer to the *Digital Navigation Systems User's Guide* or the *UVO System User's Manual*.

For **Bluetooth®** Wireless Technology FAQs, go to www.kia.com, Owners section.

Refer to your Owner's Manual for more specific **Bluetooth®** Wireless Technology phone pairing and operation instructions.

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

Ⓢ QUICK TIPS

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth®** connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Navigation System

- **Option 1:** Press the Receive/Place Call button **(B)** (displays the phone screen with number keypad)
- **Option 2:** Press the Talk button **(C)**. Then say the command "Call Name" or "Dial Number," followed by phonebook name or number

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

To maximize the use of Voice Recognition, consider these guidelines when storing contacts:

- Do not store single-name entries (e.g., "Bob", "Mom", etc.). Instead, always use full names (including first and last names) for these contacts
- Do not use special characters (e.g., '@', '-', '*', '&', etc.)
- Do not use abbreviations (i.e., use "Lieutenant" instead of "Lt.") or acronyms (i.e., use "County Finance Department" instead of "C. F. D.")
- Be sure to say the name exactly as it is entered in the contacts list

Ⓢ QUICK TIPS

Contacts Sync Tips

- If Contact Sync is set to ON, contacts store in your phone will download each time your phone is connected. There may be a delay before the system is available to place a call
- If Contact Sync is set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download

Advanced Smart Cruise Control (ASCC)*

 
The Advanced Smart Cruise Control (ASCC)* system allows you to set the vehicle to maintain a speed so long as it is not limited by traffic. When traffic is encountered the vehicle will be slowed to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

To set/adjust the ASCC speed:

- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Move the ASCC lever **B** to set or adjust speed

To set the vehicle-to-vehicle distance, press the ASCC button **C** on the steering wheel. The images on the LCD Display* **D** and the Instrument Cluster **E** will change when scrolling through the settings.

To turn system OFF, press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF and the LCD Display* ASCC image will show cancelled **F**.

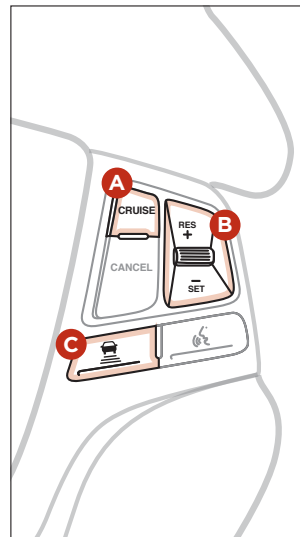

(buttons located on right side of Steering Wheel)

QR CODE

Advanced Smart Cruise Control (ASCC) Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

 
 
🔔 QUICK TIPS

To change the Cruise Control mode from ASCC to standard Cruise Control, press and hold button **C**. Repeat to switch modes again.

For the ASCC System to operate:

- When no vehicle is in front, you must be travelling at a minimum speed of 19 mph
- When following a vehicle, there is no minimum speed requirement


When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, the system will disable.

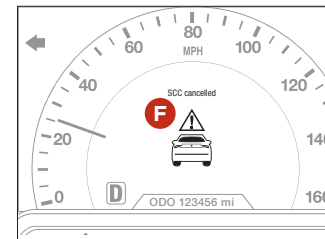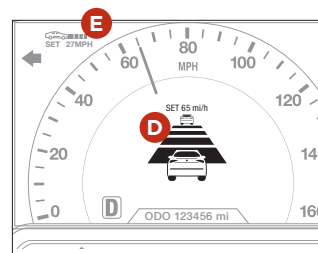

REMINDER: Cruise Control button must be ON in order to turn ASCC ON/OFF.

Audio Controls

 Cruise Control

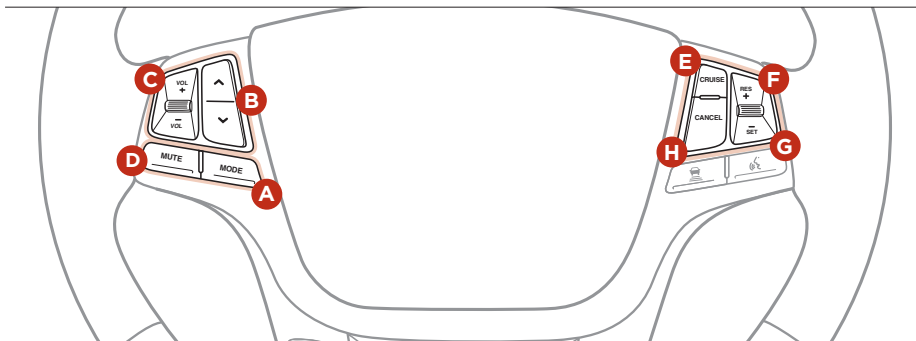

- A Audio Mode button:** Press to cycle through FM1-2/AM/SAT 1-3/CD/USB/Aux/iPod®
- B Seek/Preset button**
 - *Radio Mode:* Press to advance through Preset Stations. Press and hold to AUTO SEEK
 - *CD/USB/iPod® Mode:* Press to move TRACK UP/DOWN. Press and hold to FF/REW
- C Volume button:** Press up/down to raise/lower volume
- D Mute button:** Press to mute all audio

- E Cruise Control ON/OFF button:** Press to turn the Cruise Control ON/OFF
- F Resume Cruising Speed button:** Press to Resume or increase Cruising Speed
- G Set Cruising Speed button:** Press to set or decrease Cruising Speed
- H Cruise Control Cancel button:** To cancel Cruise Control setting, do one of the following:
 - Press the brake pedal
 - Press the CANCEL button

ⓘ QUICK TIPS

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

 
REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

For further audio system operations, refer to pages 14, 16 – 21

ⓘ QUICK TIPS

- Cruise Control functions only above approximately 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

Navigation System with AM/FM/CD/MP3/SiriusXM

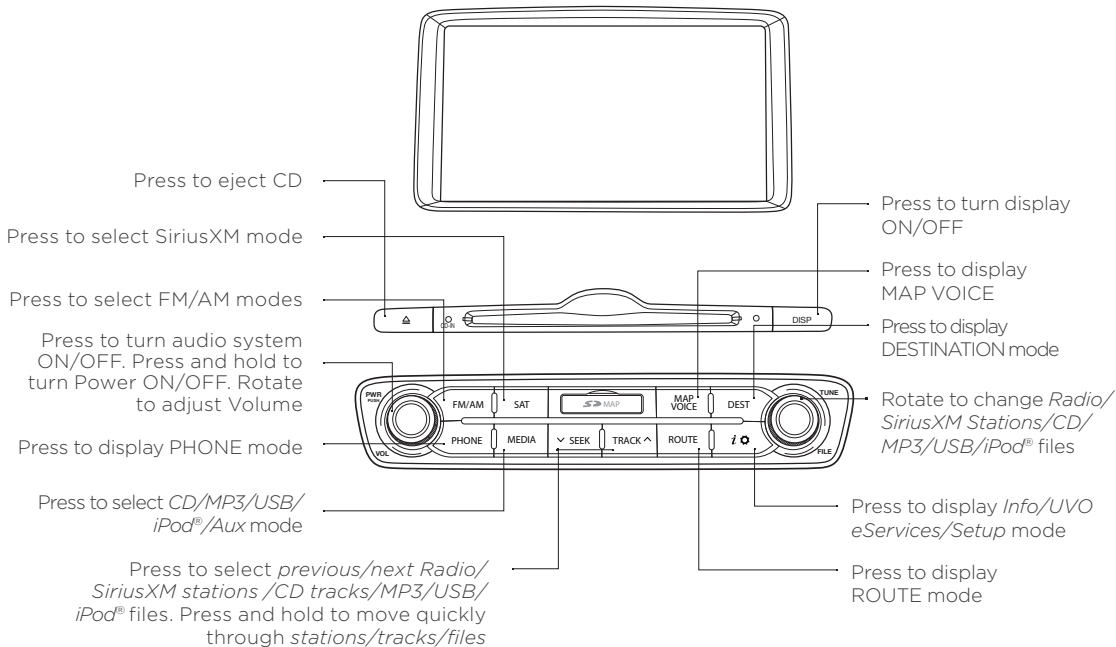

QR CODE

Navigation Audio System Videos

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/audio/nav_eServices

Ⓢ QUICK TIPS

Prolonged use of the Navigation System in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation System should be operated with the engine running to prevent battery discharge.

Ⓢ QUICK TIPS

 
When using the voice command feature, wait for the system BEEP before speaking the command.

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

REMINDER: SiriusXM service is not available in AK or HI.

For further navigation system operation, refer to the *Digital Navigation System User's Manual*.

Clock

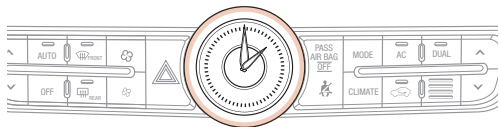

Center Panel Clock Setup*:

Clock setup is done through the Navigation system. See below or refer to the Digital Navigation System User's Manual for more information.

Navigation System Clock Setup:

 
Press the Info/Settings key on the Audio Control Unit. Then press the on-screen Setup button and select the Clock icon. Use the on-screen buttons to navigate through setup.

🕒 QUICK TIPS

Press the DONE button* on the Navigation screen to ensure changes are saved.

REMINDER: The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly.

Aux/USB/iPod® Port & Power Outlets

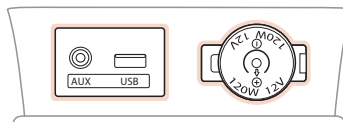

(Located in center panel)

If equipped, additional power outlets are located inside the center console and the rear part of the center console.

📱 QR CODE

Kia USB Port

 
To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

Automatic Climate Control

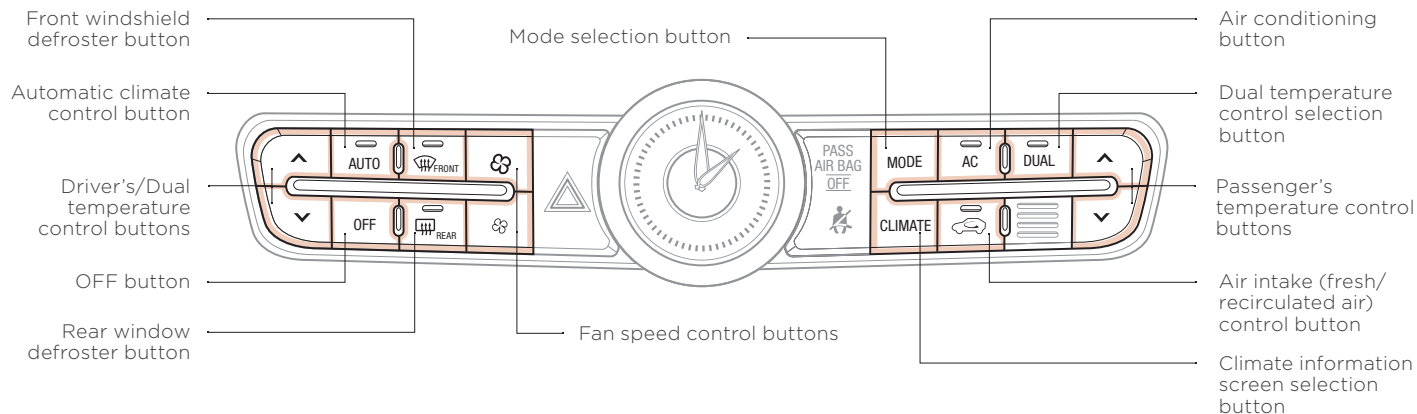

Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation
2. Press **MODE** buttons to control which vents air flows through
3. Press **DUAL** to select Dual Temperature Control Operation

Air Flow Modes

To select Air Flow Modes, rotate the Mode selection knob:



Face-Level



Floor-Level



Bi-Level



Floor/Defrost-Level

Defrost Outside Windshield:


1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set desired **Fan Speed**
2. Set desired **Temperature**
3. Press the **Front Defrost** button

REMINDER: Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

QUICK TIPS

 
- Keep inside glass as clean as possible to reduce window fogging
- Defrost  Mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation the A/C indicator will NOT illuminate, except when temperature is adjusted to LOW mode. The fan speed, air intake, air flow and air conditioning may automatically engage at any time to reach desired temperature and reduce humidity

Automatic Gear Shift with Sportmatic® Shifting

- P:** Park
- R:** Reverse
- N:** Neutral
- D:** Drive
- [+]:** Sport Mode Upshift
- [-]:** Sport Mode Downshift

Sport Mode: To enter Sport Mode, move shift lever from **D** to left gate

Sport Mode Shifting: Move shift lever up **[+]** to Upshift or down **[-]** to Downshift

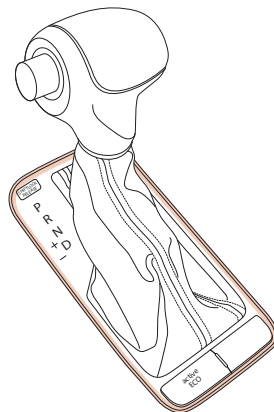


Paddle Shifters*

Paddle Shifters are operable when the shift lever is in the D position or in Sport Mode.

Paddle Shifting: Pull the **[+]** or **[-]** paddle shifter once to shift up or down one gear.

REMINDER: The Paddle Shifters can be operated when the vehicle speed is more than 6 mph.

 REMINDER: When in Sportmatic Mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

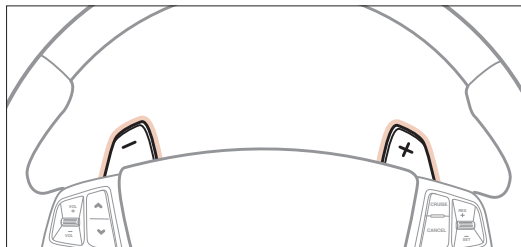

Ⓢ QUICK TIPS

- Press brake pedal and depress release button to move gear shift to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

📱 QR CODE

To view a video on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Kia Sportmatic® Shifting Video



www.KuTechVideos.com/vg13/2014

Paddle Shifters Video



www.KuTechVideos.com/vg13/2014

Electric Parking Brake (EPB)*

The Electric Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **LOW BRAKE** is illuminated on the instrument cluster.

ⓘ QUICK TIPS

 
Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light **LOW BRAKE** is OFF.

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor whine sound may be heard while operating or releasing the EPB. These conditions are normal and indicate that the EPB is functioning properly

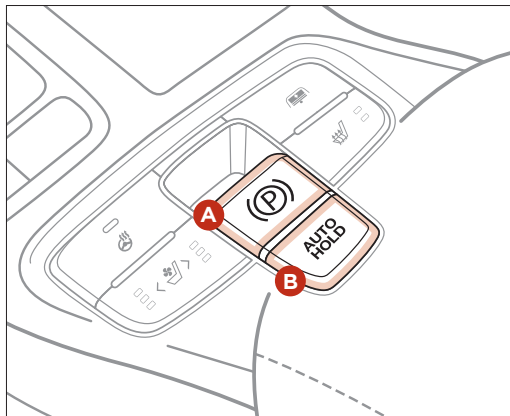

(Buttons located below Gear Shift)

AUTO HOLD*

AUTO HOLD temporarily maintains the vehicle at a standstill even if the brake pedal is released. AUTO HOLD can be turned ON/OFF using the AUTO HOLD switch **B** on the driver's panel. Before AUTO HOLD will operate, the driver's door, engine hood and trunk must be closed and the driver's seat belt must be fastened.

The AUTO HOLD indicator, which is in the instrument cluster, has four states:

White: Standby - With vehicle at a standstill, and AUTO HOLD switch **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the AUTO HOLD indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the AUTO HOLD indicator changes from white to green.

OFF (not illuminated): The indicator will turn OFF when the AUTO HOLD switch **B** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

QR CODE

Electric Parking Brake (EPB) / Auto Hold Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

Heated Steering Wheel*

Press **A** to turn ON/OFF Steering Wheel Heater, while the Engine Start/Stop Button is in the ON position. Steering Wheel Heater will turn OFF automatically in 30 minutes, or when button is pressed again to deactivate.

🕒 QUICK TIPS

 
- If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position
- System does NOT turn off when ignition is cycled. To turn off system, press the seat warmer switch

Power Rear Sunshade*

Press the Power Rear Sunshade button **B** to raise/lower sunshade, while the Engine Start/Stop Button is in the ACC/ON position.

🕒 QUICK TIPS

1. The Power Rear Sunshade will lower when the Gear Shift is moved into the R (Reverse) position
2. Then when the Gear Shift is moved into D (Drive) and vehicle's traveling more than 12mph, the Power Rear Sunshade will unfold automatically

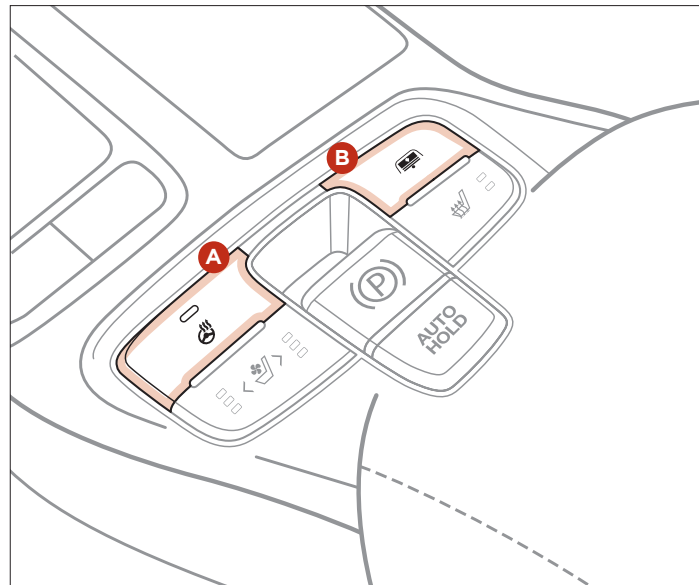

(Buttons located below Gear Shift)

Seat Warmers / Ventilated Seats*

Seat Warmers only*

Press button once for high setting (2 LEDs lit).
 Press button twice for low setting (1 LED lit).
 Press button a third time to turn OFF.



QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature

Seat Warmers / Ventilated Seats*

Seat Warmers – Press right side of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

Ventilated Seats – Press left side of button once for high setting (3 LEDs lit). Press twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.



QR CODE

Seat Warmers and Ventilated Seats Video

To view a video on your mobile device, snap this QR code or visit the listed website.

 
Refer to page 2 for more information.




www.KuTechVideos.com/vg13/2014

Power Adjustable Driver's Seat


Move/Press controls to adjust Seat forward/backward, Seat Cushion, Seatback or Lumbar.

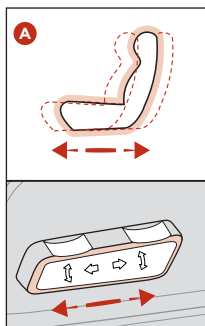


Seat forward/
backward

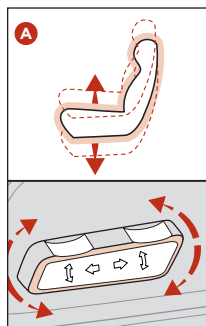 


Seat Cushion

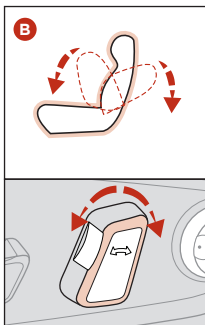 


Seatback

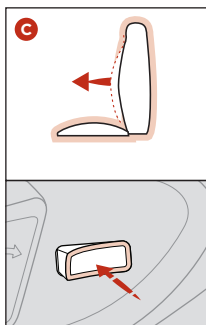 

Lumbar

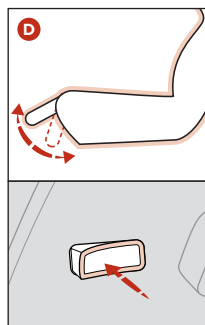 

Cushion Extension

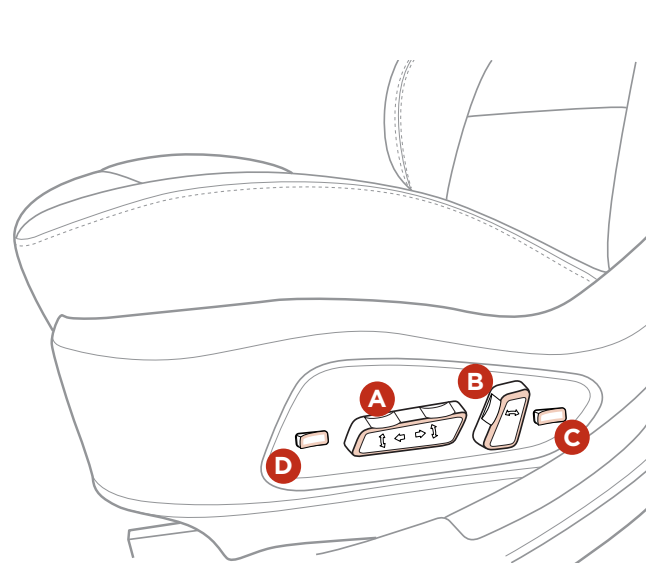 


Front Seat Headrest Adjustment

To adjust headrest forward: Pull bottom of headrest forward at an angle.

To adjust headrest back: Pull forward at a slight angle to the farthest position and release. Then pull forward to desired position.

To raise headrest: Pull headrest up.

 To lower headrest: Press lock **A**, then press the headrest down.

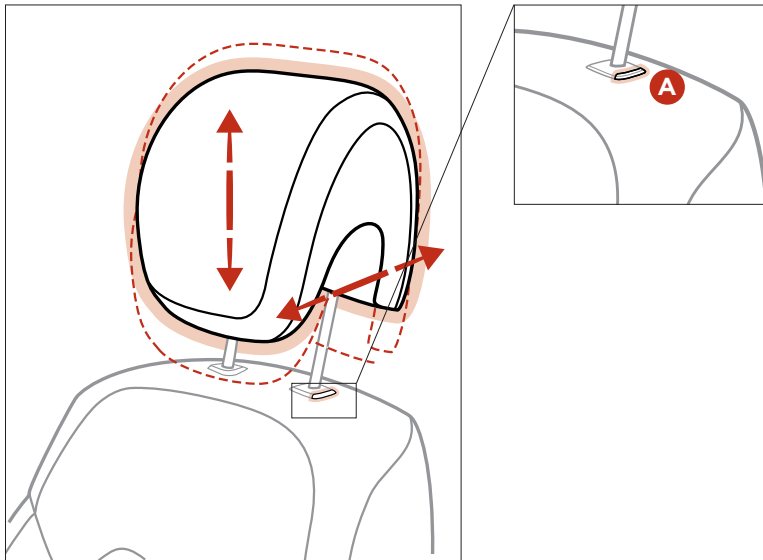


Smart Key

- A** Press to lock All Doors
- B** Press to unlock Driver's Door
Press twice within 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Trunk and open

REMINDER: Trunk lid will partially open. To fully open, lift up manually.

REMINDER: The Trunk unlocks when the Smart Key is within close proximity of the vehicle.

 - D** Press and hold more than a half a second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key

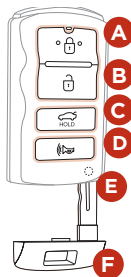


Ⓢ QUICK TIPS

The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately.

REMINDER: Remote button configuration may vary depending on vehicle options.

Mechanical Key **F**:

 - Use to unlock driver's door:
 1. Remove door handle keyhole cover with Mechanical Key
 2. Insert Mechanical Key and turn right to Unlock Driver's Door
 3. Insert Mechanical Key and turn left to Lock Driver's Door
- Use to enable/disable Child Safety Locks (page 34)
- Use to lock glove box

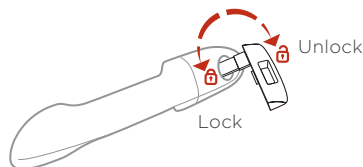

For more information on the Mechanical Key, please refer to your Owner's Manual.

Driver's Door Lock/Unlock button **G**:

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors



QR CODE

Kia Engine Stop/Start Button and Smart Key

 
To view a video on your mobile device, snap this QR code or visit the listed website.


Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

HomeLink® with Auto-Dimming Rearview Mirror*

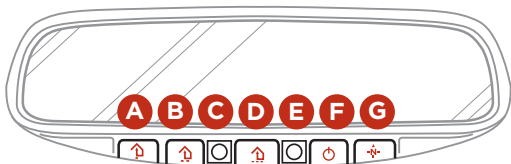

- A** HomeLink® button 
- B** HomeLink® button 
- C** Indicator light 
- D** HomeLink® button 
- E** Glare detection sensor 
- F** Automatic dimming ON/OFF 
- G** Compass control button 

The Auto-Dimming Rearview Mirror is designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location.

To turn automatic dimming ON or OFF, press button **F**

REMINDER: Mirror indicator light **C** will illuminate when automatic dimming is ON.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A B D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after or the Engine System Start/Stop button is OFF.

Map/Room Lamp Operation

Press the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

The Map Lamp turns ON when any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately.

ON position **B** - When in ON position, the Map and Room Lamps remain ON until switched again to turn OFF.

DOOR position **C** - When in DOOR position and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.

 
 
OFF position **D** - When in OFF position, all interior lights are OFF.

Room Lamp - Press the lens **E** to turn the Room Lamp ON/OFF.

REMINDER: When Room Lamp lens is pressed ON it will stay remain ON, even when the Map Lamp switch is in the OFF position.

Ⓢ QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

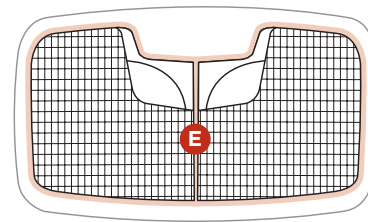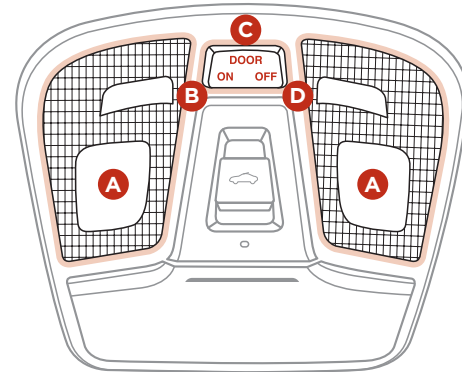

Panoramic Sunroof Operation*

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever **A**, and the ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the Sunshade and Sunroof:

Auto Open: Slide lever backward to the farthest position and release.

Auto Close: Slide the lever forward to the farthest position and release.

Slide the Sunshade:

Auto Open: Slide the lever backward to the first detent position.

Auto Close: Slide the lever forward to the farthest position.

Slide the Sunroof (with Sunshade open):

Auto Open: Slide the lever backward and release.

Auto Close: Slide the lever forward to the first detent position or pull the lever downward.

Tilt the Sunroof:

Raise: Push lever upward.

 
Lower: Pull lever downward.

Auto Close Sunroof and Sunshade: Slide the lever forward to the farthest position.

ⓘ QUICK TIPS


- To stop the Sunroof/Sunshade at any position, push or pull the sunroof control lever in any direction

REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

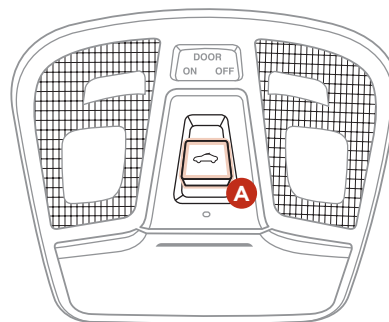

Sunvisor

 Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

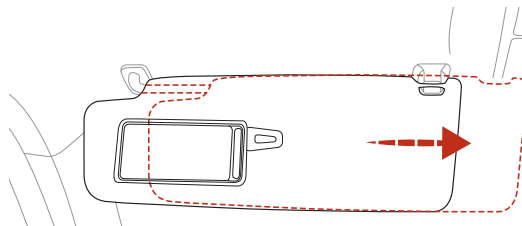

REMINDER: Sunvisor may not shield all direct light.

 
REMINDER: The Sunvisor may impair visibility if not adjusted properly.

Rear-Camera Display

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation screen while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

1. Engine Start/Stop button is in the ON position (Reddish Orange Light)
2. Gear Shift Lever is in the R (Reverse) position

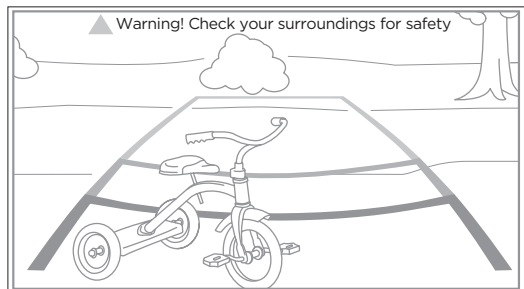

REMINDER: The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

 
REMINDER: Navigation System - While camera is active, only the Audio System can be operated on the Steering Wheel and Audio Control Unit. Navigation features are disabled.

Backup Warning System (Rear Parking Assist System)*

The Backup Warning System is not a safety device. The Backup Warning System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.


REMINDER: If the vehicle is moving at speeds over 3 mph, the system may not activate correctly.

REMINDER: When more than two objects are sensed at the same time, the closest one will be recognized first.

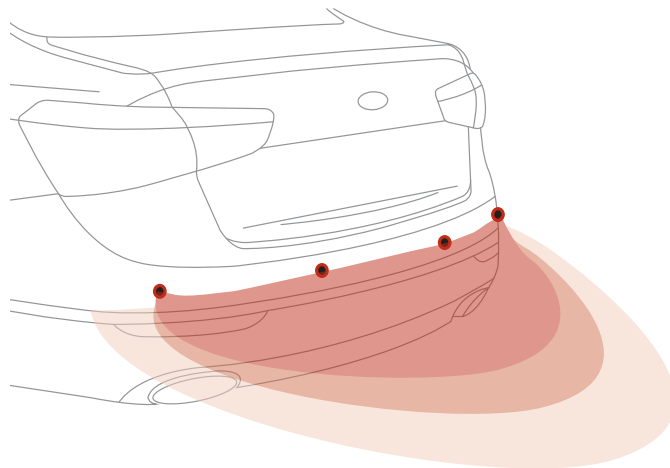

Trunk Release Button

 
Located underneath the Trunk lid. With Trunk unlocked, press the Trunk Release button **A** and pull the Trunk lid up by the handle to open.

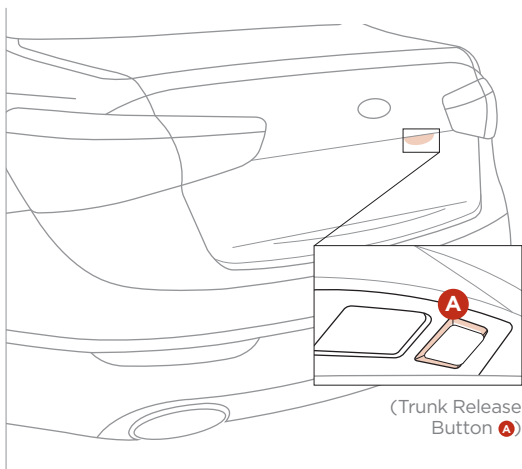

📌 QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- The Trunk unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle

Fuel Cap/Malfunction Indicator (Check Engine Light)

Tighten for *ONE CLICK* to prevent Malfunction Indicator  from illuminating.



REMINDER: The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel.

📱 QR CODE

Kia One Click Fuel Cap Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

Occupant Detection System (ODS)/ PASSENGER AIRBAG OFF Indicator

ODS detects the presence of the front passenger.

Depending on the situation and type of accident, the system may:


- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIRBAG OFF” light will illuminate.

 


Please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System" for more detailed information regarding your vehicle's airbags.

Child Safety Locks

Located on the rear edge of the rear passenger doors, turn the Child Safety Lock to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child Safety Lock is located on rear passenger's door jamb.

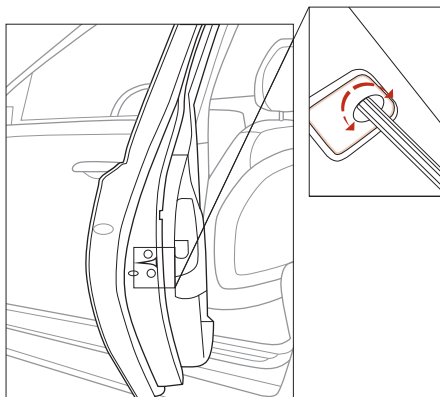

QR CODE

Kia Occupant Detection System Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/vg13/2014

Seatbelts


To properly fasten your safety belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

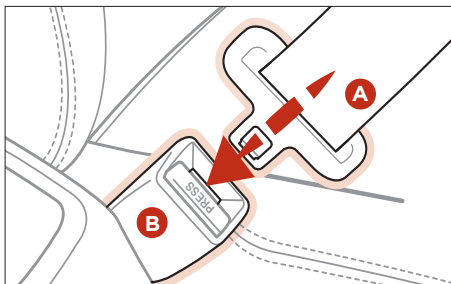

Seatbelt Retractor Inertia Locks

 - Inertia locks allow lap/shoulder Seatbelts to remain unlocked during normal vehicle operation, for freedom of movement and increased comfort
- During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, Seatbelt retractors will automatically lock the belts

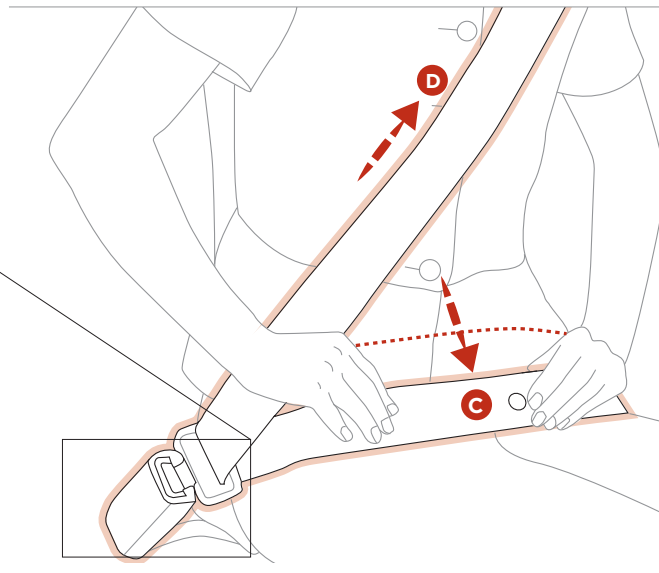

Ⓢ QUICK TIPS

The Seatbelt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

For more detailed information regarding your vehicle's Seatbelts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Seatbelts & Supplemental Restraint System."

LEGAL DISCLAIMERS

UVO eServices: Warning - Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

The Advanced Smart Cruise Control, Blind Spot Detection, and Lane-Departure Warning systems are not substitutes for proper and safe driving. Always drive safely and use caution. These systems may not detect every object in the vehicle's blind spot or direction of travel.

The Back-Up Warning System and Rear Camera Display are not substitutes for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Back-Up Warning System and Rear Camera Display may not detect every object behind the vehicle. The Blind Spot Detection System is not a substitute for proper and safe lane changing procedures. Always drive safely and use caution when changing lanes. The Blind Spot Detection System may not detect every object alongside the vehicle.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Seatbelts: For maximum protection, always wear your seatbelt.

Navigation: GPS maps and directions are for information purposes only, and Kia does not make any warranties about the accuracy of that information. Kia is not responsible for loss or delay resulting from the use of the navigation system. Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

At launch, the Apple iPhone® will be the only UVO eServices compatible device. iPhone® is a registered trademark of Apple Inc. Apple iOS 6 compatibility expected early 2013. Additional compatible devices expected late 2013.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. **If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at the current rates until you call Sirius XM at 1-866-635-2349 to cancel. Subscriptions governed by the SIRIUSXM Customer Agreement; see www.siriusxm.com.** Sirius U.S. Satellite service is available only to those at least 18 and older in the 48 contiguous United States, D.C., and P.R. (with coverage limitations), while SiriusXM Internet Radio is available throughout our satellite service area and also AK and HI. Traffic information not available in all markets. See siriusxm.com/traffic for details. ©2012 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Microsoft® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

HD Radio™ and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.

HomeLink® is a registered trademark of Johnson Controls, Inc.



NORMAL MAINTENANCE SCHEDULE

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

INTERVAL MAINTENANCE CHART							
7,500 miles (or 6 months)	A	B					
15,000 miles (or 12 months)	A	B	C				
22,500 miles (or 18 months)	A	B					
30,000 miles (or 24 months)	A		C	D			
37,500 miles (or 30 months)	A	B					
45,000 miles (or 36 months)	A	B	C				
52,500 miles (or 42 months)	A	B					
60,000 miles (or 48 months)	A		C	D	E	F	
67,500 miles (or 54 months)	A	B					
75,000 miles (or 60 months)	A	B	C		E		
82,500 miles (or 66 months)	A	B					
90,000 miles (or 72 months)	A		C	D	E		
97,500 miles (or 78 months)	A	B					
105,000 miles (or 84 months)	A	B	C		E		H
112,500 miles (or 90 months)	A	B					
120,000 miles (or 96 months)	A		C	D	E	F	G

A Inspect* — Battery condition, vacuum hose
Change — Engine oil and oil filter
Perform — Rotate tires; add fuel additive¹

B Inspect* — Air cleaner filter

C Inspect* — Air conditioner refrigerant and performance**, brake lines, hoses and connections; drive shaft and boots, exhaust pipe and muffler, front/rear disc brakes and pads**, front brake calipers, steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint and suspension mounting bolts
Replace — Climate control air filter (for evaporator and blower unit)

D Inspect* — Brake Fluid, parking Brake**, fuel filter², fuel tank air filter²; fuel tank, lines, vapor hose and fuel filler cap
Replace — Air cleaner filter, climate control air filter

E Inspect* — Drive belts³

F Inspect — Valve clearance⁴

G Replace — Engine coolant⁵

H Replace — Spark plugs (iridium coated)

* and, if necessary, adjust, clean, replace or correct.

** If equipped.

¹ If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Fuel filter & fuel tank air filter are considered to be maintenance free, but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem, etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

³ The drive belt should be replaced when cracks occur or tension is reduced excessively. Inspect "Water Pump" when replacing the drive belt or timing belt.

⁴ Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

⁵ When replacing coolant, use only a qualified coolant additive for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

Check tire pressure at least once a month or more.

See your owner's manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.
 Call 1-800-333-4KIA (4542) for roadside assistance.



CADENZA CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY

- Confirm "Good Battery" with Kia GR8-1299 battery tester
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key* lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio user's guides)


KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control - page 20 - Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

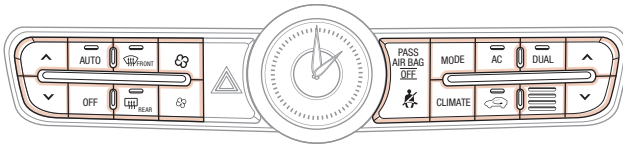

Automatic*

 - Front Seat Headrest Adjustment - page 27

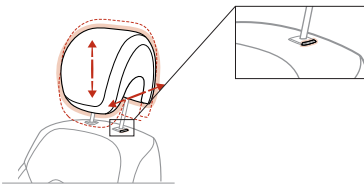


- Windshield Wipers & Washers - page 12

Move lever Up/Down to Change Wiper modes

Pull to spray and wipe.

 Rotate Rear Wiper switch to change Wiper modes.

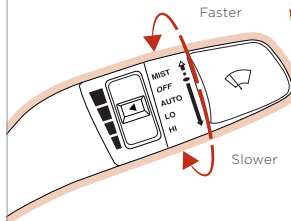

- MIST:** Single wipe
- OFF:** Wiper off
- INT:** Intermittent wipe
- AUTO:** Auto Control wipe
- LO:** Slow wipe
- HI:** Fast wipe



 
KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- Navigation System* – page 18
For further navigation system operation, refer to the Kia Digital Navigation System Owner’s Manual.




- Aux/USB/iPod® Port – page 19



 - Cruise Control / ASCC – pages 16-17
Demonstrate operation

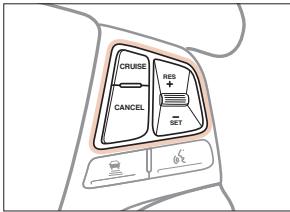

 - Bluetooth® Wireless Technology – pages 14-15
Demonstrate operation

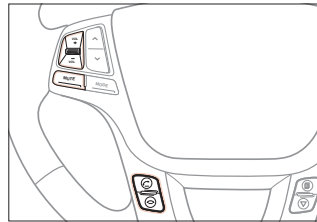

- Tire Pressure Monitoring System (TPMS) – page 5
- Blind Spot Detection (BSD)* - page 6
- Lane Departure Warning System (LDWS)* - page 7
- Engine Start/Stop Button – page 10
- Clock Setup – page 19
- Electric Parking Brake (EPB) / Auto Hold* - pages 22-23
- Seat Warmers/Ventilated Seats* – page 25

- Smart Key – page 28
- HomeLink® with Auto-Dimming Rearview Mirror – page 29
- Sunvisor – page 31
- Panoramic Sunroof Operation* – page 31
- Rear-Camera Display* – page 32
- PASSENGER AIRBAG OFF Indicator - page 34

*if equipped

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours and Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____