



# SORENTO

FEATURES & FUNCTIONS GUIDE

[www.kia.com](http://www.kia.com)

Consumer - Roadside Assistance  
1-800-333-4KIA (4542)

See Back Cover for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

# GETTING TO KNOW YOUR **SORENTO**

## **Congratulations on Your New Kia Purchase!**

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

## **Using This Guide**

The information contained in this guide is a brief overview which will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This **Features & Functions Guide** and the specific operational and safety information it provides is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

## ESSENTIAL FEATURES

Active ECO System*	05
Air Conditioning / Climate Control	22
Audio System - Standard*	16
Audio System - Navigation System*	20
Audio System - UVO System*	19
AUX/USB/iPod* Port & Power Outlets	21
<b>Bluetooth*</b> Wireless Technology	12
Cruise Control*	14
Digital Clock	21
Folding 2 <sup>nd</sup> & 3 <sup>rd</sup> Row Seats*	27
Front Active Headrests	28
PASSENGER AIR BAG OFF Indicator	35
Smart Key*	29
Tire Pressure Monitoring System (TPMS)	05
Windshield/Rear Wipers & Washers*	11

*Driving while drowsy or distracted is dangerous and should be avoided. Drivers should remain attentive to driving and exercise caution when using vehicle systems while driving.*

## VIDEOS & QR CODES . . . . . 02

### INSTRUMENT CLUSTER

Instrument Cluster Overview / Indicators & Warning Lights	03
Trip Computer / Tripmeter*	04
Fuel Efficiency	04
Tire Pressure Monitoring System (TPMS)	05
Active ECO System*	05

### DRIVER'S PANEL

Electronic Stability Control (ESC)	06
Blind Spot Detection (BSD) System*	06
Hill-Start Assist Control (HAC)	06
Hood Release Lever and Latch	06
Instrument Panel Dimmer*	07
All Wheel Drive (AWD) Transfer Mode*	07
Heated Steering Wheel Button*	07
Power Windows, Window Lock & Central Door Lock	08
Electric/Folding Mirrors*	08
Power/Heated Outside Mirrors*	08
Engine Start/Stop Button*	08

### STEERING WHEEL CONTROLS

Tilt/Telescopic Steering Wheel	09
LCD Display Control	09
Headlights & High Beams	10
Turn Signals & Fog Lights*	10
Windshield/Rear Wipers & Washers*	11
<b>Bluetooth*</b> Wireless Technology	12
Audio Controls	14
Cruise Control	14
FlexSteer™ Steering Wheel Mode*	15

### AUDIO SYSTEM

Standard Audio System Overview*	16
Standard Audio System Operation*	17
UVO System*	19
Navigation System*	20

## CENTER PANEL

Digital Clock	21
AUX/USB/iPod* Port & Power Outlets	21
Automatic Climate Control*	22
Manual Climate Control*	23
3 <sup>rd</sup> Row Air Conditioning Control*	23
Automatic Gear Shift with Sportmatic* Shifting	24

## SEATING

Seat Warmers/Ventilated Seats*	25
Driver Position Memory System*	25
Power Adjustable Driver's Seat*	26
6-Way Manual Adjustable Driver's Seat*	26
Folding 2 <sup>nd</sup> & 3 <sup>rd</sup> Row Seats*	27
Front Active Headrests*	28
Front Seat Headrest Adjustment	28

## OTHER KEY FEATURES

Remote Keyless Entry (Folding Key)*	29
Double-Turn Lock/Unlock All*	29
Smart Key*	29
HomeLink® with Auto-Dimming Rearview Mirror*	30
Power Tailgate	31
Fuel Cap / Malfunction Indicator (Check Engine Light)	31
Manual Rear Hatch Release Button	31
Map/Room/Dome Lamps	32
Sunvisor	32
Sunroof Operation*	33
Roof Rack*	33
Rear-Camera Display*	34
Backup Warning System*	34

## SAFETY

Occupant Detection System (ODS) / PASSENGER AIR BAG OFF Indicator	35
Child Safety Locks	35
Safety Belts	36

## LEGAL DISCLAIMERS (See Back Inside Cover Page)

## MAINTENANCE (See Back Cover)



Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR codes with your smart phone/tablet (mobile devices) or by visiting the following website: [www.KuTechVideos.com/xm13/2013](http://www.KuTechVideos.com/xm13/2013). Continue reading for a more in-depth look at QR codes and for instructions on how to use them.

### What are QR Codes?

A QR Code is a square, 2-dimensional Bar Code that can be read by mobile devices loaded with an appropriate Bar Code or QR Code Reader app. The app reads the Bar Code image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos, and so much more.

### How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Kia One Click Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

### 🕒 QUICK TIPS

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code Scanning. Try another QR Code Reader app; not all apps are created equal
2. After scanning, a "connecting" message appears and then nothing happens or there's a "connection error" message. These messages typically indicate that your device is having trouble connecting to the Internet

**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

### 📱 QR CODE

#### Kia One Click Fuel Cap Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

### How to snap a QR code

 
1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an App Store or Marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
  - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
  - With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
  - For operation specifics, refer to the instructions that come with the QR Code Reader app




## Instrument Cluster Overview / Indicators & Warning Lights

- A** Tachometer
- D** Engine Temperature Gauge
- G** Odometer/Tripmeter\*
- B** Turn Signal Indicators
- E** Indicator & Warning Lights
- H** Trip Computer\*
- C** Speedometer
- F** Gear Shift Position Indicator\*
- I** Fuel Gauge

**REMINDER:** Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

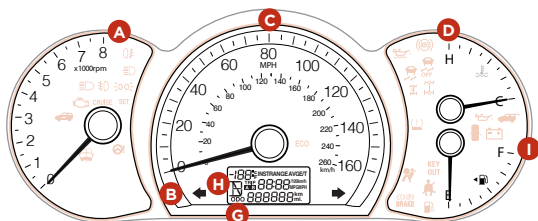

(Type A Cluster)

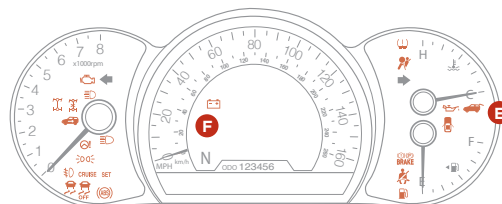 

(Type B Cluster)

- |  |  |  |  |  |   |
|--|--|--|--|--|---|
|  | Low Windshield Washer Warning Light  |  | Malfunction Indicator                        |  | Charging System Warning Light           |
|  | Light on Indicator   |  | Tailgate Open Warning Light                  |  | SET Cruise SET Indicator                |
|  | AWD System Warning Light*  |  | Front Fog Light Indicator                    |  | CRUISE Cruise Indicator                 |
|  | AWD LOCK Indicator*  |  | Seat Belt Warning Light                      |  | Engine Oil Pressure Warning Light       |
|  | ECOMINDER® Indicator   |  | Parking Brake & Brake Fluid Warning Light    |  | Low Fuel Level Warning Light            |
|  | Key Out Warning Light*   |  | Door Ajar Warning Light                      |  | (ABS) EBD System Warning Light          |
|  | Immobilizer Indicator*   |  | Air Bag Warning Light                        |  | Electronic Power Steering Warning Light |
|  | High Beam Indicator  |  | Anti-lock Braking System (ABS) Warning Light |  |   |
|  | Electronic Stability Control (ESC) Indicator*  |  |  |  |   |
|  | Electronic Stability Control (ESC) OFF Indicator*                                      |  |  |  |   |
|  | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |  |  |  |   |

### QUICK TIPS

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

 
 
## Trip Computer / Tripmeter\*

The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch is in the ON position.


To toggle through the different Trip Computer modes, press the TRIP button **A**.

To display the Tripmeter, press the TRIP button **A**, then select TRIP A or TRIP B. Press the RESET button **B** to rest the Tripmeter to zero.

(Type A Cluster)

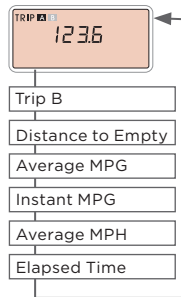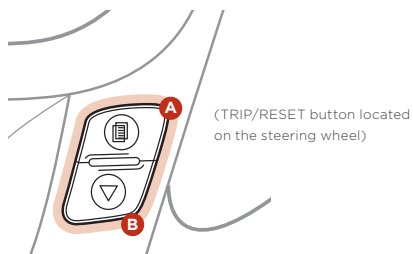

(Type A Cluster)

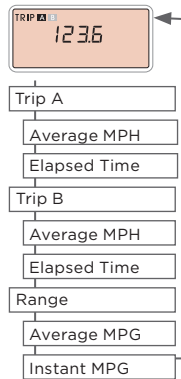 

(Type B Cluster)

**REMINDER:** Appearance of Tripmeter display may differ as equipped.

**REMINDER:** All stored driving information (except Odometer and Distance to Empty) is reset if the battery is disconnected.

## Fuel Efficiency

There are several factors that contribute to your vehicle's fuel efficiency, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel efficiency:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

**REMINDER:** Driving range will vary depending on your vehicle's fuel tank size, e.g. 12-gal. vs. 24-gal., even though the MPG may be the same.

*For more information on Fuel Economy, you can snap the QR code above to view a video or refer to the brochure "GETTING MORE OUT OF EVERY GALLON, FUEL-SAVING TIPS TO DRIVE BY" available at your local dealership.*

QR CODE

### Fuel Economy Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.





[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

## Tire Pressure Monitoring System (TPMS)



 The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator will illuminate if: one or more tires is significantly underinflated, the vehicle has a spare tire without TPMS or the outside temperature becomes significantly colder.

- Inflate tire(s) to specifications to turn off Low Tire Pressure Light  using an accurate **digital** tire pressure gauge. See front driver's door jamb for PSI specification
- The TPMS Malfunction Indicator  will illuminate after it blinks for approximately one minute when there is a problem with the TPMS. See dealer for service

## Active ECO System\*

Active ECO helps to improve fuel efficiency by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the Active ECO button . The button light will turn on and the green ECO indicator light  in the instrument cluster will illuminate (indicating that you are getting optimal fuel efficiency). The Active ECO System will remain on even when the engine is turned off and restarted.

To turn Active ECO OFF, press the button  again.

 
*For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.*

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance, safety, and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

**REMINDER:** Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

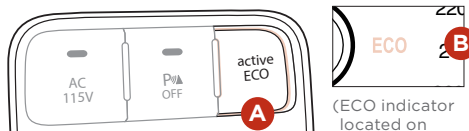

(Button panel located below Gear Shift)

(ECO indicator located on instrument cluster)

### QUICK TIPS

To help improve your fuel efficiency:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

### QR CODE

#### Kia Tire Pressure Monitoring System Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

#### Ecominder and Active ECO Video



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

## Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press ESC button **A** to turn ESC OFF/ON.

**REMINDER:** ESC is turned ON at vehicle start-up.

**REMINDER:** The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active.

 
## Blind Spot Detection (BSD) System\*

The system uses a radar sensor to help alert driver while driving. The BSD indicator on the button **B** will illuminate when turned ON.


The system will become active when the vehicle is traveling more than 19 mph and will alert the driver when another vehicle is detected by the radar sensor.

**1st stage alert:** When another vehicle is detected within the BSD System boundary, a yellow light will illuminate on the outside rearview mirrors.

**2nd stage alert:** When 1st stage alert is on and a turn signal is turned on or the hazard lights are on, an alarm will sound.

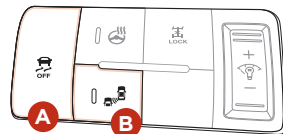

 (button panel located left of Steering Wheel)

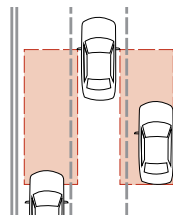

## Hillstart Assist Control (HAC)

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

**REMINDER:** The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

 
### Ⓢ QUICK TIPS

When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.


## Hood Release Lever and Latch

### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood

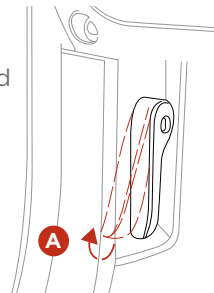

 2. In the front of the vehicle, lift the Hood slightly and pull the secondary Latch **B** inside of the Hood's center and lift the Hood

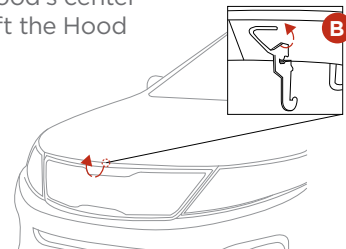

### Closing the Hood:

 
Lower the Hood about halfway and then press down to securely lock in place.

## Instrument Panel Dimmer\*

With parking lights/headlights ON, press button **D** (+) or (-) to adjust the brightness of the instrument panel illumination.

**REMINDER:** Door mood lamp is a fixed brightness and cannot be adjusted.

**REMINDER:** The Instrument Panel Dimmer does not adjust brightness on the Navigation System screen. Use Navigation setup to adjust brightness on the Navigation System.

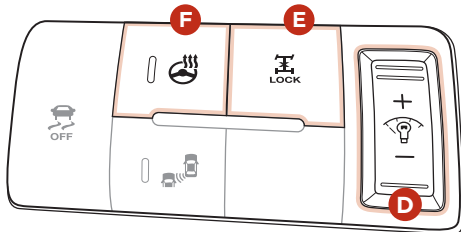

## AWD Transfer Mode\*

Press the AWD Mode selector button **E** to activate or deactivate AWD Lock mode.

### AWD Auto Mode:



The vehicle operates similar to conventional 2WD vehicles. If the system determines that there is a need for the AWD mode, the engine's driving power is distributed to all four wheels automatically without driver intervention.

### AWD Lock Mode:



Activates AWD for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to help provide optimal traction given the terrain.

 
## Heated Steering Wheel Button\*

Press **F** to turn ON/OFF Steering Wheel Heater, while the Engine Start/Stop Button is in the ON position. Steering Wheel Heater will turn OFF automatically in 30 minutes, or when button is pressed again to deactivate.

### Ⓢ QUICK TIPS

If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position.

## Power Windows, Window Lock & Central Door Lock

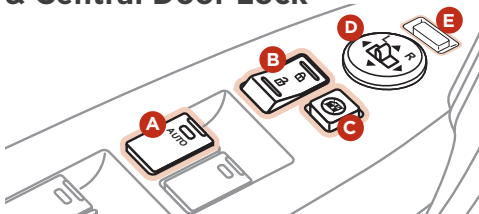

- A** Pull/Press to operate Driver's Window Auto Up/Down\*
- B** Press to Unlock/Lock All Doors
- C** Press to disable all Passenger Windows

**REMINDER:** When pressed **C**, window controls for the Passenger Windows are disabled, including from the driver's controls.

### Ⓢ QUICK TIPS

Auto Door Lock/Unlock\* will engage when gear shift is moved in to or out of the P (Park) position.

## Electric/Folding Mirrors\*

- D** Toggle left or right to select mirror. Then press arrows to adjust mirror position.
- To both fold and unfold the outside rearview mirror, press the folding mirror button **E** as pictured.

### Ⓢ QUICK TIPS

Mirrors do not automatically unfold when using Driver's Door Lock/Unlock button on door handle.

**REMINDER:** To automatically fold mirrors when exiting vehicle, press the LOCK button twice on the Smart Key.

**REMINDER:** To lock position of mirrors, toggle switch to the neutral (center) position.

## Power/Heated Outside Mirrors\*

Mirror heaters controlled with Rear Defroster.

## Engine Start/Stop Button\*

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in Park (or while in Neutral for Manual Gear Shift)



To turn the vehicle OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or in the vehicle.

**REMINDER:** In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds.

### Ⓢ QUICK TIPS

**To use electrical accessories:**

#### ACC position

- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **A**).

#### On position

- When already in the ACC position (Orange light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (Reddish Orange light **B**).
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (Reddish Orange light **B**).

**Keeping the vehicle in ACC or ON position too long can discharge the vehicle's battery**

### 📱 QR CODE

#### Kia Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



 
[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

## STEERING WHEEL CONTROLS

### Tilt/Telescopic Steering Wheel

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust **B** to desired angle and **C** distance.

When finished, pull the Lock-Release Lever **A** up to lock Steering Wheel in place.

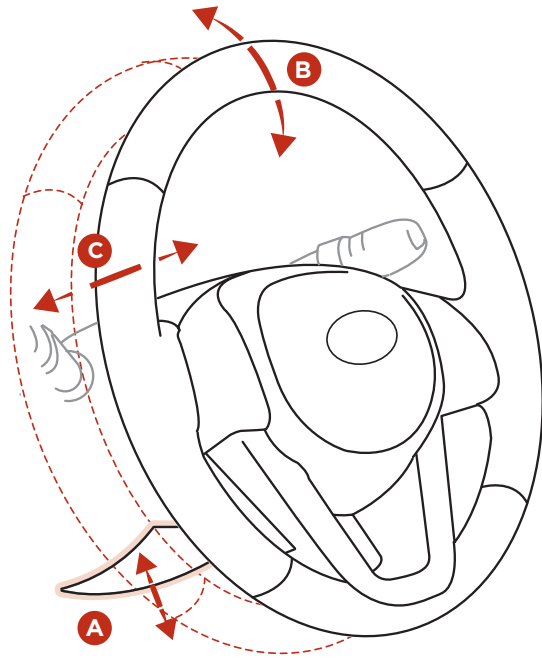

### LCD Display Control (Type B Instrument Cluster)

 
Press Mode/Select button **D** to change/select the different LCD Modes:

- Trip Computer
- User Settings
- Turn-by-Turn
- Service
- A/V\*



## Headlights & High Beams

**AUTO Light\* function** — When the light switch is in the AUTO light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

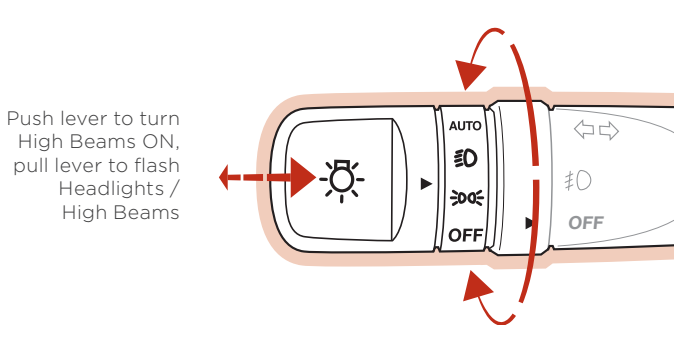


Rotate lever to change the Headlight function:

- AUTO\*** : Automatic Headlights position
- : Headlight position
- : Parking light position
- OFF** : OFF position

## Turn Signals & Fog Lights\*

 **One-Touch Lane Change Signal** is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

When the Right or Left Turn Signals cancel, they will blink 3 additional times.

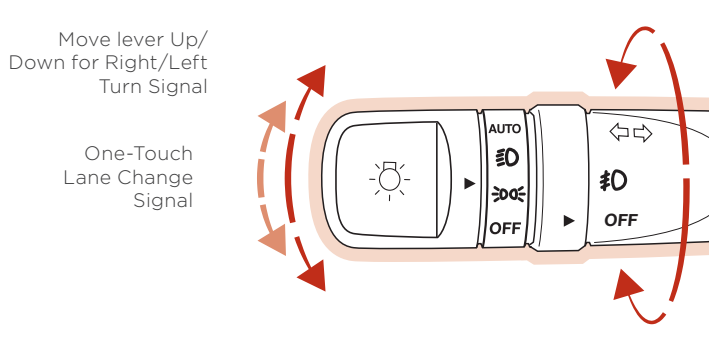

Rotate lever ring to turn Fog Lights ON/OFF


**REMINDER:** Headlights must be ON for Fog Light operation.



## Windshield/Rear Wipers & Washers\*

 Move lever Up/Down to change Wiper modes

Push to spray and wipe.

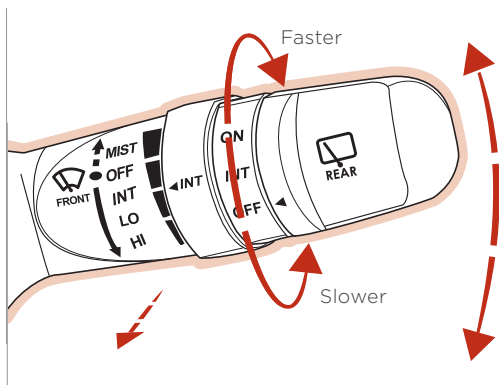

Rotate Rear Wiper switch to change Wiper modes.

**ON:** Normal wipe

**MIST:** Single wipe


**OFF:** Wiper off

**INT:** Intermittent wipe

**LO:** Slow wipe

**HI:** Fast wipe

## Bluetooth® Wireless Technology

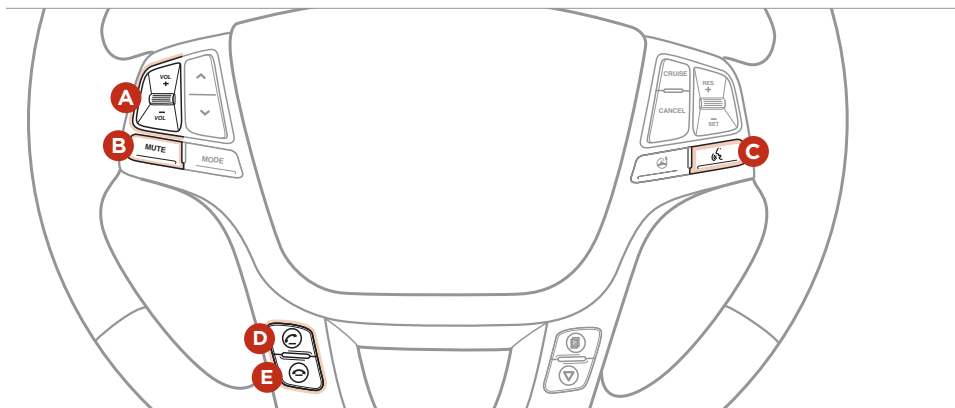 

- A Volume button:** Press up/down to raise/lower speaker volume
- B Mute button:** Press to mute the microphone during a call
- C Talk button:** Press to activate voice recognition / bring up menus / place calls with minimal voice command prompts from the system

### Ⓢ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

- D Receive Call button:** Press to receive/transfer calls. Press to place a call using vocal command prompts from the system, or to answer an incoming call
- E End Call button:** Press to end a call or cancel a function

### Ⓢ QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language may delete paired phones

For more information, refer to the *Digital Navigation Systems User's Guide* or the *UVO System User's Manual*.

For **Bluetooth®** Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section.

Refer to your Owner's Manual for more specific **Bluetooth®** Wireless Technology phone pairing and operation instructions.

**REMINDER:** Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

## Bluetooth® Wireless Technology

### Voice Recognition / Speaker Adaptation (Standard Audio System - Base Model Only)

The Voice Command feature in the Kia audio systems allows you to create speaker profiles in order to help optimize recognition accuracy.

1. Press End Call button **E** for 10 seconds
2. Say “Record Profile”, then say “Yes”
3. Speak the words shown on the Audio System display

**REMINDER:** System must have a phone paired in order to utilize the Speaker Adaptation feature.

### Ⓞ QUICK TIPS

- When using voice recognition, some phones may reverse the names in the contact list from {FIRST NAME} {LAST NAME} to {LAST NAME} {FIRST NAME}.
- When using the voice command feature, wait for the system BEEP before speaking the command.
- When using voice recognition to place a call, speak in a natural, moderate tone, with clear pronunciation.
- Open windows, sunroof or an A/C fan operating at high speeds can interfere with voice recognition
- The Contacts Sync (Phonebook Download) feature allows you to choose whether your phone contact list will transfer to your vehicle contacts each time your phone is connected or only at the initial phone pairing.
- If Contact Sync is set to ON, contacts stored in your phone will download each time your phone is connected. There may be a delay before the system is available to place a call.
- If Contact Sync set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download.
- If experiencing difficulty using voice recognition to place a call, be sure you are using the actual full contact name as entered in your phone book, not a casual or nickname (e.g., if name was entered as “Robert Smith”, say “Call Robert Smith”, not “Call Bob Smith”).

## Pairing a Phone

For instructions on how to pair a phone, refer to the audio system’s user’s guide.

## How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options on how to place a call:

### Standard Audio System

- **Option 1:** Press the Receive Call button **D** (system will prompt you through call process)
- **Option 2:** Press the Talk button **C** (system will beep to indicate it is ready for call placement). Then say the command “Call {name}” or “Dial {number}”

 
### UVO System

- **Option 1:** Press the Receive Call button **D** (displays the phone screen with number keypad)
- **Option 2:** Press the Talk button **C**. Then say the command “Call {name}” or “Dial {number}”

### Navigation System

- **Option 1:** Press the Receive Call button **D** (displays the phone screen with number keypad)
- **Option 2:** Press the Talk button **C**. Then say the command “Call Name” or “Dial Number”, followed by phone book name or number

## Audio Controls

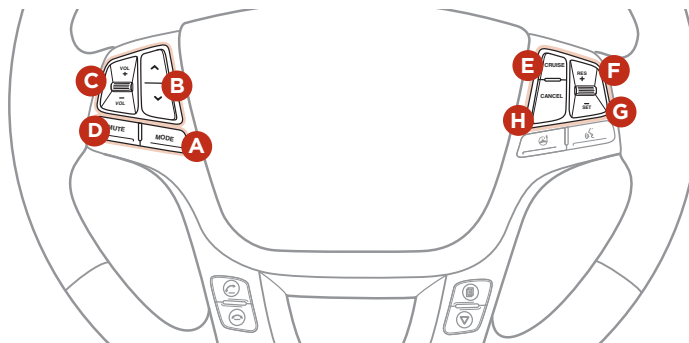

- A Audio Mode button:** Press to cycle through FM1-2/AM/SAT 1-3/CD/USB/AUX/iPod®
- B Seek/Preset button**
  - *Radio Mode:* Press to advance through Preset Stations. Press and hold to AUTO SEEK
  - *CD/ USB/iPod® Mode:* Press to move TRACK UP/DOWN. Press and hold to FF/REW
- C Volume button:** Press up/down to raise/lower volume
- D Mute button:** Press to mute all audio

### Ⓢ QUICK TIPS

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

**REMINDER:** Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

For further audio system operations, refer to pages 14, 16 – 21

## Cruise Control

- E Cruise Control ON/OFF button:** Press to turn the Cruise Control ON/OFF
- F Resume Cruising Speed button:** Press to Resume or increase Cruising Speed
- G Set Cruising Speed button:** Press to set or decrease Cruising Speed
- H Cruise Control Cancel button:** To cancel Cruise Control setting, do one of the following:
  - Press the brake pedal
  - Press the CANCEL button **H**

 
### Ⓢ QUICK TIPS

- Cruise Control is designed to function only above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting


### FlexSteer™ Steering Wheel Mode\*

Select the desired steering mode by toggling through the steering modes.


- Press the FlexSteer™ Steering Wheel Mode button **A** to display the steering mode on the LCD display (Type B instrument cluster).
- Then press the button again **A** within 4 seconds to switch modes.

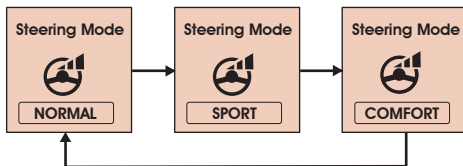

 **REMINDER:** Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

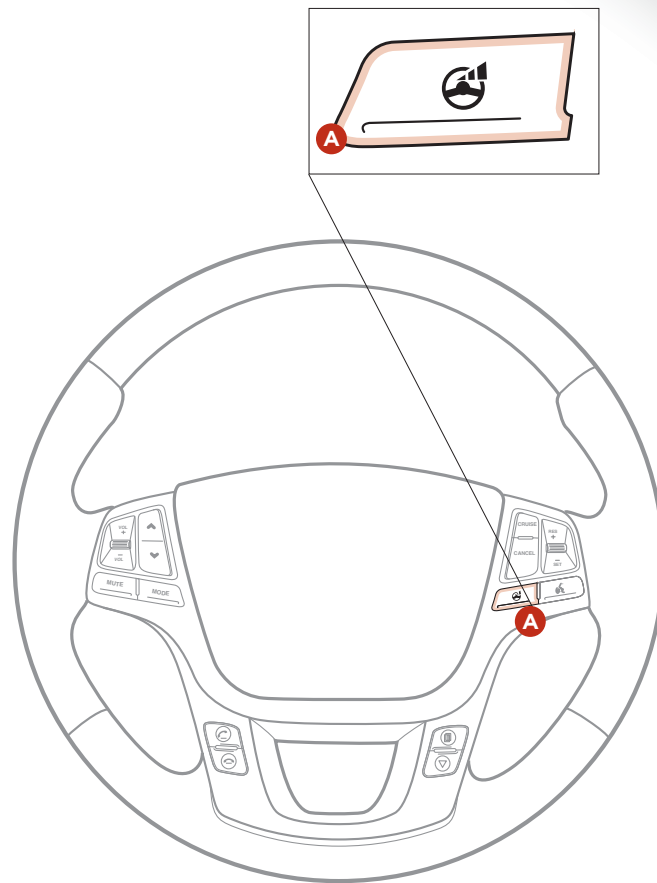

## Standard Audio System Overview — AM/FM/CD/MP3/Sirius Satellite Radio\*

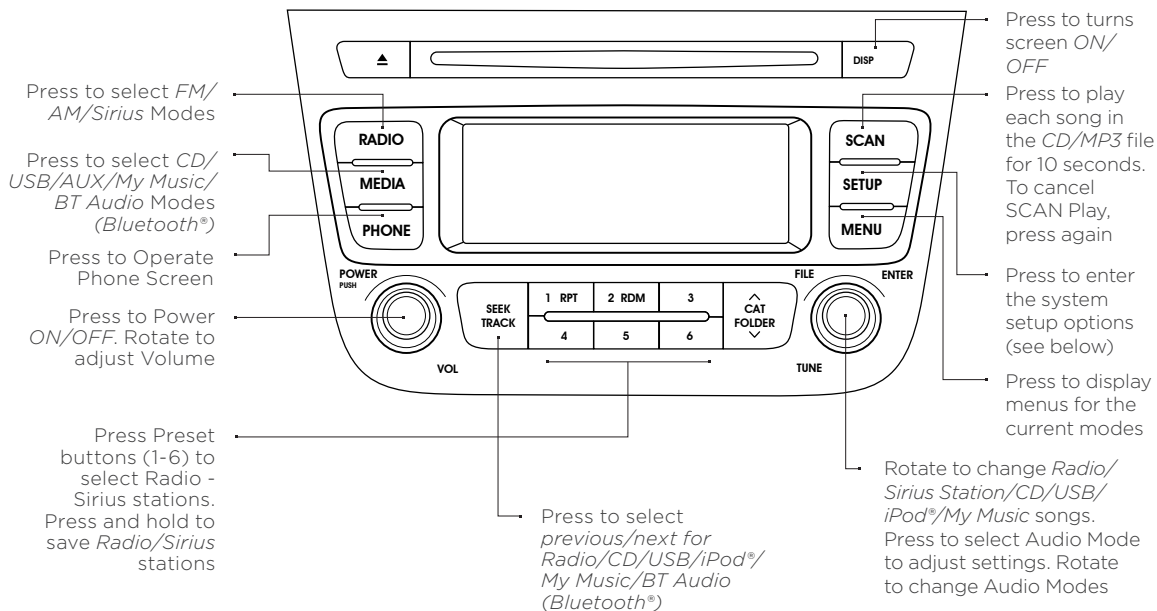 

**QR CODE**

**Standard Audio System Videos**

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[http://kutechvideos.com/audio/base\\_system](http://kutechvideos.com/audio/base_system)

**REMINDER:** Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

### Audio System Setup Options

 
Press the SETUP button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the TUNE Knob to adjust the audio option selected. Audio options may include the following:

- Display Settings
- Text Scroll
- Sound Settings
- Mode Pop-up
- Media Display
- System Settings

**REMINDER:** Sirius service not available in AK or HI.

For further audio system operations, refer to pages 14, 16 – 21.

**Standard Audio System Operation – CD/AUX/USB/iPod®/My Music\***

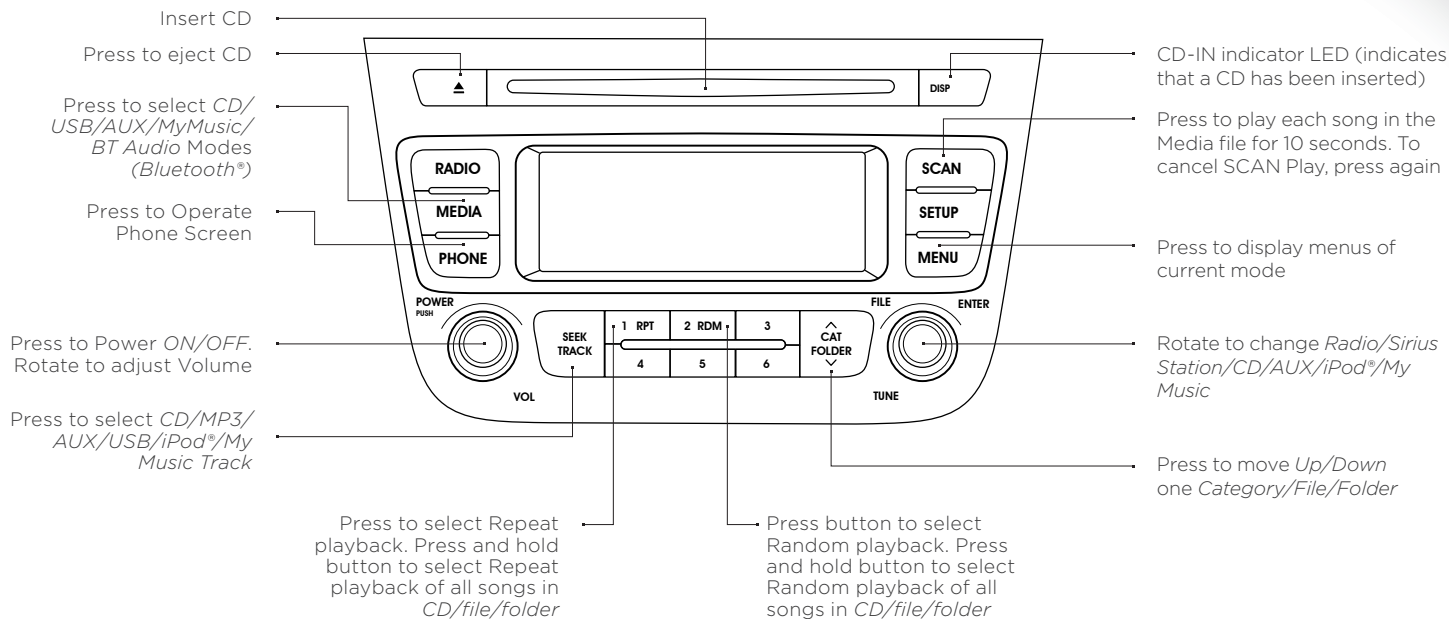


**REMINDER:** Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

**REMINDER:** Sirius service not available in AK or HI.

For further audio system operations, refer to pages 14, 16 - 21.

**Standard Audio System Operation — Sirius Satellite Radio\***

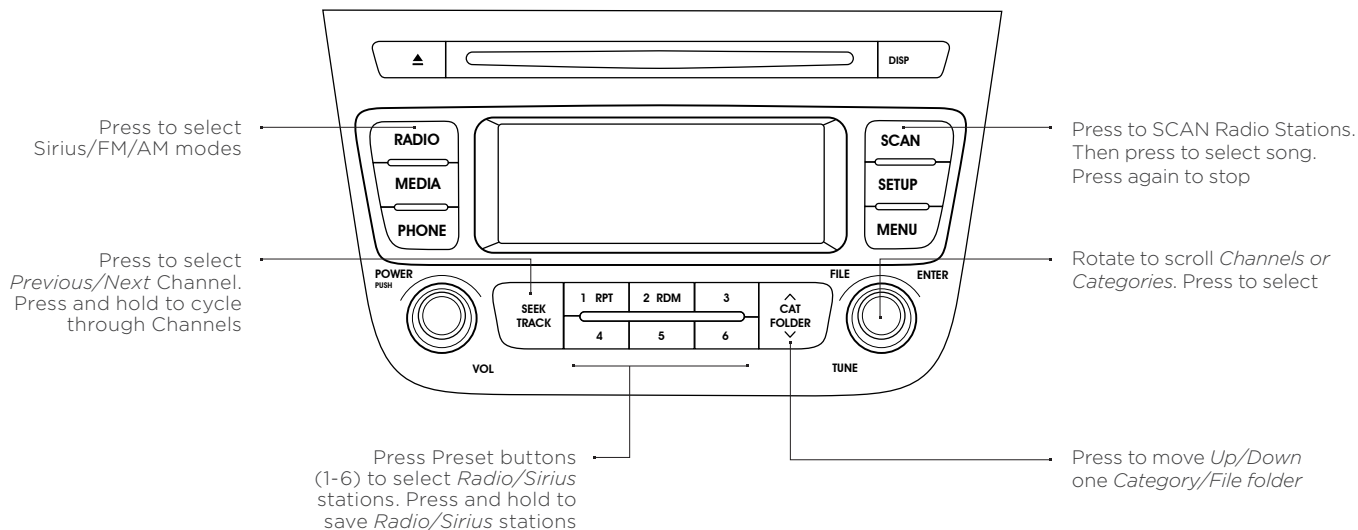 


**REMINDER:** Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

**REMINDER:** Sirius service not available in AK or HI.

*For further audio system operations, refer to pages 14, 16 - 21.*



## UVO System\*

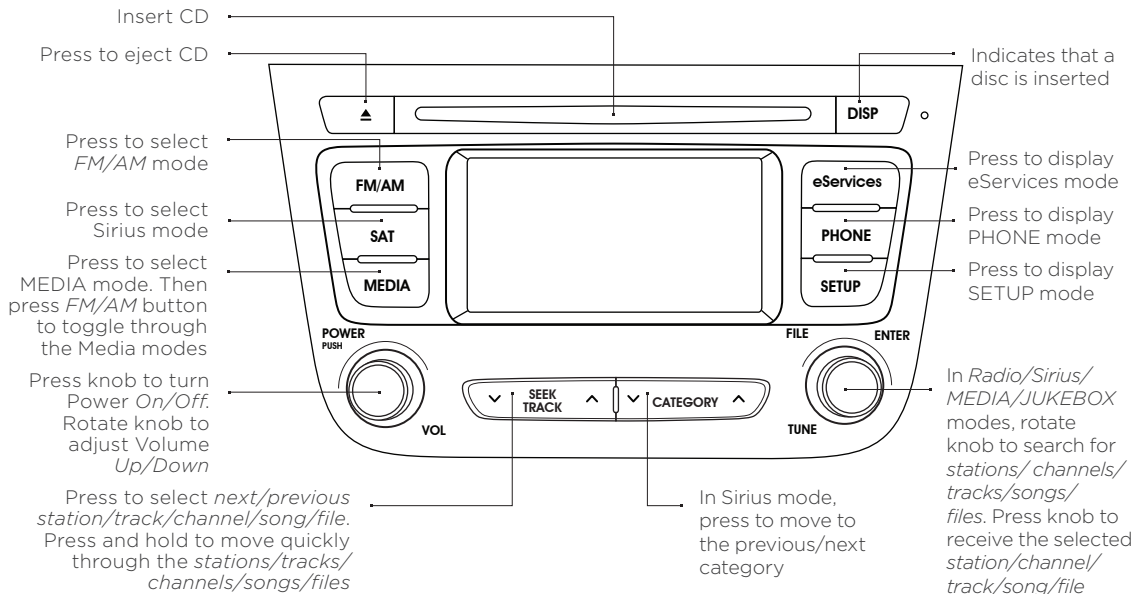 

### QR CODE

#### UVO System Videos

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[http://kutechvideos.com/audio/UVO\\_eServices](http://kutechvideos.com/audio/UVO_eServices)

**REMINDER:** Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

 
### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Only MP3 or WMA files may be played or copied to Jukebox. Commercial CDs or CDs with a CDDA audio format (compact disc digital audio) cannot be copied to Jukebox
- At any time you can interrupt UVO System Command Feedback by pressing the TALK button
- Prolonged use of the UVO system in ACC mode may drain the vehicle's battery

**REMINDER:** SiriusXM service not available in AK or HI.

For further UVO System information, refer to the UVO System User's Manual.

## Navigation System with AM/FM/CD/MP3/Sirius\*

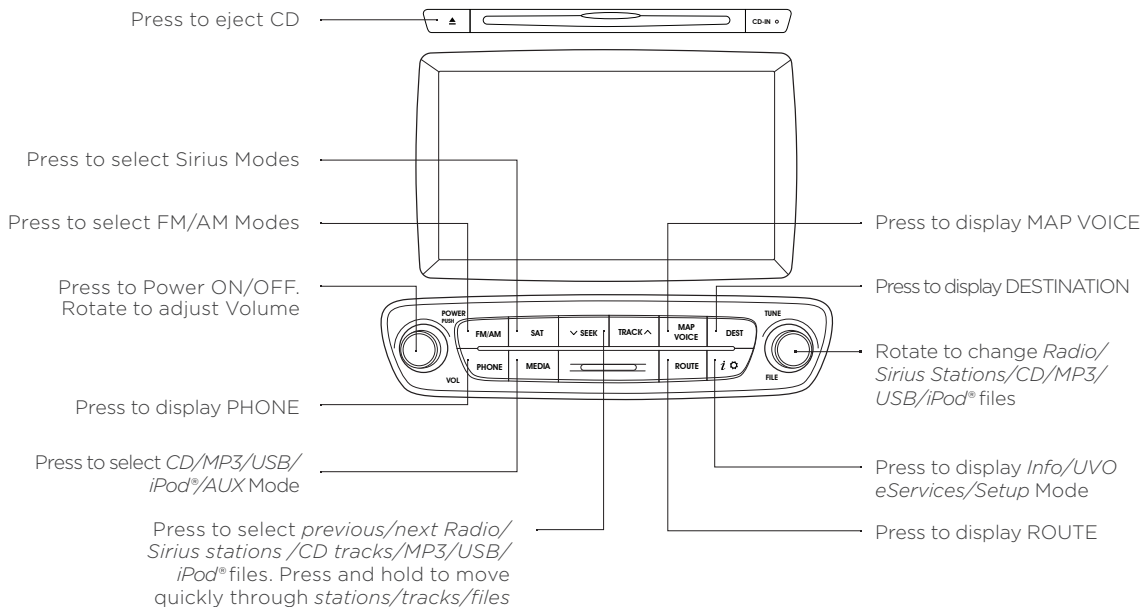

### QR CODE

#### Navigation Audio System Videos

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[http://kutechvideos.com/audio/nav\\_eServices](http://kutechvideos.com/audio/nav_eServices)

#### ⓘ QUICK TIPS

Prolonged use of the Navigation System in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation System should be operated with the engine running to prevent battery discharge.

#### ⓘ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

**REMINDER:** Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

**REMINDER:** Sirius service not available in AK or HI.

For further navigation system operation, refer to the Digital Navigation System User's Manual.

## CENTER PANEL

### Digital Clock



#### Center Panel Clock Setup:

Press the **H** button **A** to advance the time by one hour.  
Press the **M** button **B** to advance the time by one minute.

#### Ⓢ QUICK TIPS

Press and hold both for more than 5 seconds to switch from 12 to 24 hour formats

#### Navigation System Clock Setup:

 
Press the Info/Settings key on the Audio Control Unit. Then press the on-screen Setup button and select the Clock icon. Then use the on-screen buttons to navigate through setup.

#### Ⓢ QUICK TIPS


Press the DONE button\* on the Navigation screen to ensure changes are saved.

**REMINDER:** The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly.

### AUX/USB/iPod® Port & Power Outlets

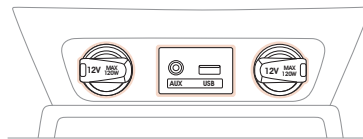

(Driver/Front Passenger)

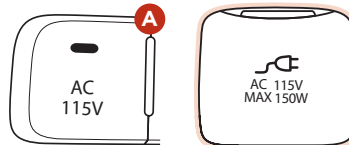 

(2nd Row AC Power Outlet and ON/OFF button)

#### 📱 QR CODE

#### Kia USB Port

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

Press button **A** to disable 2nd Row Power Outlet

 
#### Ⓢ QUICK TIPS

#### • Media Device Power Cable — Standard Audio, UVO and Navigation Systems

The iPod® connector cable provided with your iPod® unit is used to normally support operation of an iPod®, detecting the device and recharging the battery with the UVO system

- The power outlets are inactive when ignition is in the OFF position

## Automatic Climate Control\*

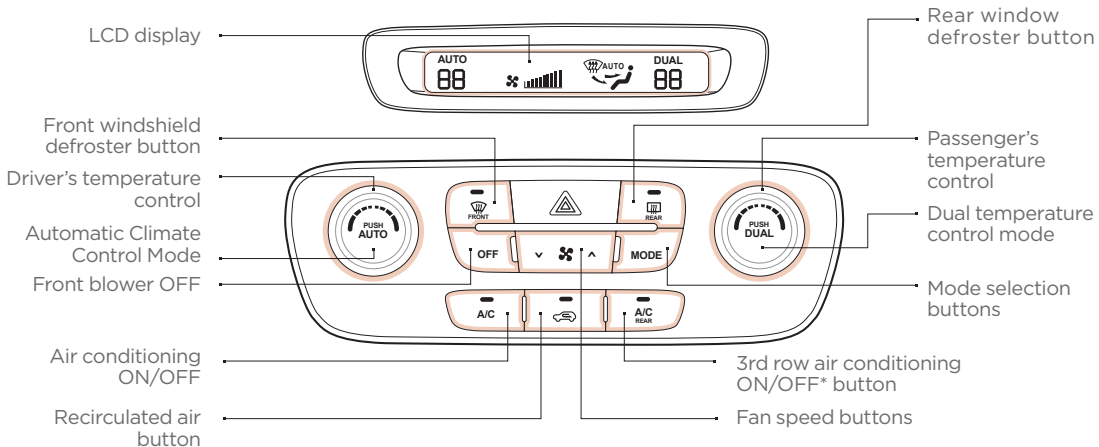

### Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation
2. Press **MODE** buttons to control which vents air flows through
3. Press **DUAL** to select Dual Temperature Control Operation

### Air Flow Modes

To select Air Flow Modes, rotate the Mode selection knob:



Face-Level



Floor-Level



Defrost-Level



Bi-Level



 
Floor/Defrost-Level

### QUICK TIPS

- The A/C Rear button indicator will not illuminate unless the 3rd Row Air Conditioning Fan Speed switch is turned ON (see page 23, 3rd Row Air Conditioning Control).
- Keep inside glass as clean as possible to reduce window fogging
- Defrost Mode activates A/C and opens Fresh Air Vent
- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically engage at any time to reach desired temperature and reduce humidity

**REMINDER:** Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

## Manual Climate Control\*

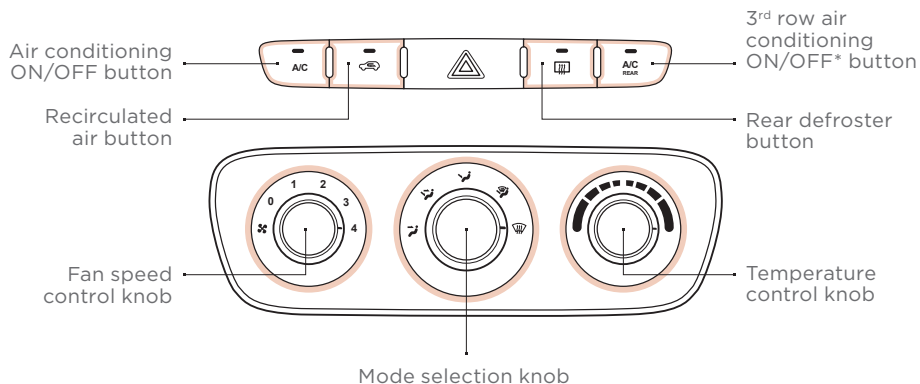

### Defrost Outside Windshield:


1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Select **Defrost** mode

### Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Select **Defrost** mode

 
**REMINDER:** Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

### Ⓢ QUICK TIPS


- The 3<sup>rd</sup> Row A/C ON/OFF button indicator will not illuminate unless the 3<sup>rd</sup> Row Air Fan Speed switch **A** is turned ON
- Defrost  Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air

## Air Flow Modes

To select Air Flow Modes, rotate the Mode selection knob:

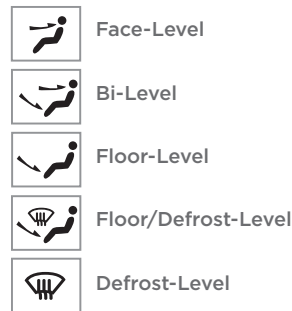

## 3<sup>rd</sup> Row Air Conditioning Control\*

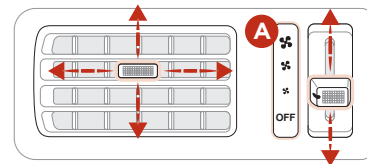 

### To turn ON the 3<sup>rd</sup> Row Air Conditioning Control:

1. Press the 3<sup>rd</sup> Row A/C button
2. Set the fan speed **A** to the desired position.

**REMINDER:** Included in Manual & Automatic Climate Control Systems.

**REMINDER:** Your Manual Climate Control system may differ from those in the illustration. See your Owner's Manual for more details.

## Automatic Gear Shift with Sportmatic® Shifting

**P:** Park

**R:** Reverse

**N:** Neutral

 
**D:** Drive

**[+]:** Sport Mode Upshift

**[-]:** Sport Mode Downshift

**Sport Mode:** To enter Sport Mode, move shift lever from **D** to left gate

**Sport Mode Shifting:** Move shift lever up **[+]** to Upshift or down **[-]** to Downshift

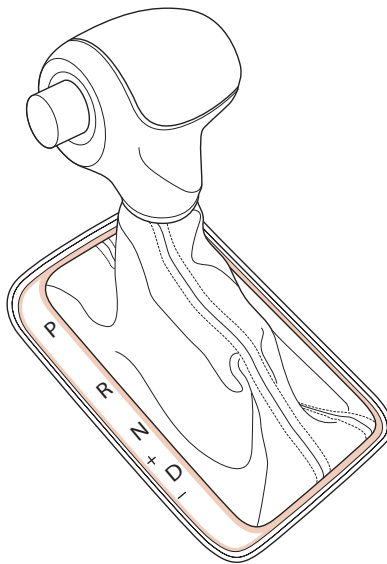

QR CODE

### Kia Sportmatic® Shifting Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



 
[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

QUICK TIPS

- Press brake pedal and depress release button to move gear shift to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected


## Seat Warmers/Ventilated Seats\*

### Seat Warmers only\*

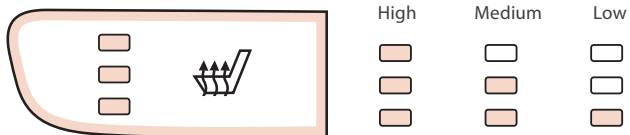

Press button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press button a third time for low setting (1 LED lit) and again to turn OFF.

### Seat Warmers/Ventilated Seats\*

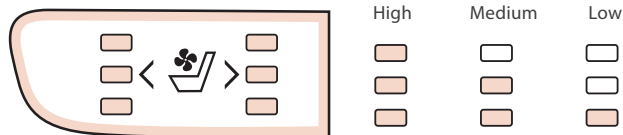 

Ventilating  
(Blue LED)      Warming  
(Yellow LED)


**Seat Warmers** – Press right side of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

**Ventilated Seats** – Press left side of button once for high setting (3 LEDs lit). Press twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

### Ⓢ QUICK TIPS

 With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature.

## Driver Position Memory System\*




To store a seating position into memory, first place the gear shifter into P (Park) while the ignition switch is on. Then:


1. Adjust the driver's seat and outside rearview mirror.
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored

## Power Adjustable Driver's Seat\*

 
Move/Press controls to adjust Seat forward/backward, Seat Cushion, Seatback or Lumbar

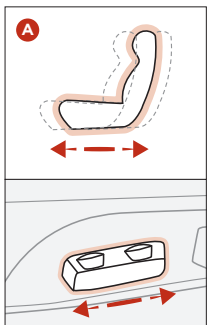


Seat forward/  
backward

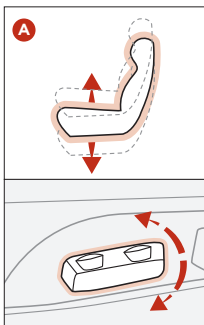 


Seat Cushion

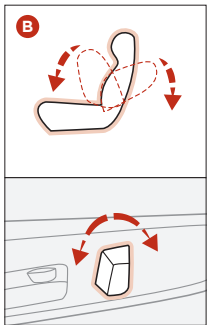 

Seatback

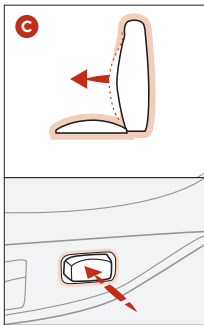 

Lumbar

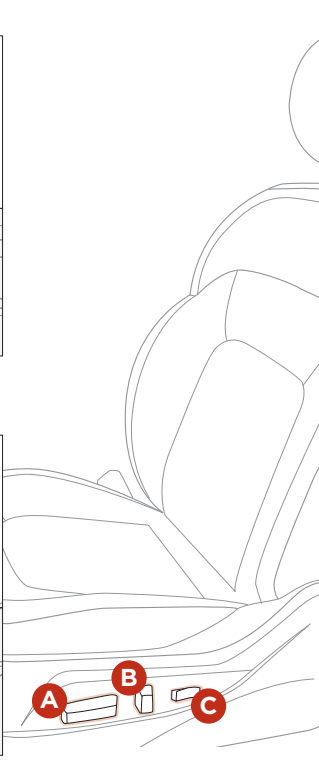 


## 6-Way Manual Adjustable Driver's Seat\*

Pull lever **A** to slide Seat forward/backward

Pull/press lever **B** to adjust Seat Height

Pull lever **C** to adjust Seatback Recline

 Press button **D** to adjust Lumbar Support\*

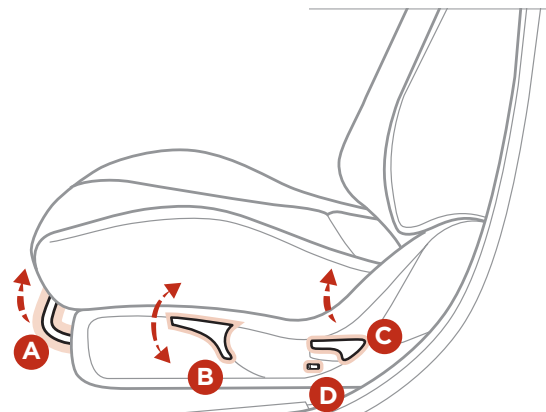




## Folding 2<sup>nd</sup> & 3<sup>rd</sup> Row Seats\*

### 2nd Row Seat — Folding Flat:

 1. Insert the Rear Seat Belt strap into the guide\* next to the Rear Seatback
2. Set the Front Seatback to the most upright position and lower the rear seat headrests to the lowest position
3. Pull the Seatback Folding Lever **A**
4. Fold the Rear Seatback flat **B**

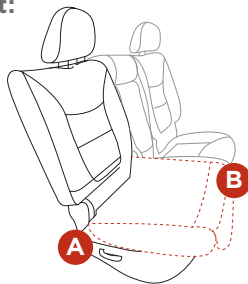


#### Ⓢ QUICK TIPS

It may be necessary to slide the Front Seat forward and to slide the Rear Seatback backward to fully lower seats

### 2nd Row Seat — Walk-In Fold\*:

 1. Insert the Rear Seat Belt strap into the guide\* next to the Rear Seatback
2. Lift the Walk-In Lever **C** on the Rear Seatback and slide the seat forward to the farthest position

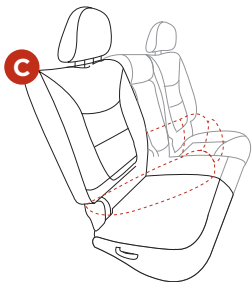

#### Ⓢ QUICK TIPS

The right side of the 2nd Row Seat has more clearance to access the 3rd Row Seat\*

### 2nd Row Seat - Unfolding:

 
1. Pull Seatback to an upright position. Then lift Seatback Folding Lever **A** again to adjust Seatback for use

#### Ⓢ QUICK TIPS

When returning Seat to its original position, ensure that it's locked into position, unfold the Headrest, and return Seatbelt to its proper position.

### 3rd Row Seat\* Folding:

1. Insert the Rear Seat Belt buckle into the pocket\* between the Rear Seatback and Seat Cushion then insert the Seat Belt into the guide
2. Set the 2nd Row Seatback to the upright position
3. Pull the Seatback folding strap **D** and fold Seat forward

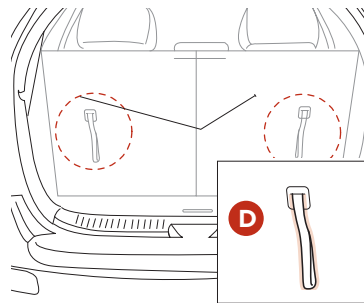


#### Ⓢ QUICK TIPS

It may be necessary to slide the 2nd Row Seat forward to fully lower 3rd Row Seats

## Front Active Headrests\*

 Moves forward in the event of certain impact collisions to help protect the driver's and front passenger's heads from moving backward, thus helping to minimize neck injuries.

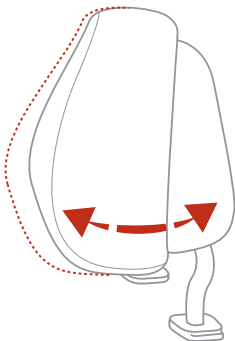


## Front Seat Headrest Adjustment

**To adjust headrest forward:** Pull bottom of headrest forward at an angle

**To adjust headrest back:** Push bottom of headrest backward at an angle


**To raise headrest:** Pull headrest up

 **To lower headrest:** Press lock **A**, then press the headrest down

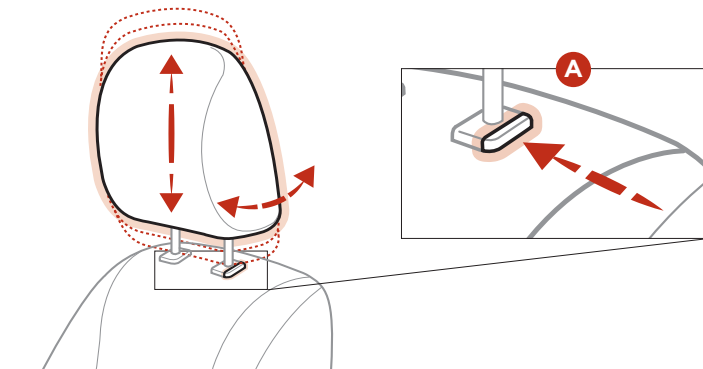

## Remote Keyless Entry (Folding Key)\*

 
- A** Press to lock All Doors
- B** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch, and manually open
- C** Press and hold for more than 1 second to unlock Rear Hatch and manually open
- D** Press and hold more than a half second for Panic Alarm. To turn OFF Alarm, press any button

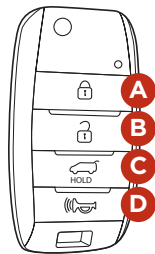

**REMINDER:** Remote button configuration may vary depending on vehicle options.

## Double-Turn Lock / Unlock All\* (Only available with Power Door Locks)

 - Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

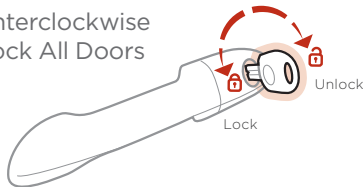

## Smart Key\*

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice within 4 seconds to unlock All Doors
- C Manual Rear Hatch:** Press and hold to unlock Rear Hatch and manually open

**REMINDER:** The Rear Hatch does not automatically open when the C button is pressed.

**REMINDER:** The Rear Hatch unlocks when the Smart Key fob is within close proximity of the vehicle.

- C Power Tailgate\*:** Press and hold for Power Tailgate to open automatically. Press again to stop at any time. Press again to automatically close
- D** Press and hold more than a half second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key

## Mechanical Key **F**:

- Use to unlock driver's door
- Use to enable/disable Child Safety Locks (page 35)
- Use to lock glove box

## Driver's Door Lock/Unlock button **G**:

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors



## QR CODE

### Kia Engine Stop/Start Button and Smart Key

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

 
## QUICK TIPS

The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately.

**REMINDER:** Remote button configuration may vary depending on vehicle options.



## HomeLink® with Auto-Dimming Rearview Mirror\*

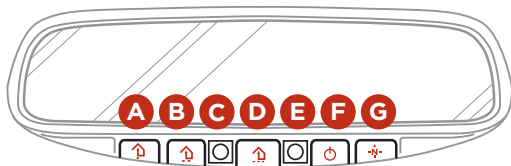

- A** HomeLink® button
- B** HomeLink® button
- C** Indicator light
- D** HomeLink® button
- E** Glare detection sensor
- F** Automatic dimming ON/OFF
- G** Compass control button

The Auto-Dimming Rearview Mirror is designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location.

To turn automatic dimming ON or OFF, press button **F**

**REMINDER:** Mirror indicator light **C** will illuminate when automatic dimming is ON.

### QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*

## How to Sync Transmitter with HomeLink\*\*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **B** **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

## Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

## Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

 
## Power Tailgate\*

### Inside the Vehicle:

Press the Power Tailgate Open/Close button **A** to automatically open/close the tailgate

Press the Power Tailgate OFF button **B** to disable

**REMINDER:** If Power Tailgate button is pressed OFF, the Power Tailgate button on the Smart Key will be disabled

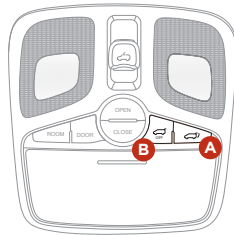


### Outside the Vehicle:

To open Power Tailgate automatically, press the Rear Hatch Release button **C**


**REMINDER:** Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Tailgate.


### Smart Key:

 To open the Power Tailgate, press and hold the tailgate button until the tailgate begins opening. Press again to close.

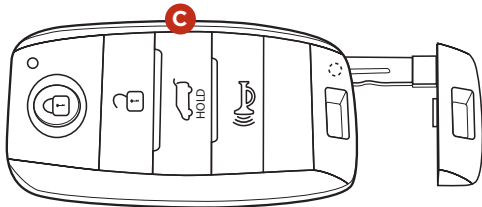

## Fuel Cap/Malfunction Indicator (Check Engine Light)

 
Tighten for *ONE CLICK* to prevent Malfunction Indicator  from illuminating.

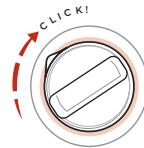

**REMINDER:** The Fuel Filler Door Release button is located on the lower part of the driver's door panel.

## Manual Rear Hatch Release Button

 Located underneath the Rear Hatch. With Rear Hatch unlocked, press the Rear Hatch Release button **C** and pull the Rear Hatch up by the handle to open.

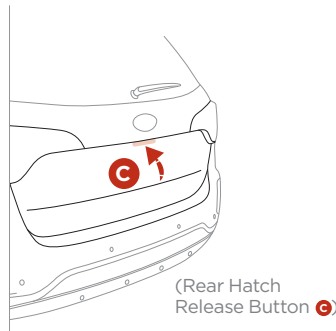

## QR CODE

### Kia One Click Fuel Cap Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

## QUICK TIPS

- The Rear Hatch must be unlocked before it can be opened by the Rear Hatch Release Button
- The Rear Hatch unlocks automatically and then can be opened manually when the Smart Key fob\* is within close proximity to the vehicle

### Map/Room/Dome Lamps

#### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the ignition switch or the Engine System Start/Stop button\* is OFF.

#### Map/Personal Lamp

Press the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

The Map Lamp turns ON when any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately.

 
**ROOM button B** - When pressed, the Map and Room Lamps remain ON until pressed again to turn OFF.

**DOOR button C** - When pressed and a door is opened, or doors are unlocked from the key fob, the Map and Room Lamps turn ON for approximately 30 seconds.

#### Dome/Room Lamp


**DOOR button D** (Type A only)- When the DOOR button is pressed, the lamp turns ON when any door is opened.

**ON button E** - When the ON button is pressed, the lamp stays on continuously. Press again to turn OFF.

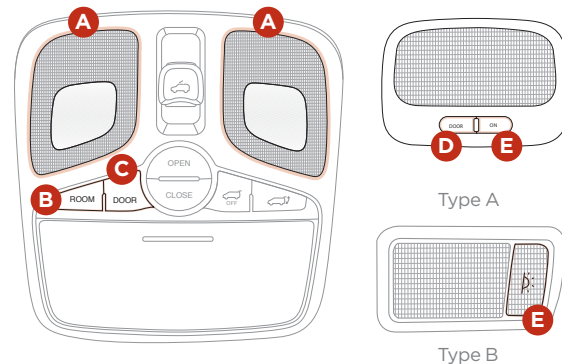

### Sunvisor

 Use the Sunvisor to shield direct light through the front or side windows. To use the Sunvisor extension, pull the extension out and adjust as needed.

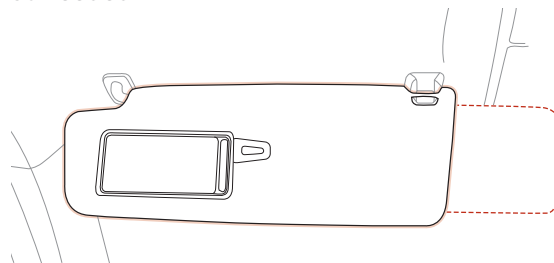

**REMINDER:** Sunvisor may not shield all direct light.

**REMINDER:** The Sunvisor may impair visibility if not adjusted properly.

#### QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

## Sunroof Operation\*

The sunroof and sunshade operation is controlled through a multidirectional switch/lever and the ignition needs to be in the ON position to operate the sunroof/sunshade.

### Slide the Sunshade and Sunroof:

- **Auto Open:** Slide lever **A** backward and release.
- **Auto Close:** Slide the lever **A** forward and release.

### Slide the Sunshade:

- **Open:** Press the OPEN button **B**.
- **Close:** Press the CLOSE button **B**.

### Slide the Sunroof (with sunshade open):

- **Open:** Slide the lever **A** backward and release.
- **Close:** Slide the lever **A** forward or pull the lever downward.

 
### Tilt the Sunroof:

- **Raise:** Push lever **A** upward.
- **Lower:** Pull lever **A** downward.
- **Auto Close:** Slide the lever **A** forward

#### Ⓢ QUICK TIPS

- To stop the Sunroof/Sunshade at any position, push or pull the sunroof control lever in any direction

**REMINDER:** Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

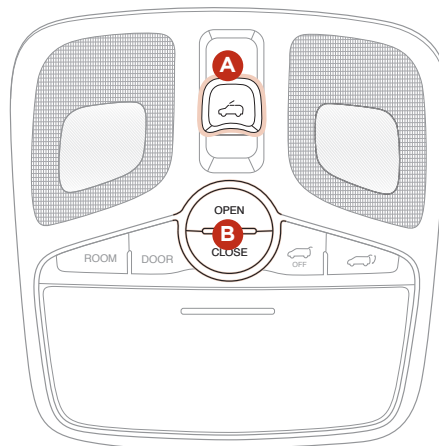

## Roof Rack\*

Crossbars can be attached to the Roof Rack to carry cargo. See your local Kia dealership to order crossbars. For more information on Roof Rack, please see the Owner's Manual.

#### Ⓢ QUICK TIPS

Be sure to position cargo to distribute weight evenly and in such a way to not interfere with the Sunroof operation.

**REMINDER:** When carrying cargo on the roof, avoid operating the Sunroof and ensure that cargo is secured safely.

**REMINDER:** The maximum evenly distributed weight of the cargo loaded on the Sorento Roof Rack cannot exceed 220lbs.

### Rear-Camera Display\*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation\* or UVO\* screen while the vehicle is in Reverse.

#### The Rear-Camera Display activates when the:

1. Engine Start/Stop\* button is in the ON position (Reddish Orange Light)
2. Gear Shift Lever is in the R (Reverse) position



 
**REMINDER:** The Rear-Camera Display and Back-Up Warning System are not substitutes for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display and Back-Up Warning System may not detect every object behind the vehicle.

**REMINDER: UVO System** - While camera is active, only the volume controls on the Audio System can be operated.

**REMINDER: Navigation System** - While camera is active, only the Audio System can be operated on the Steering Wheel and Audio Control Unit. Navigation features are disabled.

### Backup Warning System\*

The Backup Warning System is not a safety device. The Backup Warning System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, and the Backup Warning System ON/OFF button is pressed ON, the system is activated.

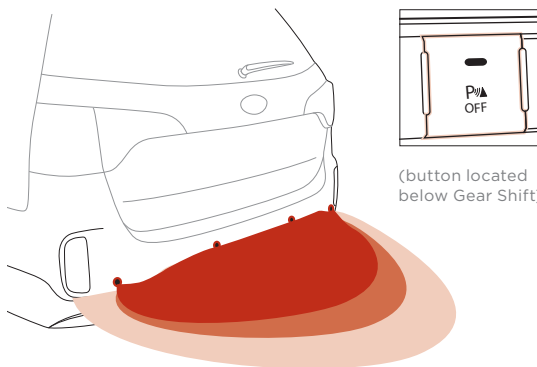

(button located below Gear Shift)

**REMINDER:** If the vehicle is moving at speeds over 3 mph (5 kmh), the system may not activate correctly.

**REMINDER:** When more than two objects are sensed at the same time, the closest one will be recognized first.

#### ⓘ QUICK TIPS

Press the Backup Warning System OFF button to deactivate the system

#### 📱 QR CODE

#### Sorento Rear Parking Assist System Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)



 
## Occupant Detection System (ODS)/ PASSENGER AIR BAG OFF Indicator

ODS detects the presence of the front passenger.

Depending on the situation and type of accident, the system may:


- Deploy air bag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the air bag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.


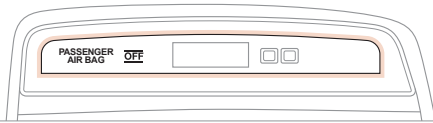


*Please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System" for more detailed information regarding your vehicle's air bags.*

## Child Safety Locks

  Located on the rear edge of the rear passenger doors, push the Child Safety Lock to the lock position  to disable the inner door handles from opening the rear doors.

**REMINDER:** Child Safety Lock is located on rear passenger's door jamb.

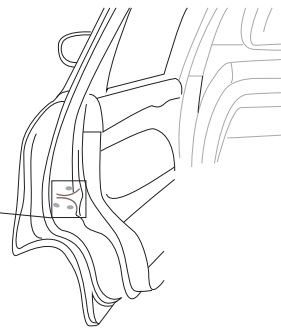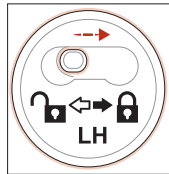

### QR CODE

#### Kia Occupant Detection System Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.

 


[www.KuTechVideos.com/xm14/2014](http://www.KuTechVideos.com/xm14/2014)

## Safety Belts


To properly fasten your safety belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

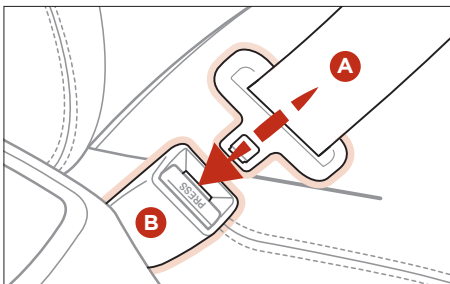

## Safety Belt Retractor Inertial Locks

 - Inertial locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation, for freedom of movement and increased comfort
- During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, safety belt retractors will automatically lock the belts

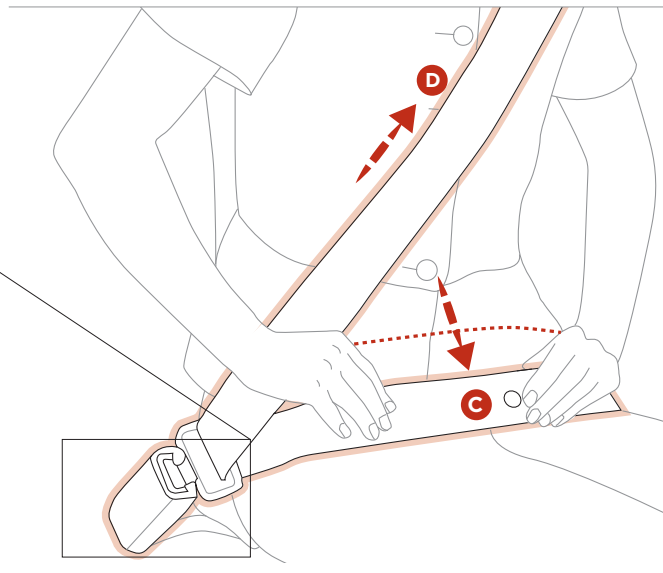

### Ⓢ QUICK TIPS

The Safety Belt warning chime operates for driver's seat only.

**REMINDER:** For maximum protection, always wear your seat belt.

*For more detailed information regarding your vehicle's safety belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."*

---

---

---

---

---

---

## Legal Disclaimers

UVO eServices: Warning - Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

Blind Spot Detection (BSD) System: The blind spot warning system is not a substitute for proper and safe lane changing procedures. Always drive safely and use caution when changing lanes. The blind spot warning may not detect every object alongside the vehicle.

Backup Warning System / Rear Camera Display: The Rear-Camera Display and Back-Up Warning System are not substitutes for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display and Back-Up Warning System may not detect every object behind the vehicle.

FlexSteer® Steering Wheel Mode: Only change steering wheel modes when safe and legal to do so.

Seatbelts: For maximum protection, always wear your seat belt.

Navigation: GPS maps and directions are for information purposes only and Kia does not make any warranties about the accuracy of that information. Kia is not responsible for loss or delay resulting from the use of the navigation system.

Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

At launch, the Apple iPhone® will be the only UVO eServices compatible device. iPhone® is a registered trademark of Apple Inc. Apple iOS 6 compatibility expected early 2013. Additional compatible devices expected late 2013.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. **If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel.** See our Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See [www.siriusxm.com/traffic](http://www.siriusxm.com/traffic) for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Microsoft® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

HD Radio® and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.

HomeLink® is a registered trademark of Johnson Controls, Inc.



# NORMAL MAINTENANCE SCHEDULE

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

INTERVAL MAINTENANCE CHART											
7,500 miles (or 6 months)	A	B									
15,000 miles (or 12 months)	A	B	C								
22,500 miles (or 18 months)	A										
30,000 miles (or 24 months)	A		C	D	E						
37,500 miles (or 30 months)	A					F					
45,000 miles (or 36 months)	A	B	C								
52,500 miles (or 42 months)	A			D							
60,000 miles (or 48 months)	A	B	C	D	E		G	H	I		
67,500 miles (or 54 months)	A	B									
75,000 miles (or 60 months)	A	B	C			F	G				
82,500 miles (or 66 months)	A	B									
90,000 miles (or 72 months)	A		C	D	E		G		I		
97,500 miles (or 78 months)	A	B									
105,000 miles (or 84 months)	A	B	C				G			J	
112,500 miles (or 90 months)	A	B				F					
120,000 miles (or 96 months)	A		C	D	E		G	H	I		

**A Inspect\*** — Battery condition, vacuum hose  
**Change** — Engine oil and oil filter  
**Perform** — Rotate tires; add fuel additive<sup>1</sup>

**B Inspect\*** — Air cleaner filter

**C Inspect\*** — Air conditioner refrigerant and performance\*\*, brake lines, hoses and connections; drive shaft and boots, exhaust pipe and muffler, front/rear disc brakes and pads\*\*, propeller shaft (AWD)\*\*, front suspension ball joints, steering operation and linkage and suspension mounting bolts,  
**Replace** — climate control air filter\*\*

**D Inspect\*** — Brake fluid and parking brake\*\*

**E Inspect\*** — Fuel filter<sup>2</sup> and fuel tank air filter<sup>2</sup>; vapor hose and fuel filler cap, fuel tank, cap, lines and hoses

**Replace** — Air cleaner filter, climate control air filter

**F Inspect\*** — Rear axle oil and transfer case oil (AWD)\*\*

**G Replace** — Drive belt<sup>3</sup>

**H Inspect** — Valve clearance<sup>4</sup>

**I Replace** — Engine coolant<sup>5</sup>

**J Replace** — Spark plugs (iridium coated)

\* and, if necessary, adjust, clean, replace or correct.

\*\* If equipped.

<sup>1</sup> If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

<sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free, but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem, etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

<sup>3</sup> The drive belt should be replaced when cracks occur or tension is reduced excessively.

Inspect "Water Pump" when replacing the drive belt or timing belt.

<sup>4</sup> Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

<sup>5</sup> When replacing coolant, use only a qualified coolant additive for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

Check tire pressure at least once a month or more.

See your owner's manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed. Call 1-800-333-4KIA (4542) for roadside assistance.



# SORENTO CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_ Mileage: \_\_\_\_\_

 
Dealership Name: \_\_\_\_\_ Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

## BEFORE DELIVERY


- Confirm "Good Battery" with Kia GR8-1299 battery tester
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Remote Keyless Entry and Smart Key\* lock/unlock
- Ensure floormats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio user's guides)

## KEY FEATURE WALKTHROUGH


- Air Conditioning / Climate Control - pages 22-23 - Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

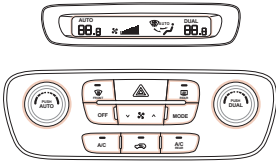

Automatic\*

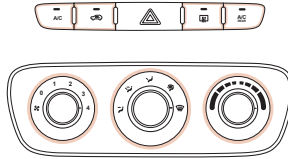 


Manual\*

 


3<sup>rd</sup> Row Air Conditioning Control\*

- Front Active Headrests - page 28

 Moves forward in the event of certain impact collisions to help protect the driver's and front passenger's heads from moving backward, thus helping to minimize neck injuries.



 
- Front Seat Headrest Adjustment - page 28

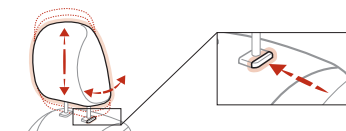

- Windshield/Rear Wipers & Washers\* - page 11

Move lever Up/Down to Change Wiper modes

 Push to spray and wipe.

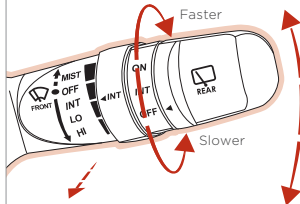

Rotate Rear Wiper switch to change Wiper modes.

**ON:** Normal Wipe

**MIST:** Single wipe

**OFF:** Wiper off

**INT:** Intermittent wipe

**LO:** Slow wipe

**HI:** Fast wipe




# SORENTO CUSTOMER DELIVERY CHECKLIST
 
## KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- Standard Audio System Overview/Operation\* – pages 16-18

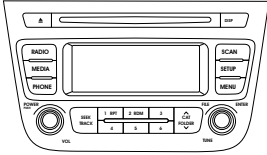


- Navigation System\* – page 20  
For further navigation system operation, refer to the Kia UVO/Digital Navigation System Owner's Manual.



 
- UVO System\* – pages 19  
For further UVO System information, refer to the Kia UVO System User's Manual.

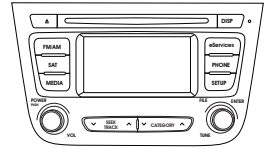

 
- AUX/USB/iPod® Port – page 21  
The iPod® connector cable provided with your iPod® unit is used to normally support operation of an iPod®, detecting the device and recharging the battery with the UVO system

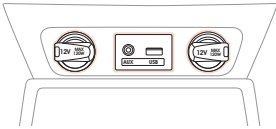

 - Cruise Control – page 14  
Demonstrate operation

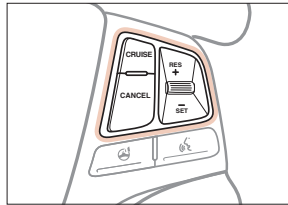

 - Bluetooth® Wireless Technology – pages 12-13  
Demonstrate operation

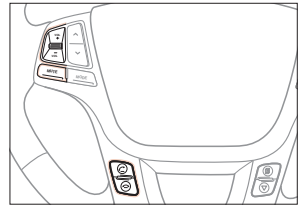

- Tire Pressure Monitoring System (TPMS) – page 5
- Engine Start/Stop Button\* – page 8
- Digital Clock – page 21
- Seat Warmers/Ventilators\* – page 25
- Folding 2<sup>nd</sup> & 3<sup>rd</sup> Row Seats\* – page 27
- Front Active Headrests – page 28
- Smart Key\* – page 29
- HomeLink® with Auto-Dimming Rearview Mirror\* – page 30

- Sunvisor – page 32
- Sunroof Operation\* – page 33
- Roof Rack\* – page 33
- Rear-Camera Display\* – page 34
- Backup Warning System\* – page 34
- PASSENGER AIR BAG OFF Indicator - page 35

\*if equipped

## DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours and Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_ Date: \_\_\_\_\_

Customer: \_\_\_\_\_ Date: \_\_\_\_\_