SPORTAGE FEATURES & FUNCTIONS GUIDE

www.kia.com

Consumer - Roadside Assistance 1-800-333-4KIA (4542)

See Back Cover for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

GETTING TO KNOW YOUR SPORTAGE

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview which will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This **Features & Functions Guide** and the specific operational and safety information it provides is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

ESSENTIAL FEATURES

Active ECO System
Air Conditioning / Climate Control 22
Audio System — Standard* 17
Audio System – Navigation System * 20
Audio System – UVO System * 19
AUX/USB/iPod® Port & Power Outlets* 21
<i>Bluetooth</i> * Wireless Technology 14
Cruise Control
Digital Clock*
Folding Rear Seats
Front Active Headrests
PASSENGER AIRBAG OFF Indicator 36
Tire Pressure Monitoring System (TPMS). 06
Windshield/Rear Wipers & Washers* 13

Driving while drowsy or distracted is dangerous and should be avoided. Drivers should remain attentive to driving and exercise caution when using vehicle systems while driving.

VIDEOS & QR CODES
INSTRUMENT CLUSTER
Instrument Cluster Overview
Indicators & Warning Lights
Trip Computer / Tripmeter*
Instant Fuel Consumption Mode* 05
Fuel Efficiency
Tire Pressure Monitoring System (TPMS) 06
Active ECO System
DRIVER'S PANEL
Power Windows, Window Lock &
Central Door Lock
Automatic Door Lock/Unlock
Power/Heated Outside Mirrors*
Power Folding Mirrors [*]
Electronic Stability Control (ESC)
Downhill Brake Control (DBC)
Hill-Start Assist Control (HAC)
Instrument Panel Dimmer*
Back-up Warning System*
Hood Release Lever and Latch 11
Fuel Door Release Lever
Engine Start/Stop Button*
STEERING WHEEL CONTROLS
Headlights & High Beams
Turn Signals & Fog Lights*
Daytime Running Lights (DRL)*
Windshield/Rear Wipers & Washers 13
Tilt/Telescopic Steering Wheel 13
Bluetooth® Wireless Technology
Audio Controls
Cruise Control
AUDIO SYSTEM
Standard Audio System [*]
UVO System*
Navigation System [*]

CENTER PANEL

$AUX/USB/iPod^{*}$ Port & Power Outlets* $% N$.	. 21
Digital Clock*	. 21
Automatic Climate Control*	. 22
Manual Climate Control*	. 23
Automatic Gear Shift / Sportmatic Shifting	. 24
4WD Transfer Mode*	. 24

SEATING

Seat Warmers / Ventilated Seats	\$. 25
Power Adjustable Driver's Seat* .				. 26
Manual Adjustable Driver's Seat*				. 27
Folding Rear Seats				. 27
Front Seat Headrest Adjustment				. 28
Front Active Headrests				. 28

OTHER KEY FEATURES

	Smart Key*
	Remote Keyless Entry*
	Double-Turn Lock / Unlock All*
	Fuel Cap / Malfunction Indicator
	HomeLink [®] with Auto-Dimming
	Rearview Mirror*
	Panoramic Sunroof Operation* $\ldots \ldots .32$
	Sunvisor
	Map/Room Lamps
	Child Safety Locks
	Rear Hatch Release Button
	Rear-Camera Display*
	Back-up Warning System
	(Rear Parking Assist System)*
S	AFETY
	Safety Belts
	Safety Belt Retractor Inertial Locks 36
	Occupant Detection System (ODS) /
	PASSENGER AIRBAG OFF Indicator 36

LEGAL DISCLAIMERS (See Back Inside Cover Page) MAINTENANCE (See Back Cover)

VIDEOS & QR CODES - SMARTPHONES, TABLETS AND COMPUTERS

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: **www.KuTechVideos.com/sl13/2014**. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional bar code that can be read by mobile devices loaded with an appropriate bar code or QR Code Reader app. The app reads the bar code image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos, and so much more

How to Use QR Codes

If you have a mobile device with a QR Code Reader app, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the *Kia One-Click Fuel Cap* section, if you would like additional information, just snap the code with your mobile device to view the selected *Kia Features & Functions* video.

© QUICK **TIPS**

- 1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2-D QR Code scanning. Try another QR Code app; not all apps are created equal
- After scanning, a "connecting" message appears and then nothing happens or there's a "connection error" message: These messages typically indicate that your device is having trouble connecting to the Internet

How to snap a QR Code

- With your mobile device, download a QR Code reader app. With many devices, you can do this through an App Store or Marketplace
- Open the QR Code reader app on your mobile device
- The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code reader app

QR CODE

Kia One-Click Fuel Cap Video


To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



INSTRUMENT CLUSTER

Instrument Cluster Overview

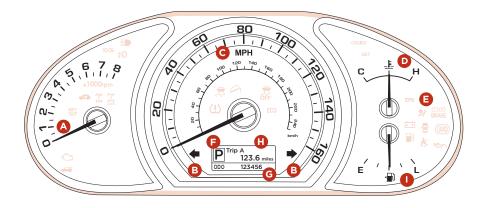

- A Tachometer
- **B** Turn Signal Indicators
- C Speedometer
- D Engine Temperature Gauge
- Indicator & Warning Lights
- Gear Shift Position Indicator*
- G Odometer
- Trip Computer / Tripmeter*
- Fuel Gauge

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

QUICK TIPS

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

INSTRUMENT CLUSTER


Indicators & Warning Lights

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

© QUICK **TIPS**

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

Ċ,	Malfunction Indicator
é	Tailgate Open Warning Light
KEY OUT	Key Out Warning Light*
	Immobilizer Indicator*
ж. М	4WD System Warning Light*
₩	4WD LOCK Indicator*
∋DQ€	Tail Light Indicator
	High Beam Indicator

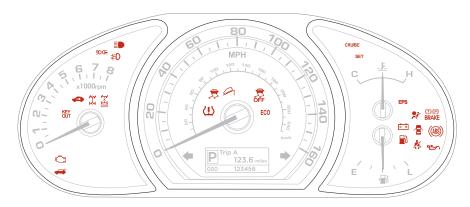

朷 Front Fog Light Indicator Low Tire Pressure Light / Tire Pressure Monitoring Û System (TPMS) Malfunction Indicator 房 Electronic Stability Control (ESC) Indicator* a Downhill Brake Control (DBC) Indicator* Electronic Stability Control (ESC) OFF Indicator* EC0 Active ECO ON/OFF Indicator Cruise ON/OFF Indicator CRUISE SET **Cruise SET Indicator**

EPS	Electronic Power Steering (EPS) System Warning Light
Ēŧ	Charging System Warning Light
	Low Fuel Level Warning Light
Ň	Airbag Warning Light
	Door Ajar Warning Light
*	Seat Belt Warning Light
(D)(P) BRAKE	Parking Brake & Brake Fluid Warning Light
(ABS)	Anti-lock Braking System (ABS) Warning Light
۹ <u>۲</u> ۰.	Engine Oil Pressure Warning Light

INSTRUMENT CLUSTER

Trip Computer / Tripmeter*

The Trip Computer is a driver information system that displays information related to driving – such as Odometer, Tripmeter, Range, Average Fuel Consumption and Driving Time – on the display when the ignition switch is in the ON position.

To cycle through the different Trip Computer modes, press the TRIP button A.

To display the Tripmeter, press the TRIP button (4), then select TRIP A or TRIP B. Press the RESET button (3) for more than 1 second to reset the Tripmeter to zero.

REMINDER: Appearance of Tripmeter display may differ, as equipped.

REMINDER: All stored driving information (except Odometer and Range) is reset if the battery is disconnected.

Instant Fuel Consumption Mode*

Press the TRIP button (A) to cycle to the Instant Fuel Consumption Mode to calculate fuel consumption during the past few seconds. Not to be used in calculation or as a reference for AVERAGE fuel economy.

- 1. Keep your vehicle in good condition with regular maintenance
- 2. Travel lightly, without carrying unnecessary weight in your vehicles
- 3. Don't let the engine idle longer than necessary

 
REMINDER: Not to be used in calculating or as a reference for AVERAGE fuel economy. **REMINDER:** If the vehicle speed exceeds 1 MPH (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (----).



Trip A



(Located on left side of instrument cluster dash panel)



Fuel Efficiency

There are several factors that contribute to your vehicle's fuel efficiency, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel efficiency:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate

🔲 QR CODE

Fuel Economy Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range can vary depending on your vehicle's fuel tank size, e.g. 12-gal. vs. 24-gal., even though the MPG may be the same.

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the brochure, "Getting More Out Of Every Gallon, Fuel-Saving Tips To Drive By" available at your local dealership.

Tire Pressure Monitoring System (TPMS)

The indicator () functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly colder.

Inflate tire(s) to specifications to turn off Low Tire Pressure Light () by using an accurate **digital** tire pressure gauge. See driver's door jamb for PSI specification

The TPMS Malfunction Indicator \bigcirc will illuminate after it blinks for approximately one minute when there is a problem with the TPMS. See dealer for service

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

© QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance, safety, and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

🔋 QR CODE

Kia Tire Pressure Monitoring System

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

Active ECO System

Active ECO helps improve fuel efficiency by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to maximize fuel economy.

To turn ON, press the Active ECO button ³. The button light will turn on and the green ECO indicator light ⁴ in the instrument cluster will illuminate (indicating that you are getting optimal fuel efficiency). The Active ECO System will remain on even when the engine is turned off and restarted.

To turn Active ECO OFF, press the button ¹ again.



(Type A cluster)



(Buttons located on left side of Driver's Panel)

For more information on the ACTIVE ECO indicator, refer to your Owner's Manual or contact your local dealership.

QUICK TIPS

To help improve your fuel efficiency:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

🔋 QR CODE

Active ECO Video


To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

Power Windows, Window Lock & Central Door Lock

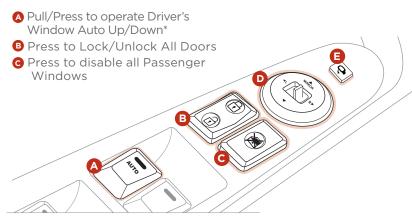

REMINDER: When pressed **O**, window controls for all Passenger Windows are disabled, including from driver's controls.

QUICK TIPS

Auto Door Unlock/Lock* will engage when gear shift is moved in to or out of the P (Park) position (Automatic Gear Shift only).

Automatic Door Lock/Unlock*

When the gear shift is moved in to or out of P (Park), all doors will Unlock /Lock.

Power/Heated Outside Mirrors*


Mirror heaters controlled with Rear Defroster.

Power Folding Mirrors*

Toggle switch **O** left or right to select mirror. Then press arrows to adjust Power Outside Mirror position.

To both fold and unfold the Power Outside Mirror, press the folding mirror button **()**.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

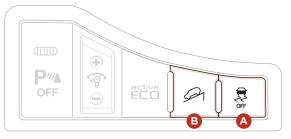

Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC button (A) to turn ESC OFF/ON.

REMINDER: ESC is turned ON at vehicle start-up.

REMINDER: The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active.

Downhill Brake Control (DBC)

DBC helps drivers maneuver down steep hills by automatically braking for them, allowing drivers to concentrate on steering.

Press 🖓 button 🖪 to turn DBC ON/OFF.

© QUICK **TIPS**

- The DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

🔋 QR CODE

Kia Sportage Feature Button Panel Video

To view a video on your mobile device, snap this QR Code.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

© QUICK **TIPS**

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.
- HAC provides a 2-second delay before the vehicle may start rolling backwards.


Instrument Panel Dimmer*

With parking lights / headlights ON, toggle switch (A) up or down to adjust display brightness of the instrument panel illumination.

REMINDER: The Instrument Panel Dimmer does not adjust brightness on the Navigation System screen, use Navigation setup to adjust brightness on the Navigation System.

Back-up Warning System (Rear Parking Assist System)*

Press the Back-up Warning System OFF button ¹ to deactivate the system (See more information on page 35).

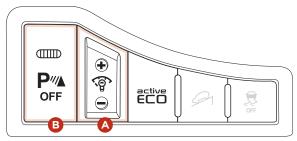

(Buttons located on left side of Driver's Panel)

QR CODE

Kia Sportage Feature Button Panel Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

Hood Release Lever and Latch

Opening the Hood:

 Pull the Hood Release Lever (2) to unlatch the Hood



2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch ^(B) to the left inside of the Hood's center and lift the Hood

B

Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Fuel Door Release Lever

Lift the Lever **G** upwards to release the fuel door.



Lever located on the driver's floor near door sill)

Engine Start/Stop Button*

To start the engine:

- 1. Depress the brake pedal
- 2. Press the ENGINE START/STOP button while in Park

To use the ENGINE START/STOP button, you must have the Smart Key* fob on your person. To turn the vehicle OFF, press the ENGINE START/STOP button.



REMINDER: In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds.

REMINDER: If Smart Key fob battery is dead, hold the fob up against the Engine Start/Stop button and press

© QUICK TIPS

To use electrical accessories:

- ACC position
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **0**)

On position

- When already in the ACC position (Orange light **D**) and without depressing the brake pedal, press the ENGINE START/STOP button again (Green light **B**)
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (Green light 1)

Keeping the vehicle in ACC or the ON position without driving may discharge the vehicle's battery.

🔲 QR CODE

Kia Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/sl13/2014

Headlights & High Beams

AUTO Light* function — When the light switch is in the AUTO light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Rotate lever to change the Headlight function:

Automatic Headlights position



Parking light positionOFFOFF position

Push lever to turn High Beams ON.

Pull lever to flash Headlights / High Beams.

Daytime Running Lights (DRL)*

The Daytime Running Lights (DRL) will turn ON when the engine is ON and the Headlight switch is in the AUTO position.

REMINDER: DRL only operates during the daytime.

🔋 QR CODE

Kia Sportage LED Daytime Running Lights Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

Turn Signals & Fog Lights*

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing.The lane change signal will blink 3 times.

REMINDER: Headlights must be ON for Fog Light operation.



Rotate lever ring to turn Fog Lights ON/OFF.

(отиа


1D

44

STEERING WHEEL CONTROLS

Windshield Wipers & Washers


Move lever Up/Down to change Wiper modes. Rotate lever to adjust Intermittent Wipe Speed.

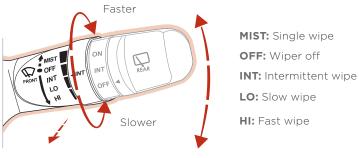

Pull to spray and wipe.

Rear Wiper & Washer

Rotate Rear Wiper switch to change Wiper modes.

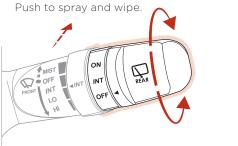


- **ON**: Normal wipe
- INT: Intermittent wipe*
- **OFF**: Wiper off


Tilt/Telescopic Steering Wheel

To adjust the Steering Wheel, push down the lock-release lever A and adjust to desired angle B and distance C.

When finished, pull up the lock-release lever A to lock Steering Wheel in place.

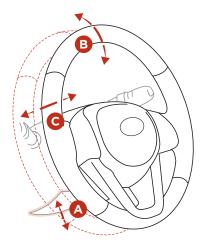

Bluetooth® Wireless Technology

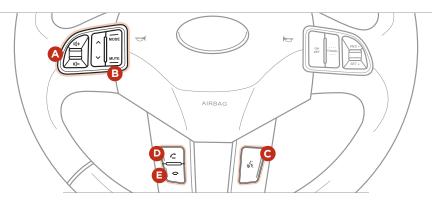

- Volume button: Press up/down to raise/lower speaker volume
- Mute button: Press to mute the microphone during a call
- **Talk button**: Press to activate voice recognition / bring up menus / place calls with minimal voice command prompts from the system

QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

- Receive/Place Call button: Press to receive/transfer calls. Press to place a call using vocal command prompts from the system, or to answer an incoming call
- **End Call button**: Press to end a call or cancel a function

© QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth*[®] Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language may delete paired phones

For more information, refer to the Digital Navigation Systems User's Guide or the UVO System User's Manual.

For **Bluetooth**[®] Wireless Technology FAQs, go to www.kia.com, Owners section.

Refer to your Owner's Manual for more specific **Bluetooth**[®] Wireless Technology phone pairing and operation instructions.

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

STEERING WHEEL CONTROLS

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIPS

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future Bluetooth^{*} connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Standard Audio System

- **Option 1:** Press the Receive/Place Call button **D** (system will prompt you through call process)
- Option 2: Press the Talk button G (system will BEEP) to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

UVO System

- **Option 1:** Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button G. Then say the command "Call {name}" or "Dial {number}"

Navigation System

- Option 1: Press the Receive/Place Call button D (displays the phone screen with number keypad)
- Option 2: Press the Talk button G. Then say the command "Call Name" or "Dial Number", followed by phone book name or number

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help vour Bluetooth[®] Wireless **Technology Voice Recognition** performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single svllable names ("John Smith" vs. "Dad", "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

QUICK TIPS

Contacts Sync Tips

- If Contact Sync is set to ON, contacts stored in your phone will download each time your phone is connected. There may be a delay before the system is available to place a call
- If Contact Sync is set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download



www.KuTechVideos.com/sl13/2014



QR CODE

Tips Video

Voice Recognition

To view a video on vour

mobile device, snap this

Refer to page 2 for more

QR Code or visit the


listed website.

information.

STEERING WHEEL CONTROLS

Audio Controls

Cruise Control

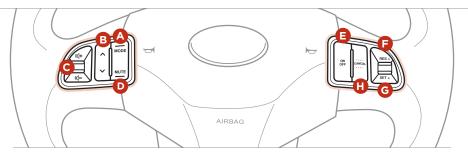

- Audio Mode button: Press to cycle through FM/AM/ SiriusXM[®]/Media (CD, USB, iPod[®], Aux, BT Audio, My Music)
- B Seek/Preset button

Radio Mode: Press to advance through Preset Stations. Press and hold to Auto Seek

Media Mode: Press to move Track up/down. Press & hold to FF/REW

- **6** Volume button: Press up/down to raise/lower volume
- D Mute Audio button: Press to mute all audio

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For further audio system operations, refer to pages 17 - 22.

QUICK TIPS

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.


- Cruise Control ON/OFF button: Press to turn the Cruise Control ON/OFF
- Resume Cruising Speed button: Press up to resume or increase Cruising Speed
- **G** Set Cruising Speed button: Press down to set or decrease Cruising Speed
- Cruise Control Cancel button: To cancel Cruise Control setting, do one of the following:
 - Press the brake pedal
 - Press the CANCEL button B

QUICK TIPS

- Cruise Control is designed to function above approximately 25 mph.
- The cruise control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting.

AUDIO SYSTEM

Standard Audio System Overview/Operation -FM/AM/SiriusXM[®]/Media (CD/USB, iPod[®], Aux, BT Audio, My Music)*

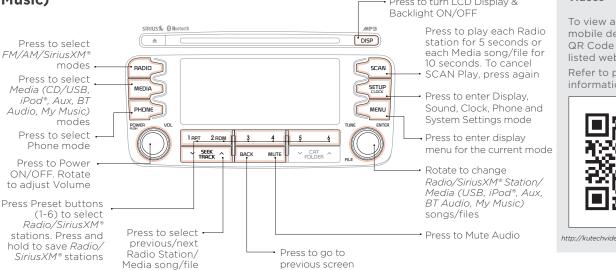

Audio System Setup Options

Press the SETUP button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the TUNE Knob to adjust the audio option selected. Audio options may include the following:

Display settings

Clock settings

Sound settings •

• System settings

REMINDER: SiriusXM[®] service not available in AK or HL.

Press to turn LCD Display &

QR CODE

Standard Audio System Videos

To view a video on vour mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




http://kutechvideos.com/audio/base system

To adjust the sound settings (Bass, middle, treble, fader, balance) - Select **Sound** settings in the SETUP menu. Then use the TUNE knob to cycle to the selection and then press the TUNE knob to select. Turn the TUNE knob left/right to adjust sound setting.

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

For further audio system operations, refer to pages 16-22.

Standard Audio System Operation — Media (CD/USB, iPod®, Aux, BT Audio, My Music)*

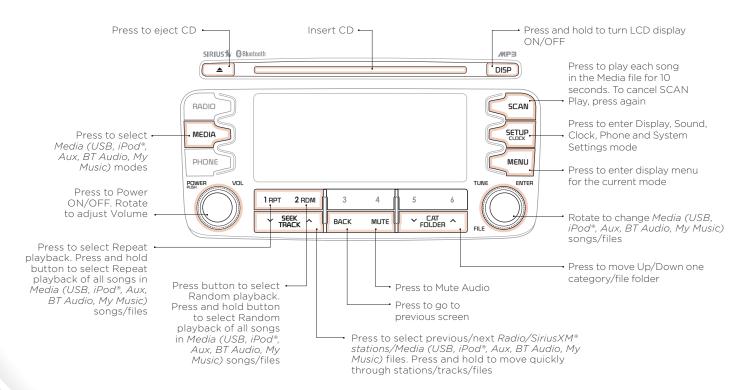


REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

REMINDER: SiriusXM[®] service not available in AK or HI.

For further audio system operations, refer to pages 16-22.

AUDIO SYSTEM

UVO System*

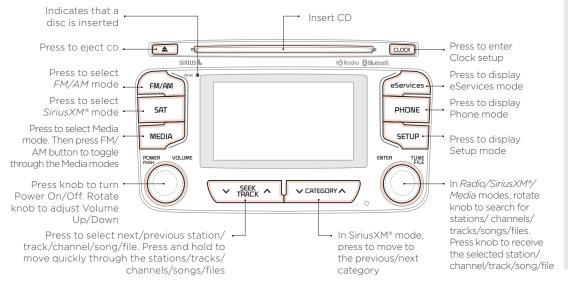

QR CODE

UVO System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/ audio/UVO_eServices

To adjust the sound settings (Bass, middle, treble, fader, balance) - Select the on-screen **SOUND** button on the audio mode's display. Then press the on-screen CHANGE button of the selection (FADER/BALANCE, TONE). To adjust, press the on-screen arrows.

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

© QUICK TIPS


- When using the voice command feature, wait for the system BEEP before speaking the command
- Only MP3 or WMA files may be played or copied to Jukebox. Commercial CDs or CDs with a CDDA audio format (compact disc digital audio) cannot be copied to Jukebox
- At any time you can interrupt UVO System Command Feedback by pressing the TALK button
- Prolonged use of the UVO system in ACC mode may drain the vehicle's battery
- If equipped, HD Radio is available when selecting FM/AM Mode

For further audio system operations, refer to pages 16-22.

REMINDER: SiriusXM[®] service not available in AK or HI.

AUDIO SYSTEM

Navigation System with FM/AM/SiriusXM®/CD/Aux/USB/iPod®/ BT Audio/My Music*

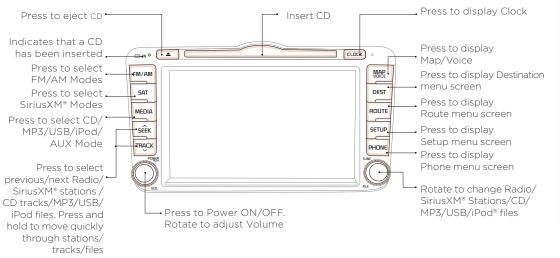

🔋 QR CODE

Navigation Audio System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/audio/nav_eServices

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

To adjust the sound settings (Bass, middle, treble, fader, balance) - Select the on-screen **SOUND** button on the audio mode's main screen. To adjust, press the on-screen arrows.

QUICK TIPS

Prolonged use of the Navigation System in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation System should be operated with the engine running to prevent battery discharge.

REMINDER: SiriusXM[®] service not available in AK or HI.


© QUICK **TIPS**

When using the voice command feature, wait for the system BEEP before speaking the command.

For further audio system operations, refer to pages 16-22.

CENTER PANEL


AUX/USB/iPod® Port* & Power Outlets*

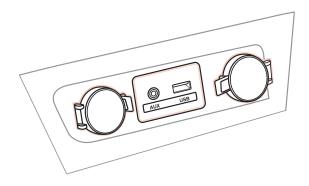

© QUICK **TIPS**

The power outlets are inactive when ignition is in the OFF position

Digital Clock*

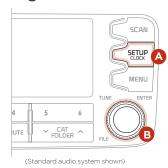

Standard Audio System Clock Setup:

- 1. With Radio off, press and hold SETUP button (A)
- 2. Rotate knob ³ to select Clock mode, then press to enter
- 3. Rotate knob ^B to adjust Hour, then press to enter
- 4. Rotate knob ¹ to adjust Minute, then press to enter

QR CODE

Kia USB Port Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014


UVO System Clock Setup:

Press the CLOCK button to display the Clock setting screen. Then use the on-screen buttons to navigate through setup.

Navigation System Clock Setup:

Press the SETUP key, then the CLOCK button to display the Clock setting screen.Then use the on-screen buttons to navigate through setup.

Automatic Climate Control*

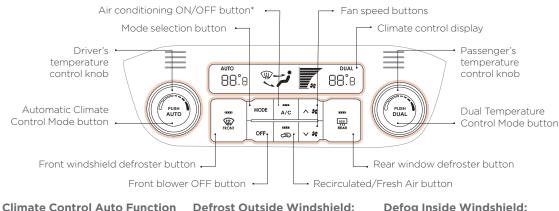

- 1. Press AUTO to select Full Auto Operation
- 2. Press MODE buttons to control which vents air flows through

3. Press DUAL to select Dual **Temperature Control Operation**

- 1. Set Fan Speed to the highest position
- 2. Set Temperature to Hot
- 3. Press the Front Defrost button 💯

Defog Inside Windshield:

- 1. Set Fan Speed to desired position
- 2. Set desired Temperature
- 3. Press the Front Defrost button 🖤

QR CODE

Kia Sportage Automatic Climate Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

Air Flow Modes

To select Air Flow Modes, press the Mode selection button :




REMINDER:

- · Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display.
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).

QUICK TIPS

- Defrost W Mode activates A/C and opens Fresh Air Vent
- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Manual Climate Control*

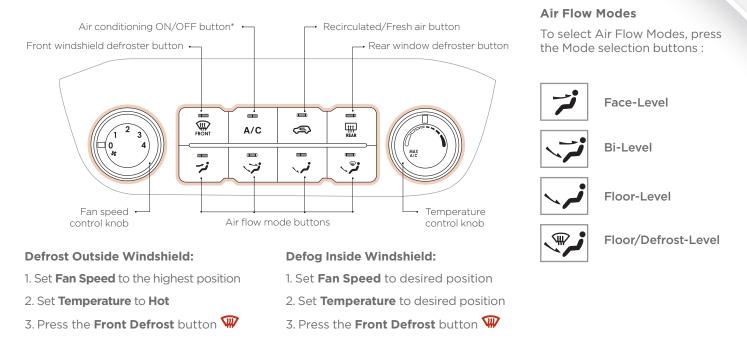

REMINDER: Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details. **REMINDER:** Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).

© QUICK TIPS

- Defrost WMode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air

• Keep inside glass as clean as possible to reduce window fogging

CENTER PANEL

Automatic Gear Shift with Sportmatic Shifting

- **R**: Reverse [-]: Sport Mode Downshift
- N: Neutral

D: Drive


Sport Mode: To enter Sport Mode, move shift lever from **D** to left gate.

Sport Mode Shifting: Move shift lever up [+] to Upshift or [-] to Downshift.

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

en to move

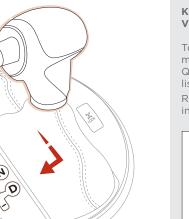

🔋 QR CODE

Kia Sportmatic Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

4WD Transfer Mode*

Press the 4WD Transfer Mode selector button (2) to activate or deactivate 4WD Lock mode.





LOCK

4WD Auto Mode:

The vehicle operates similar to conventional 2WD vehicles. If the system determines that there is a need for the 4WD mode, the engine's driving power is distributed to all four wheels automatically without driver intervention.

4WD Lock Mode:

Activates 4WD for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to maximize traction.



Seat Warmers

Press button once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.





(Located on either side of shifter)

Seat Warmers / Ventilated Seats*

Seat Warmers — Press top of button once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

Ventilated Seats — Press bottom of button once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.





Warming - Yellow LED

Ventilating - Blue LED

(Located on either side of shifter)

QR CODE

Seat Warmers and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/sl13/2014

© QUICK **TIPS**

- System turns OFF when ignition is cycled. To turn system ON, press the seat warmer switch.
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature

Power Adjustable Driver's Seat*


Move/Press controls to adjust Seat forward/backward, Seat Cushion, Seatback or Lumbar.




Seat forward/ backward



Seat Cushion

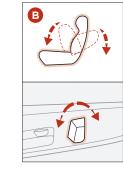

Seatback

 


Lumbar



SEATING

6-Way Manual Adjustable Driver's Seat*

Pull lever (2) to slide Seat forward/backward Pull/press lever (2) to adjust Seat Height Pull lever (9) to adjust Seatback Recline

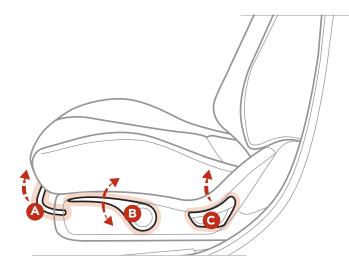


Folding Rear Seats

(Seat type with lever in front)

• Pull lever up to unlock seat

2 Fold seat flat

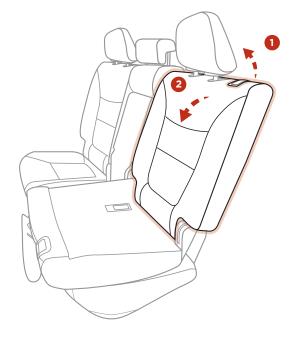


QUICK TIPS

It may be necessary to adjust the front seatbacks to fully lower rear seats.


Front Seat Headrest Adjustment

To adjust headrest forward – Pull headrest forward at an upward angle to one of several positions.

To adjust headrest back — Pull headrest completely forward at an upward angle, then release.

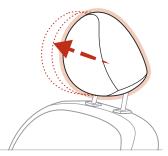

To raise headrest — Pull headrest up.

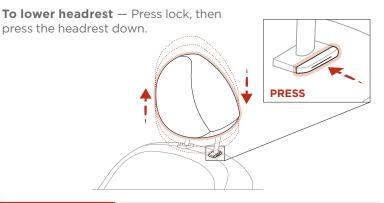


QUICK TIPS

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest up from underneath.

Front Active Headrests

To reset the headrest back — Pull forward at an upward angle to the farthest position and release.

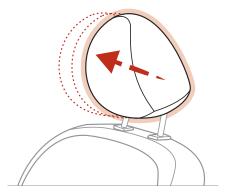

Smart Key*

Smart Key Fob:

- A Press to lock All Doors
- Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- Press and hold to unlock Rear Hatch and manually open

REMINDER: The Rear Hatch unlocks when the Smart Key fob is within close proximity of the vehicle.

- Press and hold more than a half-second for Panic Alarm. To turn off Alarm, press any button
- Press to release Mechanical Key (Button located on back of Smart Key)

Mechanical Key 🕞:


- Use to unlock Driver's Door
- Use to turn Child Safety Locks (page 33)
- Use to lock glove box

For more information on the Mechanical Key, please refer to your Owner's Manual.

Driver's Door Lock/Unlock button **G**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors



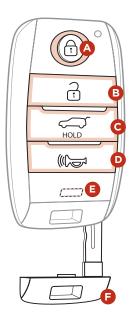

🔋 QR CODE

Kia Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014

QUICK TIPS

The Smart Key's signal can be blocked by the normal operation of a cell or smart phone. To help prevent this, store each device separately.

REMINDER: Remote button configuration may vary depending on vehicle options.

Remote Keyless Entry*

- Press the release button to unfold the key.
- B Press to Lock All Doors
- Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Rear Hatch
- Press and hold to unlock Rear Hatch and manually open
- Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

 
REMINDER:

- The Rear Hatch does not automatically open when the ${f O}$ button is pressed
- The Rear Hatch unlocks when the Smart Key fob is within close proximity of the vehicle
- Remote button configuration may vary depending on vehicle options.

Double-Turn Lock/Unlock All*


(Only available with Power Door Locks)

- Turn clockwise once to unlock Driver's
 Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock
 All Doors



Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator

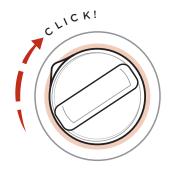

🔋 QR CODE

Kia One Click Fuel Cap Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014


REMINDER: The Fuel Door Release Lever is located on the lower part of the driver's door sill.



HomeLink[®] with Auto-Dimming Rearview Mirror*

- A HomeLink[®] button
- B HomeLink[®] button
- Indicator light

- D HomeLink[®] button
- Glare detection sensor
- Automatic dimming ON
- G Automatic dimming OFF

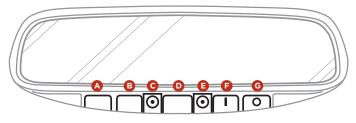

The HomeLink[®] / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press 🚺 button 🕑
- To turn automatic dimming OFF, press 🖸 button 😉

REMINDER: Mirror indicator light ⁹ will illuminate when automatic dimming is ON.

QUICK TIPS

- + You can reprogram a single $\mathsf{HomeLink}^{\scriptscriptstyle(\! B\!)}$ button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

- Press and hold the left A and center b buttons simultaneously until the indicator light begins to flash (to reprogram buttons, skip this step)
- Press and hold the desired button

 Press and hold the desired button
 Pand hold the button on the transmitter while it is approximately
 to 3 inches away from the mirror. The HomeLink[®]
 Indicator light

 will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

- Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
- 4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left A and center D buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Panoramic Sunroof Operation*

The sunroof and sunshade operation is controlled through a multidirectional switch/lever and the ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the Sunroof:

- Auto Open: Slide lever (2) backward to the farthest position and release.
- Auto Close: Slide the lever **(**) forward to the farthest position and release.

Slide the Sunshade:

• **Open/Close:** Manually slide the sunshade forward/ backward to the desired position.




REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving

QUICK TIPS

To stop the Sunroof at any position, push or pull the sunroof control lever in any direction

Sunvisor

Use the Sunvisor to shield direct light through the front or side windows.

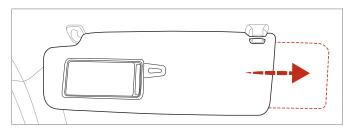

REMINDER:

- Sunvisor may not shield all direct light.
- Do not operate the vehicle if the Sunvisor is impairing your visibility.
- The Sunvisor may impair visibility if not adjusted properly.

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine System Start/Stop button* is OFF.

Personal Lamp

 
Push the lens (A) to turn the map lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

Map/Room Lamp switch

DOOR - When pressed or in the DOOR position ³, the lamp turns on when any door is opened.

ON - In the ON position Θ , the lamp stays on continuously.

OFF - In the OFF position **G**, the lamp is off even if the door is opened.






© QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Child Safety Locks

Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.


REMINDER: Child Safety Lock is located on rear passenger's door jamb.

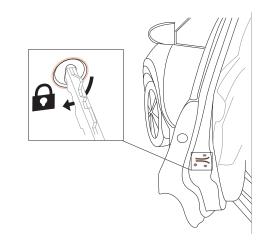

Please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System" for more detailed information regarding your vehicle's airbags.

Rear Hatch Release Button

Located underneath the Rear Hatch. With Rear Hatch unlocked, press the Rear Hatch Release Button and pull the Rear Hatch up by the handle to open.

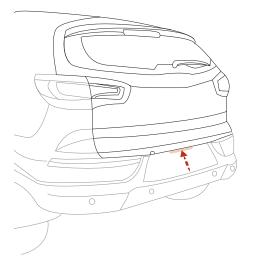

QUICK TIPS

- The Rear Hatch must be unlocked before it can be opened by the Rear Hatch Release Button
- The Rear Hatch unlocks automatically, and can then be opened, when the Smart Key fob* is within close proximity to the vehicle

Rear-Camera Display*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation* or UVO* screen while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

- 1. Engine Start/Stop* button is in the ON position (Green Light)
- 2. Gear Shift Lever is in the R (Reverse) position



REMINDER: The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display may not detect every object behind the vehicle.

REMINDER: While camera is active, only the volume controls on the Audio System can be operated.

Back-up Warning System (Rear Parking Assist System)*


The Back-Up Warning System is not a safety device. The Back-Up Warning System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

REMINDER:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly.
- When more than two objects are sensed at the same time, the closest one will be recognized first.
- The Back-Up Warning System is not a substitute forproper and safe backing-up procedures. Always drive safely and use caution when backing up. The Back-Up Warning System may not detect every object behind the vehicle.

© QUICK **TIPS**

Press the Back-up Warning System OFF button to deactivate the system (See illustration on page 10).

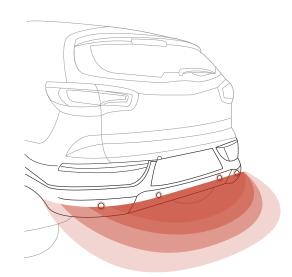

🔋 QR CODE

Kia Rear Parking Assist System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




www.KuTechVideos.com/sl13/2014


SAFETY

Safety Belts

To properly fasten your safety belts:

- Insert the tongue belt plate into the buckle until it clicks
- Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible [©]. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion ^D

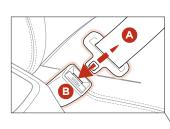

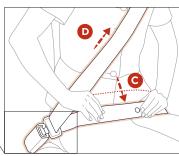

Safety Belt Retractor Inertial Locks

- Inertial locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation, for freedom of movement and increased comfort
- During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISION, Safety Belt Retractors will automatically lock the belts

QUICK TIPS

The Safety Belt warning chime operates for driver's seat only.

For more detailed information regarding your vehicle's safety belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

Occupant Detection System (ODS) / PASSENGER AIRBAG OFF Indicator

ODS detects the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate.



Kia Occupant Detection System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/sl13/2014



Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

UVO eServices: Warning - Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

UVO eServices app: At launch, the Apple iPhone* will be the only UVO eServices compatible device. iPhone* is a registered trademark of Apple Inc. Apple iOS 6 compatibility expected early 2013. Additional compatible devices expected late 2013.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

Rear-Camera Display: The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Back-Up Warning System: The Back-Up Warning System is not a substitute for proper and safe backing-up procedures. The Back-Up Warning System may not detect every object behind the vehicle. Always drive safely and use caution when backing up.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Seatbelts: For maximum protection, always wear your seatbelt.

Navigation: GPS maps and directions are for information purposes only, and Kia does not make any warranties about the accuracy of that information. Kia is not responsible for loss or delay resulting from the use of the navigation system. Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

Bluetooth* Wireless Technology: The Bluetooth* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth* enabled cell phone is required to use Bluetooth* wireless technology.

SiriusXM*: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc.. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and re not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and aliy delta of around 7,000 actively reported securities traded on the NYSE*, NASDAQ* and AMEX*. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HL © 2013 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Inc.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately.

Microsoft® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

HD Radio[™] and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.

HomeLink® is a registered trademark of Johnson Controls, Inc.

Infinity® is a trademark of Harman International Industries, Inc.

KIN NORMAL MAINTENANCE SCHEDULE

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

INTERVAL	M		ITE	NA	NC	E	сн	AR	т		
7,500 miles	A	B	С								
15,000 miles	A	в	С	D							
22,500 miles	A										
30,000 miles	A	в		D	E						
37,500 miles	A					٦					
45,000 miles	A	B	С	D					۰		
52,500 miles	A										
60,000 miles	A	B		D	E		G	H			
67,500 miles	A										
75,000 miles	A	B	C	D		E	G				
82,500 miles	A										
90,000 miles	A	B		D	E	F	G				
97,500 miles	A										
105,000 miles	A	в	С	D			G			J	
112,500 miles	A					F					
120,000 miles	A	B	С	D	E		G	H			K

Replace — Engine oil and oil filter; MPI Engine every 7,500 miles or 12 months; T-GDI Engine, at first, 3,000 miles or 6 months and every 5,000 miles or 6 months afterwards

Perform — Lubricate all locks/hinges and front/rear driveshaft u-joint; rotate tires; add fuel additive1

Inspect* — Air conditioning compressor, air conditioner refrigerant and performance**, cooling system², drive shaft and boots, battery condition, brake fluid/clutch** fluid; brake lines, hoses and connections; brake pedal and operation, chassis/ body nuts and bolts, disc brakes and pads**, exhaust pipe and muffler, front suspension ball joints; parking brakes, steering operation and linkage and suspension mounting bolts

C Inspect* — Air cleaner filter

- Inspect* Propeller shaft (4WD)**
 - Replace Climate control air filter**
- **Inspect**^{*} Fuel line, hoses and connections; fuel filter³ and fuel tank air filter³; vapor hose and fuel filler cap **Replace** Air cleaner filter
- Inspect* Rear differential oil and transfer case oil (4WD)***
- G Inspect[∗] Drive belt^₅
- H Inspect* Valve clearance⁶
- **Replace** Spark plugs (iridium coated) (T-GDI engine)
- **Replace** Spark plugs (iridium coated) (MPI engine)
- K Replace Engine coolant⁷

* and, if necessary, adjust, clean, replace or correct ** If equipped

- ¹ If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- ² Inspect "Water Pump" when replacing the drive belt or timing belt.
 ³ Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.
- ⁴ Transfer case oil and rear differential oil should be changed anytime they have been submerged in water.
 ⁵ The drive belt should be replaced when cracks occur or tension is
- reduced excessively. ⁶ Inspect for excessive tappet noise and/or engine vibration and
 - adjust if necessary. 7 When replacing coolant, use only a qualified coolant additive for your vehicle and never mix hard water in the coolant filled at the factory. An improper
 - coolant mixture can result in serious malfunction or engine damage.

Check tire pressure once a month or more.

See your owner's manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed. Call 1-800-333-4kia (4542) for roadside assistance.

© 2013 Kia Motors America, Inc. All rights reserved. Part Number: UL140-PS-004

SPORTAGE CUSTOMER DELIVERY CHECKLIST


Owner's Name:	_VIN:		Mileage:					
Dealership Name:	_Sales Consultan	ıt:	Date:					
BEFORE DELIVERY								
□ Confirm "Good Battery" with Kia battery tester								
□ Verify all tire pressures are to spec (see driver's door label	I) LF	LR	RF	RR				
□ Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock								
Ensure floormats are snapped into place (if applicable)								
□ Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches								
Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet,								
Tire Warranty booklet, and Features & Functions Guide and any supplemental audio user's guides)								

KEY FEATURE WALKTHROUGH

□ Air Conditioning / Climate Control – pages 22-23 Demonstrate Air Flow Modes, Defogging and Defrosting Windshield



□ Windshield/Rear Wipers & Washers* – page 13

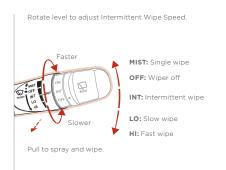


Move lever Up/Down to change Wiper modes.

Push to spray and wipe.



ON: Normal wipe INT*: Intermittent wipe OFF: Wiper Off

SPORTAGE CUSTOMER DELIVERY CHECKLIST ... continued ΚΙΛ

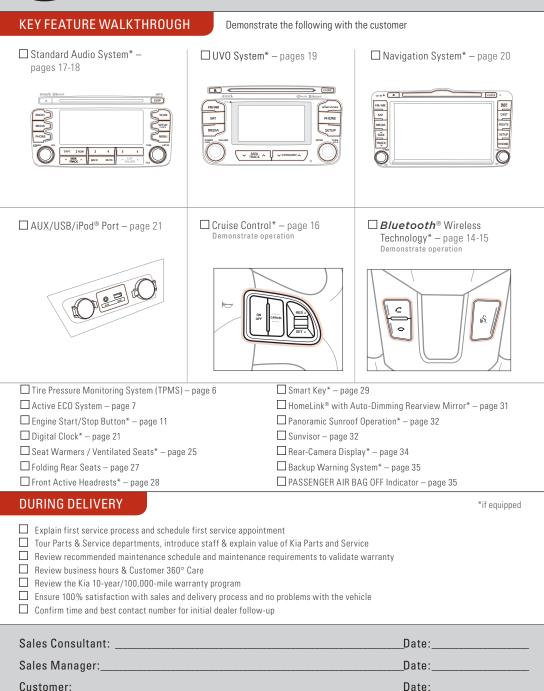

Customer: