

# SPORTAGE

## Features & Functions Guide



**Delivery First**  
The priority that delivers more

# GETTING TO KNOW YOUR **SPORTAGE**

## **Congratulations on Your New Kia Purchase!**

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

## **Using This Guide**

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)

Consumer - Roadside Assistance  
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

*Always check the Owner's Manual for complete operating information and safety warnings.*

# ESSENTIAL FEATURES

Active ECO System . . . . .	07
Air Conditioning / Climate Control . . . . .	21
Audio System — Standard Audio Systems* . . . . .	16
Audio System — UVO eServices System* . . . . .	18
Audio System — UVO eServices/Navigation System* . . . . .	19
Aux/USB/iPod® Port & Power Outlets . . . . .	20
<i>Bluetooth</i> ® Wireless Technology . . . . .	14
Cruise Control . . . . .	13
Digital Clock . . . . .	20
Front Active Headrests . . . . .	27
Passenger Airbag Off Indicator . . . . .	36
Reclining/Folding Rear Seats . . . . .	26
Tire Pressure Monitoring System (TPMS) . . . . .	05
Windshield/Rear Wipers & Washers . . . . .	12

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

<b>VIDEOS &amp; QR CODES</b> . . . . .	02
--	----

## INSTRUMENT CLUSTER

Instrument Cluster Overview . . . . .	03
Indicators & Warning Lights . . . . .	04
Fuel Economy . . . . .	05
Tire Pressure Monitoring System (TPMS) . . . . .	05
Trip Computer* / Tripmeter . . . . .	06
Instant Fuel Consumption Mode* . . . . .	06
Active ECO System . . . . .	07

## DRIVER'S PANEL

Back-Up Warning System (Rear Parking Assist System)* . . . . .	08
Instrument Panel Dimmer . . . . .	08
Downhill Brake Control (DBC) . . . . .	08
Electronic Stability Control (ESC) . . . . .	08
Hill-Start Assist Control (HAC) . . . . .	08
Power Windows, Window Lock & Central Door Lock . . . . .	09
Automatic Door Lock/Unlock . . . . .	09
Heated Outside Mirrors* . . . . .	09
Power-Folding Outside Mirrors* . . . . .	09
Engine Start/Stop Button* . . . . .	10

## STEERING WHEEL CONTROLS

Headlights & High Beams . . . . .	11
Turn Signals & Fog Lights* . . . . .	11
Daytime Running Lights (DRL)* . . . . .	11
Windshield/Rear Wipers & Washers . . . . .	12
Tilt/Telescoping Steering Wheel . . . . .	12
Audio Controls . . . . .	13
Cruise Control . . . . .	13
<i>Bluetooth</i> ® Wireless Technology . . . . .	14

## AUDIO SYSTEMS

Standard Audio System (Type A)* . . . . .	16
Standard Audio System (Type B) . . . . .	17
UVO eServices System* . . . . .	18
UVO eServices with Navigation System* . . . . .	19

## CENTER PANEL

Aux/USB/iPod® Port & Power Outlets . . . . .	20
Digital Clock . . . . .	20
Automatic Climate Control* . . . . .	21
Manual Climate Control* . . . . .	22
Automatic Gear Shift / Sportmatic® Shifting . . . . .	23
4WD Transfer Mode . . . . .	23
Seat Warmers / Ventilated Seats* . . . . .	24

## SEATING

Power Adjustable Driver's Seat* . . . . .	25
6-Way Manual Adjustable Driver's Seat* . . . . .	26
Reclining/Folding Rear Seats . . . . .	26
Front Seat Headrest Adjustment . . . . .	27
Front Active Headrests . . . . .	27

## OTHER KEY FEATURES

Smart Key* . . . . .	28
Remote Keyless Entry (Folding Key)* . . . . .	29
Double-Turn Lock / Unlock All . . . . .	29
Fuel Cap / Malfunction Indicator . . . . .	29
HomeLink® with Auto-Dimming Rearview Mirror* . . . . .	30
Map/Room Lamps . . . . .	31
Sunvisor . . . . .	31
Panoramic Sunroof Operation* . . . . .	32
Rear-Camera Display* . . . . .	33
Rear Hatch Release Button . . . . .	34
Back-Up Warning System (Rear Parking Assist System)* . . . . .	34
Hood Release Lever and Latch . . . . .	35
Fuel Door Release Lever . . . . .	35
Child Safety Locks . . . . .	35

## SAFETY FEATURES

Seat Belts . . . . .	36
Seat Belt Retractor Locks . . . . .	36
Occupant Detection System (ODS) / Passenger Airbag Off Indicator . . . . .	36

## NORMAL MAINTENANCE SCHEDULE . . . . . 37

## LEGAL DISCLAIMERS (See Back Inside Cover Page)

\*IF EQUIPPED



Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: [www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016). Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

### What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

### How to use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

### How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
  - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
  - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
  - For operation specifics, refer to the instructions that come with the QR Code Reader App

### QR CODE

#### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

 
**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

### QUICK TIPS

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code scanning
  - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet

## Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicator & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer
- H** Trip Computer\* / Tripmeter
- I** Fuel Gauge

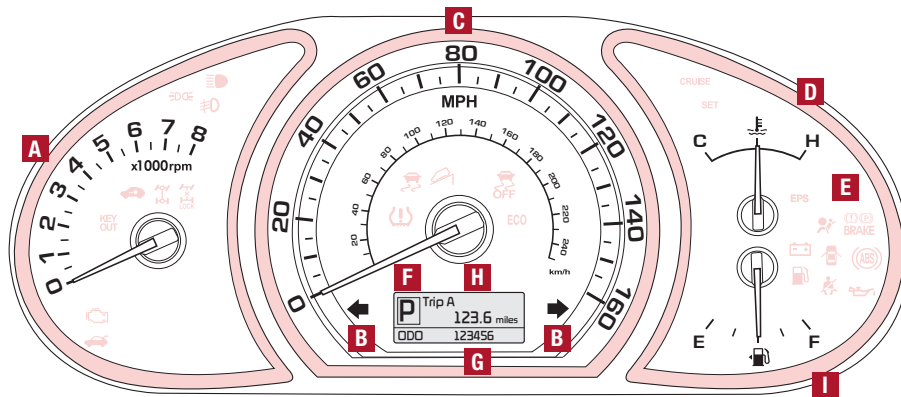


(Type A)

### REMINDERS:

 - Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations
- For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual



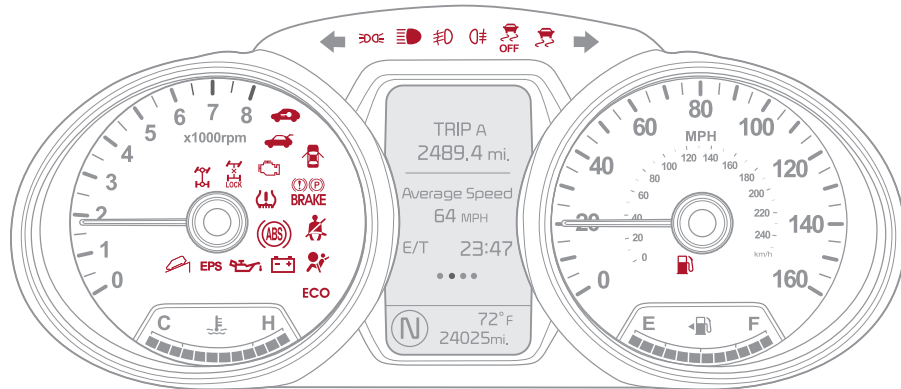



















## Indicators & Warning Lights



(Type B)

### REMINDERS:

- Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations
- For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual

- |   |   |   |  |   |  |
|---|---|---|--|---|--|
|  | 4WD System Warning Light                  |  | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |  | Airbag Warning Light                             |
|  | 4WD LOCK Indicator                        |  | Anti-lock Braking System (ABS) Warning Light   |  | Active ECO ON/OFF Indicator                      |
|  | Malfunction Indicator                     |  | Seat Belt Warning Light  |  | Tail Light Indicator                             |
|  | Tailgate Open Warning Light               |  | Downhill Brake Control (DBC) Indicator   |  | High Beam Indicator                              |
|  | Immobilizer Indicator                     |  | Electric Power Steering Warning Indicator  |  | Front Fog Light Indicator                        |
|  | Door Ajar Warning Light                   |  | Engine Oil Pressure Warning Light  |  | Electronic Stability Control (ESC) OFF Indicator |
|  | Parking Brake & Brake Fluid Warning Light |  | Charging System Warning Light  |  | Electronic Stability Control (ESC) Indicator     |
|   |   |   |  |  | Low Fuel Level Warning Light                     |

## Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads


**REMINDER:** Driving range varies depending on a vehicle's fuel tank size, e.g., 12-gal. vs. 24-gal. Even though the two vehicles' MPG may be the same, the vehicle with the larger tank will have the greater range.

*For more information on Fuel Economy, you can snap the QR Code to the right to view a video or refer to the brochure, "GETTING MORE OUT OF EVERY GALLON, FUEL-SAVING TIPS TO DRIVE BY" available at your local dealership.*

## Tire Pressure Monitoring System (TPMS)



The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light. See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute and then illuminate. See dealer for service.

**REMINDER:** Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

### QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

#### Fuel Economy Video



[www.KuTechVideos.com/s113/2016](http://www.KuTechVideos.com/s113/2016)

#### Tire Pressure Monitoring System



[www.KuTechVideos.com/s113/2016](http://www.KuTechVideos.com/s113/2016)

## Trip Computer\* / Tripmeter

 
The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch is in the ON position.

To cycle through the different Trip Computer modes, press the TRIP button **A**.


To display the Tripmeter, press the TRIP button **A**, then select TRIP A or TRIP B. Press the RESET button **B** for more than 1 second to reset the Tripmeter to zero.

### REMINDERS:

- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

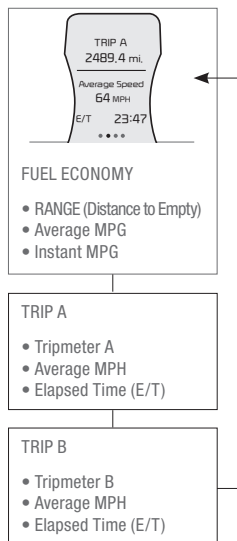

(Type B Cluster)

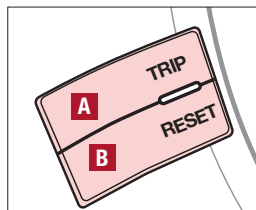 


(Located on left side of instrument cluster dash panel)

## Instant Fuel Consumption Mode\*

 Press the TRIP button **A** to cycle to the Instant Fuel Consumption Mode to calculate fuel consumption during the past few seconds.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicles
3. Don't let the engine idle longer than necessary

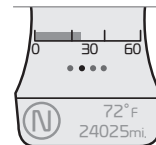

### REMINDERS:

- Not to be used in calculation or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 MPH (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (----)



## Active ECO System

Active ECO helps improve fuel economy by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the ACTIVE ECO button **A**. The green ECO indicator light **B** in the instrument cluster will illuminate, indicating that Active ECO is operating. The Active ECO System will remain on even when the ignition is cycled.

 
To turn Active ECO OFF, press the button **A** again.

*For more information on the Active ECO indicator, refer to your Owner's Manual or contact your local dealership.*

### QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

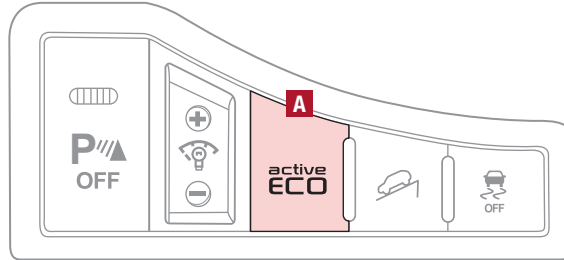

(Buttons located on left side of Driver's Panel)



(Type A cluster)

### QR CODE

#### Active ECO System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

## Back-Up Warning System (Rear Parking Assist System)\*

When the ignition is ON, the system is activated by default. Press the Back-Up Warning System OFF button **A** to deactivate the system (LED illuminated). See more information on page 34.

**REMINDER:** When ignition is cycled, the system will turn ON again.

## Instrument Panel Dimmer

With parking lights / headlights ON, toggle switch **B** up (+) or down (-) to adjust the brightness of the instrument panel illumination.

**REMINDER:** The Instrument Panel Dimmer does not adjust brightness on the audio/navigation system\* screens; use SETUP to adjust brightness on the screens.

## Downhill Brake Control (DBC)

 
DBC helps drivers maneuver down steep hills by automatically braking for them, allowing drivers to concentrate on steering.

Press  button **C** to turn DBC ON/OFF.

### QUICK TIPS

- When on, the DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

**REMINDER:** The DBC defaults to OFF, when ignition is cycled.

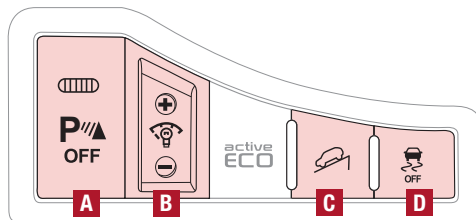

(Buttons located on left side of Driver's Panel)

## Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC button **D** to turn ESC OFF/ON.

### REMINDEES:

- ESC is turned ON by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will illuminate whenever the ESC is in operation

## Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

**REMINDER:** The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

### QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a 2-second delay before the vehicle may start rolling backward

 
## Power Windows, Window Lock & Central Door Lock

**A** Pull/Press to operate Driver's Window Auto Up/Down\*

**B** Press to Lock/Unlock All Doors

**C** Press to disable Rear Passenger Windows

**REMINDER:** When pressed **C**, window controls for all Rear Windows are disabled, including from driver's controls.

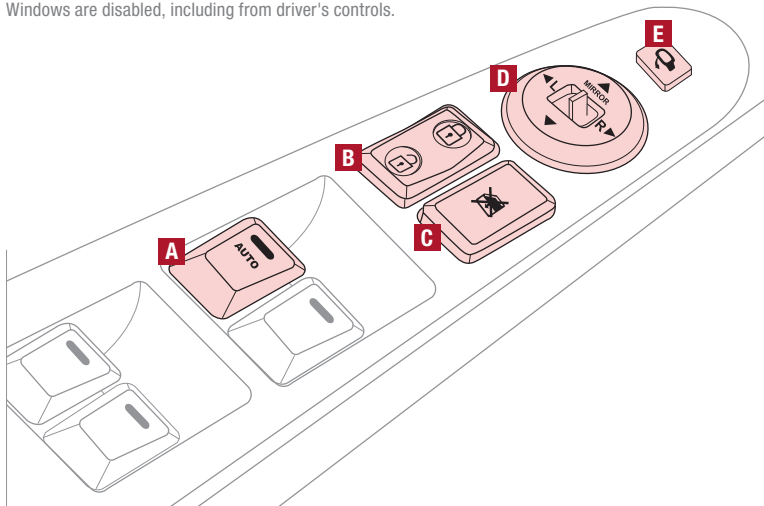

## Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved in to or out of the P (Park) position.

## Heated Outside Mirrors\*

Mirror heaters controlled with Rear Defroster.

## Power Folding Outside Mirrors\*

Toggle switch **D** left or right to select mirror. Then press arrows to adjust Power Folding Outside Mirror position.

To both fold and unfold the outside mirrors, press the folding mirror button **E**.

**REMINDER:** To lock position of mirrors, toggle switch to the neutral (center) position.

## Engine Start/Stop Button\*

### To start the engine:

 
1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in Park or Neutral

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or inside the vehicle.

### REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press

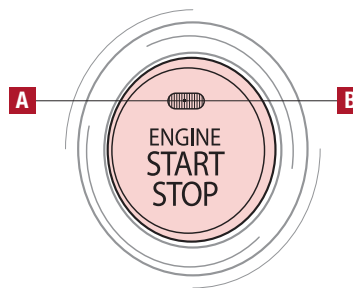

### QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **A**)

On position

- When already in the ACC position (Orange light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (Green light **B**)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (Green light **B**)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning engine on may discharge the vehicle's battery

### QR CODE

#### Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
[www.KuTechVideos.com/s113/2016](http://www.KuTechVideos.com/s113/2016)

## Headlights & High Beams

### To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

**AUTO Light\* function** — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

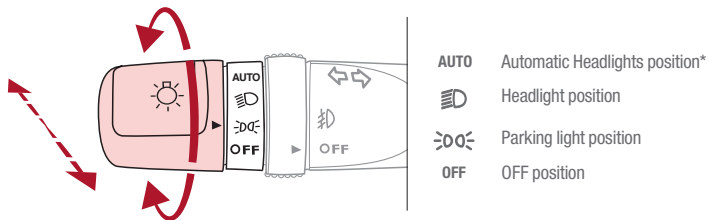


## Turn Signals & Fog Lights\*

### To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate lever ring to turn Fog Lights ON/OFF

**REMINDER:** Headlights must be ON for Fog Light operation.

 **One-Touch Lane Change Signal** is activated by moving the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

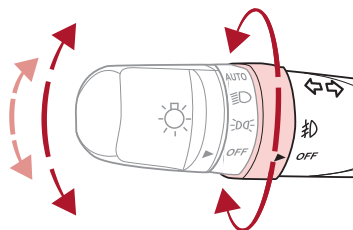

## Daytime Running Lights (DRL)\*

DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or ENGINE START/STOP button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Engine is turned off
- Switch is in the OFF position

**REMINDER:** DRL only operates during the daytime.

## QR CODE

### Sportage LED Daytime Running Lights Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

## Windshield Wipers & Washers

### To operate:

- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

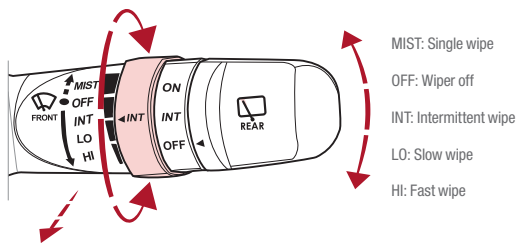

- MIST: Single wipe
- OFF: Wiper off
- INT: Intermittent wipe
- LO: Slow wipe
- HI: Fast wipe


### QUICK TIP

 Rotating INT switch up increases Intermittent wipe frequency and wipe speed. Rotating INT switch down decreases frequency of wipes.

## Rear Wiper & Washer

### To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

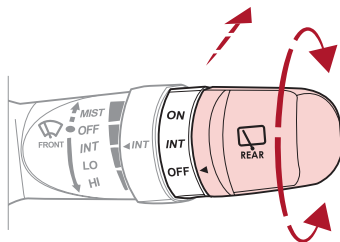

- ON: Normal wipe
- INT: Intermittent wipe\*
- OFF: Wiper off


### QUICK TIP

 On Rear Wipers, intermittent wipe function is not adjustable.

## Tilt/Telescoping Steering Wheel


To adjust the Steering Wheel, press the lock-release lever **A** down and adjust the distance **B** and desired angle **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

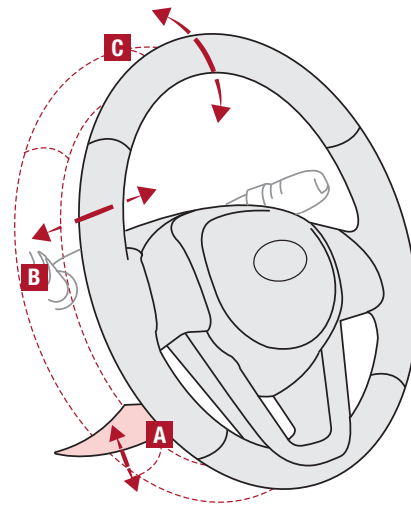

## Audio Controls
 
## Cruise Control

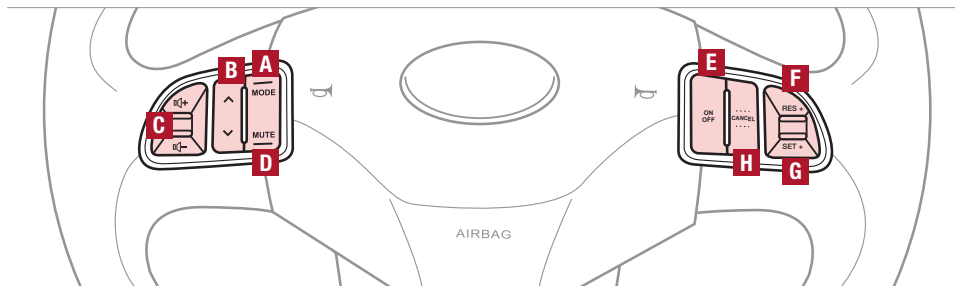

**A Audio Mode button:** Press to cycle through FM/AM/Sirius®/CD/USB/iPod/Aux/Bluetooth Audio Streaming/My Music modes

**B Seek/Preset button**  
*FM/AM/Sirius® Modes:* Press to advance through Preset Stations. Press and hold to Auto Seek  
*Media Modes:* Press to move Track Up/Down. Press & hold to Fast Forward / Rewind

**C Volume button:** Press up/down to raise/lower volume

**D MUTE button:** Press to mute all audio

### QUICK TIP

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

*Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For further audio system operations, refer to pages 16-19*

**E Cruise Control ON/OFF button:** Press to turn the Cruise Control ON/OFF

**F Resume Cruising Speed button:** Press up to resume or increase Cruising Speed

**G SET Cruising Speed button:** Press down to set or decrease Cruising Speed

 
**H Cruise Control CANCEL button:** To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

### QUICK TIPS

- Cruise Control is designed to function above approximately 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

## Bluetooth® Wireless Technology

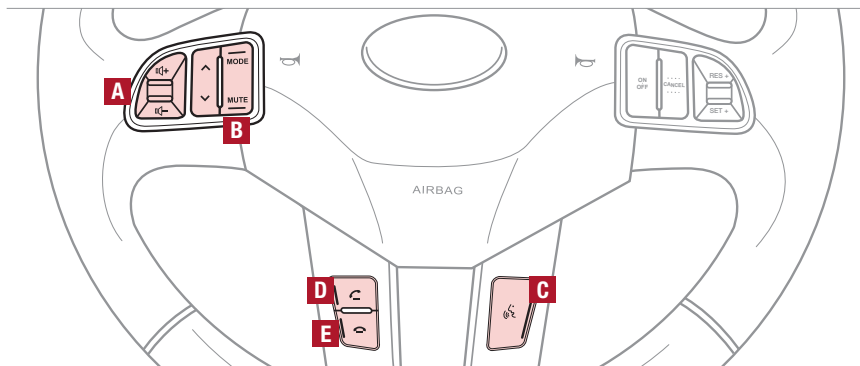

**A Volume button:** Press up/down to raise/lower speaker volume

**B MUTE button:** Press to mute the microphone during a call

**C Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system

### QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

**D Receive/Place Call button:** Press to receive/place/transfer calls. Press to place a call using voice command prompts from the system or to answer an incoming call

**E End Call button:** Press to end a call or cancel a function

### QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language setting may delete paired phones

For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.



### Bluetooth® Wireless Technology

#### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

#### QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth*® connection requests.

#### How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

#### Standard Audio Systems (Type A and B)\*

- Option 1: Press the Receive/Place Call button **D** (system will prompt you through call process)
- Option 2: Press the Talk button **C** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

#### UVO eServices System\*

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **C**. Then say the command "Call {name}" or "Dial {number}"

#### UVO eServices with Navigation System\*

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **C**. Then say the command "Call Name" or "Dial Number", followed by phone book name or number

### Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help your *Bluetooth*® Wireless Technology Voice Recognition performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

#### QR CODE

##### Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

## Standard Audio System (Type A)\*

– FM/AM/Sirius®/Media (CD, MP3, USB, iPod, AUX, My Music, BT Audio)\*

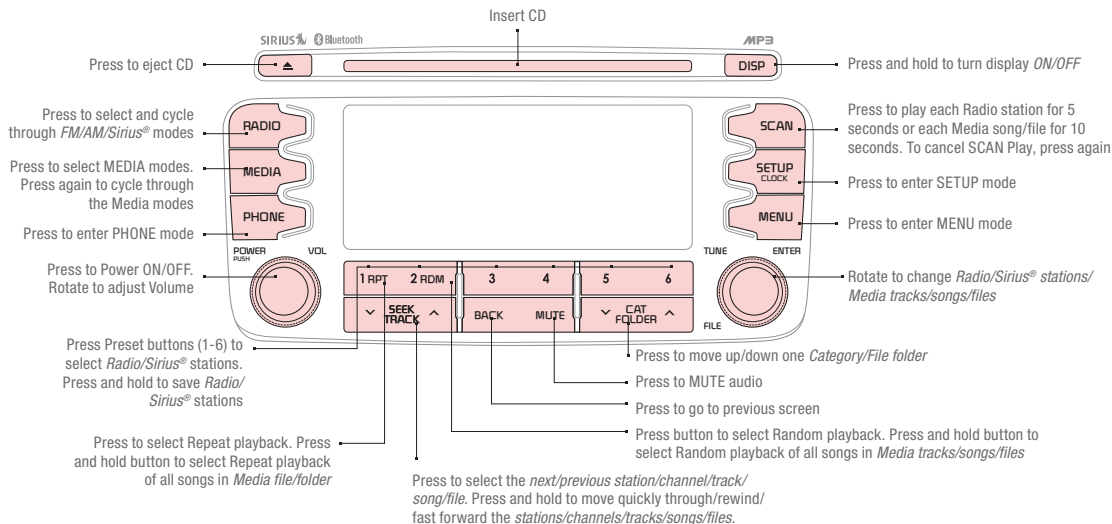

### Audio System Setup Options

Press the SETUP button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the TUNE knob to adjust the audio option selected. Audio system setup options may include the following:

- **Display settings** - Mode Popup, Media Display
- **Sound settings** - Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume
- **Clock settings** - Clock Settings, Calendar Settings, Time Format, Clock Display (When power is OFF)
- **System settings** - Memory Information, Prompt Feedback, Language

**To adjust the Sound settings** (bass, middle, treble, fader, balance) – Press the SETUP key and select Sound in the SETUP menu. Using the TUNE knob, select Sound Settings by pressing TUNE knob to enter. Then cycle to the selection and press the TUNE knob to select. Turn the TUNE knob left/right to adjust sound setting and then select Return ⇨ to exit.

For further audio system operations, refer to pages 16-19.

Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

### QR CODE

#### Standard Audio System Videos (Type A)

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



[KuTechVideos.com/audio/base\\_system](http://KuTechVideos.com/audio/base_system)

## Standard Audio System (Type B)\*

– FM/AM/Sirius®/Media (CD, MP3, USB, iPod, AUX, My Music, BT Audio)\*

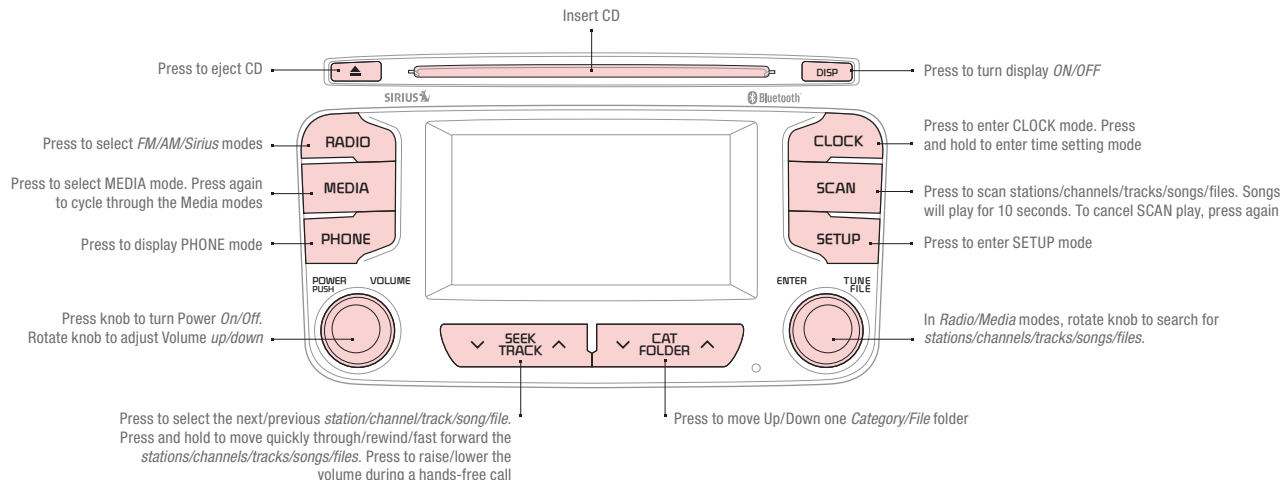

### Audio System Setup Options

Press the SETUP key, then using the touchscreen, press the menu item to enter (Display, Sound, Clock/Calendar, Phone, System). Adjust the available settings for each equipped audio system setup option by pressing the onscreen buttons/arrows. Audio system setup options may include the following:

- **Display settings** - Adjusting the Brightness, Mode Popup, MP3 Information Display
- **Sound settings** - Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume, Touchscreen Beep
- **Clock/Calendar settings** - Clock Settings, Calendar Settings, Time Format, Clock Display
- **System settings** - Memory Information, Prompt Feedback, Language

 
**To adjust the Sound settings** (bass, middle, treble, fader, balance) – When in the SETUP menu, select Sound and then Sound Setting. Adjust the settings by pressing the onscreen arrows and then return  $\Rightarrow$  to exit.

*For further audio system operations, refer to pages 16-19.*

*Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.*

## UVO eServices System\*

– FM/AM/Sirius®/Media (CD, MP3, USB, iPod, Jukebox, Aux, *Bluetooth*® Audio)

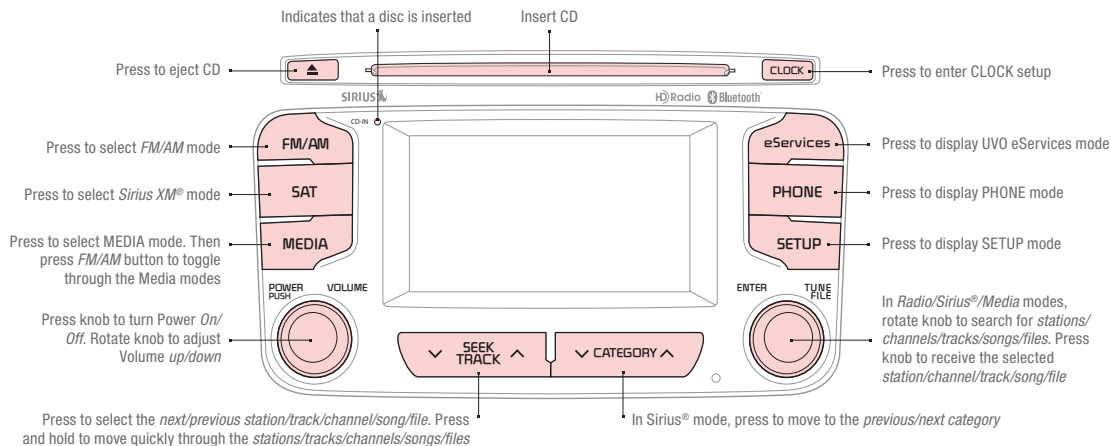

### QR CODE

#### UVO eServices System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[KuTechVideos.com/audio/UVO\\_eServices](http://KuTechVideos.com/audio/UVO_eServices)

### UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the UVO eServices App and log in to the app using your MyUVO.com account credentials
2. Register through your UVO eServices App or at MyUVO.com
3. Follow the Apps phone pairing and activation steps

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Only MP3 or WMA files may be played or copied to Jukebox. Commercial CDs or CDs with a CDDA audio format (compact disc digital audio) cannot be copied to Jukebox

 
**To adjust the Sound settings** (bass, middle, treble, fader, balance) - Select the on-screen SOUND button on the audio mode's display. Then press the on-screen CHANGE button of the selection (FADER/BALANCE, TONE). To adjust, press the on-screen arrows.

*Your vehicle's audio system may differ from that in the illustration. For more information on the UVO eServices System, refer to the UVO System User's Manual. For further audio system operations, refer to pages 16-19.*

- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the Steering Wheel
- Prolonged use of the UVO eServices System in ACC mode may drain the vehicle's battery

## UVO eServices with Navigation System\*

– FM/AM/Sirius®/Media (CD, MP3, USB, iPod, Aux, *Bluetooth*® Audio, My Music)

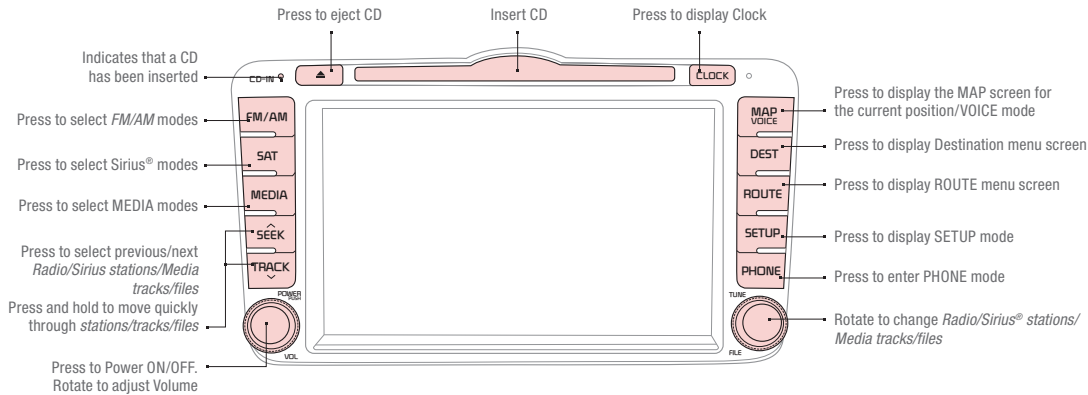

### QR CODE

#### UVO eServices with Navigation System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[KuTechVideos.com/audio/nav\\_eServices](http://KuTechVideos.com/audio/nav_eServices)

### UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the UVO eServices App and log in to the app using your MyUVO.com account credentials
2. Register through your UVO eServices App or at MyUVO.com
3. Follow the Apps phone pairing and activation step

 
**To adjust the Sound settings** (bass, middle, treble, fader, balance) - Select the on-screen **SOUND** button on the audio mode's main screen. To adjust, press the on-screen arrows.

*Your vehicle's audio system may differ from that in the illustration. For more information on the UVO eServices with Navigation System, refer to the Car Multimedia System User's Manual. For further audio system operations, refer to pages 16-18.*

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Prolonged use of the UVO eServices with Navigation System in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the UVO eServices with Navigation System should be operated with the engine running to prevent battery discharge


## Aux/USB/iPod® Port & Power Outlets

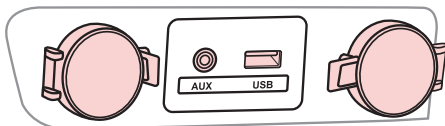

## Digital Clock

### Standard Audio System (Type A)\* Clock Setup:

 1. With Radio off, press and hold SETUP button **A**
2. Rotate knob **B** to select Clock mode, then press to enter
3. Rotate knob **B** to adjust Hour, then press to enter
4. Rotate knob **B** to adjust Minute, then press to enter

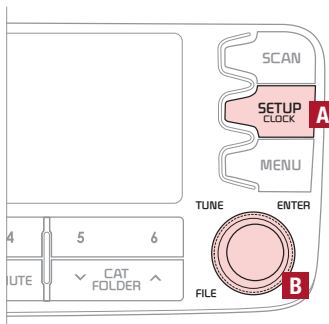

(Standard Audio System Type A\* shown)

### QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

### Standard Audio System (Type B)\* Clock Setup:

1. Briefly press the CLOCK key (under 1 second) to display time screen
2. Press and hold CLOCK key for more than 1 second to enter the time setting mode
3. Use the touchscreen buttons to adjust the time

### UVO eServices System\* Clock Setup:

Press the CLOCK button to display the Clock setting screen. Then use the on-screen buttons to navigate through setup.

### UVO eServices with Navigation System\* Clock Setup:

Press the SETUP key, then the CLOCK button to display the Clock setting screen. Then use the on-screen buttons to navigate through setup.

### QR CODE

#### USB Port Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/sf13/2016](http://www.KuTechVideos.com/sf13/2016)

## Automatic Climate Control\*

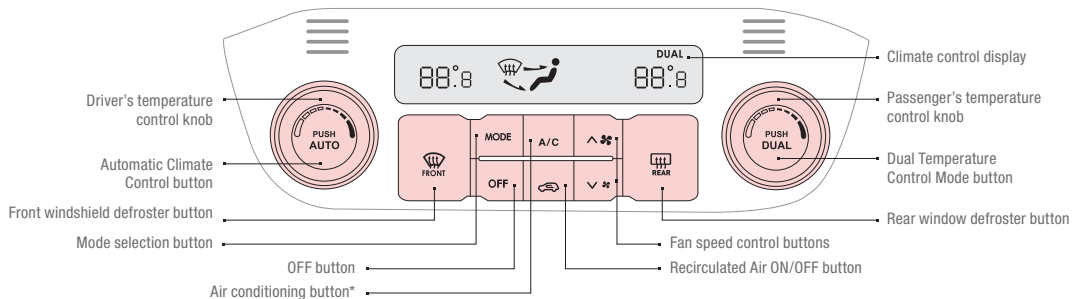

### Climate Control Auto Function

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature**
3. Press **DUAL** to select Dual Temperature Control Operation

### Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

### Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

### Air Flow Modes

To select Air Flow Modes, press the mode selection button:



Face-Level



Floor-Level



Bi-Level



Floor/Defrost-Level

### QUICK TIPS

- Defrost [~] mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

### REMINDERS:

- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or DUAL Temperature Control

*Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.*

### QR CODE

 
#### Sportage Automatic Climate Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

## Manual Climate Control\*

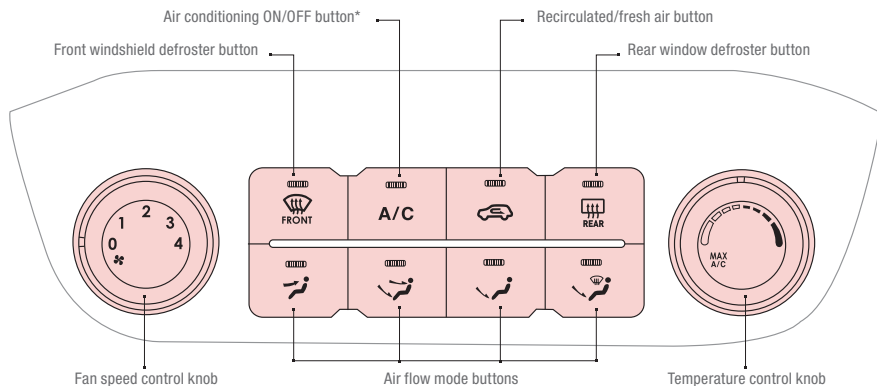


### Air Flow Modes


To select Air Flow modes, press the Mode selection buttons:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level


### Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button 

### Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set **Temperature** to desired position
3. Press the **Front Defrost** button 

### QUICK TIPS

- Defrost  mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- MAX A/C mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

**REMINDER:** Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.



## Automatic Gear Shift with Sportmatic® Shifting

**P:** Park      **[+]:** Sport Mode Upshift

**R:** Reverse      **[-]:** Sport Mode Downshift

 
**N:** Neutral

**D:** Drive

### Sport Mode:

To enter Sport mode, move shift lever from D to left gate

To shift while in Sport mode, move shift lever up [+] to upshift or down [-] to downshift.

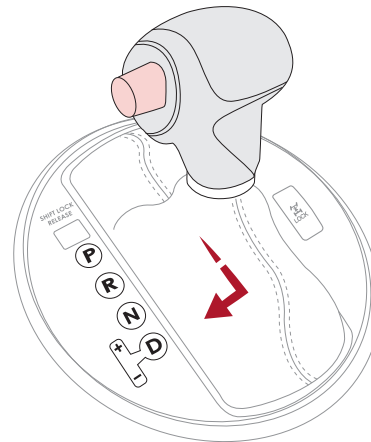

### QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

### QR CODE

#### Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

## 4WD Transfer Mode

Press the 4WD Transfer Mode selector button **A** to activate or deactivate 4WD Lock mode.

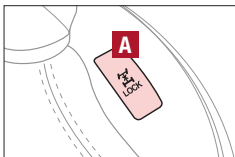

(Located near shifter)



### 4WD Auto Mode (Indicator not lit; 4WD Lock is deactivated):

The vehicle operates similar to conventional 2WD vehicles. If the system determines that there is a need for the 4WD mode, the engine's driving power is distributed to all four wheels automatically without driver intervention.

 


### 4WD Lock Mode (Indicator is lit):

Activates 4WD for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to maximize traction.

### Seat Warmers\*

Press button once for high setting (2 LEDs lit) **A**, again for low setting (1 LED lit) **B** and again to turn OFF.

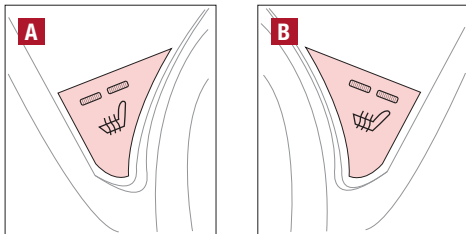


(Located on either side of gear shift)

### Seat Warmers / Ventilated Seats\*

 **Seat Warmers** — Press top of button **C** once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

**Ventilated Seats** — Press bottom of button **D** once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

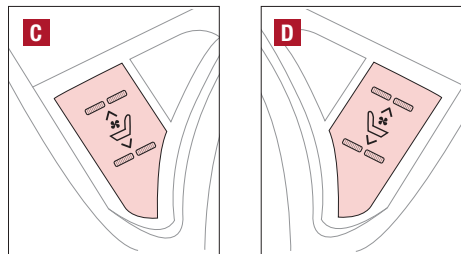

Warming - Yellow LED

Ventilating - Blue LED

(Located on either side of gear shift)

#### QUICK TIPS

- System turns OFF when ignition is cycled. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature

#### QR CODE

##### Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.




[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

## Power Adjustable Driver's Seat\*


Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar forward/backward.

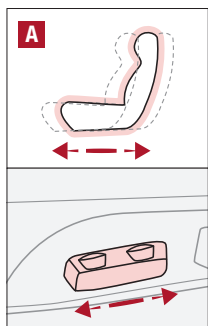


Seat

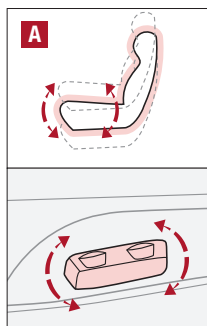 


Seat Cushion

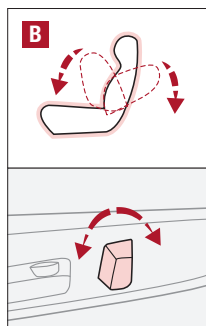 

Seatback

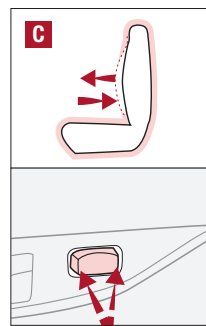 

Lumbar

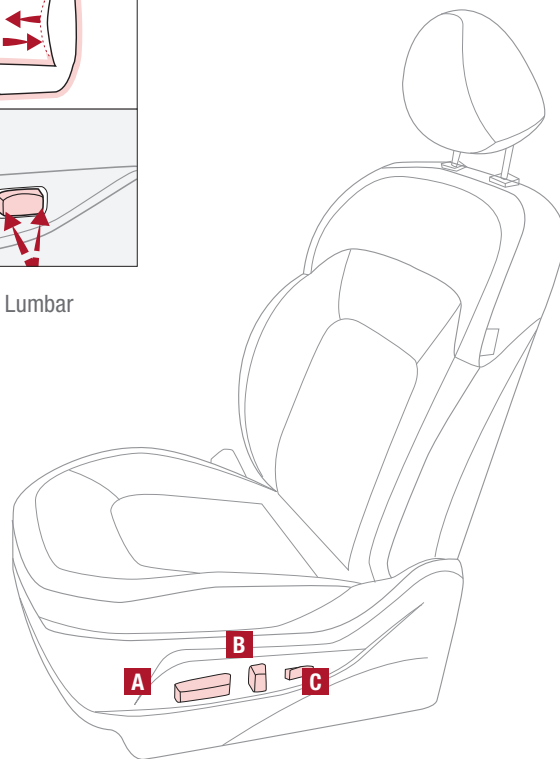 


## 6-Way Manual Adjustable Driver's Seat\*

Pull lever **A** to slide Seat forward/backward

Pull/press lever **B** to adjust Seat height

 Pull lever **C** to adjust Seatback recline

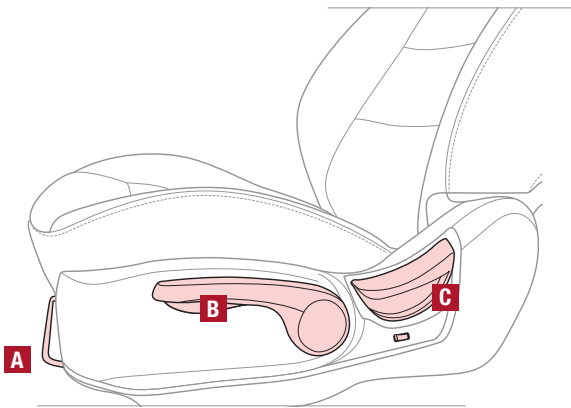

### QUICK TIP

When adjusting seat forward or backwards, ensure seat clicks or locks into place before driving the vehicle.

## Reclining/Folding Rear Seats

(Seat type with lever in front)

 
To recline the Rear Seatback:

1. Pull lever **D** up to unlock seat
2. Holding the lever **D** up, adjust Seatback to desired position **E**
3. Release the lever **D** and ensure the Seatback is locked in place

**REMINDER:** The lever must return to its original position for the Seatback to lock.

To fold the Rear Seatback:

1. Pull lever **D** up to unlock seat
2. Fold Seatback flat **F**

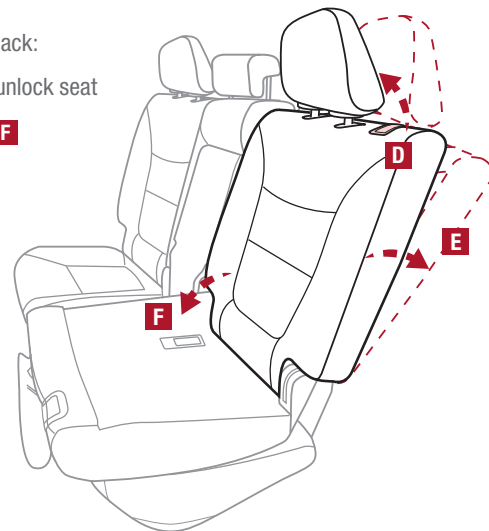


### QUICK TIP

It may be necessary to adjust the front seatbacks to fully lower rear seats.

## Front Seat Headrest Adjustment


**To adjust headrest forward** — Pull headrest forward at an upward angle to one of several positions.

 **To adjust headrest back** — Pull headrest completely forward at an upward angle, then release.

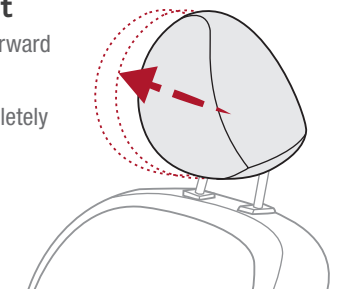

**To raise headrest** — Pull headrest up.

 **To lower headrest** — Press lock, then press the headrest down.

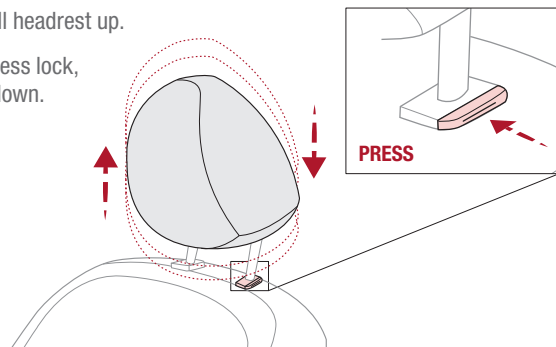


### QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest up from underneath.

## Front Active Headrests

 **To reset the headrest back** — Pull forward at an upward angle to the farthest position and release.

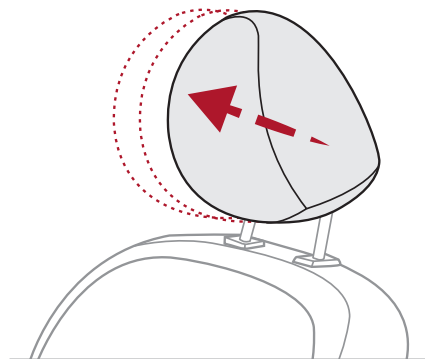

### Smart Key\*

#### Smart Key Fob:

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Rear Hatch

- C** Press and hold to unlock Rear Hatch and manually open

**REMINDER:** The Rear Hatch unlocks when the Smart Key is within close proximity of the vehicle.

- D** Press and hold for more than a half-second for Panic Alarm. To turn off Alarm, press any button

- E** Press to release Mechanical Key (Button on reverse side of fob)

#### REMINDEES:

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine
- Remote button configuration may vary depending on vehicle options

 
 
#### Driver's Door Lock/Unlock button **F**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

#### Mechanical Key **G**:

- Use to unlock/lock Driver's Door
- Use to turn Child Safety Locks (page 35)
- Use to lock glove box

*For more information on the Mechanical Key, please refer to your Owner's Manual.*

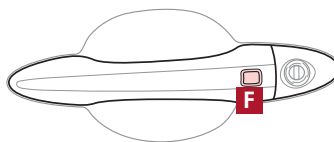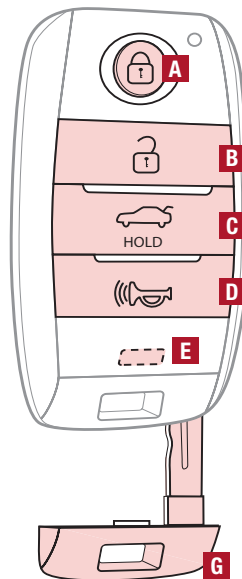

#### QR CODE

#### Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/sl13/2016](http://www.KuTechVideos.com/sl13/2016)

 
#### QUICK TIP

The Smart Key's signal can be blocked by the normal operation of a cell or smartphone. To help prevent this, store each device separately.

**REMINDER:** Remote button configuration may vary depending on vehicle options.

### Remote Keyless Entry (Folding Key)\*

- A** Press the release button to unfold the key.
- B** Press to Lock All Doors
- C** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Rear Hatch
- D** Press and hold to unlock Rear Hatch and manually open
- E** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

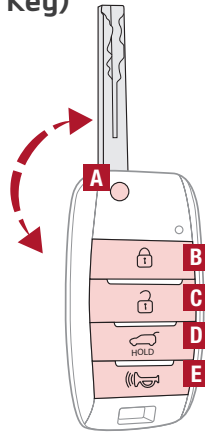


#### REMINDER:

- The Rear Hatch does not automatically open when the [D] button is pressed
- The Rear Hatch unlocks when the Smart Key is within close proximity of the vehicle
- Remote button configuration may vary depending on vehicle options


### Double-Turn Lock/Unlock All

 - Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock All Doors

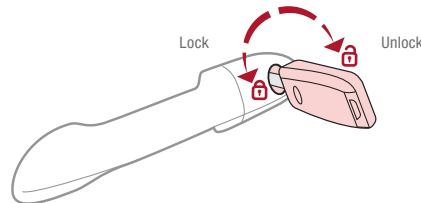

### Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

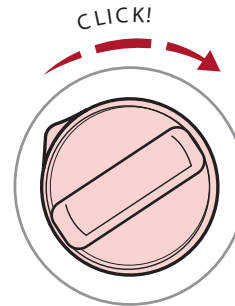

**REMINDER:** The Fuel Door Release Lever is located on the lower part of the driver's door sill.

### QR CODE

#### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



[www.KuTechVideos.com/s113/2016](http://www.KuTechVideos.com/s113/2016)

## HomeLink® with Auto-Dimming Rearview Mirror\*

- |                           |                                 |
|---------------------------|---------------------------------|
| <b>A</b> HomeLink® button | <b>E</b> Glare detection sensor |
| <b>B</b> HomeLink® button | <b>F</b> Automatic dimming ON   |
| <b>C</b> Indicator light  | <b>G</b> Automatic dimming OFF  |
| <b>D</b> HomeLink® button |                                 |

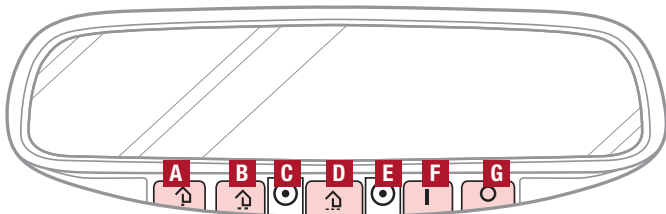

The HomeLink® / Auto-Dimming Rearview Mirror\* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press **I** button **F**
- To turn automatic dimming OFF, press **⊖** button **G**

**REMINDER:** Mirror indicator light [C] will illuminate when automatic dimming is ON.

### QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

## How to Sync Transmitter with HomeLink®\*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B** or **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

## Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

## Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*



### Map/Room Lamps

#### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the ignition or ENGINE SYSTEM START/STOP button\* is OFF.

#### Personal Lamp

 
Push the lens **A** to turn the map lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

#### Map/Room Lamp switch

DOOR - When pressed or in the DOOR position **B**, the lamp turns on when any door is opened.


ON - In the ON position **C**, the lamp stays on continuously.

OFF - In the OFF position **C**, the lamp is off even if the door is opened.

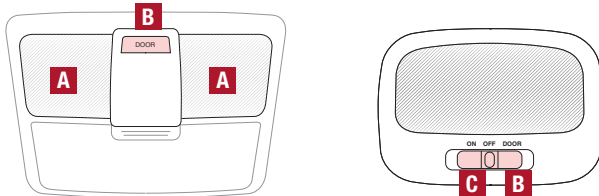

### Sunvisor

 Use the Sunvisor to shield direct light through the front or side windows.

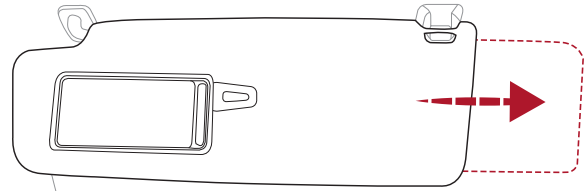

#### REMINDERS:

- Sunvisor may not shield all direct light
- Do not operate the vehicle if the Sunvisor is impairing your visibility
- The Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows.

#### QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

### Panoramic Sunroof Operation\*

The sunroof operation is controlled through a multi-directional switch/lever. The ignition or ENGINE START/STOP button\* needs to be in the ON position to operate the Sunroof. The Sunshade is manually operated.

#### Slide the Sunshade:

Open/Close: Manually slide the Sunshade forward/backward to the desired position.

#### Slide the Sunroof:

Auto Open: Slide lever **A** backward to the farthest position and release.

Auto Close: Slide the lever **A** forward to the farthest position and release.

#### Slide the Sunroof (with Sunshade open):

 
Open: Slide the lever **A** backward to the first detent position and release.

Close: Slide the lever **A** forward to the first detent position or pull the lever downward.

#### Tilt the Sunroof:

Raise: Push lever **A** upward.

Lower: Pull lever **A** downward.

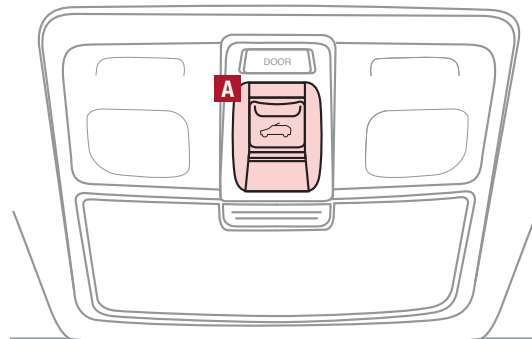

#### REMINDERS:

- Sunshade must be open before operating the sunroof
- Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving

#### QUICK TIP

 
To stop the Sunroof at any position, push or pull the sunroof control lever in any direction.

### Rear-Camera Display\*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the UVO System\*, UVO eServices System\* or UVO eServices with Navigation\* screens while the vehicle is in Reverse.

**The Rear-Camera Display activates when the:**

1. ENGINE START/STOP\* button is in the ON position (Green Light)
2. Gear Shift Lever is in the R (Reverse) position

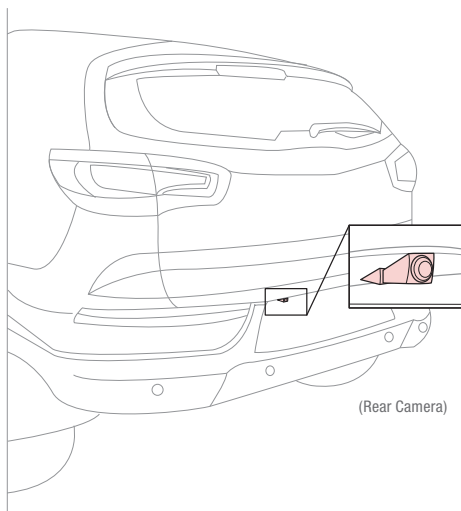


(Rear-Camera Display)

**REMINDER:** While camera is active, only the volume controls on the Audio System can be operated

*The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display may not detect every object behind the vehicle*

## Rear Hatch Release Button

 Located underneath the Rear Hatch. With Rear Hatch unlocked, press the Rear Hatch Release Button and pull the Rear Hatch up by the handle to open.

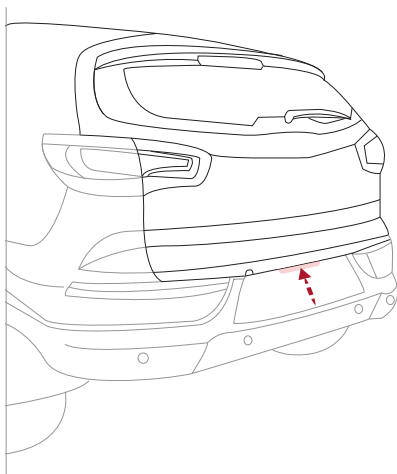

### QUICK TIPS

- The Rear Hatch must be unlocked before it can be opened by the Rear Hatch Release Button
- The Rear Hatch unlocks automatically, and can then be opened, when the Smart Key fob\* is within close proximity to the vehicle

 
 
## Back-Up Warning System (Rear Parking Assist System)\*

The Back-Up Warning System is not a safety device. The Back-Up Warning System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

To deactivate system, press the Back-Up Warning System OFF button **A** to deactivate the system (LED illuminated).

### REMINDERS:

- If the vehicle is moving at speeds over 6 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first
- When ignition is cycled, the system will turn ON again.

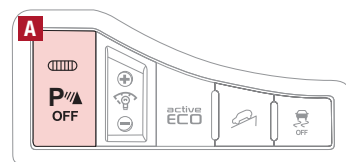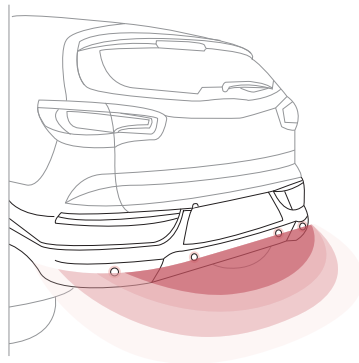

(Button located on left side of Driver's Panel)

### QR CODE

#### Rear Parking Assist System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.KuTechVideos.com/s113/2016](http://www.KuTechVideos.com/s113/2016)

*The Back-Up Warning System is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Back-Up Warning System may not detect every object behind the vehicle.*

 
### Hood Release Lever and Latch

#### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood


#### Closing the Hood:

Lower the Hood and then press down to securely lock in place.

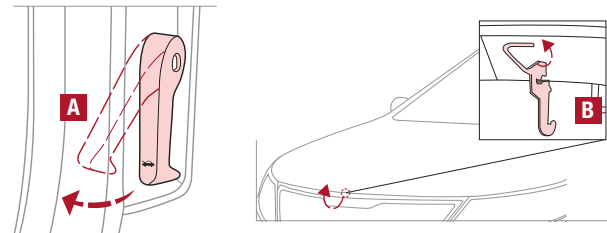

### Fuel Door Release Lever

 Lift the Lever **C** upward to release the fuel door.

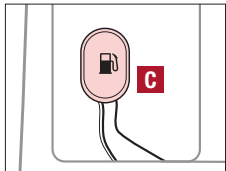


(Lever located on the driver's floor near door sill)

### Child Safety Locks

 Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.

**REMINDER:** Child Safety Lock is located on rear passenger's door jamb.

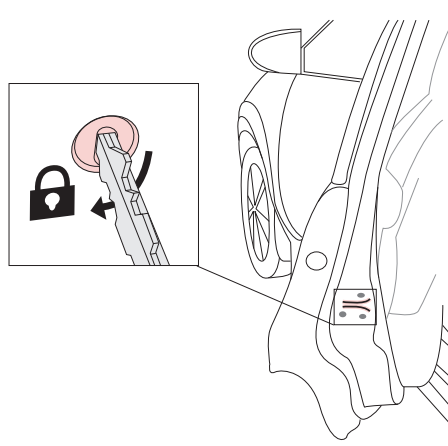


## Seat Belts

To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

 **REMINDER:** For maximum protection, always wear your seat belt.

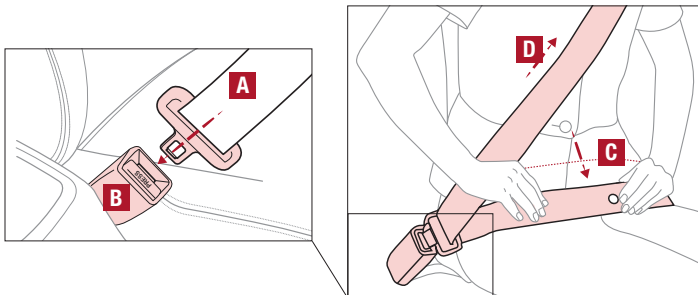

### QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

## Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

## Occupant Detection System (ODS) / Passenger Airbag Off Indicator

ODS detects the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" indicator will illuminate.



## Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

### 7,500 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)

#### INSPECT\*

- |   |                                  |
|---|----------------------------------|
| • Air cleaner filter  | • Brake pedal and operation      |
| • Air conditioning compressor, refrigerant and performance**          | • Chassis/body nuts and bolts    |
| • Cooling system <sup>2</sup>   | • Disc brakes and pads**         |
| • Drive shaft and boots - lubricate front and rear driveshaft u-joint | • Exhaust pipe and muffler       |
| • Battery condition   | • Front suspension ball joints   |
| • Brake fluid/clutch** fluid  | • Lubricate all locks and hinges |
| • Brake lines, hoses and connections                                  | • Parking brakes                 |
|   | • Steering operation and linkage |
|   | • Suspension mounting bolts      |

\*And, if necessary, adjust, correct, clean or replace \*\*If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended.

Additives are available from your authorized Kia dealer along with

information on how to use them. Do not mix other additives. 2. Inspect "Water Pump" when replacing the drive belt or timing belt.

### 15,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Climate control air filter\*\*
- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)

#### INSPECT\*

- |   |                                  |
|---|----------------------------------|
| • Air cleaner filter  | • Brake pedal and operation      |
| • Air conditioning compressor, refrigerant and performance**          | • Chassis/body nuts and bolts    |
| • Cooling system <sup>2</sup>   | • Disc brakes and pads**         |
| • Drive shaft and boots - lubricate front and rear driveshaft u-joint | • Exhaust pipe and muffler       |
| • Battery condition   | • Front suspension ball joints   |
| • Brake fluid/clutch** fluid  | • Lubricate all locks and hinges |
| • Brake lines, hoses and connections                                  | • Parking brakes                 |
|   | • Steering operation and linkage |
|   | • Suspension mounting bolts      |

\*And, if necessary, adjust, correct, clean or replace \*\*If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer

along with information on how to use them. Do not mix other additives. 2. Inspect "Water Pump" when replacing the drive belt or timing belt.

#### QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO eServices only - See page 18/19 for setup information)

## Normal Maintenance Schedule (Continued)

### 22,500 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)

### 30,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Air cleaner filter
- Climate control air filter\*\*
- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)

#### INSPECT\*

- |   |                                      |
|---|--------------------------------------|
| • Air conditioning compressor, refrigerant and performance**          | • Brake lines, hoses and connections |
| • Cooling system <sup>2</sup>   | • Brake pedal and operation          |
| • Drive shaft and boots - lubricate front and rear driveshaft u-joint | • Chassis/body nuts and bolts        |
| • Fuel filter <sup>3</sup> , fuel line, hoses and connection          | • Disc brakes and pads**             |
| • Fuel tank air filter** <sup>3</sup>                                 | • Exhaust pipe and muffler           |
| • Propeller shaft (4WD)**   | • Front suspension ball joints       |
| • Vapor hose and fuel filler cap                                      | • Lubricate all locks and hinges     |
| • Battery condition   | • Parking brakes                     |
| • Brake fluid/clutch** fluid  | • Steering operation and linkage     |
|   | • Suspension mounting bolts          |

\*And, if necessary, adjust, correct, clean or replace \*\*If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. 2. Inspect "Water Pump" when replacing the drive belt or timing belt. 3. Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.



## Normal Maintenance Schedule (Continued)

### 37,500 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)

#### INSPECT\*

- Manual transaxle fluid\*\*
- Rear differential oil (4WD)\*\*<sup>2</sup>
- Transfer case oil (4WD)\*\*<sup>2</sup>

\*And, if necessary, adjust, correct, clean or replace \*\*If equipped  
 1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. 2. Transfer case oil and rear differential oil should be changed anytime they have been submerged in water.

### 45,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Climate control air filter\*\*
- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)
- Spark plugs (iridium coated; T-GDI engine)

#### INSPECT\*

- Air cleaner filter
- Air conditioning compressor, refrigerant and performance\*\*
- Cooling system<sup>2</sup>
- Drive shaft and boots - lubricate front and rear driveshaft u-joint
- Propeller shaft (4WD)\*\*
- Battery condition
- Brake fluid/clutch\*\* fluid
- Brake lines, hoses and connections
- Brake pedal and operation
- Chassis/body nuts and bolts
- Disc brakes and pads\*\*
- Exhaust pipe and muffler
- Front suspension ball joints
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

\*And, if necessary, adjust, correct, clean or replace \*\*If equipped  
 1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. 2. Inspect "Water Pump" when replacing the drive belt or timing belt.

## Normal Maintenance Schedule (Continued)

### 52,500 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)

### 60,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup> (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

#### REPLACE

- Air cleaner filter
- Climate control air filter\*\*
- Engine oil and filter (GDI Engine - Every 7,500 miles; T-GDI Engine - At first, replace at 3,000 miles, after that, every 5,000 miles)
- Spark plugs (iridium coated; T-GDI engine)

#### INSPECT\*

- |  |                                       |                                  |
|--|---------------------------------------|----------------------------------|
| • Air conditioning compressor, refrigerant and performance**             | • Fuel tank air filter** <sup>4</sup> | • Chassis/body nuts and bolts    |
| • Cooling system <sup>2</sup>  | • Propeller shaft (4WD)**             | • Disc brakes and pads**         |
| • Drive belt <sup>3</sup> (First, 60,000 miles after every 15,000 miles) | • Valve clearance <sup>5</sup>        | • Exhaust pipe and muffler       |
| • Drive shaft and boots - lubricate front and rear driveshaft u-joint    | • Vapor hose and fuel filler cap      | • Front suspension ball joints   |
| • Fuel filter <sup>4</sup> , fuel line, hoses and connection             | • Battery condition                   | • Lubricate all locks and hinges |
|  | • Brake fluid/clutch** fluid          | • Parking brakes                 |
|  | • Brake lines, hoses and connections  | • Steering operation and linkage |
|  | • Brake pedal and operation           | • Suspension mounting bolts      |

\*And, if necessary, adjust, correct, clean or replace \*\*If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.  
 2. Inspect "Water Pump" when replacing the drive belt or timing belt. 3. Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details. 4. Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details. 5. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

# LEGAL DISCLAIMERS

**Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.**

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

---

**Airbags:** For maximum protection, always wear your seat belt.

**Apps:** All information contained herein was based upon the latest available information at the time of appstore registration. Descriptions are believed to be correct, and Kia Motors Corporation (KMC) makes every effort to ensure accuracy, however, accuracy cannot be guaranteed. From time to time, KMC may need to update or make changes to the vehicle features and other vehicle information reported in this app. KMC, by the publication and dissemination of this material, does not create any warranties, either express or implied, to any Kia products. Contact your local Kia dealer for the most current information.

**Back-Up Warning System (Rear Parking Assist System):** Back-Up Warning System is not a substitute for safe driving, and may not detect every object behind vehicle. Always drive safely and use caution.

**Bluetooth® Wireless Technology:** A compatible *Bluetooth®* wireless technology-enabled cell phone is required to use *Bluetooth®* wireless technology. The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

**Downhill Brake Control (DBC), Electronic Stability Control:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

**Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.

**Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

**Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.

**Hill-Start Assist:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

**HomeLink®** is a registered trademark of Gentex Corporation.

**iPod®** is a registered trademark of Apple Inc. iPod® mobile digital device sold separately, and connectivity requires the Kia accessory cable.

**Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.

**Rear-Camera Display:** Rear-Camera Display is not a substitute for safe driving, and may not detect all objects behind vehicle. Always drive safely and use caution up.

**SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2015 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

**Sportmatic®** is a registered trademark of Kia Motors America.

**Steering Wheel Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

**Sunvisor:** Sunvisor may not shield all direct light. Do not operate the vehicle if Sunvisor is impairing your visibility.

**Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

**TPMS:** Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

**UVO eServices:** Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

**UVO eServices app:** App uses your smartphone data service. Normal cellular service rates will apply.

**UVO eServices with Navigation:** Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.



© 2015 Kia Motors America, Inc. All rights reserved.

Part Number: UL160-PS-004

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)



# SPORTAGE CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_ Mileage: \_\_\_\_\_

Dealership Name: \_\_\_\_\_ Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

 
## BEFORE DELIVERY

- Test and confirm "Good Battery" using the Kia GR8-1299 battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)


## KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control – pages 21-22  
Demonstrate Air Flow modes, Defogging and Defrosting Windshield

Automatic\*

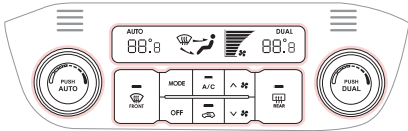


Manual\*

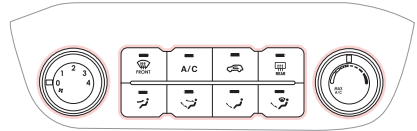 

- Windshield Wipers & Washers – page 12

**To operate:**

 - Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

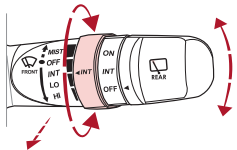


- MIST: Single wipe
- OFF: Wiper off
- INT: Intermittent wipe
- LO: Slow wipe
- HI: Fast wipe

- Rear Wiper & Washer – page 12

**To operate:**

 - Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

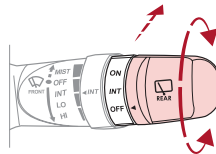

- ON: Normal wipe
- INT: Intermittent wipe\*
- OFF: Wiper off




# SPORTAGE CUSTOMER DELIVERY CHECKLIST

 
## KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- Standard Audio System\* (Type A) – page 16  
For more information, refer to the Owner's Manual.

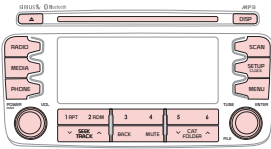

 - Standard Audio System\* (Type B) – page 17  
For more information, refer to the Owner's Manual.

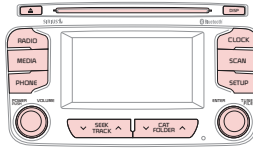

 
- UVO eServices System\* – page 18  
For more information, refer to the UVO System User's Manual.

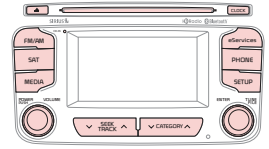


- UVO eServices with Navigation System\* – page 19  
For more information, refer to the Car Multimedia System User's Manual.



 - Cruise Control – page 13  
Demonstrate operation

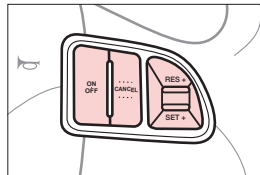

 - Bluetooth® Wireless Technology – pages 14-15  
Demonstrate operation

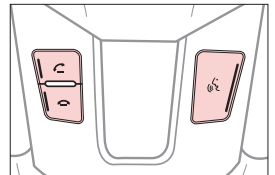

- Active ECO System – page 7
- Back-Up Warning System\* – page 34
- Digital Clock – page 20
- Engine Start/Stop Button\* – page 10
- Front Active Headrests – page 27
- HomeLink® with Auto-Dimming Rearview Mirror\* – page 30
- Panoramic Sunroof Operation\* – page 32
- Passenger Airbag Off Indicator – page 36

- Rear-Camera Display\* – page 33
- Reclining/Folding Rear Seats – page 26
- Seat Warmers / Ventilated Seats\* – page 24
- Smart Key\* – page 28
- Sunvisor – page 31
- Tire Pressure Monitoring System (TPMS) – page 5
- Aux/USB/iPod® Port & Power Outlets – page 20

## DURING DELIVERY

\*if equipped

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours & Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_ Date: \_\_\_\_\_

Customer: \_\_\_\_\_ Date: \_\_\_\_\_