

# K900

## FEATURES & FUNCTIONS GUIDE



# GETTING TO KNOW YOUR K900



## **Congratulations on Your New Kia Purchase!**

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

---

### **Using This Guide**

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact, and assumes no liability in connection with such changes.

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

[www.kia.com](http://www.kia.com)

Consumer Affairs - Roadside Assistance: 1-855-4KIAVIP (855-454-2847) or 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

## Essential Features

Aux/USB/iPod® Port & Power Outlets	25	Head-Up Display (HUD)*	07
Advanced Smart Cruise Control (ASCC)*	18	Smart Trunk	38
Automatic Transmission (Shift by Wire) and Sport Mode	28	Rear Passenger's Control System	37
UVO Luxury Services with Premium Navigation System	24	Surround View Monitoring (SVM) System*	31
Bluetooth® Wireless Technology	20	Steering Wheel Adjustment	15
Climate Control	26	Smart Key	40
Driver Information System (DIS) Controls	22	Tire Pressure Monitoring System (TPMS)	05
Power Front Seat Headrest Adjustment*	35	Windshield Wipers and Washers	17

## Videos & QR Codes . . . . . 02

## Instrument Cluster . . . . . 03-06

Instrument Cluster Overview / Indicators & Warning Lights	03
Active ECO System	04
Fuel Economy	04
Tire Pressure Monitoring System (TPMS)	05
LCD Instrument Cluster Modes	06
Trip Computer / Tripmeter	06

## Driver's Panel . . . . . 07-14

Head-Up Display (HUD)*	07
Instrument Panel Dimmer	08
Electronic Stability Control (ESC) /Traction Control System (TCS)	08
Hill-Start Assist Control (HAC)	08
Blind Spot Detection (BSD) System*	09
Lane Departure Warning System (LDWS)*	10
Fuel Door Release Button	10
Power Trunk Main Control Lever	10
Reverse Parking Aid Function	11
Parking Assist System	12
Parking Guide System (PGS) / Rear-Camera Display*	12
Power Windows, Window Lock & Central Door Lock	13
Power Folding Outside Mirrors	13
Heated Outside Mirrors	13
Auto Door Lock/Unlock	13
Engine Start/Stop Button	14

## Steering Wheel Controls . . . . . 15-21

Power Tilt/Telescoping Steering Wheel	15
Heated Steering Wheel*	15
Headlights & High Beams	16
Turn Signals & Fog Lights	16
Windshield Wipers & Washers	17
LCD Controls and Modes	17
Advanced Smart Cruise Control (ASCC)*	18
Audio Controls	19
Bluetooth® Wireless Technology	20

## Center Panel . . . . . 22-33

Driver Information System (DIS) Controls	22
UVO Luxury Services with Premium Navigation	24
Clock	25
Aux/USB/iPod® Port & Power Outlets	25

## Center Panel (Continued) . . . . . 22-33

Automatic Climate Control System	26
Automatic Transmission (Shift by Wire) and Sport Mode	28
Electric Parking Brake (EPB)	29
Auto Hold	29
Drive Mode Integrated Control System	30
Surround View Monitoring (SVM) System*	31
Front Blind Spot Monitoring System*	32
Power Rear Curtain	33

## Seating . . . . . 34-37

Seat Warmers / Ventilated Seats	34
Power Adjustable Driver's Seat	35
Power Front Seat Headrest Adjustment*	35
Driver Position Memory System	36
Power Reclining Rear Seats*	36
Rear Passenger's Control System	37

## Other Key Features . . . . . 38-47

Smart Power Trunk	38
Smart Key	40
Map/Room Lamps	42
Panoramic Sunroof Operation	43
Auto-Dimming Rearview Mirror with HomeLink®	44
Sunvisor	46
Hood Release Lever and Latch	46
Fuel Cap/Malfunction Indicator (Check Engine Light)	47
Child Safety Locks	47

## Safety Features . . . . . 48-49

Seat Belts	48
Pre-Safe Seat Belt (PSB)*	48
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	49

## Normal Maintenance Schedule . . . . . 50

## Legal Disclaimers (See Inside Back Cover)

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

## QR Codes

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: [www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017). Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

### What are QR Codes?

A QR Code is a square, 2-dimensional Bar Code that can be read by mobile devices loaded with an appropriate Bar Code or QR Code Reader app. The app reads the Bar Code image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

### How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Kia One-Click Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

### How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an App Store or Marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
  - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
  - With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
  - For operation specifics, refer to the instructions that come with the QR Code Reader app

### ONE-CLICK FUEL CAP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code scanning
  - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connecting" message appears and then nothing happens or there's a "connection error" message. These messages typically indicate that your device is having trouble connecting to the Internet.

**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.



(Type B Instrument Cluster)

## Instrument Cluster Overview

- |                                 |                                        |                        |
|---------------------------------|----------------------------------------|------------------------|
| <b>A</b> Tachometer             | <b>D</b> Indicator & Warning Lights    | <b>G</b> Trip Computer |
| <b>B</b> Turn Signal Indicators | <b>E</b> Gear Shift Position Indicator | <b>H</b> Fuel Gauge    |
| <b>C</b> Speedometer            | <b>F</b> Odometer                      |                        |

## Indicators & Warning Lights

- |                                                                                        |                                              |                                                                |
|----------------------------------------------------------------------------------------|----------------------------------------------|----------------------------------------------------------------|
| <b>AFLS</b> Adaptive Front Lighting System Warning Light                               | Malfunction Indicator                        | <b>SET</b> Cruise "Set Velocity Value" Indicator               |
| Light ON Indicator                                                                     | Trunk Open Warning Light                     | Cruise Indicator                                               |
| Advanced Smart Cruise Control Warning Indicator*                                       | Front Fog Light Indicator                    | Engine Oil Pressure Warning Light                              |
| Advanced Smart Cruise Control Radar Warning Light*                                     | Seat Belt Warning Light                      | Engine Coolant Temperature Warning Light                       |
| Lane Departure Warning System (LDWS) Indicator*                                        | Parking Brake & Brake Fluid Warning Light    | Low Fuel Level Warning Light                                   |
| <b>EPB</b> Electric Parking Brake                                                      | Door Ajar Warning Light                      | Electronic Brake Force Distribution (EBD) System Warning Light |
| Immobilizer Indicator                                                                  | Airbag Warning Light                         | Autonomous Emergency Braking (AEB) Warning Light*              |
| High Beam Indicator                                                                    | Low Windshield Washer Fluid                  | ECO/SPORT/SNOW/SMART Mode Indicator                            |
| LED Headlamp Warning Light*                                                            | Turn Signal Indicators                       | <b>PSB</b> PSB Pre-Safe Seat Belt Warning Light*               |
| Electronic Stability Control (ESC) Warning Indicator                                   | Anti-Lock Braking System (ABS) Warning Light |                                                                |
| Electronic Stability Control (ESC) OFF Indicator                                       | Auto Hold Indicator                          |                                                                |
| Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator | Charging System Warning Light                |                                                                |

**REMINDER:** Your vehicle's instrument cluster & indicator light locations may differ from those in the images. See your Owner's Manual for more details.

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.





(Button located on center panel below the gear shift)

## Active ECO System

When activated, the Active ECO system optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **A**, scroll through the modes then select ECO.

A green ECO indicator will illuminate on the instrument cluster (indicating that you are getting optimal fuel economy).

**REMINDER:** When the Active ECO system is turned ON and ignition is cycled, the system remains ON.

### ECO MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

## Fuel Economy

Several factors contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

### FUEL ECONOMY VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.





[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

**REMINDER:** Driving range varies depending on a vehicle's fuel tank size, e.g., 12-gal. vs. 24-gal. Even though two vehicles' MPG may be the same, the vehicle with the larger tank will have greater range.



## Tire Pressure Monitoring System (TPMS)

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator  will illuminate if one or more tires is significantly underinflated, or if a spare tire has been installed that does not have a TPMS device or when the outside temperature drops considerably.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator  showing which tire(s) are underinflated.

- Inflate tire(s) to specifications using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute then illuminate. See dealer for service

### TPMS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressure and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

**REMINDER:** Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).



(Type B Instrument Cluster)

### LCD Instrument Cluster Modes

The LCD Instrument Cluster modes can be changed by using the control buttons **A** on the right side of the steering wheel.


Press Mode buttons **</>** to change LCD mode.

Press Move buttons **▲/▼** to select item.

Press Select/Reset button **OK** in center to set/reset the item.

### LCD Screen Modes **B**:


 **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.

 **Turn By Turn (TBT) Mode\*:** Displays the state of the navigation system

 **Advanced Smart Cruise Control (ASCC) / Lane Departure Warning System (LDWS) Mode\*:** Displays the state of ASCC and LDWS

 **A/V Mode:** Displays the state of the A/V System


 **Information Mode:** Provides service intervals and pressure status of each tire


 **User Settings Mode:** Change settings of the doors, lamps and other features

### Trip Computer / Tripmeter

The Trip Computer is a driver information system that displays information related to driving when the ENGINE START/STOP button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode buttons **</>** on the right side of the steering wheel.


When in the Trip Computer mode , press the Move buttons **▲/▼** to cycle through the screens. When displaying TRIP A or TRIP B screens, press and hold the **OK** button to reset the Tripmeter to zero.

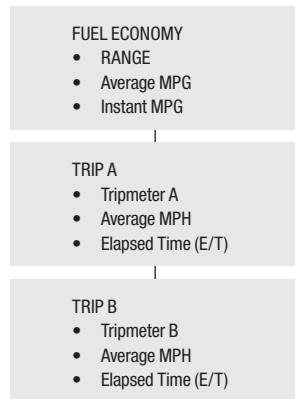

### REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected



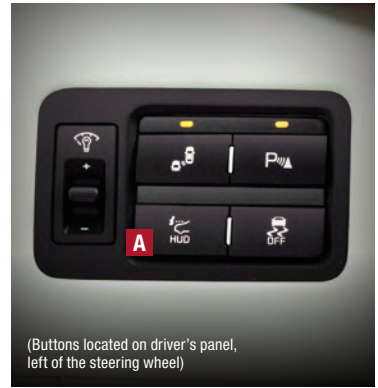

(Buttons located on driver's panel, left of the steering wheel)

## Head-Up Display (HUD)\*

The Head-Up Display (HUD) is a transparent display that projects a snippet of information from the instrument cluster and navigation system onto the windshield glass.

Press the HUD button **A** to turn the display ON/OFF.

The HUD displays:

- Turn By Turn (TBT) navigation information
- Road signs
- Speedometer
- Cruise setting speed
- Advanced Smart Cruise Control (ASCC)
- information\*
- Lane Departure Warning System (LDWS) information\*
- Blind Spot Detection (BSD) system information\*
- Warning lights (low fuel)

## Head-Up Display (HUD) User Settings

Drivers can adjust the HUD settings from the LCD Instrument Cluster modes in User Settings. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Select: Activate or deactivate HUD content (TBT\*\*, ASCC, LDWS, BSD)
- Speedometer Size: Choose the size of the HUD speedometer (Small, Medium, Large)
- Speedometer Color: Choose the color of the HUD speedometer (White, Amber, Green)

## HEAD-UP DISPLAY (HUD) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

## REMINDERS:

- The HUD image on the windshield glass may not be visible when:
  - The driver has poor sitting posture
  - The driver is wearing polarized sunglasses
  - There is an object covering the HUD
  - Driving on a wet road
  - Excessive lighting inside or outside the vehicle
- Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass.

*\*\*If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD.*



(Buttons located on driver's panel, left of the steering wheel)

## Instrument Panel Dimmer

With parking lights/headlights ON, press **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

**REMINDER:** The Instrument Panel Dimmer does not adjust brightness on the navigation system screen. Use navigation setup to adjust brightness on the navigation system.

## Electronic Stability Control (ESC) / Traction Control System (TCS)

Electronic Stability Control (ESC) is designed to help stabilize the vehicle during cornering maneuvers. Traction Control System (TCS) helps improve traction while accelerating on slippery surfaces. It is a good idea to keep both ESC and TCS turned on for daily driving whenever possible.

Press the ESC button **B** to turn Electronic Stability Control and Traction Control System OFF/ON.

To turn Electronic Stability Control and Traction Control System OFF, press and hold the ESC button for more than 3 seconds. Press again to turn ON.

### REMINDEES:

- ESC is active by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC indicator light in the instrument cluster will be lit momentarily whenever ESC is active

*For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.*

## Hill-start Assist Control (HAC)


Hill-start Assist Control (HAC) helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

HAC automatically activates whether ESC is OFF or ON but does NOT activate when ESC has malfunctioned.

### Quick Tip

When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.

**REMINDER:** HAC does not operate when the gear shift is in P (Park) or N (Neutral) position.

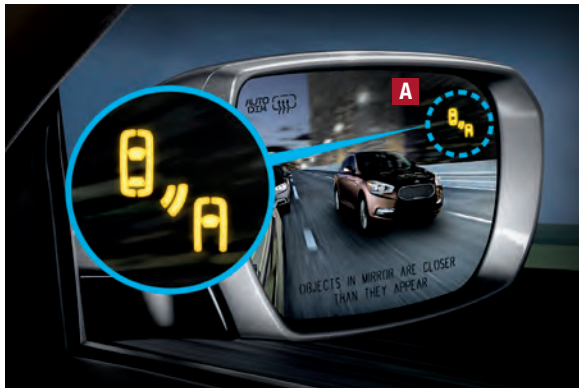

(Buttons located on driver's panel, left of the steering wheel)

## Blind Spot Detection (BSD) System\*

The Blind Spot Detection (BSD) system uses radar sensors to monitor surrounding areas and help alert the driver to nearby vehicles before changing lanes. With the ENGINE START/STOP button in the ON position, press the BSD button **B** to turn the system ON. The button light will illuminate.

The system will activate when the vehicle is traveling more than 20 mph and will alert the driver if another vehicle is detected by the radar sensor.

**1st-stage alert:** When another vehicle is detected within the BSD system boundary, a yellow indicator will illuminate **A** on the outside rearview mirrors.

**2nd-stage alert:** When 1st stage alert is on and the driver activates a turn signal, a flashing red indicator will illuminate **A** on the outside rearview mirrors and the system will sound an alert.

## Rear Cross Traffic Alert (RCTA)

If the Rear Cross Traffic Alert (RCTA) system sensors detect vehicles approaching from the left or right side, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, under these conditions:

- When the vehicle is in Reverse
- When the vehicle moves backwards from a parked position
- When the vehicle is moving less than 6 mph

### BLIND SPOT DETECTION SYSTEM VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/Kt13/2017](http://www.KuTechVideos.com/Kt13/2017)

### Quick Tip

The BSD system will activate when:

1. The system is turned on
2. Vehicle speed is above approximately 20 mph
3. Other vehicles are detected on the rear sides of the vehicle

### REMINDERS:


- The BSD system will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When the BSD is ON and the ignition is cycled, the BSD system returns to ON



**REMINDER:** The RCTA feature can be turned OFF/ON in User Settings.



(Button located on left side of the steering wheel)

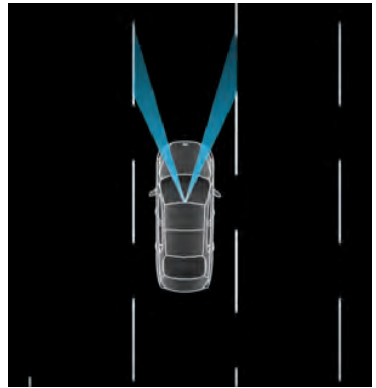

### Lane Departure Warning System (LDWS)\*

The Lane Departure Warning System (LDWS) monitors the vehicle's position on the road and issues a warning if the vehicle is drifting out of the intended lane.

With the ENGINE START/STOP button in the ON position, press the LDWS button **A** to turn the system ON. The instrument cluster indicator  will illuminate white.

If the LDWS detects that you are driving outside of your lane, the instrument cluster indicator will change to green illumination and the system may issue a warning on the LCD screen and an alert may sound, under these conditions:

- The vehicle speed exceeds approximately 38 mph
- The LDWS system recognizes the lane the vehicle is traveling in

*The Lane Departure Warning System (LDWS) is not a substitute for safe and proper driving. Always drive safely and use caution. LDWS may not always alert the driver if the vehicle is driven outside of its lane. Refer to the Owner's Manual for more information.*

#### LANE DEPARTURE WARNING SYSTEM VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KiTechVideos.com/kh13/2017](http://www.KiTechVideos.com/kh13/2017)

#### REMINDERS:

- The LDWS will not issue a warning if the turn signal is activated



(Buttons located under driver's panel, left of the steering wheel)

### Fuel Door Release Button

Press the Fuel Door Release button **B** to open the fuel door.

### Power Trunk Main Control Lever

The Power Trunk Main Control lever is located to the left of the steering wheel, below the main button panel.

To open, pull the Power Trunk Main Control lever **C**.

To close, press and hold the Power Trunk Main Control lever **C**.

*For more on how to operate the Power Trunk, see the Power Trunk Operation section, or refer to the Owner's Manual.*



## Reverse Parking Aid Function

When the gear shift lever is moved into R (Reverse) and the vehicle is moving backwards, the outside rearview mirrors will rotate downward to aid in reverse parking.

To turn the Reverse Parking Aid Function ON, press the L (Left) **A** or R (Right) **B** outside rearview mirror button (LED lit).


To turn OFF, press button(s) again.

The outside rearview mirrors will automatically return to their original positions when:

- The ENGINE START/STOP button is in the OFF position
- The gear shift lever is moved out of R (Reverse)
- The outside rearview mirror switch is in the middle position

**REMINDER:** When the buttons are not pressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.



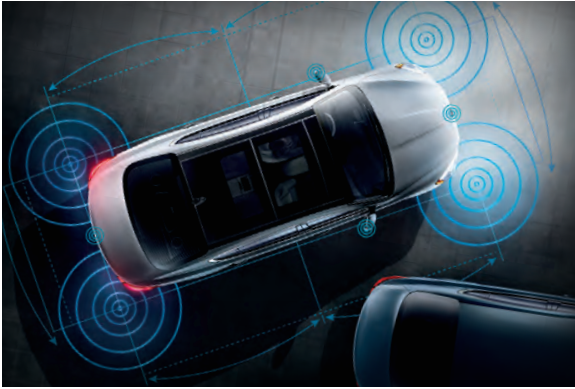

(Buttons located on driver's panel, left of the steering wheel)

## Parking Assist System

The Parking Assist System is a supplemental system that assists the driver by chiming if an object is detected within the sensing areas in the front or rear of the vehicle when parking or backing up.

When the ENGINE START/STOP button is ON and the shift lever is in R (Reverse), the system is activated and the Parking Assist button indicator is illuminated.

To turn off the Parking Assist System, press the button **A**.

### REMINDERS:


- If the vehicle is moving at speeds over 6 mph, the system may not activate
- When more than two objects are sensed at the same time, the closest one will be recognized first
- The Parking Assist System is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Assist System may not detect every object behind the vehicle

## Parking Guide System (PGS) / Rear-Camera Display\*

When parking (parallel parking or backing into or out of a parking spot) the Parking Guide System (PGS)\* displays the vehicle's projected trajectory on the navigation monitor.

The PGS will activate when the back-up light is ON with the ENGINE START/STOP button ON and the shift lever in the R (Reverse) position.

The rear-view angle of the camera can be changed by pressing the following buttons on the navigation display:

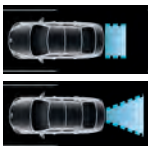

- Press TOP VIEW button to adjust the rear-view angle, as if looking down from above
- Press the NORMAL VIEW button to adjust the rear-view angle, as a normal rear view perspective

### PARKING GUIDE SYSTEM (PGS) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### REMINDERS:

- The system does NOT automatically park the vehicle
- This is a supplementary system. It is the responsibility of the driver to always check the area around the vehicle when parking the vehicle



## Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate driver's window auto up/down
- B** Press to unlock/lock all doors
- C** Press to disable all passenger windows

## Power Folding Outside Mirrors

- D** Press the L or R buttons to select the mirror to adjust
- E** Press button arrows left/right or up/down to adjust mirror position
- F** Toggle button left/right to unfold/fold the outside rearview mirrors
- F** Toggle button to center to automatically fold/unfold mirrors when:
  - Smart Key lock/unlock buttons are pressed
  - Outside door handle button is pressed
  - Driver approaches the vehicle with the Smart Key

### Quick Tip

The mirrors will automatically unfold when the Smart Key\* is within close proximity to the vehicle.

### REMINDERS:

- To automatically fold mirrors when exiting vehicle, press the LOCK button twice on the Smart Key
- To lock the mirror position, toggle button to the neutral (center) position

## Heated Outside Mirrors

Mirror heaters will operate when the rear defroster is activated.

## Auto Door Lock/Unlock

Auto Door Lock/Unlock will engage when gear shift is moved in to or out of the P (Park) position. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.



## Engine Start/Stop Button

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park)

To turn the engine OFF, press the ENGINE START/STOP button while the gear shift is in P (Park).

To use the ENGINE START/STOP button, you must have the Smart Key on your person or inside the vehicle.

### REMINDERS:

- If Smart Key fob battery is dead, you can still start the engine by pressing the ENGINE START/STOP button with the Lock-button end of the Smart Key. The Smart Key must contact the ENGINE START/STOP button directly, at a right angle
- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds

### ENGINE START/STOP BUTTON AND SMART KEY VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

To use electrical accessories:

ACC position

- When in the OFF position **A** and without depressing the brake pedal, press the ENGINE START/STOP button once. The ACC indicator will illuminate (amber) **B**.

To check warning lights:

ON position

- When already in the ACC position **B** and without depressing the brake pedal, press the ENGINE START/STOP button again. The ON indicator will illuminate (red) **C**.
- When in the OFF position **A** and without depressing the brake pedal, press the ENGINE START/STOP button twice. The ON indicator will illuminate (red) **C**.

Keeping the vehicle in ACC or ON position too long can discharge the vehicle's battery.



## Power Tilt/Telescoping Steering Wheel

To adjust the steering wheel distance, move the switch **A** forward or backward.

To adjust the steering wheel angle, move the switch **A** up or down.




## Heated Steering Wheel\*

While the ENGINE START/STOP button is in the ON position, press **B** to turn steering wheel heater ON. The button indicator will illuminate.

The steering wheel heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

### Quick Tips

- If ignition is turned OFF then ON again within 30 minutes of the steering wheel heater being turned ON, the system will remain in the ON position
- System does NOT turn off when ignition is cycled. To turn system off, press the heated steering wheel button

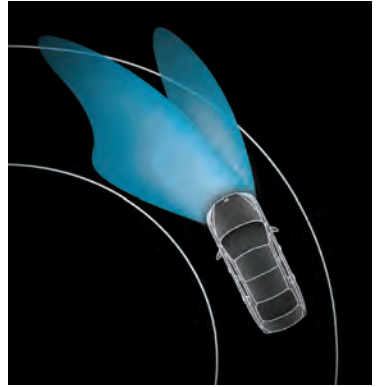

### Headlights & High Beams

**AUTO Light\*** – When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**AFLS (Adaptive Front Lighting System)** – AFLS helps improve visibility during nighttime driving by aiming the low-beam headlights in the direction the vehicle is moving. AFLS controls the aiming direction based on steering angle and speed.

When the light switch is in the AUTO light position, AFLS will activate.

**REMINDER:** When the AFLS indicator illuminates on the instrument cluster, the AFLS is not working properly. See authorized Kia dealer for service.

**Daytime Running Lights (DRL)** – DRL makes it easier for others to see the front of your vehicle during the day. The lights will be on automatically unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Switch is in the DRL OFF position
- Engine is turned off

### Headlight / High Beam Lever Operation

- Rotate lever switch to change the headlight function:

- ☰☽ Headlight position
- ☰☽☽ Parking light position
- AUTO\* Auto Light\* / AFLS position
- DRL/OFF OFF or DRL OFF position

- Press lever away from you to turn high beam headlights ON
- Pull lever to flash headlights/ high beams

### Turn Signals & Fog Lights

To operate:

- Move lever up/down for right/left turn signal
- Slightly move lever up/down to activate one-touch lane change signal
- Press toggle switch **A** up to turn fog lights ON/OFF

#### REMINDEERS:

- Headlights must be ON for fog light operation
- One-touch lane change signal is activated by moving the turn signal lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times
- To change how many times the lane change signal blinks (3/5/7), go to User Settings in the LCD instrument cluster modes

*For more information on the User Settings Mode, please refer to your Owner's Manual.*





## Windshield Wipers & Washers

To operate:

- Move lever up/down to change wiper modes
 

<b>MIST:</b> Single wipe	<b>LO:</b> Slow wipe
<b>OFF:</b> Wiper off	<b>HI:</b> Fast wipe
<b>AUTO:</b> Auto Rain Sensing	
- Pull to spray and wipe

### Auto Rain Sensing

The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To turn ON the auto rain-sensing wipers, move lever up/down to AUTO.

To adjust the auto rain-sensing wiper speed setting, move the speed control switch **A** up/down.

### AUTO RAIN-SENSING WINDSHIELD WIPERS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

- When the ENGINE START/STOP button is in the ON position and the wiper switch is in AUTO mode, the wiper will automatically operate once to perform a self-check of the system
- Set the wiper to the OFF position when the wiper is not in use
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Power Trunk lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors

 
## LCD Controls and Modes

The LCD modes **B** on the instrument cluster can be changed using the control buttons **C** on the right side of the steering wheel.

Press Mode buttons **</>** to change LCD mode.

Press Move buttons **▲/▼** to select item.

Press Select/Reset button **OK** in center to set/reset the item.



For more detailed information, see the LCD Instrument Cluster Modes section on page 6.



(Buttons located on right side of the steering wheel)



65mph

(Display on instrument cluster)

## Advanced Smart Cruise Control (ASCC)\*

The Advanced Smart Cruise Control (ASCC)\* system allows you to set the vehicle to maintain a speed so long as it is not limited by traffic. When traffic is encountered, the vehicle will be slowed to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

To set/adjust the ASCC speed:

- Press the CRUISE button up **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Press the RES+ / SET- button up/down **B** to set or adjust speed

To set the vehicle-to-vehicle distance:

- Press the ASCC button **C** on the steering wheel.
- Each time you press **C** the vehicle-to-vehicle distance will change, indicated by the number of bars that appear on the display **D**

To turn the ASCC system OFF:

- Press the CRUISE button up. The CRUISE indicator on the instrument cluster will turn off and the LCD screen ASCC image will show cancelled

### ADVANCED SMART CRUISE CONTROL (ASCC) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

The speed setting for the ASCC can be adjusted under the following conditions:

- With no vehicle in front, you must be travelling at a minimum speed of 20 mph
- When following a vehicle, there is no minimum speed requirement

When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the RES+/SET- button up/down to start the vehicle.

To change the cruise control mode from ASCC to standard cruise control, press and hold button **C**. Repeat to switch back to ASCC mode. (The ASCC system must not be activated to change modes).

### REMINDERS:

- CRUISE indicator must be ON in order to operate ASCC
- The cruise control system will not activate until the brake pedal has been depressed at least once after ignition is ON or engine starting

## Advanced Smart Cruise Control (ASCC)\* (Continued)

### Standard Cruise Control

- 1 Cruise Control ON/OFF button:** Press up to turn the cruise control ON/OFF
- 2 Resume Cruising Speed button:** Press up to resume or increase cruising speed
- 3 Set Cruising Speed button:** Press down to set or decrease cruising speed
- 4 Cruise Control Cancel button:** To cancel cruise control setting, do one of the following:
  - Press the brake pedal
  - Press the CANCEL button

### Quick Tip

The standard cruise control system is designed to function above approximately 20 mph only.



(Buttons located on left side of the steering wheel)

### Audio Controls

- F Audio System Mode button:** Press to cycle through FM1-2/AM/SAT 1-3/Disc/USB/Aux/iPod®/Bluetooth® Audio
- G Seek/Preset buttons:**
  - Radio Mode: Press to advance through preset stations. Press and hold to AUTO SEEK
  - CD/USB/iPod® Mode: Press to move TRACK UP/DOWN. Press and hold to FF/REW
- H Volume buttons:** Press VOL+ / VOL- arrows to raise/lower volume
- I MUTE button:** Press up to mute all audio

### Quick Tips

- Pressing the Audio System Mode button for more than 1 second will turn Audio Mode ON/OFF
- Surround Sound can be turned on or off

### REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the images. See your Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving



(Buttons located on left side of the steering wheel)

## Bluetooth® Wireless Technology

- A Volume button:** Press VOL +/ VOL – to raise/lower speaker volume
- B MUTE button:** Press up to mute the microphone during a call
- C Talk button:** Press down to activate Voice Recognition, bring up menus, place calls with minimal voice command prompts from the system and use Siri® Eyes Free (paired iPhone® required)
- D Receive/Place Call button:** Press up to place/receive/transfer calls. Press up to place a call using voice command prompts from the system or to answer an incoming call
- E End Call button:** Press down to end a call or cancel a function

### REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the image. See your Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving

For more information, refer to the Car Navigation System Owner's Manual. For Bluetooth® wireless technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section.

### Quick Tips

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and Bluetooth® wireless technology chip programming, functionality may differ from one phone to another
- Changing the language in settings may delete paired phones

## Bluetooth® Wireless Technology (Continued)

### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

### How to Place a Call

There are two options for placing a call:

- Option 1: Press up on the Receive/Place Call button **D** to display the phone screen with number keypad
- Option 2: Press down on the Talk button **C**. Then say the command "Call {name}" or "Dial {number}"

When using the voice command feature, wait for the system BEEP before speaking the command.

### Voice Recognition and Phone Contact Tips

The Voice Recognition system may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

To maximize the use of Voice Recognition, consider these guidelines when storing contacts in your phone:

- Use full names vs. short or single-syllable names ("John Smith" vs. "Dad"; "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, -, \*, &, #, /, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

### VOICE RECOGNITION TIPS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

- During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future Bluetooth® connection requests
- If Contact Sync is set to ON, contacts stored in your phone will download each time your phone is connected. There may be a delay before the system is available to place a call
- If Contact Sync is set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download





## Driver Information System (DIS) Controls

Provides access to all navigation and audio system control unit features.

**A Controller** – In addition to the touchscreen, the controller serves as a means for navigating K900's UVO Luxury Services with Premium Navigation system. The controller is actually three buttons: A scroll knob — for scrolling the keyboard and menus and zooming in and out on the map screen; an 8-way joystick — for toggling from left to right and top to bottom of menus and moving the focus of the navigation map; and a push button — for selecting the highlighted feature



Scroll Knob



8-Way Joystick



Push Button

**B Home** – Displays the audio control unit's Home menu which provides access to the following options: Phone, UVO\*, Settings, Media, SiriusXM®, FM/AM, Navigation\*, and SiriusXM Data®\*

**C Phone** – Displays the Phone menu which provides access to the following options: Keypad, Call History, Contacts and Favorites

**D Map/Voice** – Displays a map of the current location or repeats voice guidance

**E Nav** – Displays the navigation screen which provides access to the following menu options: Route, Destination, Nearby POI Search, Add to Address Book, Traffic, Guidance Volume and Settings

**F Menu** – Provides access to additional functions when available

**G Back** – Returns to the previous screen



## Driver Information System (DIS) Controls (Continued)

- H UVO** – Displays the UVO menu which provides access to the following options: Roadside Assist, Vehicle Diagnostics, My POIs, eServices Guide, Apps and UVO Settings
- I Power Rear Window Sunshade** – Operates the one-touch power rear window shade
- J Surround View Monitor\*** – Turns on the parking support system, which shows the 360-degree surroundings of the K900 on the navigation screen
- K SNOW mode\*** – Turns on SNOW mode, which helps with driving on slippery, snowy or muddy roads
- L ▲ / ▼** - Press to select previous/next radio/SiriusXM®\* station or media track/file/chapter. Press and hold to automatically cycle through radio stations or rewind/fast forward media tracks/files/chapters

### Quick Tip

In addition to the Driver Information System Controls (DIS), you can also move through the system using the touch screen, steering wheel controls and voice commands.



## UVO Luxury Services with Premium Navigation

- A** When lit, indicates a disc is inserted
- B** Press to eject disc
- C** Insert disc
- D** Press to turn the display OFF/ON
- E** Press and hold to reset/restart the system
- F** Press to power ON. Press quickly to turn A/V OFF. Press and hold to turn system OFF. Rotate to adjust volume
- G** Press to select FM/AM modes
- H** Press to select SiriusXM® mode
- I** Press to select MEDIA (Disc, Jukebox, USB/iPod®, Aux, Pandora®, Bluetooth® Audio) modes
- J** Press to display a map of the current location or repeat voice guidance
- K** Press to select previous/next radio/SiriusXM® stations/Disc/MP3/Jukebox/USB/iPod® tracks/files/chapters. Press and hold to automatically search radio stations. Press and hold to quickly move through media tracks/files/chapters
- L** Rotate to change Radio/SiriusXM® stations/Disc/Jukebox/USB/iPod® files. Press to select

### UVO LUXURY SERVICES WITH PREMIUM NAVIGATION SYSTEM VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.kutechvideos.com/audio/k900\\_av](http://www.kutechvideos.com/audio/k900_av)

### Quick Tips

- Use the touchscreen and/or the DIS to navigate through the menus/selections
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated with the engine running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command
- Surround Sound can be turned on or off

**REMINDER:** Your vehicle's audio system may differ from that in the image.

*For further system operation, refer to the Car Navigation System Owner's Manual.*

## UVO Luxury Services with Premium Navigation\* (Continued)

**UVO Luxury Services Registration/Activation – To use UVO Luxury Services follow these activation steps:**

1. Press the UVO button on DIS controls (Located on Center Console)
2. Select UVO Settings on the navigation screen
3. Choose Service Activation and select Activation
4. Review and Agree to the UVO Terms and Conditions
5. Complete the form fields for Account Registration (email and password) and press Submit
6. Complete the activation by downloading the UVO Luxury Services app for your iPhone® or Android™

### Sound Settings

To adjust the sound settings, press the HOME icon using the touch screen or the HOME button on the center panel, select SETTINGS, then select SOUND. From the SOUND menu, you can adjust the following settings:

- Volume Ratio
- Fade/Balance
- Treble/Middle/Bass
- Surround Sound
- Variable EQ
- Speed Dependent Vol.
- Touch Tone
- VIP Sound\*

*For further system operation, refer to the Car Navigation System Owner's Manual.*



### Clock

#### Center Panel Clock Setup:

Clock setup is completed through the navigation system screen. See below or refer to the Car Navigation System Owner's Manual for more information.

#### UVO Luxury Services with Premium Navigation System Clock Setup:

Select SETTINGS on the navigation screen. Select CLOCK. Select TIME SETTINGS and set the time, then select OK.



(The outlets shown are located in the center panel)

### Aux/USB/iPod® Port & Power Outlets

If equipped, additional power outlets are located inside the center console and in the rear passenger's center console.



## Automatic Climate Control System

### Front Climate Control

- A** Driver's Temperature Control buttons
- B** AUTO (Automatic) Climate Control button
- C** Front Windshield Defrost button
- D** Fan Speed Control buttons
- E** Mode Select button
- F** Recirculated Air ON/OFF button
- G** Front Passenger's Temperature Control buttons

- H** Climate Control System OFF button
- I** Rear Window Defrost button
- J** Air Conditioning ON/OFF button
- K** SYNC (Synchronize All Zones) Temperature Control button
- L** CLIMATE Information Screen Selection button

### Climate Control Auto Function

Press AUTO **B** to select full auto operation. In AUTO mode the driver, front passenger and rear passenger have full control of their own temperature zones. The mode, fan speed, air intake and air conditioning will activate and adjust accordingly to achieve the temperature settings for each zone.

To set temperatures:

- Press **A** to set the driver's zone temperature
- Press **G** to set the front passenger's zone temperature

**REMINDER:** Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for temperature control.

### Tri-Zone Climate Control

Pressing the SYNC button **K** synchronizes all three climate control zones (driver, passenger and rear) to the driver's temperature control.

### Air Flow Modes

To select air flow modes, press the Mode Select button **E**:

-  Face-Level
-  Floor-Level
-  Bi-Level
-  Floor/Defrost-Level

### Defrost Outside Windshield

1. Set fan speed to the highest position
2. Set temperature to hot
3. Press the front defrost button

### Defog Inside Windshield

1. Set desired fan speed
2. Set desired temperature
3. Press the front defrost button



## Automatic Climate Control System (continued)

### Rear Climate Control

- A** Fan Speed Control knob
- B** Rear Climate Control OFF button
- C** Rear Climate Control LCD screen
- D** Rear Temperature Control knob
- E** AUTO (Automatic) Climate Control button
- F** Climate Control REAR LOCK button

Turn the rear temperature control knob **D** to set the rear passenger's zone temperature.

The rear seat, rear audio and rear climate controls can be activated or deactivated by using the REAR LOCK button **F**.

The REAR LOCK button light **F** will be illuminated when the rear seat controls are locked.

REAR LOCK settings can also be changed in the UVO eServices with Premium Navigation system.

To set from the navigation system:

- Press the CLIMATE button
- Deselect the Rear Climate option

REAR LOCK settings return to the default setting when ignition is cycled.

**REMINDER:** If the rear climate controls have been deactivated through navigation system, they must be activated the same way.

### TRI-ZONE AUTOMATIC CLIMATE CONTROL VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

- Keep inside glass as clean as possible to help reduce window fogging
- Defrost Mode activates A/C and opens the fresh air vent to help dehumidify the air and improve defroster performance

**REMINDER:** Your automatic climate control system may differ from the image. See your Owner's Manual for more details.





(Button located on center panel below the gear shift)

## Automatic Transmission (Shift by Wire) and Sport Mode

To shift into any gear from Park, depress the brake pedal, then press the Unlock button **A**, located on the side of the gear shift lever, and shift.

**P:** Park – To shift into Park from any gear, press the P button **B** on the gear shift while vehicle is stationary and the brake pedal is depressed.

**R:** Reverse – To shift into Reverse, depress brake pedal, press the Unlock button **A**, and move the shift lever forward twice to skip over Neutral and into Reverse.

**N:** Neutral

**D:** Drive

**[+]:** Sport Mode Upshift

**[-]:** Sport Mode Downshift

**Sport Shift Mode:** With the gear shift in Drive, pull the lever to the left for Sport mode.

- To upshift [+] – move the shift lever forward
- To downshift [-] – pull the shift lever rearward

**Paddle Shifters\*:** Paddle shifting is operable when the shift lever is in the Sport mode position.

**REMINDERS:**

- Paddle shifters can be operated when the vehicle speed is more than 6 mph
- When in Sport mode, pulling the left and right paddle shifters at the same time will NOT shift gears

**AUTOMATIC TRANSMISSION (SHIFT BY WIRE) AND SPORT MODE**

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

**Quick Tips**

- Press the Unlock button **A** when shifting from P (Park) to any gear
- The instrument cluster and the light on top of the shift lever identifies the gear the vehicle is currently in

**REMINDERS:**

- When in P (Park), if the Unlock button is not pressed while shifting, the transmission does not shift
- If the vehicle is turned off while in Neutral without shifting into Park, it will remain in Neutral until the driver's door is opened. At that point it will automatically shift into Park
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power trunk lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors

## Electric Parking Brake (EPB)

The Electric Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

### Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **C**. Ensure that the indicator light **EPB BRAKE** is illuminated on the instrument cluster.

### Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **C**, with the ignition switch in the ON position. Ensure that the indicator light **EPB BRAKE** is OFF.

#### REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily or remains continuously lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB. These conditions are normal and indicate that the EPB is functioning properly

## Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned On/Off using the AUTO HOLD switch **D** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed and the driver's seat belt must be fastened.

The Auto Hold indicator, which is in the instrument cluster, has four states:

**White:** Standby – With vehicle at a standstill, and AUTO HOLD switch **D** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

**Green:** Engaged – When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

**OFF** (not illuminated) – The indicator will turn OFF when the AUTO HOLD switch **D** is manually turned OFF or when the EPB is manually turned ON.

**Yellow:** Malfunction – When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

#### ELECTRIC PARKING BRAKE (EPB) / AUTO HOLD VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

#### Quick Tip

Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline.



(Button located on center panel below the gear shift)

## Drive Mode Integrated Control System

NORMAL, ECO, SPORT, SMART and SNOW drive modes may be changed according to the driver's preference or road conditions. The system's default mode is NORMAL and is not displayed on the instrument cluster nor the navigation screen.

To change the drive mode from the NORMAL (default) mode, press the DRIVE MODE button **A**.

**ECO Mode** – A green ECO indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.

**SPORT Mode** – A yellow SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.

**SNOW Mode** – To activate, press the SNOW MODE button **B** located below the gear shift. It will operate regardless of the mode you selected with the Drive Mode button. To deactivate SNOW mode, press SNOW mode button **B** again.

### Smart Mode

When SMART mode is activated, the system automatically selects the drive mode (ECO, NORMAL, SPORT) best suited to the current driving style (economic, average, aggressive). A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (green, white, red) depends on the current driving style. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.


### Quick Tip

When the ENGINE START/STOP button is turned off, the system will default to Normal mode and each mode will need to be selected again when the vehicle restarts.

### REMINDERS:

When ECO mode is selected, the following may occur to improve fuel economy:

- Acceleration may be slightly reduced even when the accelerator is fully depressed
- Air conditioner performance may be limited
- Shift pattern of the automatic transmission may change
- Engine noise may increase
- System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- When SNOW MODE is selected, the SNOW mode will operate regardless of which drive mode (NORMAL/SPORT/ECO/SMART) is selected

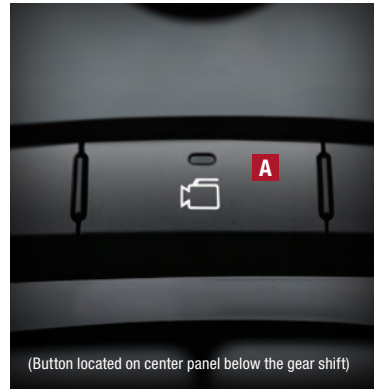

(Button located on center panel below the gear shift)

## Surround View Monitoring (SVM) System\*

The Surround View Monitoring (SVM) System is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the navigation screen.

Press **A** to turn the SVM system ON/OFF.

- When OFF: The camera view will automatically display on the navigation screen when the vehicle is shifted into Reverse. The camera view will turn off when the vehicle is shifted out of Reverse
- When ON: The camera view will display on the navigation screen in both Drive and Reverse. In Drive, the camera view will continue to display until the vehicle is traveling at speeds above approximately 13 mph. If you keep the SVM system on, the camera view will reappear on the navigation screen whenever the vehicle speed drops below approximately 13 mph

### SURROUND VIEW MONITORING (SVM) SYSTEM VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.







[www.KUTechVideos.com/kh13/2017](http://www.KUTechVideos.com/kh13/2017)





**REMINDER:** The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. The Surround View Monitoring system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

**Camera View Modes** – To change camera view modes, use the touch screen or rotate the controller and push to select the mode.

When in Drive & Neutral:

-  Displays the front side and SVM images simultaneously on the screen
-  Displays the front side image on the screen
-  Displays the front side and left side images simultaneously on the screen
-  Displays the front side and right side images simultaneously on the screen

When in Reverse:

-  Displays the rear view and SVM images simultaneously on the screen
-  Displays the rear side image on the screen
-  Displays the rear and left side images simultaneously on the screen
-  Displays the rear and right side images simultaneously on the screen



(Button located on center panel below the gear shift)

### Front Blind Spot Monitoring System\*

The Front Blind Spot Monitoring System is a supplementary system that presents a live image on the navigation display of what is currently in front of the vehicle.

Press the Front Blind Spot Monitoring button **A** to activate the Front Blind Spot Monitoring system. The system will operate when the gear shift is in the N (Neutral) or (D) Drive position and the vehicle is traveling at speeds less than approximately 6 mph.

**REMINDER:** The Front Blind Spot Monitoring System is not a substitute for proper and safe driving procedures. Always drive safely and use caution.



## Power Rear Curtain

The rear and side window curtains offer passenger protection from direct sunlight.

While the ENGINE START/STOP button is in the ACC/ON position, press the power rear curtain button **A** to raise/lower curtain.

**REMINDER:** Raising or lowering the rear curtain by hand may cause motor failure.



### POWER REAR CURTAIN & REAR SIDE-WINDOW CURTAINS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips

- The power rear curtain will lower automatically when the gear shift is moved into the R (Reverse) position and raise automatically when the gear shift is moved from R (Reverse) into P (Park)
- When the gear shift is moved into D (Drive) and the vehicle is traveling at speeds greater than 12 mph, the power rear curtain will unfold automatically





## Seat Warmers / Ventilated Seats

### Front Seats

**Seat Warmers** – Press button **A** once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

**Ventilated Seats** – Press button **B** once for high setting (3 LEDs lit). Press twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

### Rear Seats

**Seat Warmers** – Press top of button **C** once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

**Ventilated Seats\*** – Press bottom of button **D** once for high setting (3 LEDs lit). Press twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.



(Rear Passenger Controls are located in the middle of the rear seat)

### SEAT WARMERS AND VENTILATED SEATS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)


### Quick Tip

With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature.

**REMINDER:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.



(Buttons are located on the door panel)

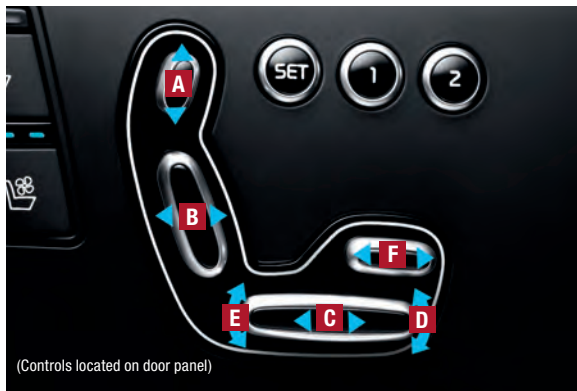

## Power Adjustable Driver's Seat

Move/press controls to adjust headrest, seat forward/backward position, seat cushion length, seatback angle or lumbar support.

**Headrest Height Adjustment\*:** Move button **A** up/down to adjust headrest height

**Seatback Angle Adjustment:** Move button **B** forward/backward to adjust seatback angle

**Seat Sliding, Seat Height and Cushion Length\* Adjustments:**

- Move button **C** forward/backward to slide seat
- Move front part of button **D** up/down to raise/lower front part of seat
- Move back part of button **E** up/down to raise/lower back part of seat
- Move button **F** forward/backward to increase/decrease cushion length\*

**Lumbar Support Adjustment:**

- Press **G** to increase support
- Press **H** to decrease support
- Press **I** to move lumbar support up/down



## Power Front Seat Headrest Adjustment\*

**Power Height Adjustment\* –** To adjust the height, move the seat control button **A** up/down.

**Manual Tilt Adjustment –** To adjust the headrest forward/backward, tilt the lower part of the headrest at a slight angle.

## Driver Position Memory System

The integrated system stores into memory the position of the driver's seat, outside rearview mirrors, Head-Up Display (HUD)\*, and steering wheel positions. To store positions into memory, first place the gear shift into P (Park) while the ENGINE START/STOP button is in the ON position. Then:

1. Adjust the driver's seat, outside rearview mirrors, Head-Up Display (HUD)\* settings and steering wheel positions
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons 1 or 2 **B** within 5 seconds. The system will beep twice when memory has been stored



## Power Reclining Rear Seats\*

The rear seats can be adjusted by using the control switches located on the door.

### Seatback & Seat Slide Adjustment:

- Move the button **C** forward/backward to adjust the seatback position
- Move the button **D** forward/backward to adjust the seat position

**Easy Access (AUTO) Button** – When opening the rear door, the rear seats will automatically move rearward to provide easier access for passengers. Press the AUTO button **E** on the door panel to turn the system ON (LED is lit) and OFF (LED not lit).

### REMINDERS:

- Keep hands and other objects away from seat mechanisms while the seat is in motion
- Do not adjust the seat while wearing seat belts
- Do not operate the rear power seat while the child seat is installed
- Do not operate two or more power seat control switches at the same time. Doing so may result in power seat motor or electrical component malfunction



## Rear Passenger's Control System

The rear passenger's control system lets users adjust the rear and front seat controls, rear audio control and climate control.

### Rear Seat Adjustment

To activate or deactivate the system, press the REAR LOCK button **A** on the rear armrest console.

To control the rear seat lumbar support\*, press the L (left seat) **B** or R (right seat) **C** button.

To adjust the lumbar support, move the lever **D**:

- To the LEFT to increase
- To the RIGHT to decrease
- UP to move the support position higher
- DOWN to move lower

**Easy Access (AUTO)** – When opening the rear door, the rear seats will automatically move rearward to provide easier access for passengers.

Press the AUTO button **E** on the door panel to turn the system ON (LED is lit) or OFF (LED not lit).

### Front Passenger Seat Adjustment

To adjust the angle of the front passenger's seat from the rear seat control system or the buttons on front seatback, press the top/bottom of button **F** to angle the front seatback forward/backward.

To adjust the position of front passenger's seat from the rear seat control system or the buttons on the front seatback, press the top/bottom of button **G** to move the seat forward/backward.

#### Quick Tip

Users can also activate/deactivate the rear passenger control system through the navigation system. Press the CLIMATE button on the center panel and deselect the Rear Climate option. If the rear climate controls have been deactivated through navigation system, they must be activated the same way.

**REMINDER:** The front passenger seat adjustments **F G** only operate when seat is not occupied.



(Buttons located on left side of front passenger seatback)



## Smart Power Trunk

The Smart Trunk automatically unlocks and opens the trunk hands-free when the Smart Key fob is detected near the rear of the vehicle.

When the Smart Key fob is on your person and you are within close proximity to the rear of the vehicle, the hazard lights will blink and a chime will sound for approximately three seconds to alert you that the Smart Trunk is about to open.

The alert system will blink and chime two additional times before the Smart Trunk opens.

The Smart Trunk feature is OFF by default. To enable the Smart Trunk, go to User Settings in the LCD instrument cluster modes and select Smart Trunk.

### Quick Tip

The Smart Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

### REMINDERS:

- The Smart Trunk feature will not operate within 15 seconds after the doors are closed and locked or if the Smart Key is within 60 inches from the front door handles
- Doors must be closed and locked for the Smart Trunk to operate
- The Smart Key must be outside of the vehicle for the Smart Trunk to operate

*For more information on Smart Trunk operation, please refer to the Owner's Manual.*





## Smart Power Trunk (Continued)

### Power Trunk

The Power Trunk can be operated from several controls to either open, close or lock the trunk. The Power Trunk Lock button will close the trunk, lock all doors and trunk and then arm the vehicle.

To turn the Power Trunk features ON, press the Power Trunk Lid Control button to ON, located inside the glove box.

**Driver's Panel Power Trunk Main Control Lever** – Located to the left of the steering wheel, below the main button panel.

To open, pull the Power Trunk Main Control lever **A**.


To close, press and hold the Power Trunk Main Control lever **A**.

**Power Trunk Close/Lock Buttons** – Located underneath the inside of the trunk lid.

To close trunk – Press the Trunk Close button **B**.

To close trunk and lock and arm all doors/trunk, press the Trunk Lock button **C**.

**Exterior Power Trunk Open Button** – Located underneath the outside of the trunk lid. To open, press the soft-touch Power Trunk Open button.

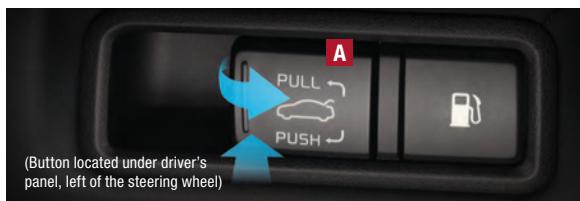

### POWER TRUNK VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

### Quick Tips


- The trunk must be unlocked before it can be opened by the Trunk Release button
- The trunk unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle

### REMINDERS:

- Power Trunk may be damaged if attempting to open or close manually
- When not in use, keep the Trunk Lid Control button in the OFF position
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Power Trunk lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the trunk lid when operating the Power Trunk





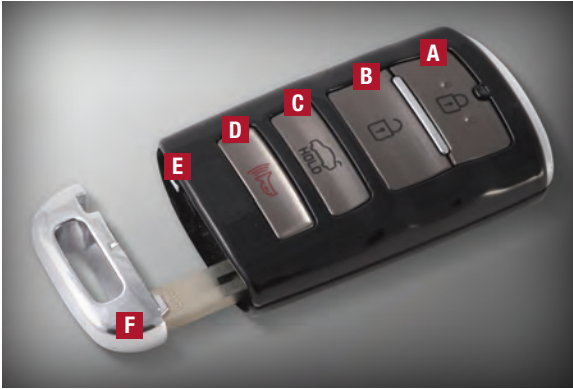

**ENGINE STOP/START  
BUTTON & SMART  
KEY VIDEO**

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)

**Smart Key**

- A** Press to lock all doors
- B** Press to unlock driver's door. Press twice within 4 seconds to unlock all doors
- C** Press and hold for more than 1 second to unlock trunk and open

**REMINDERS:**


- Trunk lid will partially open. To fully open, lift up manually
- The trunk unlocks when the Smart Key is within close proximity of the vehicle

- D** Press and hold more than a half a second for panic alarm. To turn off alarm, press any button
- E** Press to release mechanical key (button on reverse side)

**REMINDER:** Remote button configuration may vary depending on vehicle options.

**Quick Tips**

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound

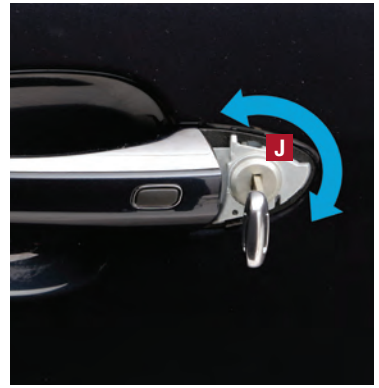

## Smart Key (Continued)

### Driver's Door Lock/Unlock Button **H**:

To unlock door(s):


- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors

To lock all doors:

- Press again to lock all doors

### Mechanical Key **F**:

- Use to unlock driver's door:
  1. Remove door handle keyhole cover with mechanical key by pressing up into slot as shown **I**
  2. Insert mechanical key **J** and turn right to unlock driver's door
  3. Insert mechanical key **J** and turn left to lock driver's door
- Use to lock glove box

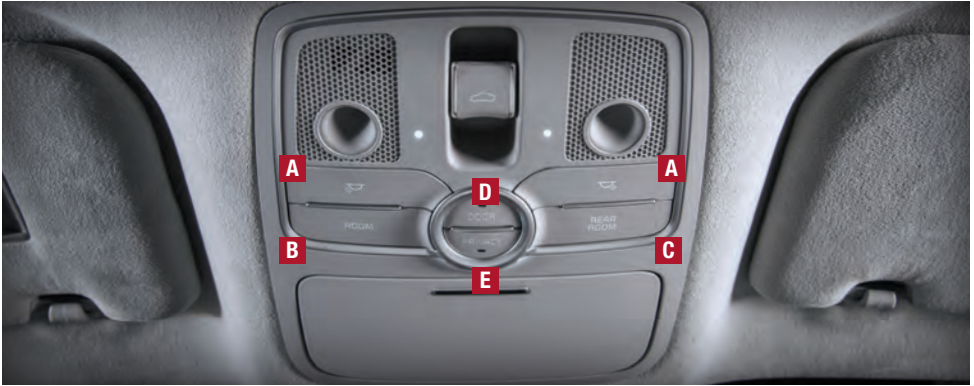

## Map/Room Lamps

### Automatic Turn Off Function

The interior lights automatically turn off approximately 20 seconds after the ENGINE START/STOP button is turned OFF.

### Map/Room Lamp Operation

**Map Lamps** – These lights produce spot beams for convenient use as map lamps or as personal lamps for the driver or the front passenger. Press the buttons **A** to turn the map lamps ON/OFF.

**ROOM button** – Press the button **B** to turn the front and rear lamps ON/OFF.

**REAR ROOM button** – Press the button **C** to turn the rear lamp ON/OFF.

**DOOR button** – When the DOOR button **D** is pressed (LED lit) the front and rear lamps will turn ON as follows:

- When a door is opened or doors are unlocked with the Smart Key, the lamps will turn ON for approximately 30 seconds
- If the ENGINE START/STOP button is in the ACC/OFF position and a door is open, the lamps will stay ON for approximately 20 minutes
- If the ENGINE START/STOP button is in the ACC/ON position and a door is open, the lamps will stay ON

The lamps will turn OFF immediately if the ENGINE START/STOP button is turned ON or all doors are locked.

**PRIVACY button** – When button **E** is pressed (LED lit) and a door is opened, that door lamp will turn ON.

### Quick Tips

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

**REMINDER:** When room lamp lens is pressed ON it will remain ON, even when the map lamp switch is in the OFF position.



## Panoramic Sunroof Operation

The sunroof and sunshade operation is controlled by a multi-directional switch/lever **A**. The ignition needs to be in the ON position to operate the sunroof/sunshade.

### Slide the sunshade and sunroof:

Auto Open – Slide lever backward to the farthest position and release.

Auto Close – Slide the lever forward to the farthest position and release.

### Slide the sunshade:

Auto Open – Slide the lever backward to the first detent position.

Auto Close – Slide the lever forward to the farthest position.

### Slide the sunroof (with sunshade open):

Auto Open – Slide the lever backward and release.

Auto Close – Slide the lever forward to the first detent position or pull the lever downward.

### Tilt the sunroof:

Raise – Press lever upward.

Lower – Pull lever downward.


### Auto-close sunroof and sunshade:

Slide the lever forward to the farthest position.

### Quick Tip

To stop the sunroof/sunshade at any position, press or pull the sunroof control lever in any direction.

**REMINDER:** Sunshade must remain OPEN while sunroof is open and vehicle is moving.

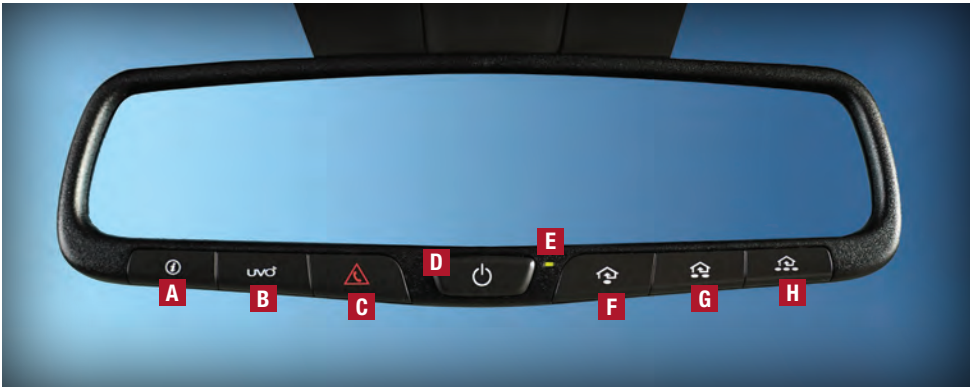

### Auto-Dimming Rearview Mirror with HomeLink®

- |                                                            |                                 |
|------------------------------------------------------------|---------------------------------|
| <b>A</b> eServices Guide button ⓘ                          | <b>E</b> Glare detection sensor |
| <b>B</b> UVO Luxury Services Voice Local Search button UVO | <b>F</b> HomeLink® button 🏠     |
| <b>C</b> Roadside Assist button ⚠️                         | <b>G</b> HomeLink® button 🏠     |
| <b>D</b> Auto dimming ON/OFF ⏻                             | <b>H</b> HomeLink® button 🏠     |

The Auto-Dimming Rearview Mirror is designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location. To turn automatic dimming ON or OFF, press button **D**.

**REMINDER:** Mirror indicator light will illuminate when automatic dimming is ON.

### UVO Luxury Services Rearview Mirror Key Functions

- A** UVO Luxury Services Guide button: Provides information about UVO Luxury Services features within the vehicle. Press button **A** and follow the voice prompts to use the eServices Guide.
- B** UVO Luxury Services Voice Local Search button: Uses Google® to locate points of interest in the surrounding area. Press button **B** and follow the voice prompts to use UVO Luxury Services Voice Local Search.
- C** Roadside Assist button: Connects to Roadside Assist and provides services including emergency assistance and vehicle towing. Press button **C** to connect to Roadside Assist.

## How to Sync Transmitter with HomeLink®

If programming for the first time, begin with step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **F** and center **G** buttons simultaneously until the indicator light begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **F**, **G** or **H** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® indicator light will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

## Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

## Erasing programmed buttons:

Press and hold the left **F** and center **H** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

## Quick Tips

- You can reprogram a single HomeLink® button by repeating step 2
- Erasing programmed buttons will delete all trained transmitters

*If your garage door opener was manufactured in 2011 or later, and you are unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*






### Sunvisor

Use the sunvisor to shield direct light through the front or side windows.

Slide the sunvisor out and adjust as needed.

#### REMINDERS:

- Sunvisor may not shield all direct light
- Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows

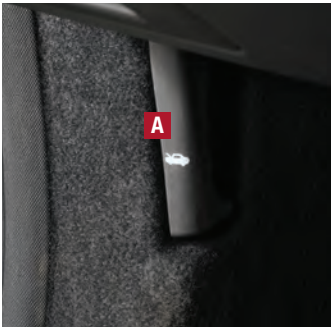

### Hood Release Lever and Latch

#### Opening the Hood:


1. Pull the hood release lever **A** to unlatch the hood
2. In the front of the vehicle, lift the hood slightly, push the secondary latch inside of the hood (center) **B** to the left and lift the hood

#### Closing the Hood:

Lower the hood about halfway and then press down to securely lock in place.



### Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten until ONE CLICK to prevent malfunction indicator  from illuminating.

**REMINDER:** The fuel filler door release button is located on the driver's panel to the left of the steering wheel.

#### ONE-CLICK FUEL CAP VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.KuTechVideos.com/kh13/2017](http://www.KuTechVideos.com/kh13/2017)



### Child Safety Locks

Located on the rear edge of the rear passenger doors, move the Child Safety Lock to the lock position  to disable the inner door handles from opening the rear doors.

**REMINDER:** Child Safety Lock is located on rear passenger door jamb.



## Seat Belts

### To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **B**

### Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

### Quick Tip

The seat belt warning chime operates for the driver's seat only.

*For more detailed information regarding your vehicle's safety belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."*

## Pre-Safe Seat Belt (PSB)\*

The Pre-Safe Seat Belt (PSB) will activate and pull the seat belt into tighter contact against the occupant's body if a collision is detected or during certain driving maneuvers.

The PSB system operates as below:

- The seat belt may tighten when:
  - The vehicle senses a collision
  - An emergency braking situation occurs
  - There's a loss of vehicle control

### REMINDERS:

The Pre-Safe Seat Belt warning light will illuminate on LCD screen if there is a problem with the system. Have the system checked if:

- The warning light does not turn on briefly when you turn the ENGINE START/STOP button to the ON position
- The warning light stays on after illumination for approximately 3 seconds
- The warning light comes on while the vehicle is in motion



## Occupant Detection System (ODS) / Passenger Airbag Off Indicator

ODS detects the presence of the front passenger **A**.

Depending on the situation and type of accident, the system may:

- Deploy air bag (adult)
- Not deploy the airbag (unoccupied)

If the system determines that the airbag should not be deployed, the “PASS AIRBAG OFF” light will illuminate **B**.

*Please refer to your Owner's Manual and the separate brochure titled “Understanding Your Safety Belt & Supplemental Restraint System” for more detailed information regarding your vehicle's airbags.*

## Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

### Quick Tip

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO Luxury Services account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO Luxury Services only)

### 7,500 Miles

#### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

#### REPLACE:

- Engine oil and filter (Every 7,500 miles)

#### INSPECT\*:

- Air cleaner filter
- Fuel lines, fuel hoses and connections
- Fuel tank air filter<sup>2</sup>
- Power steering fluid
- Vacuum hose
- Vapor hose and fuel filler cap

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

<sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

### 15,000 Miles

#### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

#### REPLACE:

- Engine oil and filter (Every 7,500 miles)
- Climate control air filter (for evaporator and blower unit)

#### INSPECT\*:

- Air cleaner filter
- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Fuel lines, fuel hoses and connections
- Fuel tank air filter
- Front brake disc/pads, calipers
- Propeller shaft
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting points
- Power steering fluid
- EHPS (Electronic Hydraulic Power Steering) motor pump and hoses
- Vapor hose and fuel filler cap

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

## 22,500 Miles

### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

### REPLACE:

- Engine oil and filter (Every 7,500 miles)

### INSPECT\*:

- Air cleaner filter
- Vacuum hose
- Power steering fluid
- Fuel lines, fuel hoses and connections
- Vapor hose and fuel filler cap
- Fuel tank air filter<sup>2</sup>

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. <sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

## 30,000 Miles

### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

### REPLACE:

- Engine oil and filter (Every 7,500 miles)
- Fuel tank air filter<sup>2</sup>
- Climate control air filter (for evaporator and blower unit)
- Air cleaner filter

### INSPECT\*:

- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Propeller shaft
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Brake fluid
- Fuel filter
- Fuel lines, fuel hoses and connections
- Parking brake
- Vapor hose, fuel filler cap, fuel tank
- Power steering fluid
- EHPS (Electronic Hydraulic Power Steering) motor pump and hoses

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. <sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.



### 37,500 Miles

#### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

#### REPLACE:

- Engine oil and filter (Every 7,500 miles)

#### INSPECT\*:

- Air cleaner filter
- Vacuum hose
- Fuel lines, fuel hoses and connections
- Vapor hose and fuel filler cap
- Fuel tank air filter<sup>2</sup>
- Rear differential oil
- Power steering fluid

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

<sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

### 45,000 Miles

#### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

#### REPLACE:

- Engine oil and filter (Every 7,500 miles)
- Climate control air filter (For evaporator and blower unit)

#### INSPECT\*:

- Air cleaner filter
- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Fuel lines, fuel hoses and connections
- Vapor hose and fuel filler cap
- Fuel tank air filter
- Propeller shaft
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Power steering fluid
- EHPS (Electronic Hydraulic Power Steering) motor pump and hoses

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

## 52,500 Miles

### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

### REPLACE:

- Engine oil and filter (Every 7,500 miles)

### INSPECT\*:

- Air cleaner filter
- Fuel lines, fuel hoses and connections
- Vapor hose and fuel filler cap
- Fuel tank air filter<sup>2</sup>
- Vacuum hose
- Power steering fluid

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

<sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

## 60,000 Miles

### PERFORM:

- Add fuel additives<sup>1</sup> (Every 7,500 miles)
- Rotate tires

### REPLACE:

- Engine oil and filter (Every 7,500 miles)
- Climate control air filter (for evaporator and blower unit)
- Air cleaner filter
- Fuel tank air filter<sup>2</sup>

### INSPECT\*:

- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Fuel lines, fuel hoses and connections
- Valve clearance<sup>3</sup> (3.8L)
- Propeller shaft
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Brake fluid
- Fuel filter<sup>2</sup>
- Parking brake
- Vapor hose, fuel filler cap, fuel tank
- Drive belts<sup>4</sup> (First 60,000 miles and after every 15,000 miles)
- Power steering fluid
- EHPS (Electronic Hydraulic Power Steering) motor pump and hoses

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

<sup>2</sup> Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details. <sup>3</sup> Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. <sup>4</sup> The drive belt should be replaced when cracks occur or tension is reduced excessively.





Lined area for notes with horizontal ruling lines.

## LEGAL DISCLAIMERS

---

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

---

**Advanced Smart Cruise Control (ASCC):** The Advanced Smart Cruise Control system is not a substitute for safe driving and cruise-control procedures. This is not an auto-pilot feature. Always drive safely and use caution. The Advanced Smart Cruise Control system may not detect every object in front of the vehicle.

**Airbag:** For maximum protection, always wear your seat belt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.

**Android™:** Android™ is a registered trademark of Google Inc.

**Autonomous Emergency Braking System (AEB):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

**Blind Spot Detection System (BSD) / Rear Cross Traffic Alert (RCTA):** Blind Spot Detection and Rear Cross Traffic Alert are not substitutes for safe driving, and may not detect all objects around or behind vehicle. Always drive safely and use caution.

**Bluetooth® Wireless Technology:** The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

**Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

**Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

**Google®:** Google® is a registered trademark of Google, Inc.

**Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

**HomeLink®:** Homelink® is a registered trademark of Gentex Corporation

**iPhone®/iPod®:** iPhone® and iPod® are registered trademarks of Apple, Inc.

**Lane Departure Warning System (LDWS):** The Lane Departure Warning System (LDWS) is not a substitute for safe and proper driving. Always drive safely and use caution. LDWS may not always alert the driver if the vehicle is driven outside of its lane. Refer to the Owner's Manual for more information.

**Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats.

**Pandora® internet radio:** Pandora® is a registered trademark of Pandora Media, Inc.

**Parking Assist System:** The Parking Assist System is not a substitute for proper and safe backing-up procedures. The Parking Assist System may not detect every object behind the vehicle. Always drive safely and use caution when backing up.

**Parking Guide System / Rear-Camera Display:** The Parking Guide System / Rear-Camera Display are not substitutes for proper and safe backing-up procedures. The Parking Guide System / Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

**Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.

**Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

**Seat belts:** For maximum protection, always wear your seatbelt.

**Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

**Siri®:** Siri® is a registered trademark of Apple, Inc.

**SiriusXM®:** SiriusXM® service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. **If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel.** See our Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See [siriusxm.com/traffic](http://siriusxm.com/traffic) for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

**Smart Trunk/Smart Power Trunk:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

**Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

**Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

**Surround View Monitor (SVM):** Surround View Monitor is not a substitute for safe driving, and may not detect all objects around vehicle. Always drive safely and use caution.

**Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on regular basis.

**UVO Luxury Services:** Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

**Vehicle Diagnostics:** Vehicle Diagnostics checks powertrain, chassis and air bag systems, and is not a substitute for maintenance. See UVO Luxury Services Maintenance Feature or Owner's Manual for maintenance schedule.





# K900 CUSTOMER DELIVERY CHECKLIST

## Key Feature Walkthrough



- Surround View Monitoring (SVM) System\* – page 31**



- Bluetooth® Wireless Technology – pages 20-21**  
Demonstrate operation



- Advanced Smart Cruise Control (ASCC)\* – page 18**  
Demonstrate operation



- Windshield Wipers & Washers – page 17**

- Auto-Dimming Rearview Mirror with HomeLink® – page 44
- Aux/USB/iPod® Port – page 25
- Blind Spot Detection (BSD)\* – page 9
- Clock Setup – page 25
- Electric Parking Brake (EPB) / Auto Hold\* - pages 29
- Engine Start/Stop Button – page 14
- Head-Up Display (HUD)\* – page 7
- Panoramic Sunroof Operation – page 43
- Parking Guide System (PGS)\* – page 12
- Passenger Air Bag Off Indicator – page 49
- Power Front Seat Headrest Adjustment\* – page 35
- Rear Passenger's Control System – page 37
- Seat Warmers/Ventilated Seats – page 34
- Smart Key – page 40
- Sunvisor – page 46
- Tire Pressure Monitoring System (TPMS) – page 5

## During Delivery

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours and Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: \_\_\_\_\_

Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_

Date: \_\_\_\_\_

Customer: \_\_\_\_\_

Date: \_\_\_\_\_



## K900 CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_

Mileage: \_\_\_\_\_ Dealership Name: \_\_\_\_\_

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

### Before Delivery

- Confirm "Good Battery" with Kia GR8-1299 battery tester
- Verify all tire pressures are to spec (see driver's door label)    LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Smart Key\* lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio/video/navigation user's guides)

### Key Feature Walkthrough



- Driver Information System (DIS) Control – pages 22-23
- Automatic Transmission (Shift by Wire) and Sport Mode – page 28



- Automatic Climate Control – pages 26-27  
Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed.
- UVO Luxury Services with Premium Navigation System – page 24  
For further system operation, refer to the Car Navigation System Owner's Manual.

