

niro

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **NIRO**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.



Available on the App Store, the Kia AR Owner's Manual App uses AR (Augmented Reality) technology to provide tips and useful information about your vehicle.

To use the Kia AR Owner's Manual App:

- Simply scan the interior or engine (motor) room of your vehicle with your smart phone or tablet, select feature/component and view the video guide.
- If you are unable to scan the vehicle, use the AR Manual (without scan) menu, select feature/component and view the video guide.

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Pages for Vehicle
Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

ESSENTIAL FEATURES

Air Conditioning / Climate Control	32
Audio System – UVO eServices System*	28
Audio System – UVO eServices / Premium Navigation*	29
Aux/USB/iPod® Port & Power Outlets	30
Bluetooth® Wireless Technology	22
Cruise Control	24
Digital Clock	30
Sport/ECO Modes	10
Fuel Economy	08
Hybrid Displays – UVO eServices / Premium Navigation*	11
Instrument Cluster / Hybrid Displays	12
Passenger Airbag Off Indicator	44
Tire Mobility Kit	43
Tire Pressure Monitoring System (TPMS)	05
Windshield Wipers & Washers	21

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



VIDEOS & QR CODES	02
--	----

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Hybrid Indicators at Startup	06
LCD Instrument Cluster Modes	07
Trip Information / Trip Computer	07
Fuel Economy	08
User Settings	09
Service Mode	09
Sport/ECO Modes	10

HYBRID SYSTEM

UVO eServices with Premium Navigation* Display	11
Instrument Cluster - Energy Flow	12
Emergency Starting	14

DRIVER'S PANEL

Blind Spot Detection System*	15
Lane Departure Warning System (LDWS)*	16
Autonomous Emergency Braking (AEB) / Forward Collision Warning System*	16
Instrument Panel Dimmer	17
Electronic Stability Control (ESC)	17
Hill-Start Assist Control (HAC)	17
Engine Start/Stop Button	18
Power Windows, Window Lock & Central Door Lock	19
Automatic Door Lock/Unlock	19
Power/Heated Outside Mirrors*	19
Power Folding Mirrors*	19

STEERING WHEEL CONTROLS

Headlights & High Beams	20
Turn Signals & Fog Lights	20
Windshield Rear Wipers & Washers	21
Heated Steering Wheel Button*	21
Bluetooth® Wireless Technology	22
Audio Controls	24
Standard Cruise Control	24
Smart Cruise Control (SCC)*	25
Tilt/Telescoping Steering Wheel	26

AUDIO SYSTEMS

UVO eServices Setup*	27
UVO eServices System*	28
UVO eServices with Premium Navigation*	29

CENTER PANEL

Digital Clock	30
Aux/USB/iPod® Port & Power Outlets	30
TRB Charger*.	30
AC Inverter*.	30
Wireless Smartphone Charging System*.	31
Automatic Climate Control	32
Automatic Gear Shift with Sportmatic® Shifting	34
Seat Warmers / Ventilated Seats*	34

SEATING

Driver Position Memory System*.	35
Front Seat Headrest Adjustment	35
Power Adjustable Driver's Seat*.	36
6-Way Manual Adjustable Driver's Seat*.	36

OTHER KEY FEATURES

Smart Key*	37
Double-Turn Lock/Unlock All	37
Remote Keyless Entry (Folding Key)*	38
Map/Room Lamps	39
Sunroof Operation*.	39
Hood Release Lever and Latch	40
Fuel Door Release	40
Fuel Cap / Malfunction Indicator	40
Sunvisor	40
Parking Assist System*.	41
Rear-Camera Display*	41
Hybrid Battery Air Intake	42
Child-Protector Rear Door Lock	43
Tire Mobility Kit.	43

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	44
Seat Belts.	44
Seat Belt Retractor Locks	44

NORMAL MAINTENANCE SCHEDULE

LEGAL DISCLAIMERS (See Back Inside Cover Page)

*IF EQUIPPED

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.KuTechVideos.com/de23/2017. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to Snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.KuTechVideos.com/de23/2017

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet


Instrument Cluster Overview

- A** Hybrid system gauge
- B** Fuel gauge
- C** Speedometer
- D** Warning and indicator lights
- E** LCD display (including Trip computer)
- F** Battery SOC (State of Charge) gauge
- G** Distance to empty

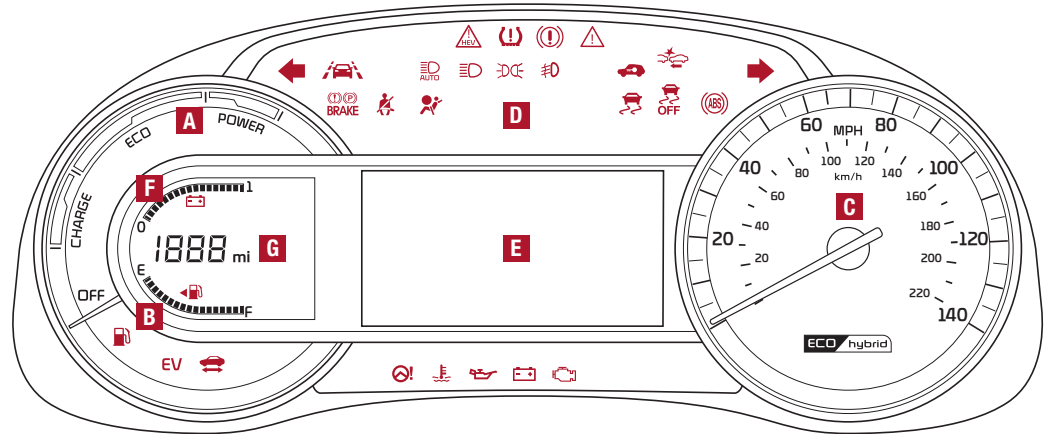

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

 Indicators & Warning Lights

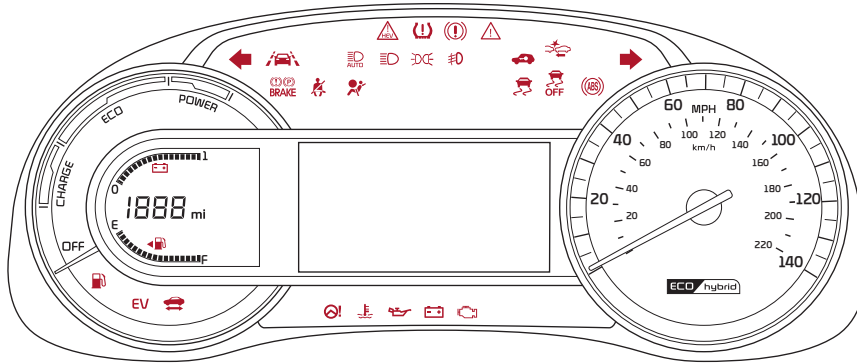

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

- High Beam Indicator
- Tail Light Indicator
- Front Fog Light Indicator*
- Master Warning Light*
- Autonomous Emergency Braking (AEB)*
- Lane Departure Warning System (LDWS) On/Off Indicator Light
- Electronic Brake Force (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)
- Immobilizer Indicator*
- READY Indicator
- EV Mode Indicator

- ECO Indicator Light*
- SPORT Mode Indicator Light*
- Hybrid System Warning Light
- Engine Coolant Temperature Warning Light*
- Engine Oil Pressure Warning Light
- Charging System Warning Light
- Seat Belt Warning Light
- Malfunction Indicator
- Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator
- Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator
- Electronic Stability Control (ESC) OFF Indicator

- Parking Brake & Brake Fluid Warning Light
- Electronic Power Steering (EPS) Warning Light*
- Airbag Warning Light
- Parking Brake Light
- Anti-lock Braking System (ABS) Warning Light
- Low Fuel Level Warning Light
- CRUISE Cruise ON/OFF Indicator*
- Trunk Open Warning Light
- Door Ajar Warning Light
- Regenerative Brake Warning Light (Two separate indicators on Instrument Cluster lit at same time)
- Cruise SET Indicator Light*

Tire Pressure Monitoring System (TPMS)



The TPMS indicator (⚠️) functions as both Low Tire Pressure Light and TPMS Malfunction Indicator. The indicator (⚠️) will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

 
The LCD screen in the instrument cluster will display the Low Tire Pressure indicator **A** showing which tire(s) are underinflated. Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light (⚠️). See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator (⚠️) will blink for approximately one minute then illuminate - See dealer for service.

QUICK TIP

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

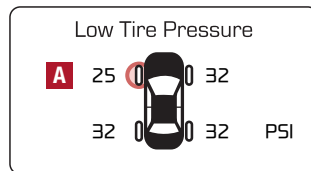

QR CODE

Tire Pressure Monitoring System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/de23/2017

Hybrid Indicators at Startup

- A Hybrid System Gauge** — Indicates how economically the vehicle is being driven.
 - **Blue zone:** High-efficiency range
 - **Green zone:** Normal-efficiency range
 - **Grey zone:** Low-efficiency range


- B EV Mode** — Illuminates when the electric motor is powering the vehicle.
- C Ready** — Illuminates when the hybrid system is operational. Even if the engine is off, the vehicle can be driven.
- D State of Charge (SOC)** — Displays the hybrid battery charge status.

REMINDER: Avoid starting or driving the vehicle when the fuel tank is empty. As the engine will be incapable of charging the high-voltage hybrid battery, the battery will lose its charge and may be damaged.

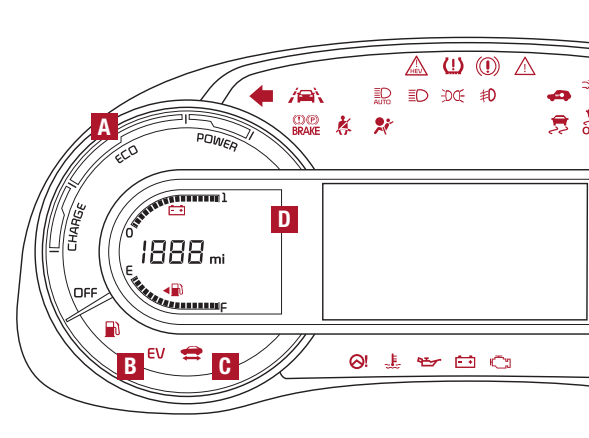

LCD Instrument Cluster Modes


Press Mode button **A** to scroll through different LCD Instrument Cluster Modes.

 **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.

 
 **Turn-by-Turn Mode*:** Displays the state of the navigation

 **SCC/LDWS* Mode:** Displays the state of the Smart Cruise Control (SCC)* and the Lane Departure Warning System (LDWS)

 **Audio Mode*:** Displays the state of the A/V System

 **Service Modes:** Informs on upcoming service intervals, tire pressure status, warning messages related to TPMS, BSD malfunction and when any door is not securely closed.

 **User Settings Mode:** Change settings of the doors, lamps and other features

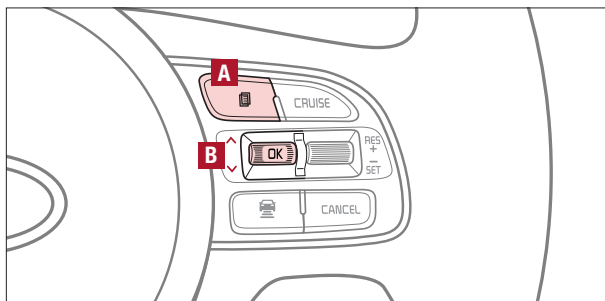

(Buttons located on Steering Wheel – Type A shown)

 
Your vehicle's steering wheel buttons may differ from those in the illustrations.

Trip Information / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the Engine Start/Stop button is in the ON position.

To cycle through the Trip modes, press the Mode button **A**.

When in the Trip Computer mode , press the OK button **B** to cycle through the screens. When displaying TRIP A or TRIP B screens, press and hold the OK button **B** to reset the Tripmeter to zero.

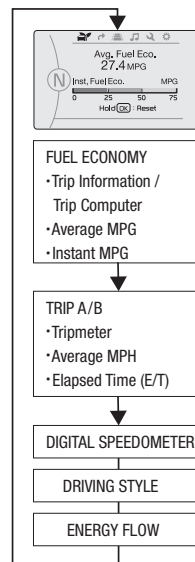

REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

 
REMINDER: Driving range can vary depending on your vehicle's fuel tank size, e.g., 12-gal. vs. 24-gal., even though the MPG may be the same

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

When the Instrument Cluster LCD screen is in the Trip Computer mode, the screen displays fuel economy information related to the driving range and average fuel economy.

To change modes, go to User Settings in the LCD Instrument Cluster modes.

Average Fuel Consumption - Calculates average* fuel consumption from the distance driven and amount of fuel injected into the engine / total fuel used.

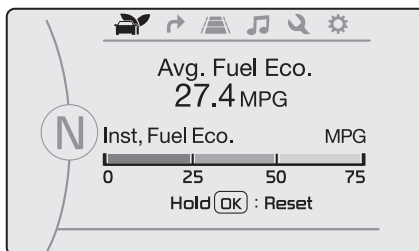

(Actual vehicle's LCD screen may vary)

QR CODE

Fuel Economy Video


To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/de23/2017

User Settings

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill and with the ENGINE START/STOP* button* or ignition is ON and select User Settings .

You can navigate the selections on the display by pressing the Move/Set/Reset button **B** up/down, and then selecting the item by pressing the Move/Set/Reset button **B** again.

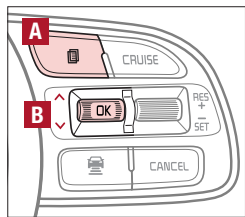

(Buttons located on Steering Wheel – Type B)

Driving Assist:

- Smart Cruise Control*
- AEB (Autonomous Emergency Braking)*
- FCW (Forward Collision Warning)*
- Rear Collision Warning (Rear Cross Traffic Alert)*
- Coasting Guide*

Door:

- Automatically Lock
- Automatically Unlock
- Two Press Unlock

Lights:

- One-Touch Turn Signal
- Headlamp Delay
- Welcome Light

Sound:

- Park Assist System Volume*

Convenience:

- Seat Easy Access*
- Wireless Charging System*
- Wiper/Light Display*

Service Interval:

- Set Mileage/Month
- Service Interval ON/OFF


Other features:

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit

Reset

- Choosing reset will restore defaults for all User Settings menus

Service Mode

To enter Service mode, press the Mode button **A**, scroll to Service Mode  and press Move/Set/Reset button **B**. System will display number of miles remaining until next service is due, as well as type of service.

When service is required, the following will be displayed:

Service Required

 
To reset the Service mode system, press and hold the Move/Set/Reset button **B** for more than 1 second.

To turn Service In OFF, go to User Settings.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the Move/Set/Reset button **B** up/down and scroll to Service Interval. Press the Move/Set/Reset button **B** to enter
- Press the Move/Set/Reset button **B** up/down and toggle to ON, then press the Move/Set/Reset button **B** again. Then press the Move/Set/Reset button **B** to scroll and select the desired miles or months for your next service
- Press the Move/Set/Reset button **B** again to enter



QR CODES

To view a video on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



www.KuTechVideos.com/de23/2017

LCD Display: Maintenance Video



www.KuTechVideos.com/de23/2017

 
Sport/ECO Modes

The mode can be change **A** by moving the shift lever from D to the left gate and back:

(D) - ECO Mode


(S) - Sport Mode - When shift lever is moved into the left gate from (D). If shift lever is not moved through the gears, then the vehicle will shift automatically.

The LCD screen **B** on the instrument cluster will display the mode the vehicle is in.

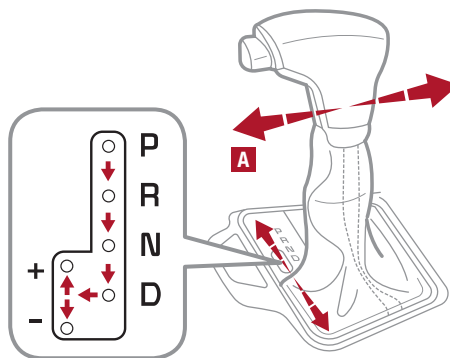

ECO Mode (Active ECO)

 Active ECO helps improve fuel economy by controlling several vehicle components. When in ECO Mode, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

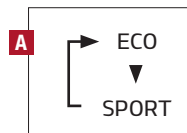


QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

 For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.

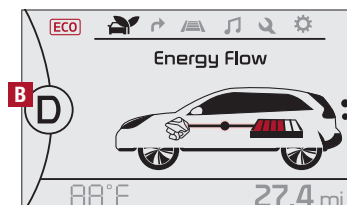


(Located in Instrument Cluster)


UVO eServices with Premium Navigation Display*

When equipped, NIRO's UVO eServices with Premium Navigation screen also provides information on economical operation and hybrid system modes. To enter the Hybrid display mode, press the INFO key on the audio control unit. Press the HYBRID button. Then select one of the three menus **A** - FUEL ECONOMY, ECO DRIVING and ENERGY FLOW.

 
A **Hybrid System Home Screen** - Fuel Economy, ECO Driving and Energy Flow

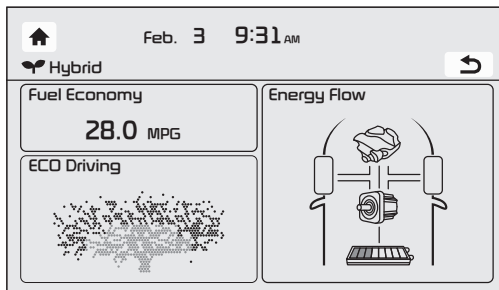

 
Energy Flow - Displays the current flow of power between NIRO's main powertrain components.

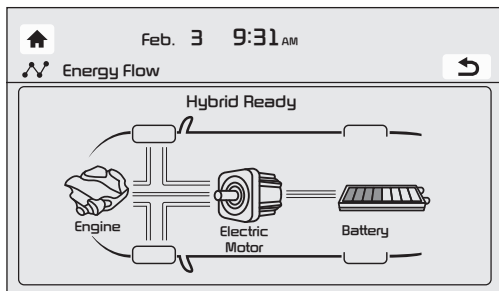

 ECO Level - The more economically and environmentally-friendly you drive, the more the ECO Level increases.

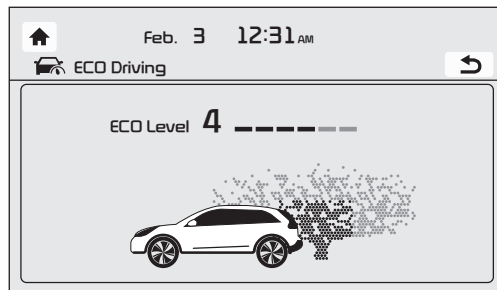

 
Fuel Economy - Displays the average fuel economy over the duration of a trip.

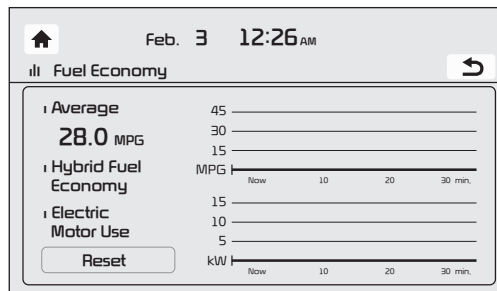


Instrument Cluster – Energy Flow

NIRO's instrument cluster LCD screen displays the following hybrid system modes to inform the driver of its status. To change modes, go to User Settings in the LCD Instrument Cluster modes.

 
EV Propulsion - The electric motor is moving the vehicle.

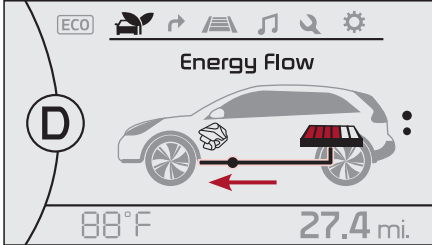

 
Engine-Only Propulsion - The engine is moving your vehicle.

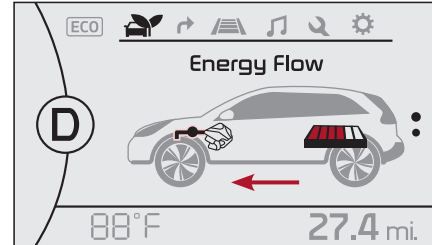

 Power Assist - Both the electric motor AND the engine are moving the vehicle.

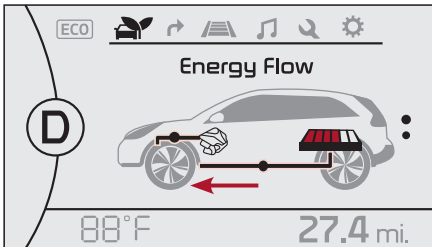

 
Engine Generation - While the vehicle is stopped, the engine is charging the hybrid battery.

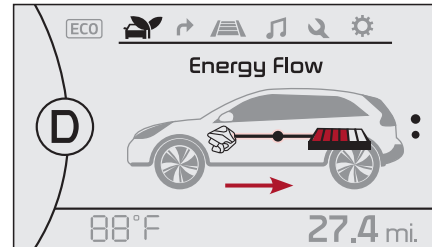


Instrument Cluster - Energy Flow

NIRO's instrument cluster LCD screen displays the following hybrid system modes to inform the driver of its status. To change modes, go to User Settings in the LCD Instrument Cluster modes.

 
Power Reserve - While the engine powers the vehicle, it is also recharging the hybrid battery.

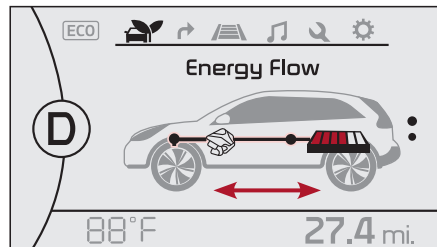

 
Engine Brake/Regeneration - The regenerative braking system is recharging the hybrid battery.

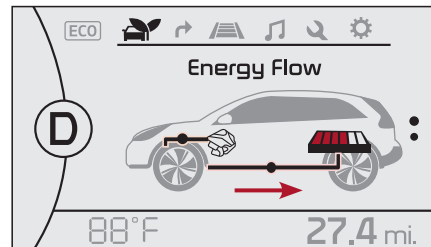

 Vehicle Stop - The vehicle's hybrid system is standing by.

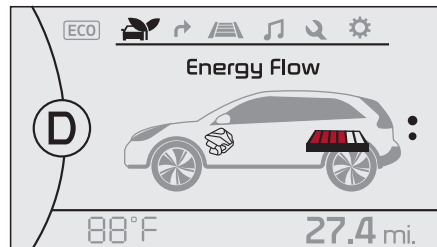

 Engine Generation/Regeneration - The engine and the regenerative braking system are both recharging the hybrid battery.

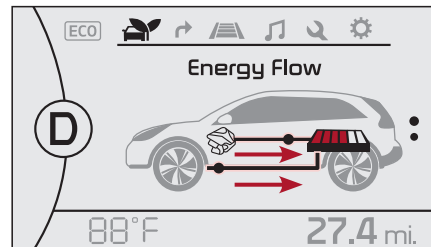

Emergency Starting

Before Jump Starting:

1. If the vehicle appears to have a dead battery, first press the 12V Battery Reset button **A**. Then immediately start the vehicle by pressing the brake and turning the ignition on or pressing the Engine Start/Stop button.
2. If the vehicle does not start after completing the above steps, then jump start the vehicle (as described below).

REMINDERS:

 
 
- After starting, idle or drive the vehicle for more than 30 minutes to help charge the 12-volt battery.
- If the vehicle does not start immediately after pressing the 12V Battery Reset button **A**, then the power of the 12V battery is automatically disconnected to save any additional discharge.
- Repeated use of the 12V Battery Reset button may cause over discharge which will prevent the vehicle from starting.

Jump Starting:

1. Remove the underhood fusebox cover **B**.
2. The {+} jump start terminal **C** is located in the fuse box; the suitable ground point **D** is located in the engine compartment (See Owner's Manual for detailed description)
3. Connect cables in the following order and disconnect in reverse order:
 - Connect the {+} clamp of your jumper cable to the {+} jump start terminal **C**
 - Connect the {-} clamp of your jumper cable to the suitable ground point **D**.
4. Then immediately start the vehicle by pressing the brake and turning the ignition on or pressing the Engine Start/Stop button

REMINDER: Jump starting your vehicle can be dangerous if done incorrectly. Follow the above jump starting procedures to avoid harm to yourself or damage to your vehicle and any of its components. You can also consult your Owner's Manual for further detailed instructions for jump starting your vehicle. If in doubt, we strongly recommend that you have a competent technician or towing service jump start your vehicle.

For more information on Emergency Starting, please refer to the Owner's Manual.

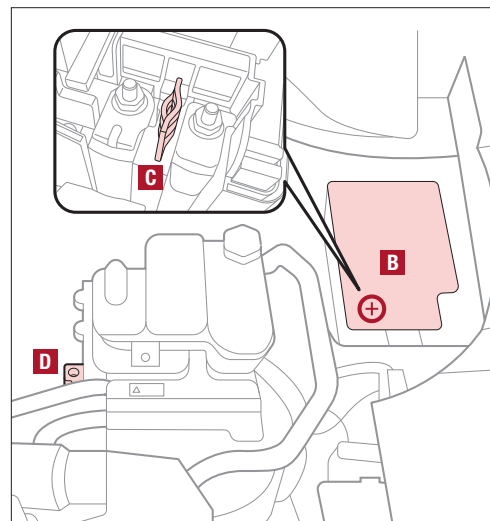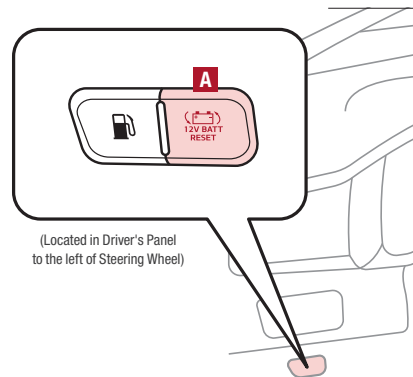

(Niro engine compartment shown, right side)

Blind Spot Detection (BSD) System*

The BSD system uses radar sensors to help alert the driver before changing lanes. The light on the BSD button **A** will illuminate when turned ON. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than 18 mph and will alert the driver if another vehicle is detected by the radar sensor.

Blind Spot Detection / Lane Change Assist

1st-stage alert: When another vehicle is detected within the BSD System boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

RCTA (Rear Cross Traffic Alert)

 
 
 
If the RCTA system sensors detect approaching vehicles from the left or right side **C**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, with these conditions:

- When the vehicle is in Reverse
- When the vehicle moves in reverse from a parking position
- When the vehicle is moving less than 6 mph

REMINDERS:

- The BSD system will not show a warning if the vehicle speed is only 6 mph above the surrounding vehicles
- If the BSD is turned ON and the ignition is cycled, the BSD system returns to ON
- The RCTA feature can be turned OFF/ON in User Settings

For more information on the Blind Spot Detection System, please refer to the Owner's Manual.

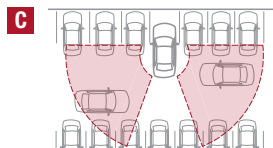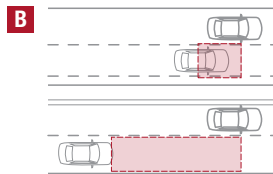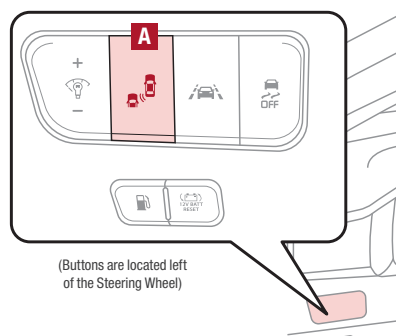

REMINDER: The above images are for illustration purposes only and may not reflect actual operation.

QR CODE

Blind Spot Detection w/RCTA Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

Lane Departure Warning System (LDWS)*

With the ENGINE START/STOP button in the ON position, press the LDWS button **A** to turn system ON. The instrument cluster indicator  will illuminate.

 
If the LDWS detects that you are veering outside of your lane, the system may issue a warning on the LCD screen and an alert may sound, while applying a slight adjustment to the steering, trying to prevent the vehicle from moving outside its lane.

If the LDWS detects that you are veering outside of your lane, the system may issue a warning on the LCD screen and an alert may sound.

All systems will operate under the following conditions:

- The vehicle exceeds approximately 55 mph
- The LDWS system recognizes the lane the vehicle is traveling in
- LDWS will stay on when the ignition is cycled


REMINDER: LDWS will not issue a warning if the turn signal is activated.

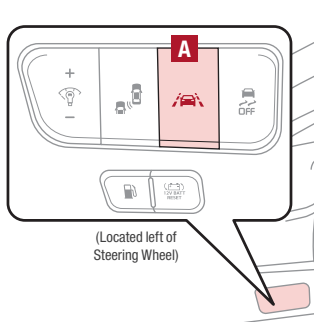

When the LKAS sensor detects the lane traveling in, both lanes are illuminated



 When the LKAS sensor does not detect the lane traveling in the lanes are not illuminated

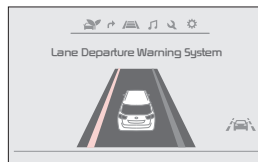

When the LDWS sensor detects the vehicle veering outside of the lane traveling in, a yellow indicator will illuminate either on the left or right lane (shown in both images above)



QR CODE

Lane Departure Warning System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

Autonomous (Assist) Emergency Braking (AEB) / Forward Collision Warning (FCW)*

The AEB helps to alert the driver when rapidly approaching a vehicle that is slowing down, braking or stopped **B**. A warning message will appear on the LCD screen and a chime will sound. The AEB will become active when the vehicle is traveling more than 6 mph.

To turn the AEB off, go to User Settings in the LCD Instrument Cluster modes.

REMINDER: The AEB will be activated by default when vehicle power is cycled on, even when previously set to off

 


Autonomous (Assist) Emergency Braking is not a substitute for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.

Instrument Panel Dimmer

Press switch **A** up or down to adjust display brightness of the instrument panel illumination.

REMINDER: The Instrument Panel Dimmer does not adjust brightness on the UVO eServices System or the UVO eServices with Premium Navigation System screens; use the system's setup menu to adjust brightness on the screens.

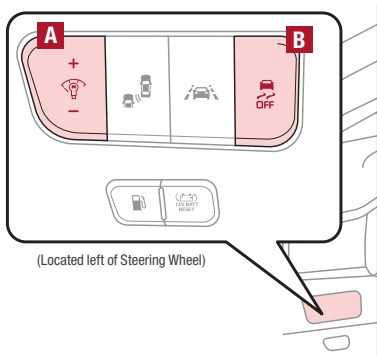


Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

REMINDEERS:

- ESC is active by default at vehicle start-up
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDEERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.
- In the event of HAC system malfunction, see Authorized Kia Dealer for service.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a 2-second delay before the vehicle may start rolling backward

 
Engine Start/Stop Button

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park)

To turn the vehicle OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.

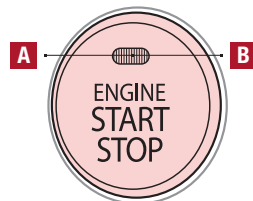

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light **A**)

ON position

- When already in the ACC position (amber light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (red light **B**)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (red light **B**)

Keeping the vehicle in ACC or ON position without turning engine on may discharge the vehicle's battery.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

QR CODE

Engine Start/Stop Button & Smart Key Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

Power Windows, Window Lock & Central Door Lock

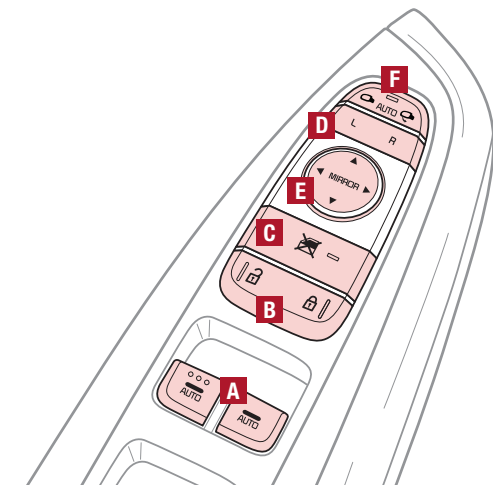

A Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows

REMINDER: When pressed **C**, window controls for the Rear Passenger Windows are disabled.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved in to or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Power/Heated Outside Mirrors*

Mirror heaters controlled with Rear Defroster.

Power Folding Outside Mirrors*

Press L or R buttons **D** (left or right) to select mirrors. Then press arrows **E** to adjust mirror position.

To both fold and unfold the outside rearview mirrors, press the folding mirror button **F** as pictured:

- Left – The mirrors will unfold.
- Right – The mirrors will fold.
- Center – The mirrors will fold/unfold automatically when doors are locked/unlocked with the Smart Key or a door handle button is pressed. Also, the mirrors will unfold when approaching the vehicle with the Smart Key fob in proximity.

QUICK TIP

 
To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key*.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

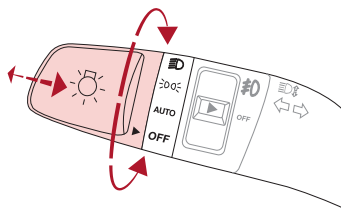

- Headlight position
- Parking light position
- AUTO* Auto Light Position / Daytime Running Lights (DRL)
- DRL OFF DRL OFF position

AUTO Light position — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL)* — DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or ENGINE START/STOP button* is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Fog lights are on
- Parking brake is applied
- Engine is turned off

REMINDERS:

 
- DRL only operates during the daytime
- The DRL system turns off when the headlights are ON, parking brake is applied or the front fog lights are turned on

Turn Signals & Fog Lights

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate lever ring to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

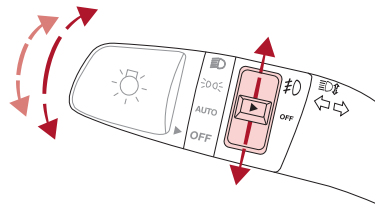


One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to User Settings Mode in the LCD Instrument Cluster modes.

Windshield/Rear Wipers & Washers

To operate Windshield Wipers and Washers:

 - Move lever Up/Down to change Wiper modes
- Press switch **A** Up/Down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

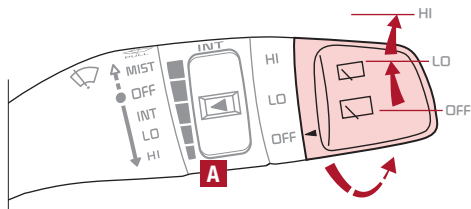


Windshield
MIST: Single wipe
OFF: Wiper off
INT: Intermittent wipe
LO: Slow wipe
HI: Fast wipe

Rear
HI: Continuous wipe
LO: Intermittent* wipe
OFF: Wiper off

Heated Steering Wheel Button*

Press button **B** to turn ON/OFF steering wheel heater, while the ignition or ENGINE START/STOP button is in the ON position.

 Steering wheel heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

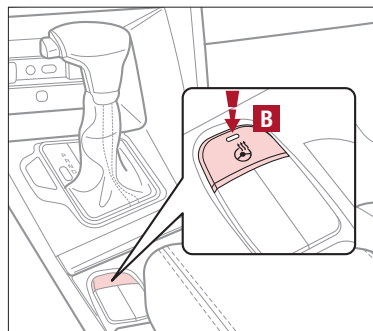

(Located below gear shift)

QUICK TIPS

- Pressing lever up increases Intermittent wipe frequency and wipe speed. Pressing lever down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use
- LO and HI sets wiper speed. No intermittent wipe function on Rear Wipers.

 
To operate Rear Wiper & Washer:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

QUICK TIP

If ignition is turned OFF, then ON again, within 30 minutes of steering wheel heater being turned on, system will automatically be set ON again.

Bluetooth® Wireless Technology

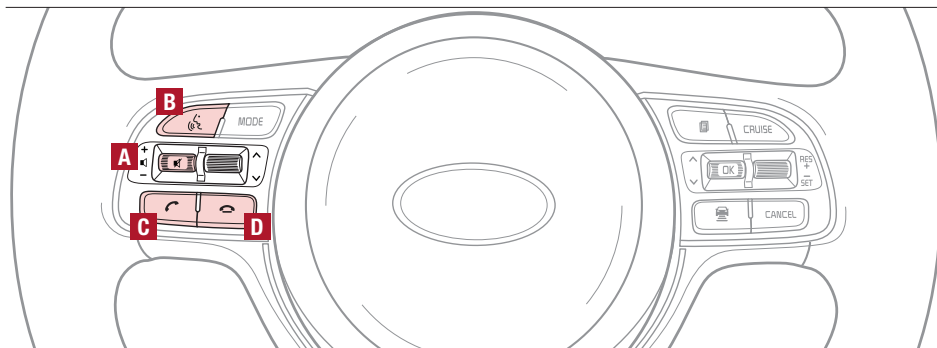

(Type B shown)

- A Volume button:** Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call
- B Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system
- C Receive/Place Call button:** Press to receive/place/transfer calls. Press to place a call using voice command prompts from the system, or to answer an incoming call
- D End Call button:** Press to end a call or cancel a function

QUICK TIPS

- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- When using the voice command feature, wait for the system BEEP before speaking the command.
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language setting may delete paired phones

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving

For more information, if equipped, refer to the Car Multimedia System User's Manual or the UVO System User's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Multimedia System User's Manual or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future *Bluetooth*® connection requests.

How to Place a Call

For the UVO eServices System and the UVO eServices System with Premium Navigation, there are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or "Dial {number}"

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help your *Bluetooth*® Wireless Technology Voice Recognition performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single-syllable names ("John Smith" vs. "Dad"; "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

Audio Controls

Standard Cruise Control

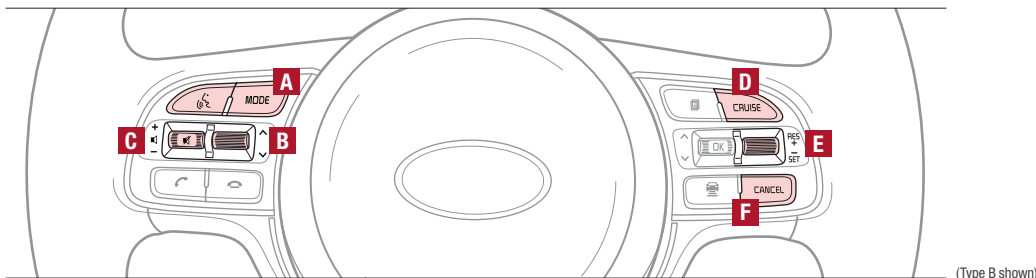

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®/Media modes

B Seek/Preset button:
FM/AM/SiriusXM® Modes: Press to advance through Preset Stations. Press and hold to auto seek
Media Mode: Press to move Track Up/Down. Press & hold to FF/REW

C Volume button: Press up/down to raise/lower volume
Mute button: Press to mute all audio

QUICK TIP

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For further audio system operations, refer to pages 27-29.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details

D CRUISE Control ON/OFF button: Press to turn the Cruise Control ON/OFF

E Resume Cruising Speed button: Press up to resume or increase Cruising Speed
Set Cruising Speed button: Press down to set or decrease Cruising Speed

F Cruise Control CANCEL button: To cancel Cruise Control setting, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Standard Cruise Control is a part of the Smart Cruise Control (SCC)* and can be set as the operating mode. To switch from SCC to Standard Cruise Control, press and hold the CRUISE button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

Smart Cruise Control (SCC)*

 
The Smart Cruise Control (SCC)* system allows you to set the vehicle to maintain a speed so long as it is not limited by traffic. When traffic is encountered, the vehicle will be slowed to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

To set/adjust the SCC speed:


- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Move the SCC lever **B** to set or adjust speed

To adjust the vehicle-to-vehicle distance setting **C**, press the SCC button **D** on the steering wheel. The images on the LCD screen **E** and the Instrument Cluster **F** will change when scrolling through the settings. Each time the button is pressed, the vehicle-to-vehicle distance changes.

To turn system OFF, press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF and the LCD screen SCC image will show canceled **G**.

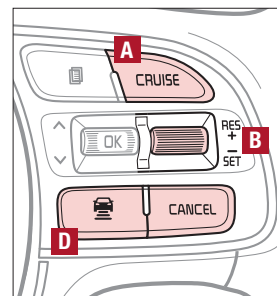

(Type B shown)

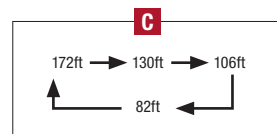 



QUICK TIPS

To change the Cruise Control mode from SCC to standard Cruise Control, press and hold button **A**. Repeat to switch modes again (The SCC system must not be activated to change modes).

For the SCC System to operate, you must be traveling at a minimum speed of 20 mph, when no vehicle is in front.

The Smart Cruise Control System (SCC) is deactivated when driving under the speed of 6.0 mph

  When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle in front.

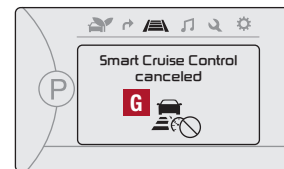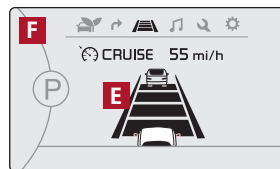

(Actual screen on vehicle may vary)

 
REMINDERS:

- Cruise Control button must be ON in order to turn SCC ON/OFF
- SCC system is activated when ignition is turned on. Speed will need to be reset when ignition is cycled on
- The distance settings are approximations and may vary depending on factory settings at the time. See owner's manual for more information

Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

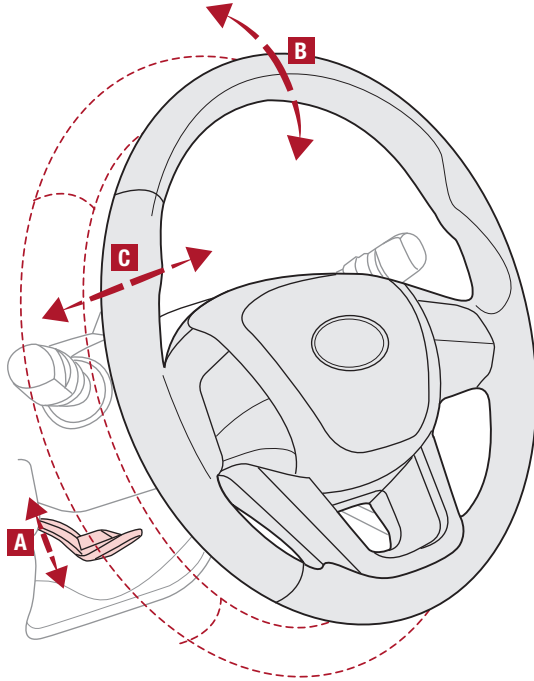

UVO eServices Setup*

UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the free Kia UVO eServices app.
2. Open the UVO eServices app and create an account by clicking on REGISTER. After entering your information and following the prompts to complete registration.
3. In the app, click CONTINUE, accept the terms and click CONTINUE once again.
4. Follow the app's IN-CAR SETUP instructions to connect your smartphone and complete UVO eServices activation.

Android Auto™*

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

How to start Android Auto™:

1. Press the SETUP key on your UVO eServices system's control panel.
2. Press the CONNECTIVITY button, select Android Auto™ then select ENABLE ANDROID AUTO.
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

Apple CarPlay™*

Setting up and starting Apple CarPlay™:

1. Connect the Apple CarPlay™ compatible iPhone with the vehicle's USB port using the manufacturer's cable provided with your iPhone.
2. On the UVO eServices System audio control unit, press the SETUP key.
3. Press the CONNECTIVITY button on the screen and select Apple CarPlay™.
4. Select ENABLE APPLE CARPLAY.
5. From the vehicle's home screen, select the Apple CarPlay™ button, where you'll see all the Apple CarPlay™ supported apps

 
REMINDERS:

- Android Auto compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay™ compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)

For further UVO eServices System operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 28-29.

UVO eServices System*

– FM/AM/SiriusXM®/Media (USB, iPod®, Aux, *Bluetooth*® Audio, My Music, Pandora®)

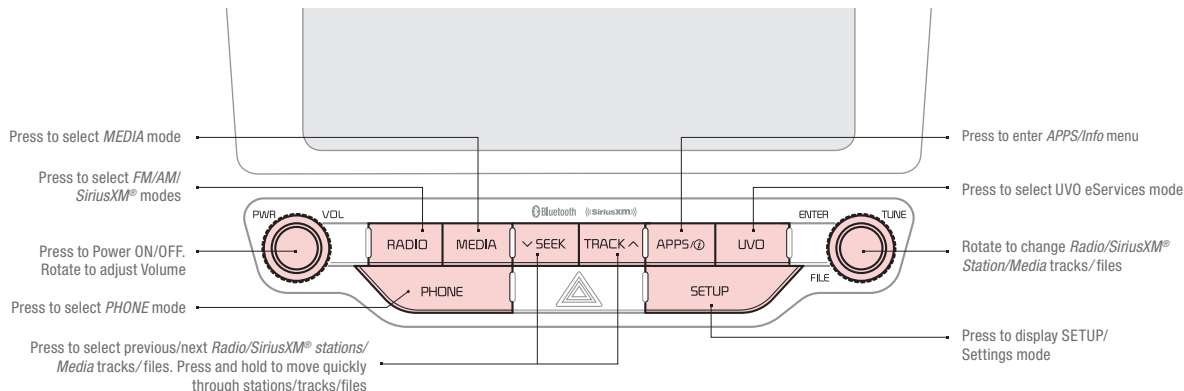

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button
- Prolonged use of the UVO eServices system in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO eServices System should be operated when the engine is running to prevent battery discharge

REMINDER:

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QR CODE

UVO eServices System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/audio/uvo3_eservices

Sound Settings

 
To adjust the UVO eServices System with Navigation sound settings:

1. Press the SETUP key on the audio control unit
2. Select the on-screen SOUND button
3. Select the menu item (Position, Tone, Advanced, Default)
4. Use the onscreen buttons to adjust settings
5. Press the return button \Rightarrow to save settings

Your audio system may differ from those in the illustrations. For further UVO eServices with Premium Navigation® operations, refer to the Car Multimedia System User's Manual. For further audio system operations, refer to pages 26-28.

UVO eServices with Premium Navigation*

– FM/AM/SiriusXM®/Media (USB, iPod®, Aux, *Bluetooth*® Audio, My Music, Pandora®)

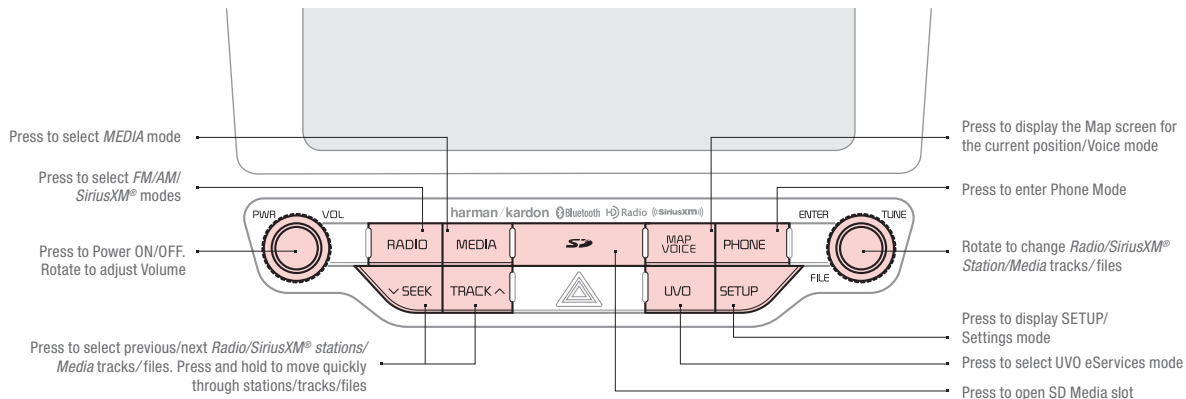

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button
- Prolonged use of the UVO eServices system in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO eServices System should be operated when the engine is running to prevent battery discharge

REMINDER:

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Sound Settings

To adjust the UVO eServices System with Navigation sound settings:

1. Press the **SETUP** key on the audio control unit
2. Select the on-screen **SOUND** button
3. Select the menu item (Position, Tone, Advanced, Default)
4. Use the onscreen buttons to adjust settings
5. Press the return button **⇐** to save settings

Your audio system may differ from those in the illustrations. For further UVO eServices with Premium Navigation operations, refer to the Car Multimedia System User's Manual. For further audio system operations, refer to pages 26-27.*

QR CODE

UVO eServices with Premium Navigation Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/audio/avn4

Digital Clock

UVO eServices System* / UVO eServices with Premium Navigation System* Clock Setup:

Press the SETUP key on the head unit. Then press the on-screen Clock icon to enter clock settings. Follow the onscreen options to adjust the clock settings.

QUICK TIP

 
Press the on-screen return icon to save changes.

REMINDERS:

- When needed, Daylight Savings must be enabled in the Clock Settings screen.
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (UVO eServices with Navigation System*).


USB Charger*

The USB charger is located inside the Center Console.

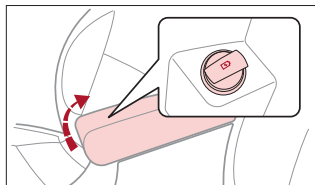

(Rear of Center Console shown)

 Aux/USB/iPod® Port & Power Outlets

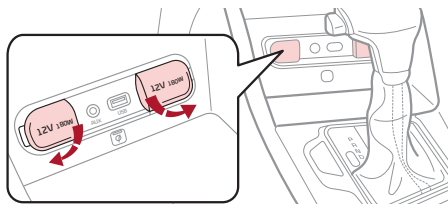

Use the Aux port to connect audio devices and the USB port to connect USB audio devices, smartphones and iPod® devices.

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

REMANDER: Using the power outlet (accessory plug) for prolonged periods of time with the engine off could cause the battery to discharge.

For more information on the Aux/USB/iPod® Port & Power Outlets, refer to the Owner's Manual.

 
AC Inverter*

The AC inverter supplies 115V/150W electric power to operate accessories or devices.

To use the AC inverter, open the AC inverter cover and connect a plug to it.

The AC inverter is ON when the vehicle is on.

For more information on AC Inverter usage and safety, see the Owner's Manual.

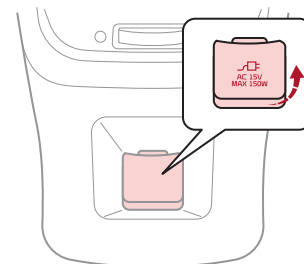

Wireless Smartphone Charging System*

1. Slide open tray cover
2. Place smartphone on the center of the charging pad
3. Indicator light **B** will change to amber once the wireless charging begins
4. Once charging is complete, the orange light will change to green

 
REMINDERS:

- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging, however, device compatibility varies. See your owner's manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance - Device position on the wireless charging system can affect charging performance. Other factor that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness

QUICK TIP

If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area.

Requires Qi enabled device or Qi enabled case

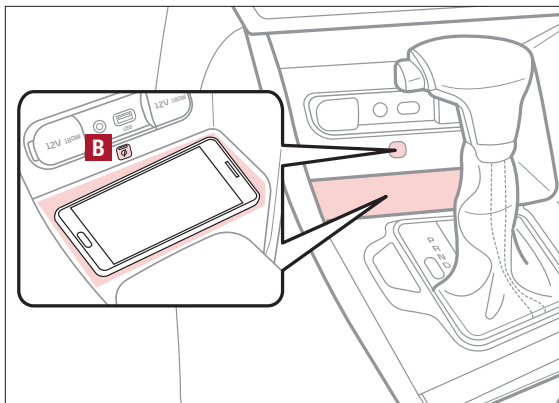

(Located in front of Gear Shift)

QR CODE

Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/de23/2017

Automatic Climate Control*

(Type A – Vehicles equipped with UVO eServices with Premium Navigation)


- A** Mode Selection button
- B** ECON (Economy Air Conditioning) button
- C** Dual Climate Control Button
- D** Dual Temperature Control knob
- E** Air Conditioning On/Off button
- F** Recirculated Air button
- G** Rear Windshield Defroster
- H** Fan Speed Control buttons
- I** System OFF button
- J** Climate information screen selection button
- K** Automatic Climate Control button
- L** Temperature Control knob
- M** Driver Only Fan Control
- N** Front Windshield Defroster

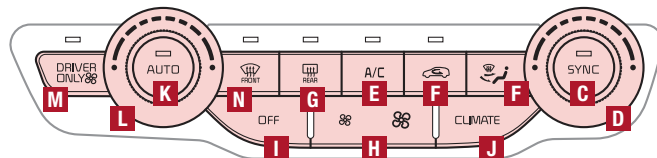

Automatic Climate Control*

(Type B – Vehicles equipped with UVO eServices)

 - A** Climate Control display
- B** Mode Selection button
- C** ECON (Economy Air Conditioning) button
- D** Dual Climate Control Button
- E** Dual Temperature Control knob
- F** Air Conditioning On/Off button
- G** Recirculated Air button
- H** Fan Speed Control buttons
- I** System OFF button
- J** Automatic Climate Control button
- K** Temperature Control knob
- L** Front Windshield Defroster
- M** Driver Only Fan Control
- N** Rear Windshield Defroster

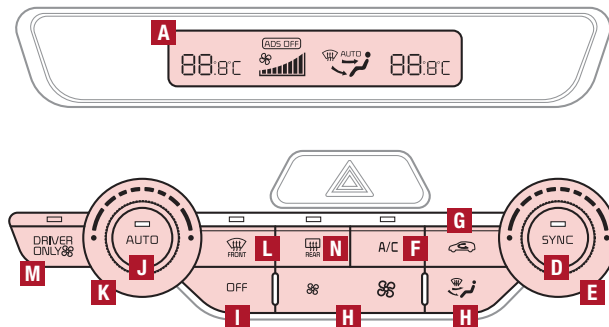


Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Automatic Climate Control*


Climate Control Auto Function

1. Press AUTO to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature
3. Press SYNC to synchronize driver and passenger temperature

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Driver Only Ventilation:

Driver Only Ventilation restricts air flow to the driver's side vents only. This helps to optimize driving range by limiting the power drawn from the battery. Press DRIVER ONLY button  to enable air flow through the driver's side vents only.

REMINDERS:


- MAX A/C Mode automatically engages Recirculated Air
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Air Flow Modes:


To select Air Flow Modes, press the Mode selection buttons:



Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set Temperature to Hot
3. Press the Front Defrost button 

 
 
 
 
Defog Inside Windshield:

1. Set Fan Speed to desired position
2. Set desired Temperature
3. Press the Front Defrost button 

Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Automatic Gear Shift with Sportmatic® Shifting

- P: Park
- R: Reverse
- N: Neutral
- D: Drive (ECO Mode)
- D: Drive, left gate (Sport Mode)
- [+]: Manual Sport Mode Upshift
- [-]: Manual Sport Mode Downshift

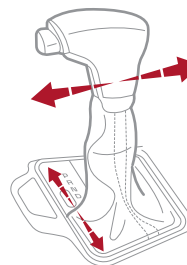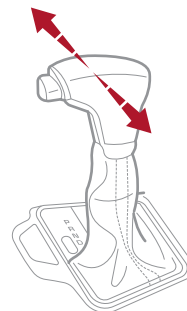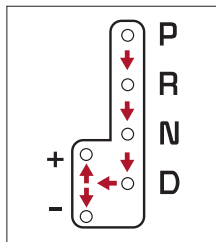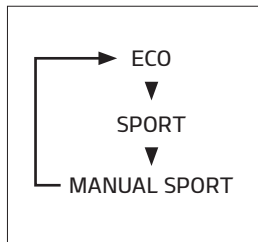

Sport Mode: To enter Sport Mode, move shift lever from D to left gate. When in Sport Mode, If the shift lever is not moved up or down, then the vehicle will automatically shift gears. To shift while in Manual Sport mode, move shift lever up [+] to upshift or down [-] to downshift. See page 10 for more information on the Drive Modes.

 
Seat Warmers / Ventilated Seats*

Seat Warmers — Press top of button once for high setting (3 LEDs lit), again for middle setting (2 LEDs lit), again for low setting (1 LED lit). Press again to turn OFF.

Ventilated Seats — Press bottom of button once for high setting (3 LEDs lit), again for middle setting (2 LEDs lit), again for low setting (1 LED lit). Press again to turn OFF.

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default

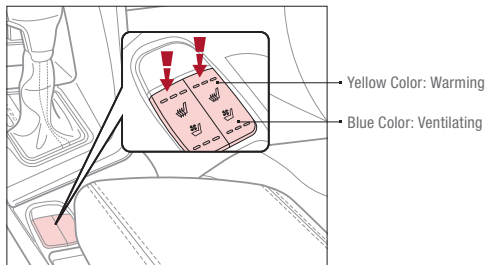

QR CODES

To view these videos on your mobile device, snap these QR codes. Refer to page 2 for more information.

Sportmatic® Shifting Video



www.KuTechVideos.com/de23/2017

Heated and Ventilated Seats Video

 


www.KuTechVideos.com/de23/2017

Driver Position Memory System*

To store a seating position into memory, first place the shifter into P (Park) while the ignition switch is ON. Then:


1. Adjust the driver's seat
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored
4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen

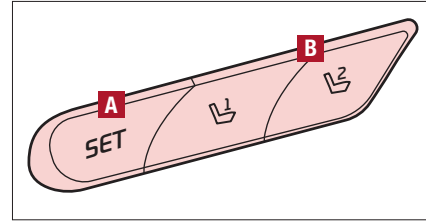

Front Seat Headrest Adjustment



To raise headrest: Pull headrest up.

 To lower headrest: Press lock **C**, then press the headrest down.

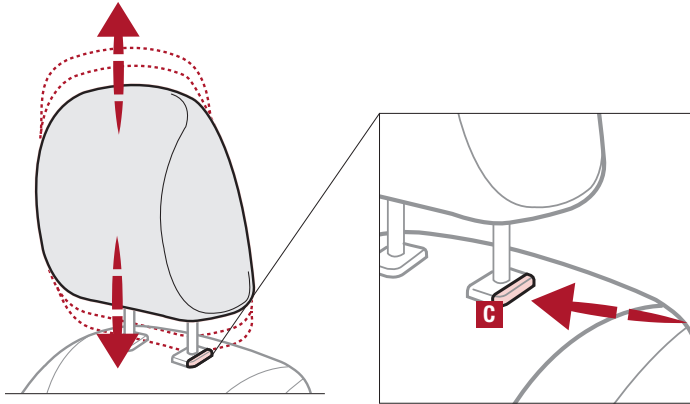

Power Adjustable Driver's Seat*

  Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar forward/backward

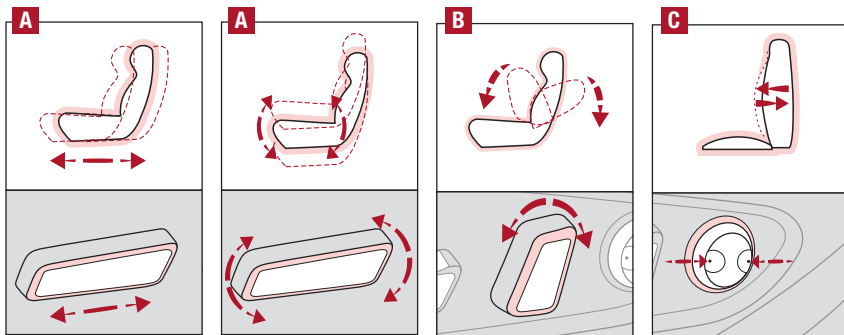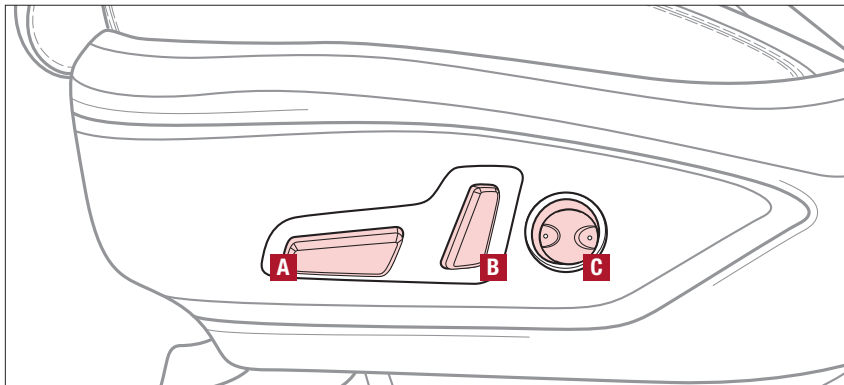

Seat

Seat Cushion

Seatback

 
Lumbar

6-Way Manual Adjustable Driver's Seat*

Pull lever **D** to slide Seat forward/backward.

Pull/press lever **E** to adjust Seat height.

Pull lever **F** to adjust Seatback recline.

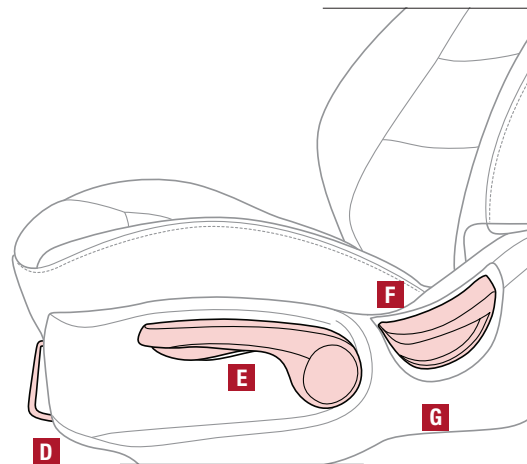

QUICK TIP

When adjusting seat forward or backwards, ensure seat clicks or locks into place before driving vehicle.

Smart Key*

Smart Key Fob:

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate. Then lift the lid to manually open Liftgate.

REMINDER:

The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle.

- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key (on reverse side of fob)

Driver's Door Lock/Unlock button **G**:

 
- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

Mechanical Key **F**:


- Use to unlock Driver's Door
- Use to enable/disable Child Safety Locks

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

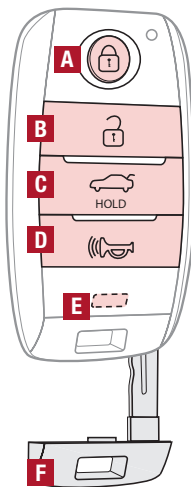

 REMINDER: Remote button configuration may vary depending on vehicle options.

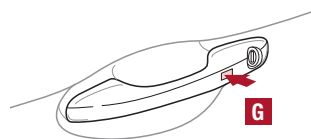

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

Double-Turn Lock/Unlock All

- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

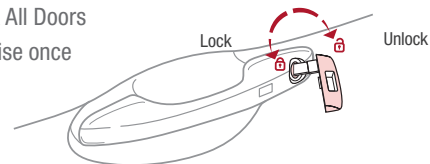


Remote Keyless Entry (Folding Key)*

- A** Press the release button to unfold the key
- B** Press to lock All Doors
- C** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch
- D** Manual Liftgate*: Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate.
- D** Power Liftgate*: Press and hold for more than 1 second to open
- E** Press and hold more than a half second for Panic Alarm.

Remote button configuration may vary depending on vehicle options.

 To turn OFF Alarm, press any button.

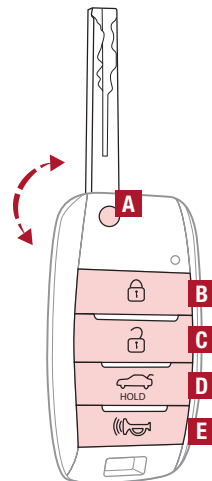

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ENGINE START/STOP button is OFF.

 
Map/Personal Lamp

Push the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a Map Lamp or Personal Lamp for the driver or front passenger.


Room Lamp

 : When pressed **B**, the lamp turns ON when any door is opened.

 : When pressed **C**, the lamp stays on continuously.

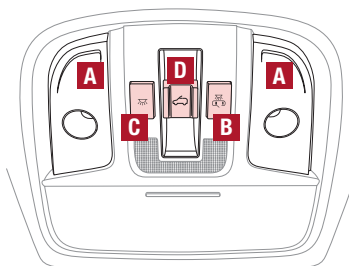

(Type B)

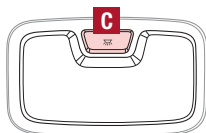 

(Type A)

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunroof Operation*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.

Slide the Sunshade and Sunroof:

- Auto Open: Slide lever backward to the farthest position and release
- Auto Close (Sunroof only): Slide the lever **D** forward to the farthest position and release

Slide the Sunshade:

- Open: Manually slide the Sunshade open
- Auto Close: Slide the lever **D** forward to the farthest position

Slide the Sunroof (with Sunshade open):

- Open: Slide the lever **D** backward and release
- Close: Slide the lever **D** partially forward to the first detent position or pull the lever downward

Tilt the Sunroof:

- Raise: Push lever **D** upward
- Auto Close: Slide the lever **D** forward to the farthest position

REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

 
QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** inside of the Hood's center and lift the Hood

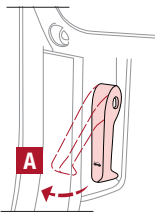

(Located on Driver side kick panel)

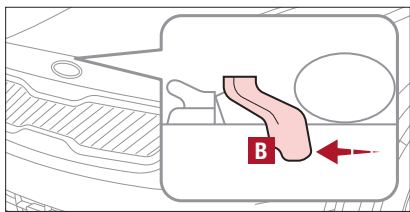 


(Latch located inside hood)

Closing the Hood: Lower the Hood about halfway and then press down to securely lock in place.

Fuel Door Release

 
Press the button **C** to release the fuel door.



(Buttons located on Driver's Panel to the left of the Steering Wheel)

Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for **ONE CLICK** to prevent Malfunction Indicator  from illuminating.

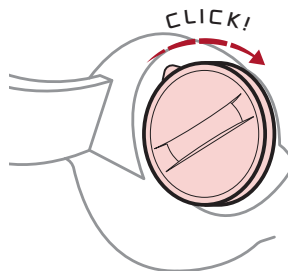

REMINDER: The Fuel Filler Door Release button is located on the left side of the Steering Wheel on the lower button panel

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

Sunvisor

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

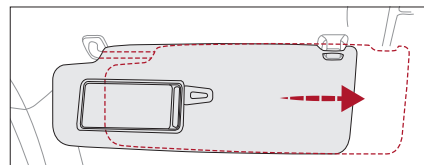


REMINDEERS:

- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sunvisor around from the front or side windows


Parking Assist System*

The Parking Assist System* is not a safety device. The Parking Assist System* is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the front, rear and side of the vehicle when moving forward or backing up.

 The system is activated when the ignition is ON and the vehicle is in R (Reverse). To deactivate the system, press the Parking Assist System* button **A** (LED illuminated), when vehicle is in D (Drive) or R (Reverse).

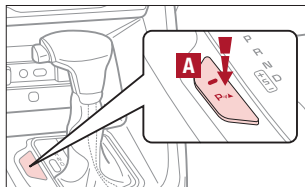

 To activate, press button **A** again (LED not illuminated).

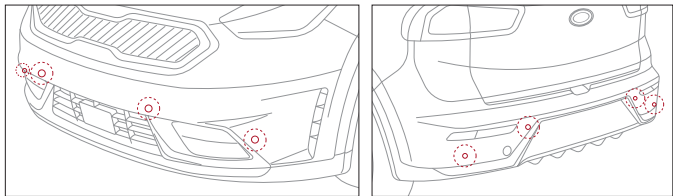

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first
- The above images are for illustration purposes only and may not reflect actual operation

 
The Parking Assist System is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. The Parking Assist System* may not detect every object in front of or behind the vehicle.*

Rear-Camera Display*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the rearview display mirror or the UVO eServices System/UVO eServices with Premium Navigation System* screens while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

- ENGINE START/STOP button is in the ON position (green light)
- Gear Shift Lever is in the R (Reverse) position

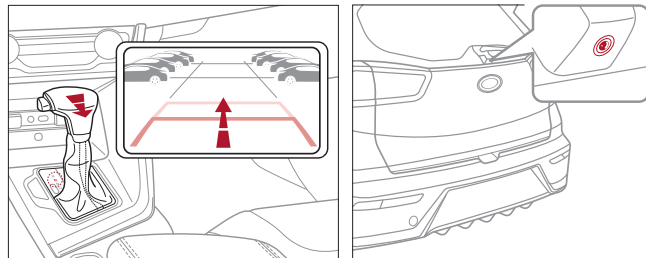


REMINDERS:

- The above images are for illustration purposes only and may not reflect actual operation
- UVO eServices System* — While camera is active, only the volume controls on the Audio System can be operated.
- UVO eServices System/UVO eServices with Premium Navigation System* — While camera is active, only the Audio System can be operated on the Steering Wheel and Audio Control Unit. Navigation features are disabled.

The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up

Hybrid Battery Air Intake

 The Hybrid Battery Air Intake, located on the side underneath the rear seats, is used to cool down the hybrid battery. For safety reasons, this vent should never be blocked. Doing so may cause the battery to overheat.

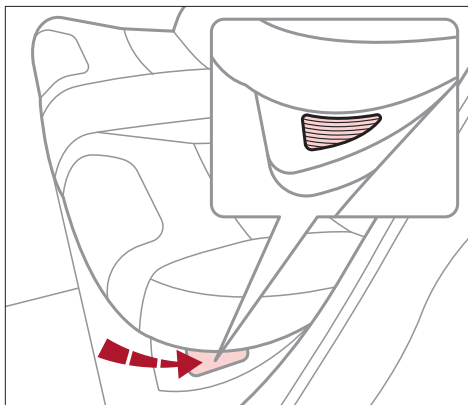


QUICK TIP

Clean the air intake for the hybrid battery regularly with a dry cloth

PRECAUTION: Never clean the battery vent with a WET cloth or spill liquid over the air intake. This could cause an electric shock, which could cause serious damage, injury or death.

Child-Protector Rear Door Lock

 Locate these locks on the rear edge of the rear passenger doors. Turn the safety lock to the LOCK position to disable the inner door handles from opening the rear doors.

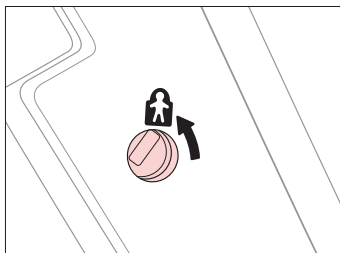

REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.

 
Tire Mobility Kit

The Tire Mobility Kit may temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.

A Sealant Bottle

B Compressor

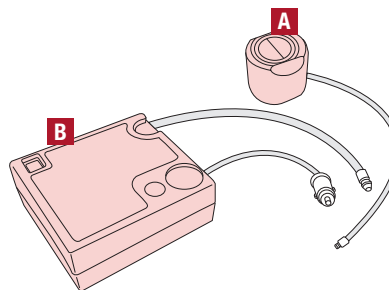

QR CODE

Tire Mobility Kit Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/de23/2017

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

REMINDERS:

- The above images are for illustration purposes only and may not reflect actual operation
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for a maximum distance of up to 120 miles.

Occupant Detection System (ODS) / Passenger Airbag Off Indicator

ODS detects the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

 
If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" light will illuminate.



Seat Belts

To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**.

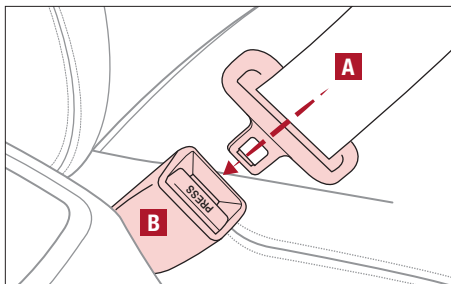

QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

 
REMINDER:

For maximum protection, always wear your Seat Belt.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

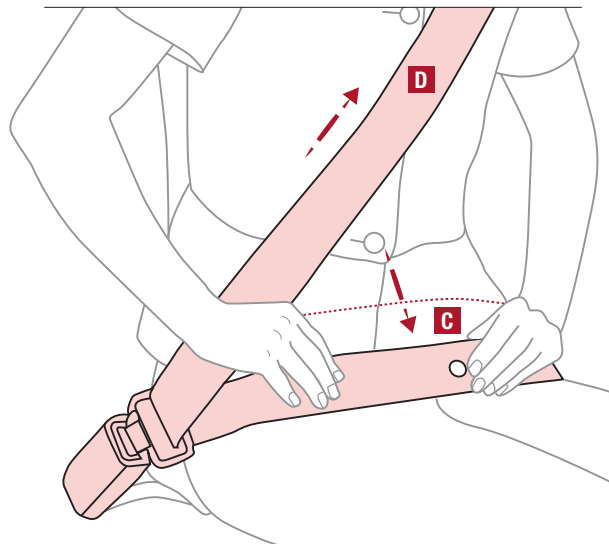

Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

7,500 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position)

REPLACE:

- Engine oil and filter

INSPECT*:

- Air cleaner filter
- HSG belt²
- Vacuum hose

* And, if necessary, adjust, correct, clean, or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

15,000 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position

REPLACE:

- Climate control air filter (for evaporator and blower unit)
- Engine oil and filter

INSPECT*:

- Air cleaner filter
- HSG belt²
- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers and rotors
- Rear brake disc/pads
- Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Engine Clutch Actuator Hose and Lines

* And, if necessary, adjust, correct, clean, or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO eServices only; see page 27 for setup information)

Normal Maintenance Schedule (Continued)

22,500 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position

REPLACE:

- Engine oil and filter
- Engine clutch actuator fluid

INSPECT*:

- Air cleaner filter
- HSG belt²
- Vacuum hose

* And, if necessary, adjust, correct, clean, or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

30,000 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position

REPLACE:

- Air cleaner filter
- Climate control air filter (for evaporator and blower unit)
- Engine oil and filter

INSPECT*:

- | | |
|--|---|
| • Air conditioning refrigerant | • Fuel tank air filter** ² |
| • Brake fluid | • HSG belt ³ |
| • Brake hoses and lines | • Rear brake disc/pads |
| • Drive shafts and boots | • Parking brake |
| • Exhaust pipe and muffler | • Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint |
| • Front brake disc/pads, calipers and rotors | • Suspension mounting bolts |
| • Fuel filter ² | • Vacuum hose |
| • Fuel cap, fuel lines, fuel hoses and connections | • Vapor hose and fuel filler cap |
| | • Engine clutch actuator hose and lines |

* And, if necessary, adjust, correct, clean, or replace.

** If equipped

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

³ Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

Normal Maintenance Schedule (Continued)

37,500 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position

REPLACE:

- Engine oil and filter

INSPECT*:

- Air cleaner filter
- HSG belt²
- Vacuum hose
- Dual clutch transmission fluid

* And, if necessary, adjust, correct, clean, or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

45,000 miles

PERFORM:

- Fuel additive¹
- Rotate tire position

REPLACE:

- Climate control air filter (for evaporator and blower unit)
- Engine oil and filter
- Engine Clutch Actuator Fluid

INSPECT*:

- Air cleaner filter
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads and calipers
- HSG belt²
- Rear brake disc/pads
- Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Vacuum hose
- Engine clutch actuator hose and lines

* And, if necessary, adjust, correct, clean, or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

Normal Maintenance Schedule (Continued)

52,500 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position

REPLACE:

- Engine oil and filter

INSPECT*:

- Air cleaner filter
- HSG belt²
- Vacuum hose

* And, if necessary, adjust, correct, clean, or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

60,000 miles

PERFORM:

- Add fuel additive¹
- Rotate tire position

REPLACE:

- Air cleaner filter
- Climate control air filter (for evaporator and blower unit)
- Engine oil and filter
- HSG belt²

INSPECT*:

- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads and calipers
- Rear brake disc/pads
- Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Brake fluid
- Fuel cap, fuel lines, fuel hoses and connections
- Fuel tank air filter^{**3}
- Parking brake
- Vacuum hose
- Vapor hose and fuel filler cap
- Engine clutch actuator hose and lines

* And, if necessary, adjust, correct, clean, or replace.

** If equipped

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary. If HSG belt noise occurred, readjust HSG belt tension before replacing.

³ Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Airbags: For maximum protection, always wear your seat belt.

Android Auto: Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Apps: All information contained herein was based upon the latest available information at the time of appstore registration. Descriptions are believed to be correct, and Kia Motors Corporation (KMC) makes every effort to ensure accuracy, however, accuracy cannot be guaranteed. From time to time, KMC may need to update or make changes to the vehicle features and other vehicle information reported in this app. KMC, by the publication and dissemination of this material, does not create any warranties, either express or implied, to any Kia products. Contact your local Kia dealer for the most current information.

Autonomous Emergency Braking System (AEB) / Forward Collision Warning System: These systems are not substitutes for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.

Bluetooth® Wireless Technology: A compatible Bluetooth® wireless technology-enabled cell phone is required to use Bluetooth® wireless technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such mark by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

Driver Assist Features - Smart Cruise Control (SCC)*, Parking Assist System, Blind Spot Detection (BSD) with Lane Change Assist, Rear Cross Traffic Alert (RCTA), Lane Departure Warning System, Rear-Camera Display: These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

Electronic Stability Control, Hill-start Assist Control (HAC): No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Engine Start/Stop Button with Smart Key: Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.

Front Seat Headrest Adjustment: Never attempt to adjust headrests when vehicle is in motion.

Google Play™ Store is a trademark of Google, Inc. © 2016 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.

iPhone®/iPod®, Apple CarPlay™: Apple CarPlay, iPhone, iPod are registered trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

Navigation: Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Occupant Detection System (ODS): Kia vehicles use a number of different ODS types that vary by model.

Pandora® internet radio: Pandora® is a registered trademark of Pandora Media, Inc.

Seat adjustments: Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

Seat Belts / Airbags: For maximum protection, always wear your seatbelt.

Seat warmers: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2016 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

Sportmatic® is a registered trademark of Kia Motors America.

Steering Wheel Controls: Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

Sunvisor: Sunvisor may not shield all direct light. Do not operate the vehicle if Sunvisor is impairing your visibility.

Tilt/Telescoping Steering Wheel: Never attempt to adjust steering wheel position when vehicle is in motion.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

UVO eServices: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

UVO eServices app: App uses your smartphone data service. Normal cellular service rates will apply.

 
UVO eServices with Premium Navigation: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.



KEY FEATURE WALKTHROUGH


UVO eServices Setup – page 27

Walk customer through the registration/activation process for UVO eServices.

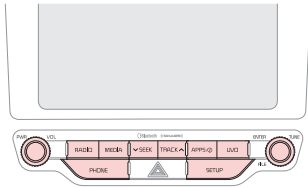


UVO eServices System* – page 28

 For further operational information, refer to the Car Multimedia System User's Manual.

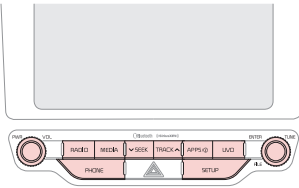


UVO eServices with Premium-Navigation* – page 29

 For further operational information, refer to the Car Multimedia System User's Manual.

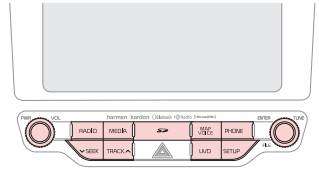


 Aux/USB/iPod® Port & Power Outlets – page 30

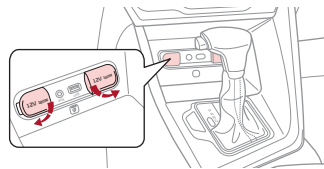


Cruise Control – page 24

 Demonstrate operation

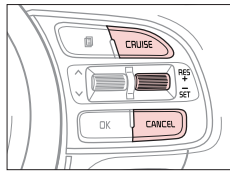

Bluetooth® Wireless Technology – page 22

 Demonstrate operation, and pair customer's phone.

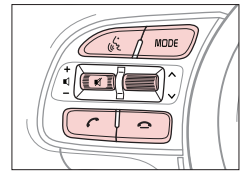

- Tire Pressure Monitoring System (TPMS) – page 5
- Trip Information / Trip Computer – page 7
- Fuel Economy – page 8
- Sport/ECO Modes – page 10
- Engine Start/Stop Button – page 18
- Audio Controls – page 24
- Digital Clock – page 30
- Seat Warmers/Ventilated Seats* – page 34

- Smart Key – page 37
- Sunroof Operation* – page 39
- Sunvisor – page 40
- Parking Assist System* – page 41
- Rear-Camera Display* – page 41
- Tire Mobility Kit – page 43
- Passenger Airbag Off Indicator – page 44

*IF EQUIPPED

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours & Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



NIRO CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- Confirm "Good Battery" with Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any supplemental audio user's guides)

KEY FEATURE WALKTHROUGH


- Instrument Cluster / Hybrid Displays – page 3

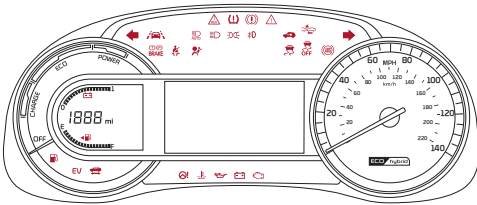

 - Hybrid Displays - UVO eServices with Premium Navigation System* – page 11

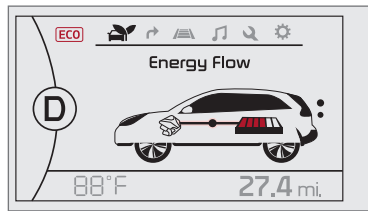

 
- Climate Control System* – page 32
Demo Defrost and Defog Windshield

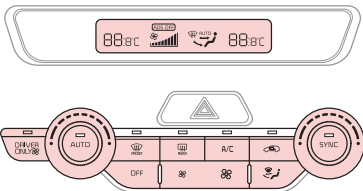

Type B shown

Automatic Climate Control with UVO eServices shown

 - Windshield/Rear Wipers & Washers – page 21
Windshield: Move lever Up/Down to change Wiper modes.
Rotate lever to adjust Intermittent Wipe Speed.

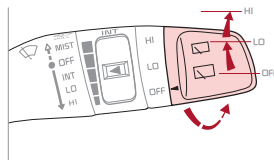

Windshield
 MIST: Single wipe
 OFF: Wipe off
 INT: Intermittent wipe
 LD: Slow wipe
 HI: Fast wipe

Pull to spray and wipe.



© 2016 Kia Motors America, Inc. All rights reserved.

Part Number: UN170-PS-004

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)