

RIO

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **RIO**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

ESSENTIAL FEATURES

Air Conditioning / Climate Control	23
Active ECO System*	08
Audio System - Standard Audio System (Type A)*	19
Audio System - Standard Audio System (Type B)*	20
Audio System - UVO eServices System*	21
Audio System - UVO eServices with Navigation*	22
Aux/USB/iPod® Port & Power Outlets*	23
Bluetooth® Wireless Technology*	16
Cruise Control*	18
Digital Clock	23
Folding Rear Seatback	28
Idle, Stop and Go (ISG) System*	09
Manual Gear Shift*	26
Passenger Airbag Off Indicator	35
Smart Key*	29
Tire Mobility Kit	35
Tire Pressure Monitoring System (TPMS)	05
Windshield/Rear Wipers & Washers*	14

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



VIDEOS & QR CODES	02
------------------------------	----

INSTRUMENT CLUSTER	
Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Trip Computer / Tripmeter	06
Instant Fuel Consumption Mode	06
Fuel Economy	06
User Settings*	07
Service Mode (Maintenance)*	07
Active ECO System*	08

DRIVER'S PANEL	
Idle, Stop and Go (ISG) System*	09
Instrument Panel Dimmer	10
Electronic Stability Control (ESC)	10
Hill-Start Assist Control (HAC)	10
Power Windows, Window Lock & Central Door Lock*	11
Power/Heated Outside Mirrors*	11
Power Folding Outside Mirrors*	11
Engine Start/Stop Button*	12

STEERING WHEEL CONTROLS	
Headlights & High Beams	13
Turn Signals & Fog Lights*	13
Windshield Wipers & Washers	14
Rear Wiper & Washer*	14
Tilt/Telescoping Steering Wheel*	15
Bluetooth® Wireless Technology*	16
Audio Controls	18
Cruise Control*	18

AUDIO SYSTEMS	
Standard Audio System (Type A)*	19
Standard Audio System (Type B)*	20
UVO eServices System*	21
UVO eServices with Navigation*	22

CENTER PANEL	
Digital Clock	23
Aux/USB/iPod® Port & Power Outlets	23
Manual Climate Control	24
Automatic Gear Shift / Sportmatic® Shifting*	25
Manual Gear Shift*	26

SEATING	
Seat Warmers*	27
6-Way Adjustable Driver's Seat	27
Front Seat Headrest Adjustment	27
Folding Rear Seatback	28

OTHER KEY FEATURES	
Smart Key*	29
Remote Keyless Entry (Folding Key)*	30
Double-Turn Lock/Unlock All*	30
Fuel Cap / Malfunction Indicator	30
Hood Release Lever and Latch	31
Fuel Door Release Lever	31
Trunk Release Lever	31
Sunvisor	31
Map/Room Lamps*	32
Sunroof Operation*	33
Rear-Camera Display*	34
Child Safety Locks	35
Tire Mobility Kit	35

SAFETY FEATURES	
Occupant Detection System (ODS/	
Passenger Airbag Off Indicator	36
Seat Belts	36
Seat Belt Retractor Locks	36

NORMAL MAINTENANCE SCHEDULE	37
------------------------------------	----

LEGAL DISCLAIMERS (See Back Inside Cover Page)

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.KuTechVideos.com/ub13/2017. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.KuTechVideos.com/ub13/2017

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet
3. When accessing videos on your mobile device, standard cellular data rates will apply

Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Warning and Indicator Lights
- E** Gear Shift Position Indicator
- F** Odometer
- G** Trip Computer
- H** Fuel Gauge
- I** Engine Coolant Temperature Gauge

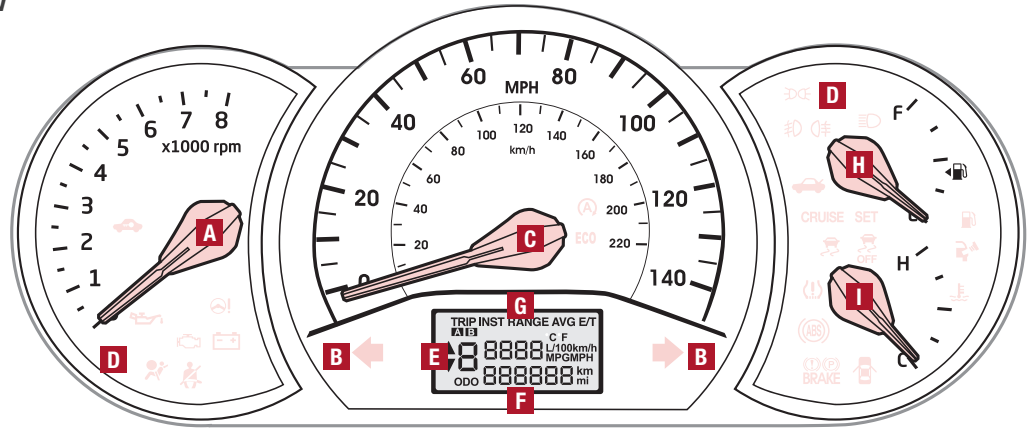


(Type A cluster)*

REMINDERS:

- Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations
- For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual

 Indicators & Warning Lights

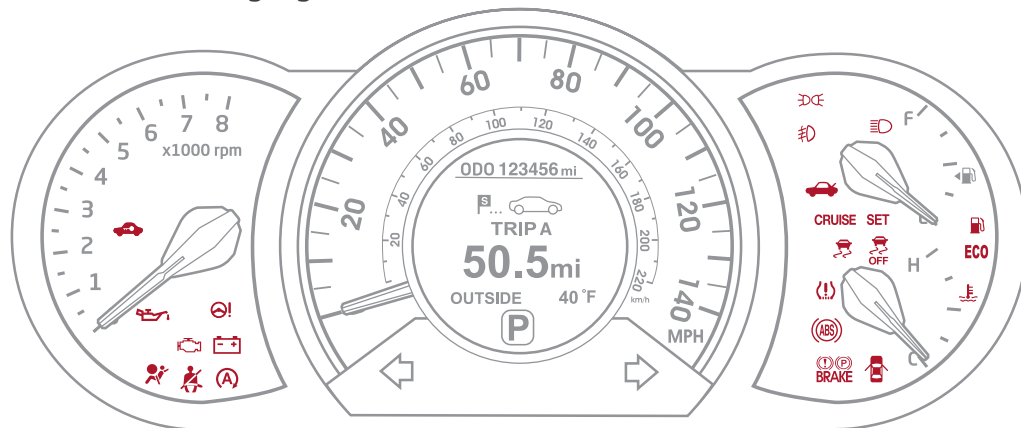

(Type B cluster)*

REMINDERS:

- Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations
- For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual

 Immobilizer Indicator*

 Engine Oil Pressure Warning Light

 Airbag Warning Light

 Malfunction Indicator

 Seat Belt Warning Light

 Electric Power Steering (EPS) System Warning Light*

 Charging System Warning Light

 Auto Stop (ISG system) Indicator*

 Tail Light Indicator

 Front Fog Light Indicator

 High Beam Indicator

 Trunk/Hatch Open Warning Light*

CRUISE Cruise Control Indicator*

SET Cruise SET Indicator*

 Electronic Stability Control (ESC) Indicator*

 Electronic Stability Control (ESC) OFF Indicator*

 Low Fuel Level Warning Light

ECO ECOMINDER® Indicator*

 Low Tire Pressure Light

 Engine Coolant Temperature Warning Light

 Anti-lock Braking System (ABS) Warning Light*

 Parking Brake & Brake Fluid Warning Light

 Door Ajar Warning Light

 Electronic Brake Force Distribution (EBD) System Warning Light

Tire Pressure Monitoring System (TPMS)

The TPMS indicator (⚠️) functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator (⚠️) will illuminate if one or more tires is significantly underinflated, or if a spare tire has been installed that does not have a TPMS device or when the outside temperature drops considerably.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light (⚠️). See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator (⚠️) will blink for approximately one minute and then illuminate - See dealer for service.

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

QR CODE

Tire Pressure Monitoring System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/ub13/2017

Trip Computer / Tripmeter


The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the ENGINE START/STOP button* is in the ON position.

To cycle through the different Trip Computer modes, press the TRIP button **A**.


To display the Tripmeter, press the TRIP button **A**, then select Trip A or Trip B. Press the RESET button **B** for more than 1 second to reset the Tripmeter to zero.

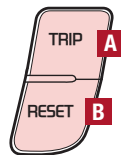

 (Located on the right side of the Steering Wheel)

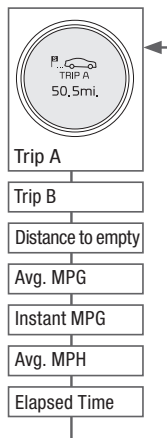

(Type B cluster)

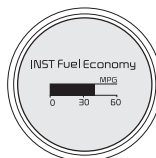 

(Type B cluster)

REMINDEES:

- Appearance of Trip Computer / Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range / Distance to Empty) is reset if the battery is disconnected

Instant Fuel Consumption Mode*

Press the TRIP button **A** to cycle to the Instant Fuel Consumption mode. This screen displays the calculated fuel consumption during the past few seconds.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicle
3. Don't let the engine idle longer than necessary

REMINDEES:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 MPH (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (----)

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range varies depending on a vehicle's fuel tank size, e.g.12-gal.vs.24-gal. Even though the two vehicles' MPG may be the same, the vehicle with the larger tank will have the greater range.

For more information on Fuel Economy, you can snap the QR code above to view a video or refer to the brochure "GETTING MORE OUT OF EVERY GALLON, FUEL-SAVING TIPS TO DRIVE BY" available at your local dealership.

QR CODE

Fuel Economy Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/ub13/2017

User Settings*

(Type B cluster)

To enter the User Settings mode in the LCD Instrument Cluster when the vehicle is at a standstill and with the ENGINE START/STOP button* in the ON position or ignition on, press the TRIP button

A to toggle to User Settings. Press and hold the TRIP button for more than 2 seconds to enter.

Toggle through the menu by pressing the TRIP button and select the item by pressing the RESET button **B**.

User Settings Menu

 
Car Option:

- Align Steering Wheel*
- Outside Temperature Unit*
- Language

Maintenance:

- Engine Oil
- Tire Rotation

For more information on the User Settings mode, please refer to your Owner's Manual.



(Located on the right side of the Steering Wheel)

Service Mode (Maintenance)*

(Type B cluster)

When service is required, the following screens will be displayed:

- Rotate Tire
- Change Engine Oil

To reset or deactivate the Maintenance system reminder, press the RESET button **B** for more than one second. Then toggle to the preference and select by pressing the RESET button **B**.

 
 
 
Service (Maintenance) Interval Setting

When in User Settings mode, press the TRIP button **A** to toggle to Maintenance and select by pressing the RESET button **B**.

When in the Maintenance mode, toggle to the menu item and press the RESET button **B** to enter:

- Engine Oil
- Tire

Toggle to your selection and press the RESET button **B** to set.

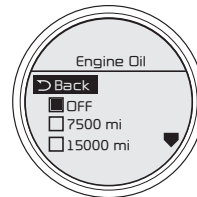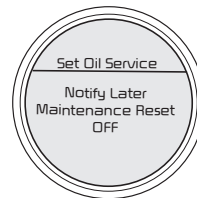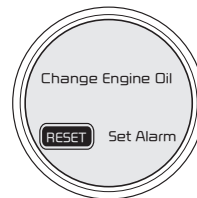

(Type B cluster)

QR CODES

To view a video on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



www.KuTechVideos.com/ub13/2017

LCD Display: Maintenance Video



www.KuTechVideos.com/ub13/2017

Active ECO System*

Active ECO helps improve fuel economy by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the ACTIVE ECO button **A**. The green ECO Indicator light **B** in the instrument cluster will illuminate, indicating that the Active ECO is operating. The Active ECO System will remain on even when the ignition is cycled.

 
To turn the Active ECO System OFF, press the ACTIVE ECO button **A** again.

QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.

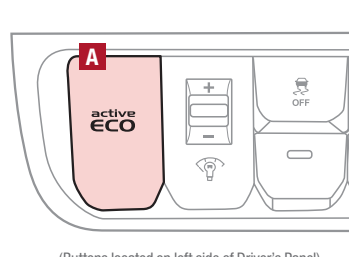

(Buttons located on left side of Driver's Panel)



(Type B Cluster)

QR CODE

Active ECO System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/ub13/2017

Idle, Stop and Go (ISG) System*

The ISG system helps reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill the engine will stop, and the green AUTO STOP indicator (A) on the instrument cluster (A) will illuminate and the message Auto Stop will appear in the LCD screen*.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Sport mode. When engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG System, press the ISG OFF button (B). If you press again, the system will be activated.

QUICK TIPS

 
The ISG system is disabled when:

- A seat belt is unfastened
- The hood or a door is opened
- Battery condition is poor
- The front or rear defroster is turned on
- Engine coolant temperature is low
- The outside ambient temperature is too low/high
- Emission control devices activate
- The vehicle is on a steep slope


REMINDERS:

- ISG is active by default at vehicle start-up. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically
- If the AUTO STOP indicator (A) is illuminated yellow, please contact an authorized Kia dealer

For more information on Idle, Stop and Go System, refer to your Owner's Manual or contact your local dealership.

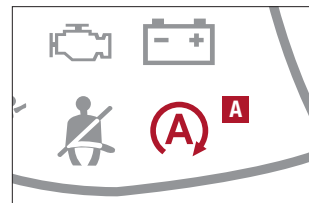

(Type B Cluster)

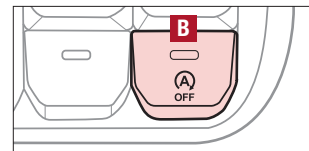 

(Buttons located on left side of Driver's Panel)

QR CODE

Idle, Stop and Go System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/ub13/2017

Instrument Panel Dimmer

With parking lights / headlights ON, toggle switch **A** up or down to adjust display brightness of the instrument panel illumination.

REMINDER: The Instrument Panel Dimmer does not adjust brightness on the UVO eServices with Navigation system screen. Use navigation setup to adjust brightness on the navigation system.

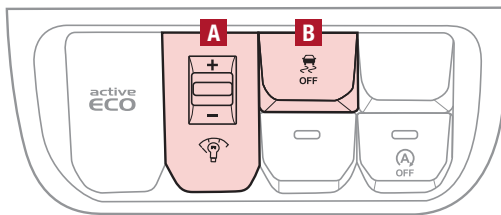

(Buttons located on left side of Driver's Panel)

Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC OFF button **B** to turn OFF.

REMINDEES:

- ESC is active by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will be lit momentarily whenever the ESC is active

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backwards

Power Windows, Window Lock & Central Door Lock*

- A** Pull/Press to operate Driver's Window Auto Up/Down*
- B** Press to Unlock/Lock All Doors
- C** Press Power Window Lock button* to disable all Passenger Windows

Automatic Door Lock/Unlock*

Auto Door Lock/Unlock will engage when the gear shift is moved in to or out of the P (Park) position.

Refer to your Owner's Manual for more information on Auto Door Lock/Unlock.

Power/Heated Outside Mirrors*

 
Mirror heaters controlled with Rear Defroster.

Power Folding Outside Mirrors*

To adjust outside mirror positions, toggle switch **D** left or right to select mirror, then press arrows to adjust.

REMINDER: To lock position of mirrors, toggle mirror switch **D** to the neutral (center) position.

To fold the Power Folding Outside Mirrors, press the folding mirror button **E**. Press again to unfold.

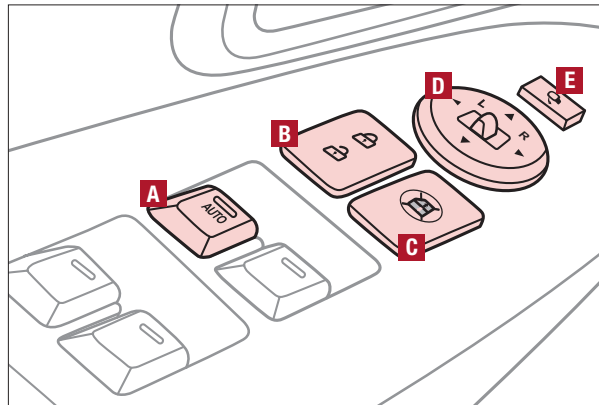

(Buttons located on the Driver's Door Panel)

Engine Start/Stop Button*

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or inside the vehicle.

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park) (or while in Neutral for Manual Gear Shift)

To turn the engine OFF:

1. Move gear shift into Park
2. Press the ENGINE START/STOP button

QUICK TIPS

To use electrical accessories:

 
ACC position **A**:

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once

ON position **B**:

- When already in the ACC position **A** and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice **B**

Keeping the vehicle in ACC or the ON position for extended periods of time without turning engine on may discharge the vehicle's battery.

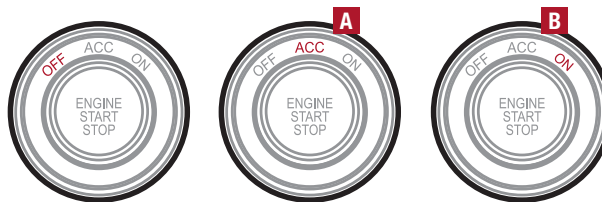

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

QR CODE

Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/ub13/2017

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

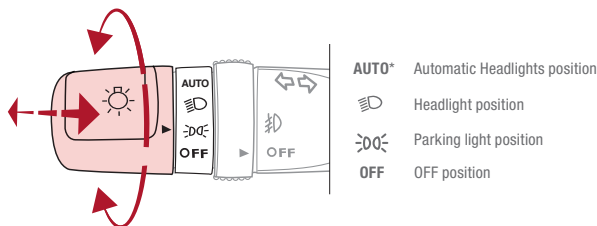


AUTO Light* function — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate lever ring to turn Fog Lights ON/OFF

 REMINDER: Headlights must be ON for Fog Light operation.

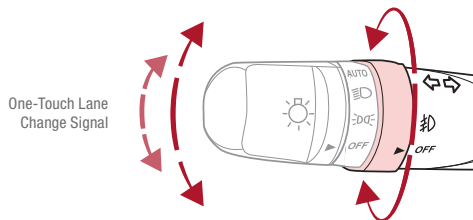


One-Touch Lane Change Signal is activated by moving the Turn Signal Lever Up/Down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

Windshield Wipers & Washers

To operate:

 - Move lever Up/Down to change Wiper modes
- Rotate lever ring to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

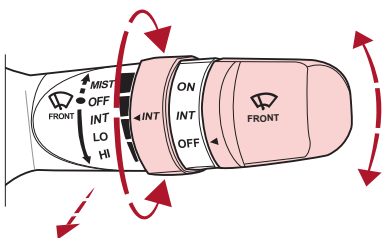

- MIST:** Single wipe
- OFF:** Wiper off
- INT:** Intermittent wipe
- LO:** Slow wipe
- HI:** Fast wipe

 
QUICK TIPS

- Rotating ring up increases Intermittent wipe frequency and wipe speed. Rotating ring down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

Rear Wiper & Washer*

To operate:

- Rotate Rear Wiper switch to change wiper modes.
- Push lever to spray and wipe

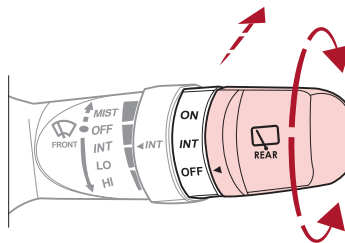


- ON:** Normal wiper
- INT:** Intermittent wipe*
- OFF:** Wiper off

QUICK TIP

On Rear Wipers, intermittent wipe function is not adjustable.

Tilt/Telescoping Steering Wheel*

 
To adjust the Steering Wheel, press the lock-release lever **A** down and adjust the distance **B** and desired angle **C**. When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

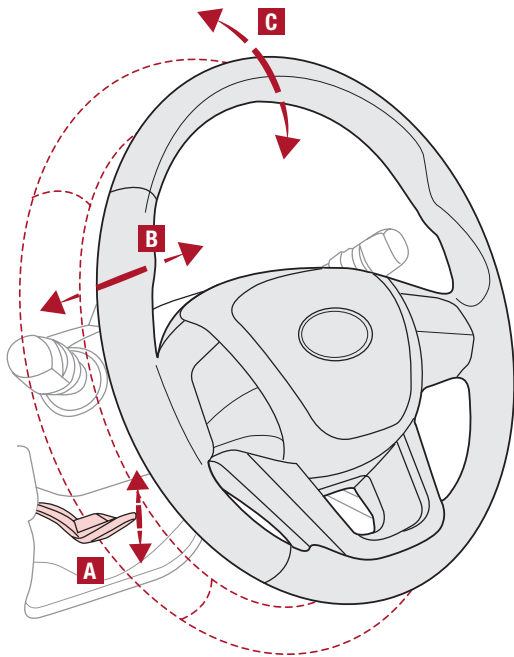

QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

 Bluetooth® Wireless Technology*

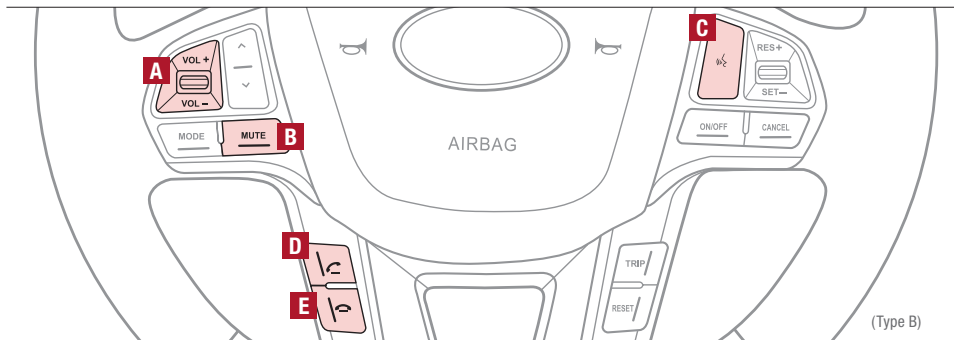

- A Volume button:** Press up/down to raise/lower speaker volume
- B MUTE button:** Press to mute the microphone during a call
- C Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

- D Receive/Place Call button:** Press to receive/place/transfer calls. Press to place a call using voice command prompts from the system, or to answer an incoming call.
- E End Call button:** Press to end a call or cancel a function

QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language may delete paired phones

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, if equipped, refer to the Car Multimedia System User's Manual or the UVO System User's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology*

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future *Bluetooth*® connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Standard Audio Systems*

- Option 1: Press the Receive/Place Call button **D** (system will prompt you through call process)
- Option 2: Press the Talk button **C** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

UVO eServices System*

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **C**. Then say the command "Call {name}" or "Dial {number}"

UVO eServices with Navigation*

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **C**. Then say the command "Call Name" or "Dial Number," followed by phonebook name or number

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help your *Bluetooth*® Wireless Technology Voice Recognition performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single-syllable names ("John Smith" vs. "Dad"; "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.KUTechVideos.com/ub13/2017

Audio Controls

Cruise Control*

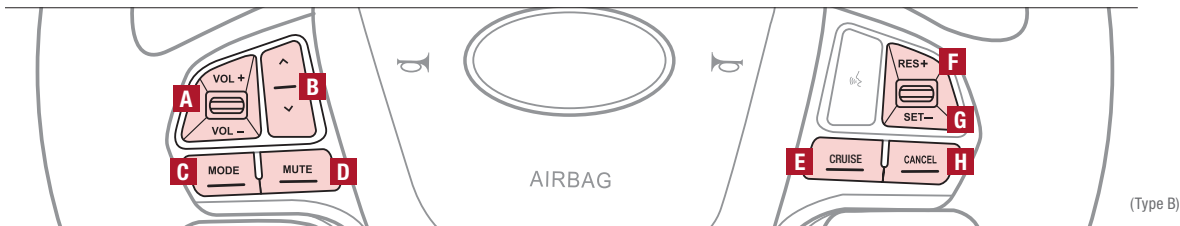

A Volume button: Press up/down to raise/lower volume

B Seek/Preset button

- *Radio Mode:* Press to advance through Preset Stations. Press and hold to Auto Seek
- *Media Mode:* Press to move Track up/down. Press & hold to FF/REW

C Audio MODE button: Press to cycle through FM/AM/SiriusXM®/CD/MP3/USB/iPod®/Aux/Bluetooth® Audio* modes

D MUTE button: Press to mute all audio

QUICK TIP

Pressing the Audio MODE button for more than 1 second will turn Audio Mode ON/OFF

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

For further audio system operations, refer to pages 19 – 22

E CRUISE Control On/Off button: Press to turn the Cruise Control system On/Off

F Resume Cruising Speed button: Press up to resume or increase Cruising Speed

G Set Cruising Speed button: Press down to set or decrease Cruising Speed

H Cruise Control CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function above approximately 25 mph
- The cruise control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

 
REMINDER: Standard Cruise Control is a part of the Smart Cruise Control System (SCC) and can be set as the operating mode. To switch from SCC to Standard Cruise Control, press and hold the CRUISE button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

Standard Audio System (Type A)*

– FM/AM/SiriusXM®/Media (CD, USB, iPod®, Aux, My Music, Bluetooth® Audio)*

(with Bluetooth® Wireless Technology*)

(without Bluetooth® Wireless Technology*)

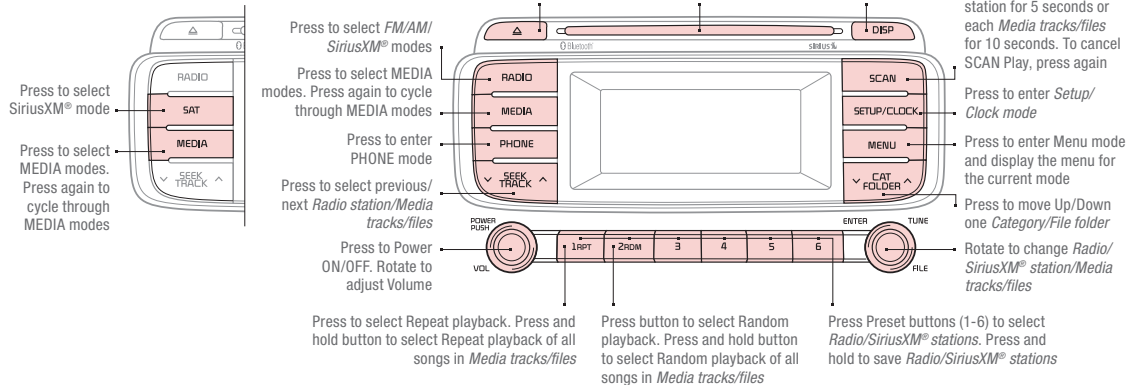

QR CODE

Standard Audio System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.KUTechVideos.com/
audio/base_system](http://www.KUTechVideos.com/audio/base_system)

Audio System Setup Options

Press the SETUP/CLOCK button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the TUNE knob to adjust the audio option selected. Audio options may include the following:

- **Display settings** - Mode Popup, Media Display
- **Sound settings** - Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume*
- **Clock settings** - Clock Settings, Calendar Settings, Time Format, Clock Display (when power is off)
- **System settings** - Memory Information*, Prompt Feedback*, Language

 
Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

For further audio system operations, refer to pages 20-22.

To adjust the sound settings: (Bass, middle, treble, fader, balance), press the SETUP/CLOCK button and select SOUND SETTINGS in the SETUP menu. Then use the TUNE knob to cycle to the selection and press the TUNE knob to select. Turn the TUNE knob left/right to adjust sound setting.

Standard Audio System (Type B)*

– FM/AM/SiriusXM®/Media (USB, iPod®, AUX, My Music, BT Audio)

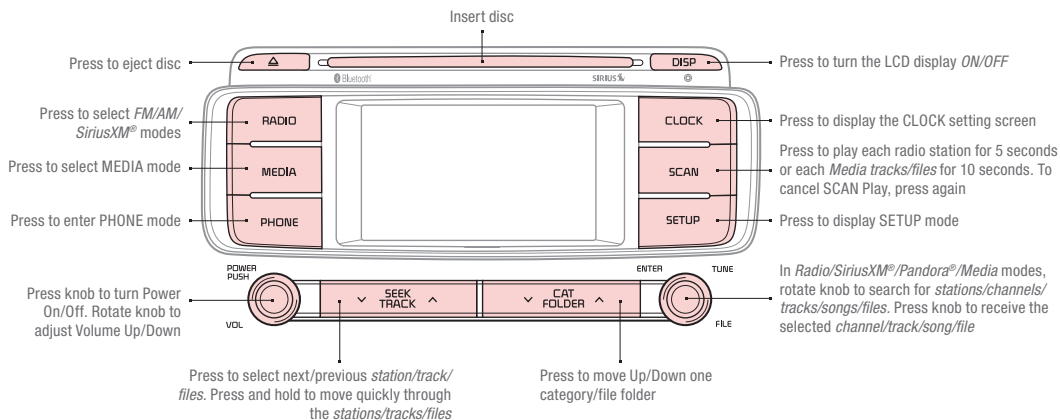

Audio System Set-up Options

Press the SETUP key, then using the touchscreen, press the menu item to enter (Display, Sound, Clock/Calendar, Phone, System). Adjust the available settings for each equipped audio system setup option by pressing the onscreen buttons/arrows. Audio system setup options may include the following:

 
- **Display settings** - Adjusting the Brightness, Mode Popup, MP3 Information Display
- **Sound settings** - Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume, Touchscreen Beep
- **Clock/Calendar settings** - Clock Settings, Calendar Settings, Clock Display
- **System settings** - Memory Information, Prompt Feedback, Language

To adjust the Sound settings (bass, middle, treble, fader, balance) – When in the SETUP menu, select Sound and then Sound Setting. Adjust the settings by pressing the onscreen arrows and then return \Rightarrow to exit.

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 19-22. See your Owner's Manual for more details.

UVO eServices System*

– FM/AM/SiriusXM®/PANDORA®/Jukebox/Media (CD, USB, iPod®, Aux, *Bluetooth*® Audio)

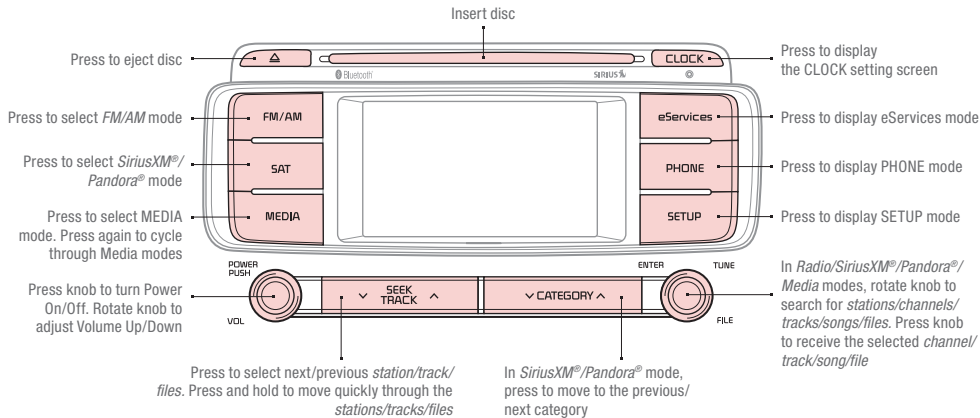

QR CODE

UVO eServices System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/audio/UVO_eServices

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Only MP3 or WMA files may be played or copied to Jukebox. Commercial CDs or CDs with a CDDA audio format (compact disc digital audio) cannot be copied to Jukebox
- At any time, you can interrupt UVO System / UVO eServices System Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the UVO System in ACC mode may drain the vehicle's battery

To adjust the sound settings (fader/balance, treble/middle/bass, touch screen beep), select the on-screen SOUND button on the audio mode display. For Fader/Balance and Tone, press the on-screen CHANGE button of the selection. Then press the on-screen arrows to adjust.

 
UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the UVO eServices App and log in to the app using your MyUVO.com account credentials
2. Register through your UVO eServices App or at MyUVO.com account
3. Follow the Apps phone pairing and activation steps

Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual or UVO System User's Manual for more details. For other audio system operations, refer to pages 19-22 or your Owner's Manual.

UVO eServices with Navigation*

– FM/AM/SiriusXM®/Media (CD, MP3, USB, iPod, Aux, Bluetooth® Audio, My Music)

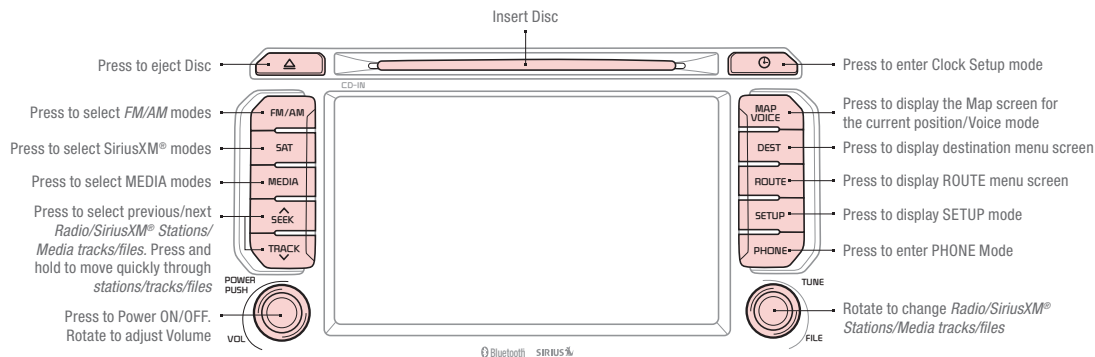

UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the UVO eServices App and log in to the app using your MyUVO.com account credentials
2. Register through your UVO eServices App or at MyUVO.com account
3. Follow the Apps phone pairing and activation steps

To adjust the sound settings (fader, balance, treble, mid, bass, volume ratio), press the SETUP button and select the on-screen SOUND button. Then select which sound to adjust. Press the on-screen arrows and DONE to save settings.

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated with the engine running to prevent battery discharge

Your vehicle's audio system may differ from that in the illustration. For further operational information, refer to the Car Multimedia System User's Manual. For other audio system operations, refer to pages 19-21 or your Owner's Manual.

QR CODE

Navigation Audio System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


[www.KUTechVideos.com/
audio/navigation](http://www.KUTechVideos.com/audio/navigation)

Digital Clock

Standard Audio System* Clock Setup:

1. With audio system on: Press the SETUP/CLOCK button **A** until the clock adjustment mode displays
2. Rotate knob **B** to set the Clock, then press to save setting



UVO eServices System* Clock Setup:

Press the CLOCK button to display the Clock Setting screen. Then use the on-screen buttons to navigate through setup.

UVO eServices with Navigation* Clock Setup:

Press the SETUP button and select the on-screen CLOCK button and then TIME to display the Clock Setting screen. Then use the on-screen buttons to adjust time. Press DONE to save settings.

QUICK TIP

 
Press the DONE button* on the navigation screen to ensure changes are saved.

Aux/USB/iPod® Port & Power Outlets

The AUX/USB/iPod® ports can be used to connect audio devices, smartphones, MP3 players and an iPod®. The Power Outlets are for 12V electric accessories.

QUICK TIP


The power outlets are inactive when ignition is in the OFF position.

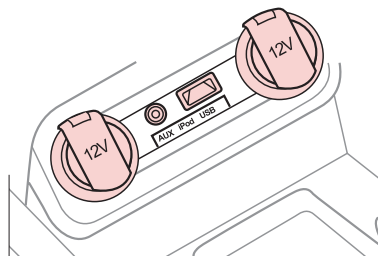

REMINDER: Using the power outlets and AUX/USB/iPod® ports for prolonged periods of time with the ignition / ENGINE START/STOP button in the ACC or ON position (Engine OFF) could cause the battery to discharge.


For more information on the Aux/USB/iPod® Ports and Power Outlets, refer to the Owner's Manual.

 Manual Climate Control

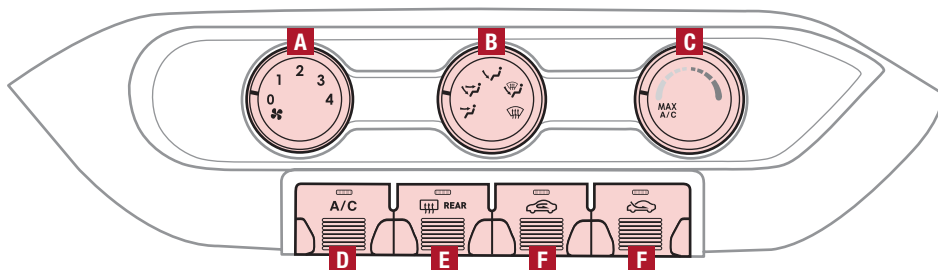


- A** Fan speed control
- B** Mode selection control
- C** Temperature control
- D** Air conditioning ON/OFF button
- E** Rear windshield defroster button
- F** Recirculated/Fresh Air button

Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set Temperature to Hot
3. Select Defrost mode 

Defog Inside Windshield:


1. Set Fan Speed to desired position
2. Set Temperature to desired position
3. Select Defrost mode 

Air Flow Modes

To select Air Flow modes, set the mode selection knob:



QUICK TIPS

- Defrost  Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details

Automatic Gear Shift with Sportmatic® Shifting*

P: Park

R: Reverse

N: Neutral

D: Drive

 
[+]: Sport Mode Upshift

[-]: Sport Mode Downshift

Sport Mode:

To enter Sport mode, move shift lever from D to left gate


To shift while in **Sport mode**, move shift lever up [+] to upshift or down [-] to downshift.

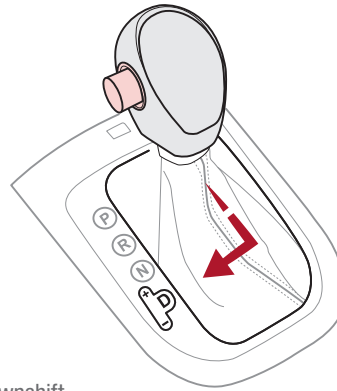

Paddle Shifters*

Paddle Shifters are operable when the shift lever is in the D position or Sport mode.

 Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

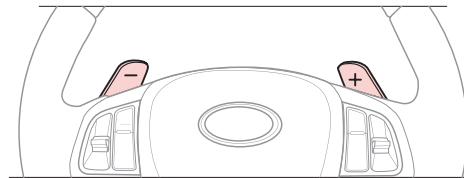

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

REMINDERS:

- When in Sport mode, pulling the left and right paddle shifters at the same time will NOT shift gears
- The Paddle Shifters can be operated when the vehicle speed is more than 6 mph

QR CODES

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

Sportmatic® Shifting Video



www.KuTechVideos.com/ub13/2017

Paddle Shifters Video

 
 


www.KuTechVideos.com/ub13/2017

Manual Gear Shift*




Starting the Engine

1. Apply Parking Brake **A**
2. Depress Clutch fully **B**
3. Shift into Neutral **C**
4. Turn ignition to START

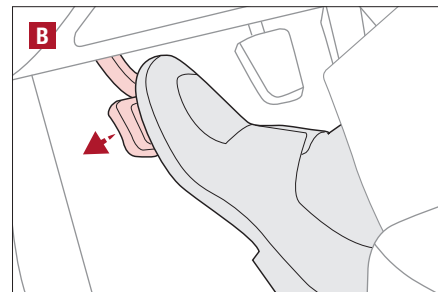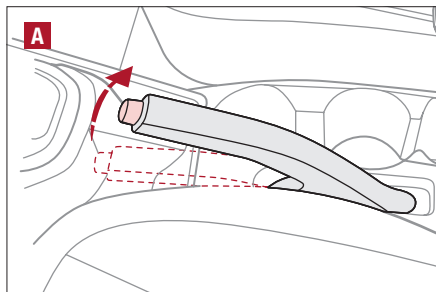

Shifting into Reverse

   1. Depress Clutch fully **B**
2. Shift into Neutral **C**
3. Press the Shift Lever button **D**
4. Shift into Reverse **E**

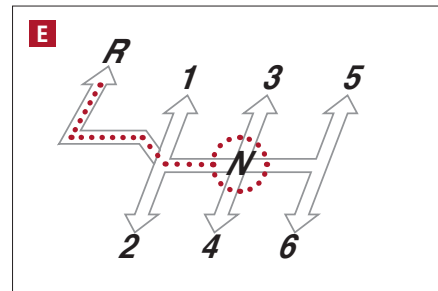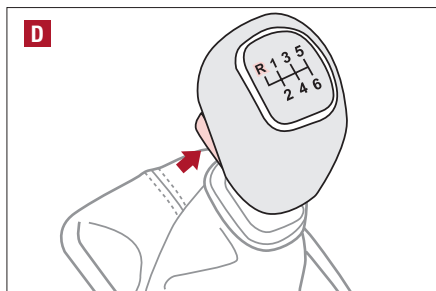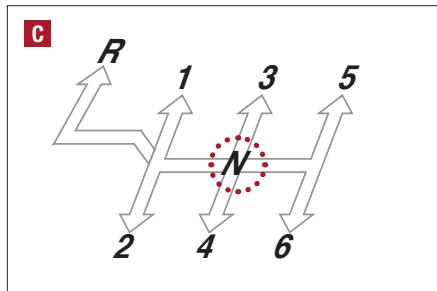


QUICK TIP

When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever button.

Seat Warmers*

Press button to cycle through the Seat Warmer settings:

 - High setting - Two LEDs illuminated
- Low setting - One LED illuminated
- Off - LEDs not illuminated

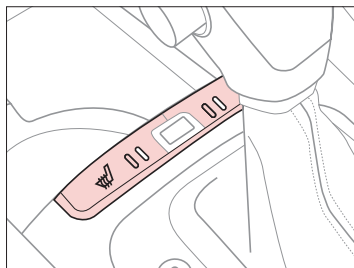

QUICK TIPS

 
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature
- System turns OFF when ignition is cycled. To turn system ON, press the seat warmer switch

6-Way Adjustable Driver's Seat

Pull lever **A** to slide Seat forward/backward.

Pull/press lever **B** to adjust Seat Height.

Pull lever **C** to adjust Seatback Recline.

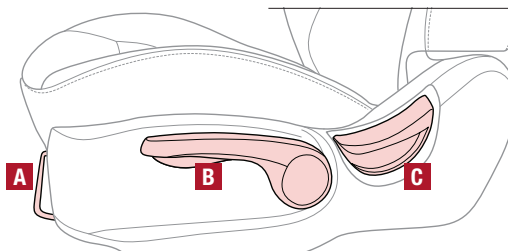


QUICK TIP

When adjusting seat forward or backwards, ensure seat clicks or locks into place before driving the vehicle.

Front Seat Headrest Adjustment


To adjust headrest forward: Pull headrest forward at an upward angle to one of several positions.

 To adjust headrest back: Pull headrest completely forward at an upward angle, then release.

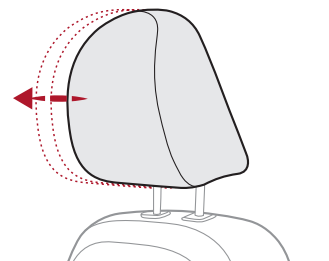

To raise headrest: Pull headrest up.

 
To lower headrest: Press lock, then press the headrest down.

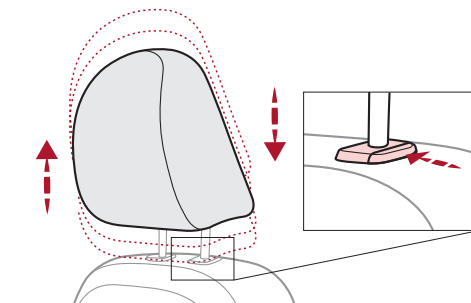

Folding Rear Seatback

To Fold:

 1. Ensure the belt strap is in the guide **A** (4-door model)
Insert the metal seat belt tab into the holder **B** (5-door model)
2. Adjust the Front Seatback in the upright position and lower the headrest to the lowest position
3. Pull on the Rear Seatback lock release lever **C D**, then fold the seat toward the front

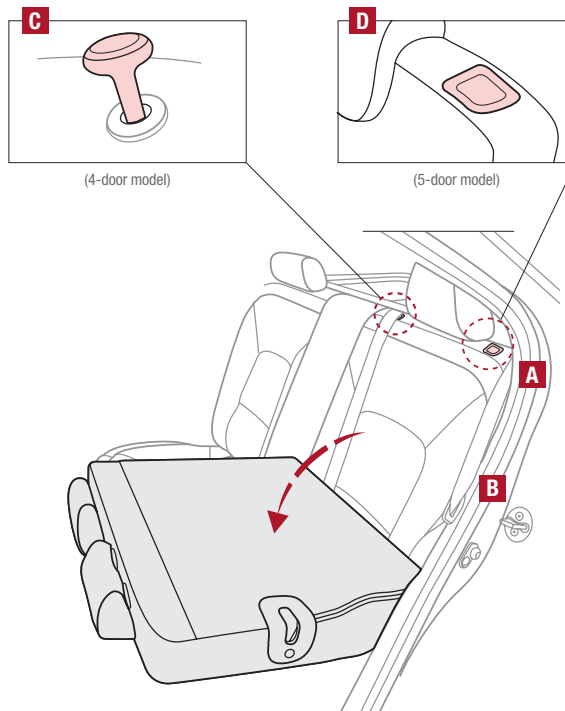

To Unfold:

1. Pull the lock release lever **C D** and lift the Seatback backward until it clicks firmly in place.
2. Return the rear seat belt to the proper position

QUICK TIPS

- It may be necessary to adjust the front seatbacks to fully lower rear seats
- Ensure Seat is locked by pressing down on Seatback and red line is visible on bottom of Folder Lever

REMINDERS:

- Before unfolding Seatback, ensure the metal seat belt tab is placed into the holder
- Always make sure the seatback is locked in place when unfolded

Smart Key*

Smart Key Fob:

- A** Press to lock all Doors
 - B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock all Doors
 - C** Press and hold to unlock Trunk/Rear Hatch* and manually open
- REMINDER:** The Trunk/Rear Hatch* unlocks when the Smart Key fob is within close proximity of the vehicle.
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
 - E** Press to release Mechanical Key (button located on reverse side)
 - F** Mechanical Key

REMINDEES:

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine
- Remote button configuration may vary depending on vehicle options

 
 
Driver's Door Lock/Unlock button **G**:

To unlock door(s):

- Press button once to unlock Driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

Mechanical Key **H**:

- Press button on back of key fob to release Mechanical Key
- Use to unlock driver's door
- Use to enable/disable Child Safety Locks
- Use to lock glove box

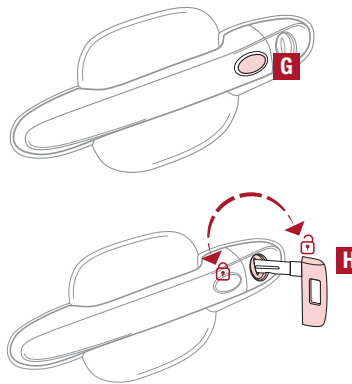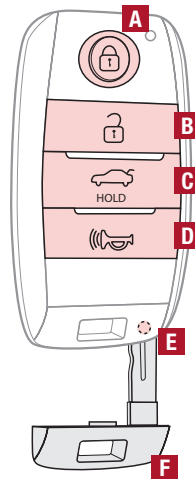

QR CODE

Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/ub13/2017

QUICK TIP

 
The Smart Key's signal can be blocked by the normal operation of a cell or smart phone. To help prevent this, store each device separately.

For more information on the Mechanical Key, please refer to your Owner's Manual.

Remote Keyless Entry (Folding Key)*

- A** Press the release button to unfold the key
- B** Press to Lock all Doors
- C** Press to unlock Driver's Door
Press twice in 4 seconds to unlock all Doors and Trunk / Rear Hatch*
- D** Press and hold to unlock Trunk / Rear Hatch* and manually open


REMINDER: Remote button configuration may vary depending on vehicle options.

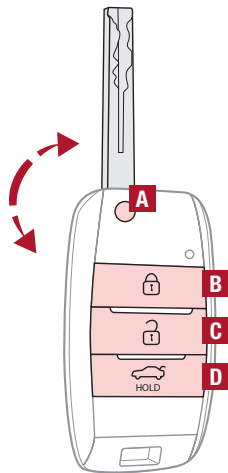

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

 REMINDER: The Fuel Filler Door Release lever is located on the lower part of the driver's door sill.

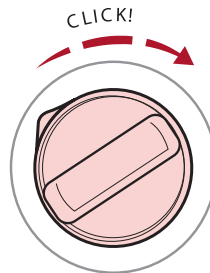

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/ub13/2017

Double-Turn Lock / Unlock All*

(Only available with Power Door Locks)


- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock all Doors
- Turn counterclockwise once to lock all Doors

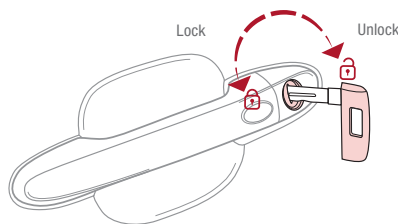

Hood Release Lever and Latch


Opening the Hood:

 1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the hood's center and lift the hood
3. Pull out the support rod from the Hood and set into place to hold the Hood open

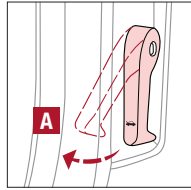

(Lever located near floor below Driver's Panel)

 (Latch located inside hood)

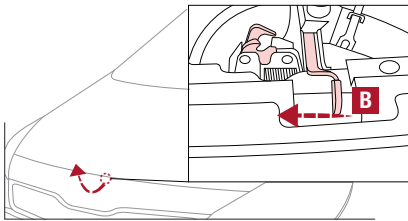


Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

REMINDER: While lowering and closing, keep hands away from under the Hood.

Fuel Door Release Lever

 Lift the lever **C** upwards to release the fuel door.

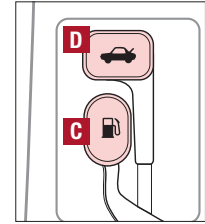

(Lever located on the driver's floor near door sill)

 
Trunk Release Lever

(4-door model)

Lift the lever **D** upwards to unlock the trunk lid.

Sunvisor

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

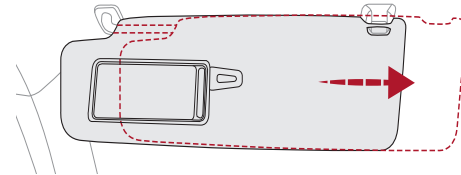

REMINDEES:

- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly. Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows.




Map/Room Lamps*

Map Lamp*

Push the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map or personal lamp for the driver or front passenger.

When the DOOR button **B** is pressed, the lamp turns ON when any door is opened

 
 
Room Lamp **C**

- **On:** In the ON position , the lamp stays on continuously
- **Door:** In the DOOR position , the lamp turns ON when any door is opened
- **Off:** In the OFF position , the lamp is OFF even if the door is opened

QUICK TIP

If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage

REMINDER: Using interior lights for an extended period of time may cause battery discharge.

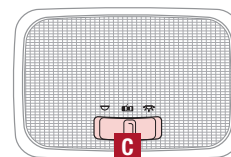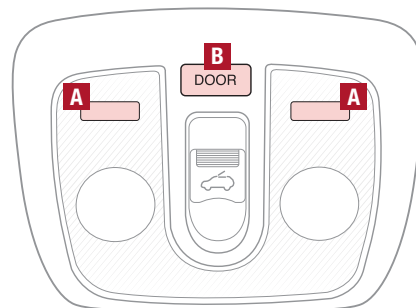

Sunroof Operation*

The ignition or the ENGINE START/STOP button needs to be in the ON position to operate the Sunroof.

Slide the Sunroof:

- **Open/Close:** Slide lever **A** backward/forward
- **Auto Open:** Slide lever **A** backward to farthest position and release to fully open the sunroof
- **Auto Close:** Slide lever **A** forward to farthest position and release

 
Tilt the Sunroof:

- **Raise/Lower:** Push lever **A** upward/pull lever downward

QUICK TIP

To stop the sunroof at any position, slide lever **A** briefly in any direction.

REMINDER: The Sunroof cannot slide when it is in the tilt position nor can it be tilted while in an open or slide position.

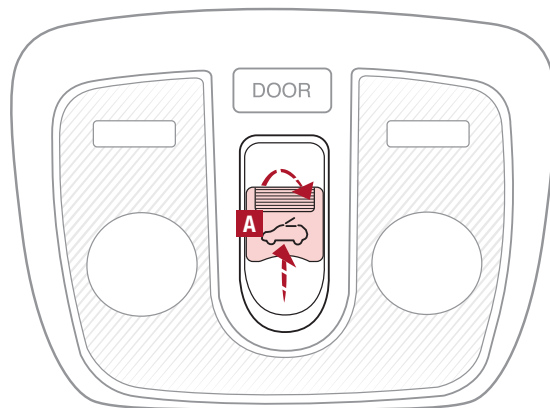

Rear-Camera Display*

 
The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Standard Audio System, UVO eServices System and the UVO eServices with Premium Navigation screens while the vehicle is in Reverse.

The Rear-Camera Display activates when the:


1. ENGINE START/STOP* button is in the ON position
2. Gear Shift Lever is in the R (Reverse) position

REMINDER: While camera is active, only the volume controls on the audio system can be operated.

The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display may not detect every object behind the vehicle.

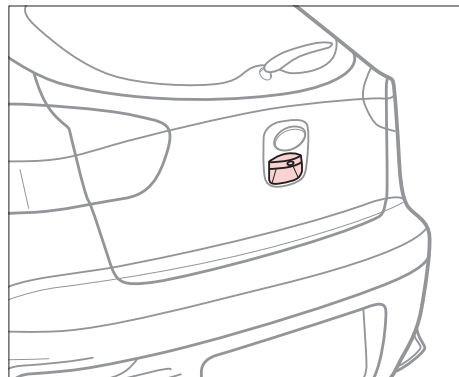

(Camera located at the rear of vehicle)

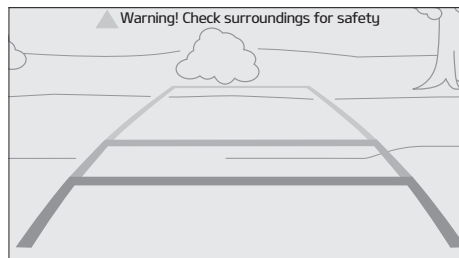 


(Image displays on the UVO eServices with Premium Navigation* or UVO eServices* System screens)

Child Safety Locks

Located on the rear edge of the rear passenger doors, insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.

 REMINDER: Child Safety Lock is located on rear passenger's door jamb.

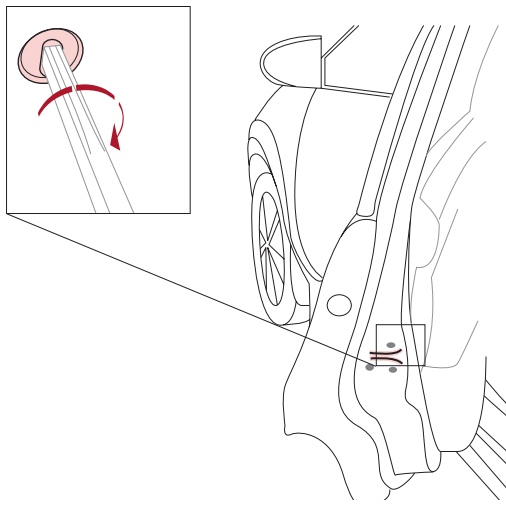


Tire Mobility Kit

The Tire Mobility Kit enables you to quickly and effectively seal certain types of tire damage, enabling you to drive to the nearest service center. As a result, not all types of tire damage will require towing.

For operational information, please refer to section 6 of your Owner's Manual.

A Sealant Bottle

 B Compressor

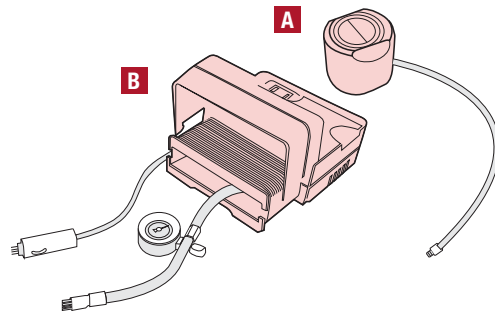

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if a tire is damaged beyond repair

QR CODE

Tire Mobility Kit Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/ub13/2017

REMINDER: After the tire is properly sealed, drive cautiously, keeping vehicle speed below 50 mph and driving no more than 120 miles.

Occupant Detection System (ODS) / Passenger Airbag Indicator

ODS detects the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)



If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" light will illuminate.

Please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System" for more detailed information regarding your vehicle's airbags.

Seat Belts

 
To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

QUICK TIP

The Seat Belt warning chime operates for driver's seat only


REMINDER: For maximum protection, always wear your seat belt.

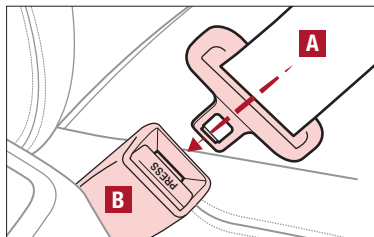

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

 During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

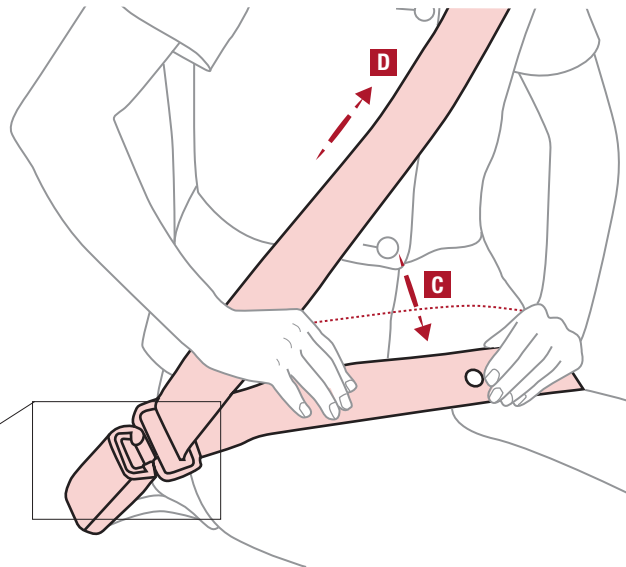

For more detailed information regarding your vehicle's seat belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

7,500 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- | | |
|--|-----------------------------------|
| • Air cleaner filter | • Chassis/body nuts and bolts |
| • Air conditioning compressor, air conditioner refrigerant and performance** | • Drum brake and linings** |
| • Cooling system*** ² | • Disc brakes and pads** |
| • Drive shaft and boots | • Exhaust pipe and muffler |
| • Battery condition | • Front suspension ball joints |
| • Brake fluid / clutch** fluid | • Fuel tank, cap, lines and hoses |
| • Brake lines, hoses and connections | • Lubricate all locks and hinges |
| • Brake pedal and operation | • Parking brakes |
| | • Steering operation and linkage |
| | • Suspension mounting bolts |

*And, if necessary, adjust, correct, clean or replace. **If equipped. ***Check and adjust level and check for leaks. Inspect regularly. ¹If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ²Inspect "Water Pump" when replacing the drive belt or the timing belt.

15,000 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Climate control air filter**
- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- | | |
|--|-----------------------------------|
| • Air cleaner filter | • Chassis/body nuts and bolts |
| • Air conditioning compressor, air conditioner refrigerant and performance** | • Drum brake and linings** |
| • Cooling system*** ² | • Disc brakes and pads** |
| • Drive shaft and boots | • Exhaust pipe and muffler |
| • Battery condition | • Front suspension ball joints |
| • Brake fluid / clutch** fluid | • Fuel tank, cap, lines and hoses |
| • Brake lines, hoses and connections | • Lubricate all locks and hinges |
| • Brake pedal and operation | • Parking brakes |
| | • Steering operation and linkage |
| | • Suspension mounting bolts |

*And, if necessary, adjust, correct, clean or replace. **If equipped. ***Check and adjust level and check for leaks. Inspect regularly. ¹If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ²Inspect "Water Pump" when replacing the drive belt or the timing belt. Check tire pressure once a month or more.

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO eServices only - See page 21/22 for setup information)

Normal Maintenance Schedule (Continued)

22,500 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance (if equipped)
- Cooling system
- Drive shaft and boots
- Disc brakes and pads (if equipped)
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel tank, cap, lines and hoses
- Lubricate all locks and hinges

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. Check tire pressure once a month or more.

*And, if necessary, adjust, correct, clean or replace.

30,000 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Air cleaner filter
- Climate control air filter**
- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- | | |
|---|---|
| <ul style="list-style-type: none"> • Air conditioning compressor, air conditioner refrigerant and performance** • Cooling system***² • Drive shaft and boots • Fuel filter³ • Fuel line, hoses and connection • Fuel tank air filter³ • Manual transaxle fluid** (Every 37,500 miles) • Battery condition • Brake fluid / clutch** fluid • Brake lines, hoses and connections • Suspension mounting bolts | <ul style="list-style-type: none"> • Brake pedal and operation • Chassis/body nuts and bolts • Drum brake and linings** • Disc brakes and pads** • Exhaust pipe and muffler • Front suspension ball joints • Fuel tank, cap, lines and hoses • Lubricate all locks and hinges • Parking brakes • Steering operation and linkage |
|---|---|

*And, if necessary, adjust, correct, clean or replace. **If equipped. ***Check and adjust level and check for leaks. Inspect regularly. ¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ² Inspect "Water Pump" when replacing the drive belt or the timing belt. ³ Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details. Check tire pressure once a month or more.

Normal Maintenance Schedule (Continued)

37,500 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance
- Cooling system
- Drive shaft and boots
- Disc brakes and pads (if equipped)
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel tank, cap, lines and hoses
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. Check tire pressure once a month or more.

*And, if necessary, adjust, correct, clean or replace.

45,000 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Climate control air filter**
- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- | | |
|--|-----------------------------------|
| • Air cleaner filter | • Chassis/body nuts and bolts |
| • Air conditioning compressor, air conditioner refrigerant and performance** | • Drum brake and linings** |
| • Cooling system*** ² | • Disc brakes and pads** |
| • Drive shaft and boots | • Exhaust pipe and muffler |
| • Battery condition | • Front suspension ball joints |
| • Brake fluid / clutch** fluid | • Fuel tank, cap, lines and hoses |
| • Brake lines, hoses and connections | • Lubricate all locks and hinges |
| • Brake pedal and operation | • Parking brakes |
| | • Steering operation and linkage |
| | • Suspension mounting bolts |

*And, if necessary, adjust, correct, clean or replace. **If equipped. ***Check and adjust level and check for leaks. Inspect regularly. ¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ² Inspect "Water Pump" when replacing the drive belt or the timing belt. Check tire pressure once a month or more.

Normal Maintenance Schedule (Continued)

52,500 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance
- Cooling system
- Disc brakes and pads (if equipped)
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel tank, cap, lines and hoses
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. Check tire pressure once a month or more

*And, if necessary, adjust, correct, clean or replace.

60,000 miles

PERFORM:

- Add fuel additive¹ (Every 7,500 miles)
- Rotate tires - including tire pressure and tread wear (Every 7,500 miles)

REPLACE:

- Air cleaner filter
- Climate control air filter**
- Engine oil and filter (Every 7,500 miles)

INSPECT*:

- | | | |
|--|--------------------------------------|-----------------------------------|
| • Air conditioning compressor, air conditioner refrigerant and performance** | • Fuel tank air filter ³ | • Drum brake and linings** |
| • Cooling system**** ² | • Valve clearance ⁵ | • Disc brakes and pads** |
| • Drive belt ⁴ (First, 60,000 miles after every 15,000 miles) | • Vapor hose and fuel filler cap | • Exhaust pipe and muffler |
| • Drive shaft and boots | • Battery condition | • Front suspension ball joints |
| • Fuel filter ³ | • Brake fluid / clutch** fluid | • Fuel tank, cap, lines and hoses |
| • Fuel line, hoses and connection | • Brake lines, hoses and connections | • Lubricate all locks and hinges |
| | • Brake pedal and operation | • Parking brakes |
| | • Chassis/body nuts and bolts | • Steering operation and linkage |
| | | • Suspension mounting bolts |

*And, if necessary, adjust, correct, clean or replace. **If equipped. ***Check and adjust level and check for leaks. Inspect regularly. ¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ² Inspect "Water Pump" when replacing the drive belt or the timing belt. ³ Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details. ⁴ The drive belt should be replaced when cracks occur or tension is reduced excessively. ⁵ Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. Check tire pressure once a month or more.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Airbags: For maximum protection, always wear your seat belt.

Apps: All information contained herein was based upon the latest available information at the time of appstore registration. Descriptions are believed to be correct, and Kia Motors Corporation (KMC) makes every effort to ensure accuracy, however, accuracy cannot be guaranteed. From time to time, KMC may need to update or make changes to the vehicle features and other vehicle information reported in this app. KMC, by the publication and dissemination of this material, does not create any warranties, either express or implied, to any Kia products. Contact your local Kia dealer for the most current information.

Bluetooth® Wireless Technology: A compatible *Bluetooth®* wireless technology-enabled cell phone is required to use *Bluetooth®* wireless technology. The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

Driver Assist Features - Forward Collision Warning System (FCWS), Rear-Camera Display: These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

Electronic Stability Control: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Engine Start/Stop button with Smart Key: Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.

Front Seat Headrest Adjustment: Never attempt to adjust headrests when vehicle is in motion.

Seat Belts / Airbags: For maximum protection, always wear your seatbelt.

Hill-Start Assist Control (HAC): No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

HomeLink® is a registered trademark of Gentex Corporation.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately, and connectivity requires the Kia accessory cable.

Navigation: Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Occupant Detection System (ODS): Kia vehicles use a number of different ODS types that vary by model.

Pandora® is a registered trademark of Pandora Media, Inc.

Rear-Camera Display: The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not detect every object alongside or behind the vehicle. Always drive safely and use caution when backing up.

SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2015 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

Sportmatic® is a registered trademark of Kia Motors America.

Steering Wheel Controls: Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

Sunvisor: Sunvisor may not shield all direct light. Do not operate the vehicle if Sunvisor is impairing your visibility.

Tilt/Telescoping Steering Wheel: Never attempt to adjust steering wheel position when vehicle is in motion.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

UVO eServices: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

UVO eServices app: App uses your smartphone data service. Normal cellular service rates will apply.

UVO eServices with Navigation: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

 


R10 CUSTOMER DELIVERY CHECKLIST


KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer:


- Standard Audio System (Type A)*
– page 19

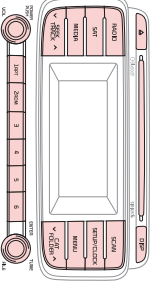

 
- Standard Audio System (Type B)*
– page 20

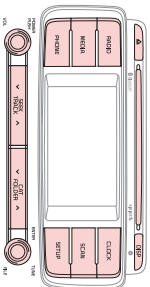

 
- UVO eServices System*
– page 21
For further operational information, refer to the UVO System User's Manual Guide.

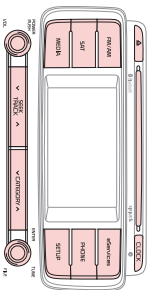

 
- UVO eServices with Navigation*
– page 22
For further operational information, refer to the Car Multimedia System User's Manual

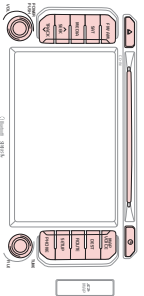

 - Cruise Control* – page 18
Demonstrate operation

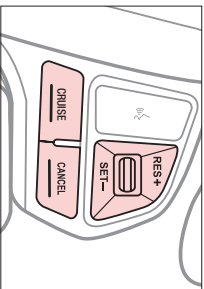

 - Bluetooth® Wireless Technology* – pages 16-17
Demonstrate operation

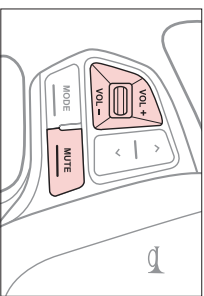

- AUX/USB/iPod® Port – page 23
- Active ECO System* – page 8
- Digital Clock – page 23
- Engine Start/Stop Button* – page 12
- Folding Rear Seatback – page 28
- Idle, Stop and Go (ISG) System* – page 9
- Passenger Airbag Off Indicator – page 36

- Rear-Camera Display* – page 34
- Seat Warmers* – page 27
- Smart Key* – page 29
- Sunroof Operation* – page 33
- Sunvisor – page 31
- Tire Mobility Kit – page 35
- Tire Pressure Monitoring System (TPMS) – page 5

*If equipped

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours & Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



RIO CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- Test and confirm "Good Battery" using the Kia GR8-1299 battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key* lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any Audio System User's Manual)

KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control - page 24 — Demonstrate Air Flow Modes, Defogging and Defrosting Windshield

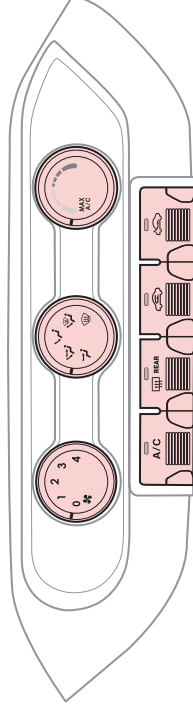

 
- Manual Gear Shift* — page 26
Demonstrate lifting button for Reverse gear

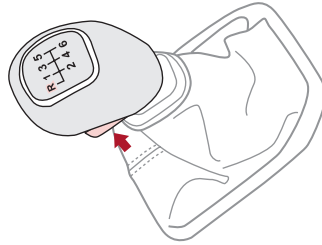

- Windshield/Rear (5-door model) Wipers & Washers* — page 14

To operate:

 - Move lever Up/Down to change Wiper modes
- Rotate lever ring to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

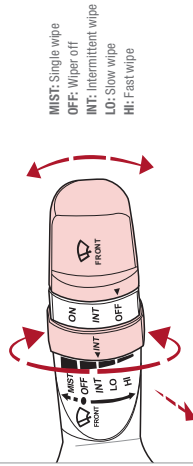



© 2016 Kia Motors America, Inc. All rights reserved.

Part Number: UR170-PS-004

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)