

SORENTO

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **SORENTO**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Pages for Vehicle
Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

ESSENTIAL FEATURES

Advanced Smart Cruise Control (ASCC)*	19
Air Conditioning / Automatic Climate Control*	26
Audio System – Standard Audio System*	20
Audio System – UVO eServices System*	22
Audio System – UVO eServices/Premium Navigation*	23
Aux/USB/iPod® Ports, Power Outlets & AC Inverter*	29
Bluetooth® Wireless Technology	16
Cruise Control	18
Digital Clock	29
Passenger Airbag Off Indicator	44
Service Mode	7
Smart Key*	37
Tire Pressure Monitoring System (TPMS)	5
Trip Modes / Trip Computer	6
User Settings	7
Windshield/Rear Wipers & Washers	15

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



VIDEOS & QR CODES	2
INSTRUMENT CLUSTER	
Instrument Cluster Overview	3
Indicators & Warning Lights	4
Tire Pressure Monitoring System (TPMS)	5
Fuel Economy	5
LCD Instrument Cluster Modes	6
Trip Modes / Trip Computer	6
User Settings	7
Service Mode	7
Drive Mode Integrated Control System	8
ECO Mode (Active ECO)*	8

DRIVER'S PANEL	
Electronic Stability Control (ESC)	9
Hill-Start Assist Control (HAC)	9
Instrument Panel Dimmer	9
AC Inverter*	9
Blind Spot Detection (BSD) System*	10
Lane Departure Warning System (LDWS)*	11
Autonomous Emergency Braking (AEB) / Forward Collision Warning (FCW)*	11
Power Windows, Window Lock & Central Door Lock	12
Power Folding Outside Mirrors*	12
Heated Outside Mirrors	12
Automatic Door Lock / Unlock	12
Fuel Door Release Button	12
Reverse Parking Aid Function*	13
Engine Start/Stop Button*	13

STEERING WHEEL CONTROLS	
Tilt / Telescoping Steering Wheel	14
Headlights & High Beams	14
Turn Signals & Fog Lights*	15
Windshield / Rear Wipers & Washers	15
Bluetooth® Wireless Technology	16
Audio Controls	18
Standard Cruise Control	18
Advanced Smart Cruise Control (ASCC)*	19

AUDIO SYSTEMS	
Standard Audio System*	20
UVO eServices / Android Auto™ / Apple CarPlay® Setup	21
UVO eServices System*	22
UVO eServices with Premium Navigation*	23

*IF EQUIPPED

CENTER PANEL	
Surround View Monitor (SVM)*	24
Automatic Gear Shift with Sportmatic® Shifting	25
Paddle Shifters*	25
Automatic Climate Control*	26
AWD (All-Wheel Drive) Lock*	26
Manual Climate Control*	28
Digital Clock	29
Aux / USB / iPod® Ports, Power Outlets & AC Inverter*	29
Electronic Parking Brake (EPB)*	30
Auto Hold*	30
Heated Steering Wheel*	31
Seat Warmers / Ventilated Seats*	31

SEATING	
Front Seat Headrest Adjustment	32
Driver Position Memory System*	32
Power Adjustable Driver's Seat*	33
Manual Adjustable Driver's Seat*	33
2nd-Row Folding Seat	34
2nd-Row Auto-Folding Seat*	34
3rd-Row Folding Seat*	35
Unfastening Center Seat Belt	35

OTHER KEY FEATURES	
Sunvisor	36
Sunglasses Holder	36
Remote Keyless Entry (Folding Key)*	36
Double-Turn Lock / Unlock All	36
Smart Key*	37
Power Liftgate*	38
Smart Power Liftgate*	39
HomeLink® with Auto-Dimming Rearview Mirror*	40
Map/Room Lamps	41
Panoramic Sunroof with Power Sunshade*	41
Rear Parking Assist System*	42
Rear-Camera Display	42
Hood Release Lever and Latch	43
Fuel Cap / Malfunction Indicator (Check Engine Light)	43
Child-Protector Rear Door Lock	43

SAFETY FEATURES	
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	44
Seat Belts	44
Seat Belt Retractor Locks	44

NORMAL MAINTENANCE SCHEDULE	45
LEGAL DISCLAIMERS	See Back Inside Cover Page

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning.
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet
3. When accessing videos on your mobile device, standard cellular data rates will apply

Instrument Cluster Overview

 
- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer/Trip Computer/Tripmeter
- H** Fuel Gauge

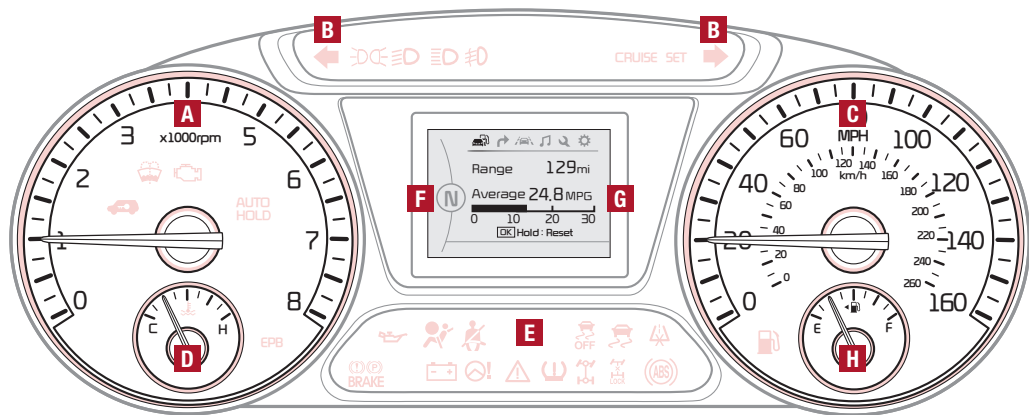







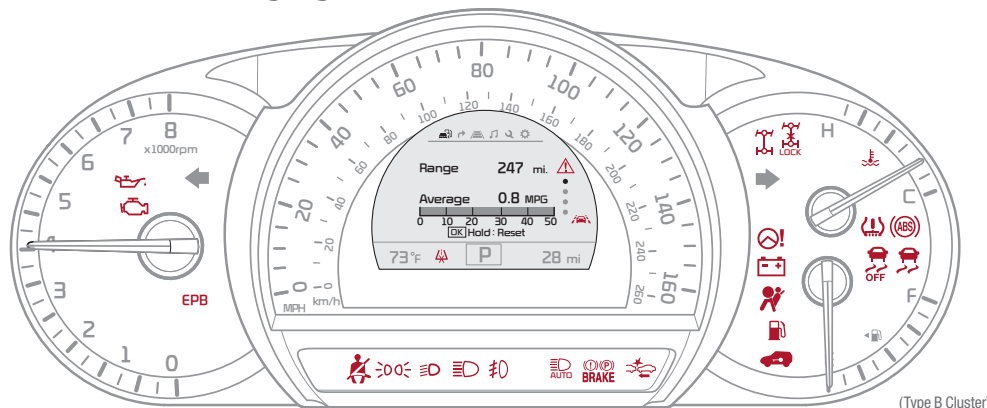
























(Type A Cluster)

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual.

Indicators & Warning Lights





Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual.


- | | | | | | |
|--|---|---|--|---|--|
|  | Engine Oil Pressure Warning Light |  | All-Wheel Drive (AWD) Warning Light* |  | Anti-Lock Braking System (ABS) Warning Light |
|  | Malfunction Indicator Light |  | All-Wheel Drive (AWD) Lock Indicator Light* |  | Electronic Stability Control (ESC) OFF Indicator Light |
|  | Electric Parking Brake (EPB) Warning Light* |  | Electronic Power Steering (EPS) Warning Light |  | Electronic Stability Control (ESC) Warning Indicator Light |
|  | Seat Belt Warning Light |  | Charging System Warning Light |  | AUTO HOLD Indicator* |
|  | Light ON Indicator Light |  | Airbag Warning Light |  | Cruise Control SET Indicator* |
|  | Head Lamp ON Indicator Light |  | Low Fuel Level Warning Light |  | Cruise Control ON Indicator* |
|  | High Beam Indicator Light |  | Immobilizer Indicator Light* |  | Washer Fluid Warning Light* |
|  | Front Fog Light Indicator Light |  | Engine Coolant Temperature Warning Light |  | Master Warning Light |
|  | High Beam Assist Indicator Light* |  | Icy Road Warning Indicator Light |  | Electronic Brake Force Distribution (EBD) System Warning Light |
|  | Parking Brake & Brake Fluid Warning Light |  | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator Light |  | Lane Departure Warning System (LDWS) ON/OFF Indicator Light |
|  | Autonomous Emergency Braking (AEB)* | | | | |


Tire Pressure Monitoring System (TPMS)




The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

 The indicator  will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

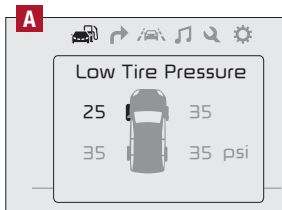

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Indicator . See front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) are underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range varies depending on a vehicle's fuel tank size, (e.g., 12-gal. vs. 24-gal). Even though the two vehicles MPG may be the same, the vehicle with the larger tank will have the greater range.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDEERS:

- Check the recommended tire pressure label located on the left side of driver's door jam, visible when the door is opened.
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

QR CODES

To view these videos on your mobile device, snap these QR codes or visit the listed website.

Refer to page 2 for more information.

Tire Pressure Monitoring System Video



www.youtube.com/KiaFeatureVideos

Fuel Economy Video



www.youtube.com/KiaFeatureVideos

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

LCD Instrument Cluster Modes

Press the Mode button **A** to cycle through different LCD Instrument Cluster Modes:



Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.



Turn-by-Turn Mode*: Displays the state of the navigation system



Advanced Smart Cruise Control (ASCC) / Lane Departure Warning System (LDWS)*: Displays the state of the ASCC and LDWS



A/V Mode: Displays the state of the A/V System



Information Modes: Informs on service intervals / Informs of warning messages related to washer fluid, Blind Spot Detection (BSD) system malfunction and other systems / Informs when any door is not securely closed

 


User Settings Mode: Change settings of the doors, lamps and other features



Your vehicle's steering wheel buttons may differ from those in the illustrations.


Trip Modes / Trip Computer

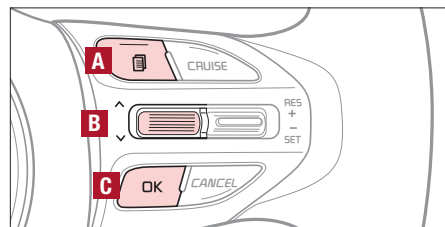

(Type A; Controls located on Steering Wheel)

The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

 
To cycle through the LCD Instrument Cluster modes, press the Mode button **A**.

To select and enter Trip Computer mode , press the Move button **B** up/down and then press OK button **C** to enter. To cycle through and select the different screens (Fuel Economy, Trip A, Trip B), press the Move button **B** up/down again and then press OK button **C**. When displaying TRIP A or TRIP B screens, press and hold the OK button **C** to reset the Tripmeter to zero.

Press the OK button **C** to go back to the previous mode/item


REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

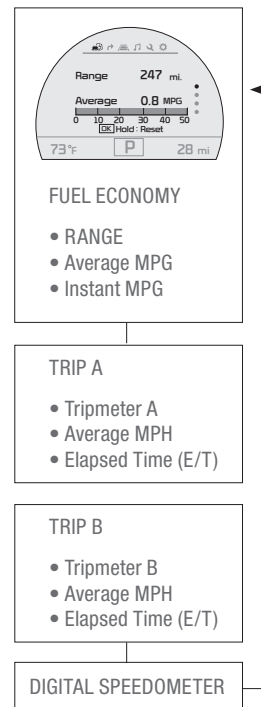

(Type B Cluster)

User Settings

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a stand-still and with the Engine/Start Stop button in the ON position and select User Settings  by pressing the Move button **B** up/down.

You can navigate the selections on the display by pressing the Move button **B**, and then selecting the item by pressing the OK button **C**.

Press the OK button **C** to go back to the previous mode/item.

User Settings mode:

Driving Assist

- Smart Cruise Control Response*
- Rear Cross Traffic Alert*
- Forward Collision Warning*

Door/Liftgate (Tailgate)

- Automatically Lock/Unlock
- Two Press Unlock
- Door Lock Sound
- Power Liftgate*
- Smart Liftgate*

Lights

- One-Touch Turn Signal
- Head Lamp Delay*
- Welcome Light*

Sound

- Park Assist System Volume*
- Blind Spot Detection Sound*
- Welcome Sound*

Seat/Steering

- Easy Seat Access*
- Steering Position


Service Interval

- ON/OFF
- Set mileage/months

Other Features

- Fuel Economy Auto Reset ON/OFF
- Wiper/Lights Display*
- Fuel Economy Unit
- Speedometer Subscale*
- Temperature Unit
- Tire Pressure Unit
- Language

Service Mode

To enter Service Mode, press the Mode button **A**, scroll to Service Mode  by pressing the Move button **B**. Then press the OK button **C** to enter. System will display number of miles remaining until next service is due, as well as the type of service due.

When service is required, the following will be displayed:

Service Required **D**.

To reset the Service Mode system, press and hold the OK button **C** for more than 1 second.

 
 
Press the OK button **C** to go back to the previous mode/item

To turn **Service In OFF** **E**, go to User Settings.

Service Interval Setting **F**

To set the service interval in User Settings mode:

- Press the Mode button **A** to cycle to User Settings and press the OK button **C** to enter
- If Service Interval is OFF, press the OK button **C** to turn ON
- Press the Move button **B** to select/change the interval setting
- Press the OK button **C** to select the interval



(Type B cluster)

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



www.youtube.com/KiaFeatureVideos

LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System*

The Drive Mode may be selected depending on driver's preferences and road conditions.

 
To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The Instrument Cluster will display SPORT or ECO when selected. When in Normal mode, it will not display in the Instrument Cluster.

REMINDERS:

- The system is turned ON and in Normal mode when ignition is in the ON position
- When ECO mode is selected, the indicator will display and system remains on, even when ignition is cycled
- Steering effort may be slightly increased in Sport mode



(Appears on LCD in Instrument Cluster)

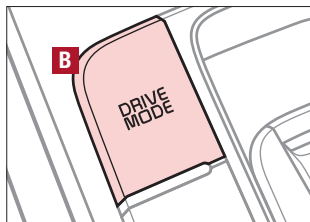

(Located on Center Panel below Gear Shift)*

ECO Mode (Active ECO)*

The Active ECO system helps improve fuel economy by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B** and scroll through options until in the ECO mode. The ECO mode indicator in the instrument cluster will illuminate, indicating that the vehicle is in ECO mode and Active ECO is operating. The Active ECO system will remain on even when the ignition is cycled.

To turn the Active ECO system OFF, press the DRIVE MODE button **B** again and change to another mode.

QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.

QR CODE

Drive Mode Integrated Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos


Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press ESC OFF button **A** to turn Traction Control OFF/ON.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press again to turn ON.

REMINDERS:

- ESC is active by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

 
Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal HAC operation.
- HAC provides a 2-second delay before the vehicle may start rolling backwards

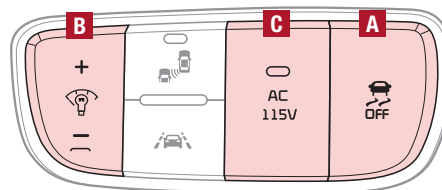

(Button panel located left of Steering Wheel)

Instrument Panel Dimmer

 
With parking lights/headlights ON, press button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDERS:

- The Instrument Panel Dimmer does not change brightness when headlights are turned off.
- The Instrument Panel Dimmer does not adjust brightness on the UVO eServices* nor the UVO eServices with Premium Navigation system* screens. Use those system's settings to adjust brightness on the screens.

AC Inverter*

The AC Inverter supplies 115V/150W electrical power to operate accessories or equipment. Press AC Inverter button **C** to activate.

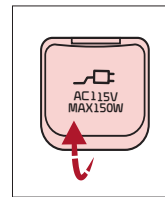

(Outlet located on back of Center Console*)

Blind Spot Detection (BSD) System*

The BSD system uses radar sensors to help alert the driver before changing lanes. The light on the BSD button **A** will illuminate when turned ON. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than 18 mph and will alert the driver if another vehicle is detected by the radar sensor.

Blind Spot Detection (BSD) / Lane Change Assist (LCA)

1st-stage alert: When another vehicle is detected within the BSD System boundary **B**, or vehicle in the LCA boundary **C** approaches at a high speed, a yellow indicator will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

 
RCTA (Rear Cross Traffic Alert)

If the RCTA system sensors detect approaching vehicles from the left or right side **D**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, when these conditions are met:


- The gear shift is in Reverse
- The vehicle is moving less than 6 mph
- The RCTA can be set to on/off in User Settings from the LCD Instrument Cluster modes

REMINDERS:

- When the BSD is ON and the vehicle power is cycled to OFF then ON again, the BSD system returns to ON
- The RCTA feature can be turned OFF/ON in User Settings. When vehicle power is cycled, the RCTA will remain in the previous state
- For more information on RCTA, refer to the Owner's Manual

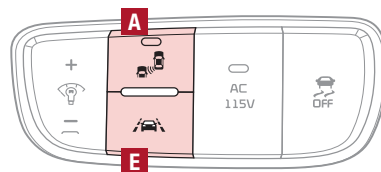

 (Button panel located left of Steering Wheel)

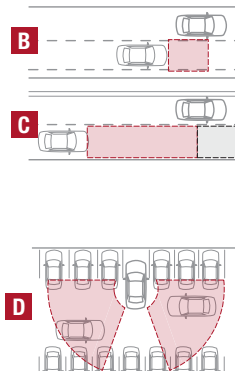

QR CODE

Blind Spot Detection System w/RCTA Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

For more information on the above systems, please refer to the Owner's Manual.

Lane Departure Warning System (LDWS)*

With the Engine Start/Stop button in the ON position, press the LDWS button **E** (shown on previous page) to turn system ON. The instrument cluster indicator  will illuminate white.

 
If the LDWS detects that you are veering outside of your lane, the system may issue a warning on the LCD screen and an alert may sound, under these conditions:

- The vehicle exceeds approximately 40 mph
- The LDWS system recognizes the lane the vehicle is traveling in


If LDWS button is ON/OFF and ignition is cycled, the system returns to its previous state.

REMINDER: LDWS will not issue a warning if the turn signal or hazard lights are activated.


The Lane Departure Warning System (LDWS) is not a substitute for safe and proper driving. Always drive safely and use caution. LDWS may not always alert the driver if the vehicle is driven outside of its lane.

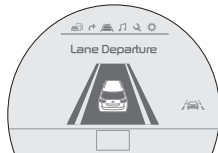

 
When the LDWS sensor detects the lane traveling in, the lane is illuminated

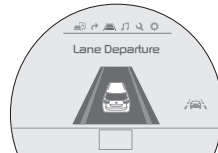

 When the LDWS sensor does not detect the lane traveling in the lanes is not illuminated

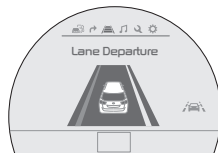

 When the LDWS sensor detects the vehicle veering outside of the lane traveling in, the lane the vehicle's crossing will blink (shown in both images above)

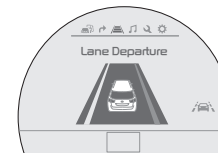

QR CODE

Lane Departure Warning System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Autonomous Emergency Braking (AEB)/Forward Collision Warning (FCW)*

The AEB helps to alert the driver when rapidly approaching a vehicle that is slowing down, braking or stopped **A**. A warning message will appear on the LCD screen and a chime will sound. The AEB will become active when the vehicle is traveling more than 6 mph.

To turn the AEB off, go to User Settings in the LCD Instrument Cluster modes.

REMINDER: The AEB will be activated by default when vehicle power is cycled on, even when previously set to off

Autonomous (Assist) Emergency Braking is not a substitute for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.



Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Front Windows Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors (also unlocks Fuel Door)

C Press to disable Rear Passenger Windows

REMINDER: When pressed **C** window controls for the Rear Passenger Windows are disabled.

Power Folding Outside Mirrors*

Press the L or R buttons **D** to select the mirror to adjust.

Press button arrows **E** left/right or up/down to adjust mirror position.

Toggle button **F** left/right to unfold/fold the outside rearview mirrors.

Toggle button **F** to center to automatically fold/unfold mirrors when:

- The Smart Key* Lock/Unlock buttons are pressed
- The door outside handle button* is pressed

 
QUICK TIP

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMINDER: To lock position of mirrors, press switch to the OFF position (LED not lit).

Heated Outside Mirrors

Mirror heaters are controlled with Rear Defroster.

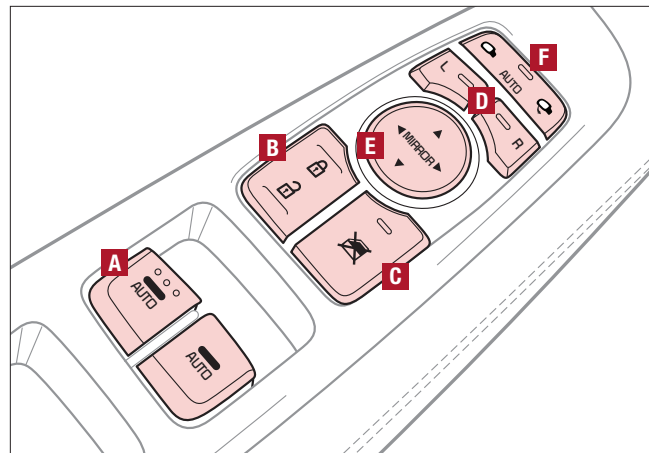


(Button/switch panel located on Driver's Door)

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved in to or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Fuel Door Release Button

 Press the Fuel Door Release button to release the fuel door.



(Button located left of Steering Wheel)

Reverse Parking Aid Function*

 
 
When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backward, the outside rearview mirrors **A** will rotate downward to aid in reverse parking.

When the left or right mirror buttons **B** are depressed, the Reverse Parking Aid Function will operate (LED lit).

To turn OFF the function, press the switches again.

The outside rearview mirrors will automatically return to their original positions when:

- The ENGINE START/STOP Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror switches are not depressed

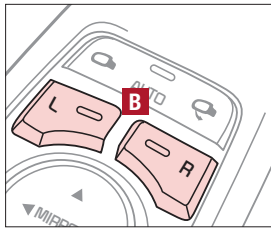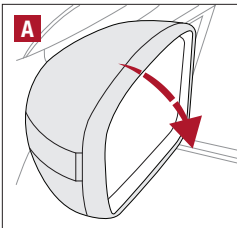


(Button/switch panel located on Driver's Door)

REMINDER: When one of the outside rearview mirror switches are not depressed (LED lit), the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Engine Start/Stop Button*

To start the engine:

 1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park)

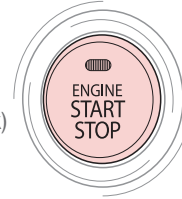

To turn the engine OFF: Press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or inside the vehicle.

REMINDEERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light)

ON position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the ENGINE START/STOP button again (red light)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (red light)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning engine on may discharge the vehicle's battery.

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and distance **C**.

When finished, pull the Lock-Release Lever **A** up to lock Steering Wheel in place.

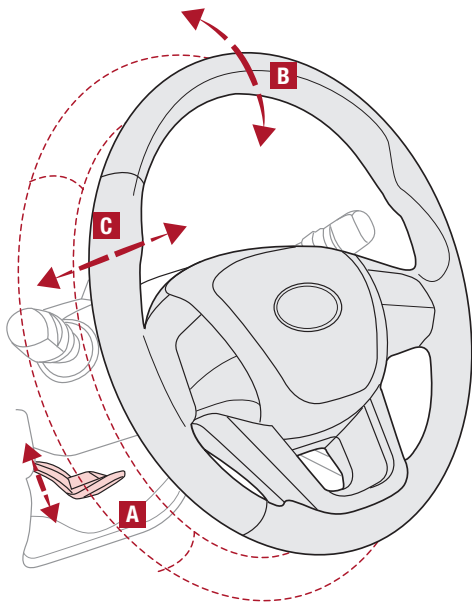

QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

Headlights & High Beams

To operate:

 
- Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

 Headlight position

 Parking light position

AUTO Auto Light / AFLS*

OFF OFF position

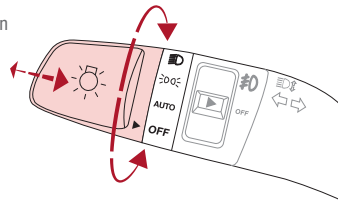

AUTO Light function* — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Adaptive Front Lighting System (AFLS) / Dynamic Bending Light* — The Adaptive Front Lighting System helps improve visibility during nighttime driving by aiming the low beam headlights in the direction the vehicle is moving. AFLS controls the aiming direction based on steering angle and speed.

When the light switch is in the AUTO Light position, the AFLS will activate.

REMINDER: When the AFLS indicator illuminates on the instrument cluster, the AFLS is not working properly. See authorized Kia dealer for service.

QR CODE

Dynamic Bending Light Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Turn Signals & Fog Lights*

To operate:

 
- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Push toggle switch **A** to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to User Settings Mode in the LCD Instrument Cluster modes.


For more information on the User Settings Mode, please refer to your Owner's Manual.

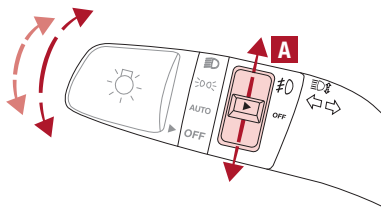

Windshield Wipers & Washers

To operate:

 - Move lever Up/Down to change Wiper modes
- Push switch **B** to adjust Intermittent Wipe
- Pull lever to spray and wipe

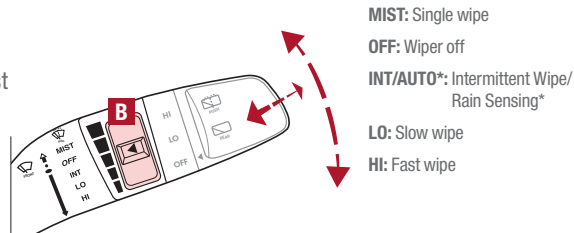

QUICK TIP

Moving switch **B** up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes.

Auto Control (Rain Sensing)*

 
The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To adjust the Auto Rain Sensing speed setting, move the speed control switch **A** up/down.

Rear Wiper & Washer*

To operate:


- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

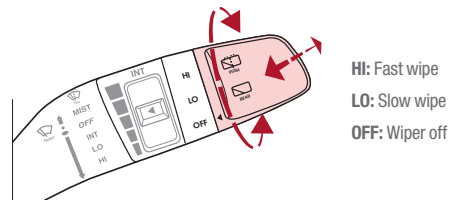

QUICK TIP

On Rear Wipers, intermittent wipe function is not adjustable.

 Bluetooth® Wireless Technology

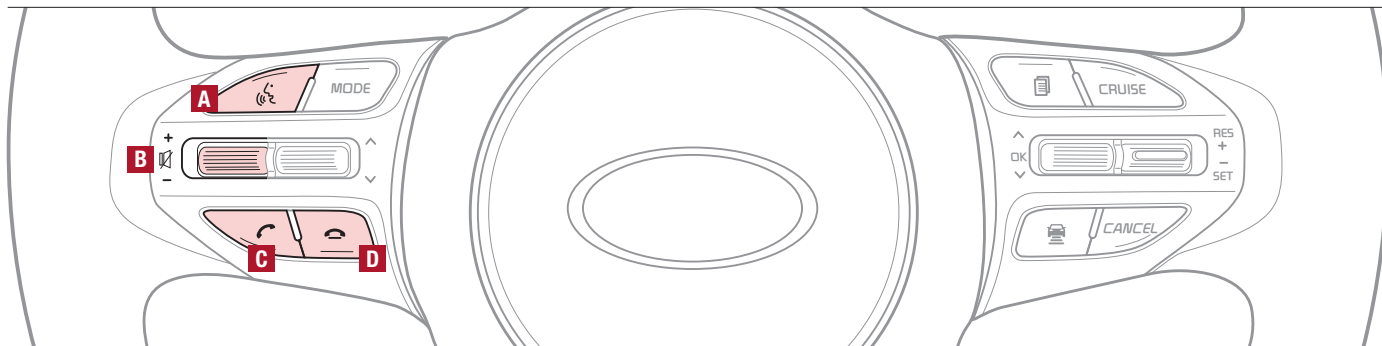

A Talk button: Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system

B Volume button: Roll up/down to raise/lower speaker volume
Mute button: Press to mute the volume during a call

C Receive/Place Call button: Press to receive/place/transfer calls.
 Press to place a call using voice command prompts from the system, or to answer an incoming call

D End Call button: Press to end a call or cancel a function

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language setting may delete paired phones

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, if equipped, refer to the Car Multimedia System User's Manual or the Owner's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth®** connection requests

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Standard Audio Systems*

- Option 1: Press the Receive/Place Call button **D** (system will prompt you through call process)
- Option 2: Press the Talk button **A** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

UVO eServices and UVO eServices with Premium Navigation*

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **A**. Then say the command "Call {name}" or "Dial {number}"

Voice Recognition and Phone Contact Tips*

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help your **Bluetooth®** Wireless Technology Voice Recognition performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single-syllable names ("John Smith" vs. "Dad"; "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

QR CODE

Voice Recognition Tips Video*

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Audio Controls

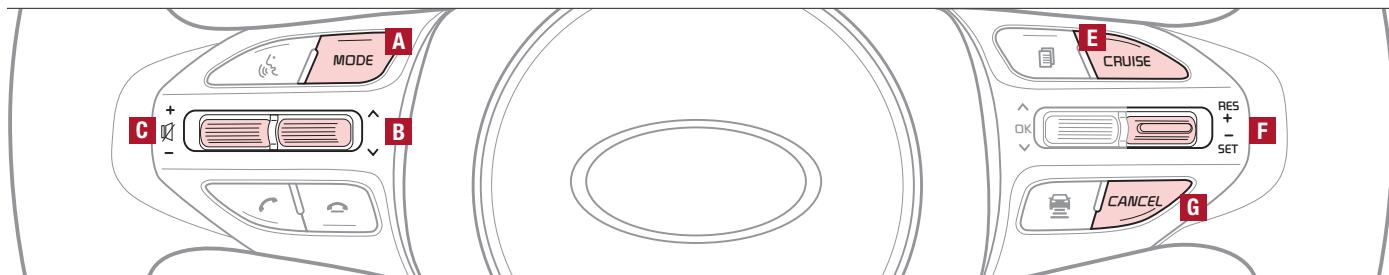

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®/Media modes

B Seek/Preset buttons:

FM/AM/SiriusXM® Modes: Press to advance through Preset Stations. Press and hold to auto seek

Media Modes: Press up/down to move track up/down. Press and hold to fast forward/rewind

C Volume buttons: Press up/down to raise/lower volume
Mute button: Press to mute all audio

QUICK TIP

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Standard Cruise Control

E CRUISE Control ON/OFF button: Press to turn the Cruise Control ON/OFF

F Resume Cruising Speed button: Press up to resume or increase cruising speed
Set Cruising Speed button: Press down to set or decrease Cruising Speed

G Cruise Control CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Standard Cruise Control is a part of the Advanced Smart Cruise Control (ASCC)* and can be set as the operating mode. To switch from ASCC to Standard Cruise Control, press and hold the CRUISE button (the ASCC system must not be activated to change modes). Repeat to switch back to ASCC mode.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details

Advanced Smart Cruise Control (ASCC)*

The Advanced Smart Cruise Control (ASCC)* system allows you to set the vehicle to maintain a speed so long as it is not limited by traffic. When traffic is encountered, the vehicle will be slowed to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

To set/adjust the ASCC speed:

- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed and press lever **B** down to set speed
- Press the ASCC lever **B** up or down to adjust or set speed

To set the vehicle-to-vehicle distance, press the ASCC button **C** on the steering wheel. The image on the LCD screen **E** will change when scrolling through the settings.

The CANCEL button **D** will disable Advanced Smart Cruise Control and the display **F** will show “Smart Cruise Control canceled.” To resume at the previously set speed, press the Resume button **B**.

REMINDERS:

- Cruise Control button must be ON in order to turn ASCC ON/OFF
- For the ASCC System to operate, you must be traveling at a minimum speed of 20 mph, when no vehicle is in front.
- The ASCC System is operating when driving above the speed of 6.0 mph

 
QUICK TIPS

To change the Cruise Control mode from ASCC **G** to standard Cruise Control **H**, press and hold button **C**. Repeat to switch modes again (The ASCC system must not be activated to change modes).

For the ASCC System to operate:

- When no vehicle is in front, you must be travelling at a minimum speed of 20 mph
- When following a vehicle, there is no minimum speed requirement

When following a vehicle, the system will automatically adjust the cruise speed based on the vehicle in front. It may bring the vehicle to a complete stop if necessary. If the vehicle stops for more than 3 seconds, the accelerator pedal must be depressed or press lever **B** up or down to start driving.

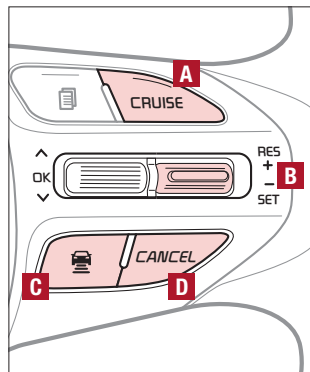

(Buttons located on right side of Steering Wheel)

QR CODE

 
 
Advanced Smart Cruise Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

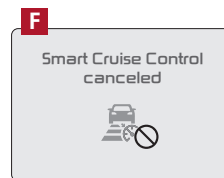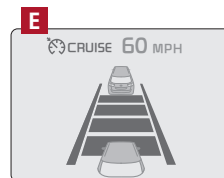

Standard Audio System*

 FM/AM/SiriusXM®/Media (CD, USB, iPod®, Aux, *Bluetooth*® Audio, My Music)*

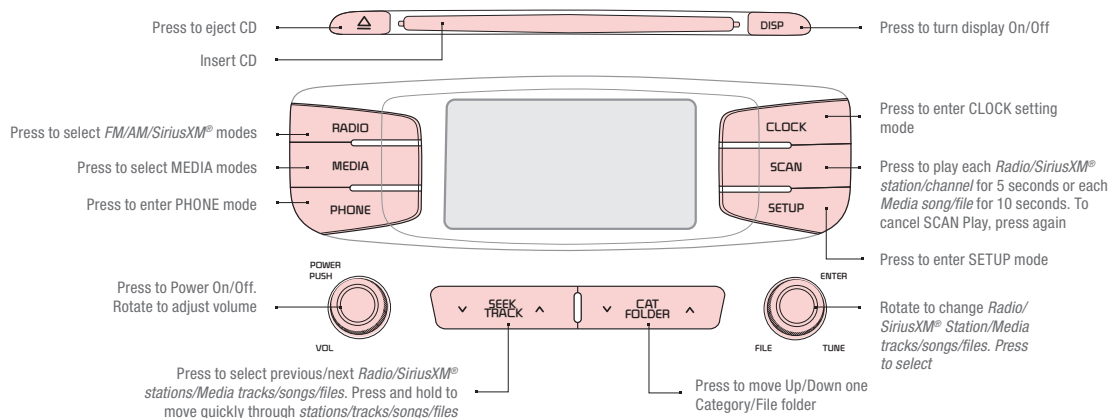

QR CODE

Standard Audio System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Audio System Setup Options

Press the SETUP key, then using the touchscreen, press the menu item to enter (Display, Sound, Clock/Calendar, Phone, System). Adjust the available settings for each equipped audio system setup option by pressing the onscreen buttons/arrows. Audio system setup options may include the following:

- **Display settings** – Adjusting the Brightness, Mode Popup, MP3 Information Display
- **Sound settings** – Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume, Touchscreen Beep
- **Clock/Calendar settings** – Clock Settings, Time Format, Calendar Settings, Clock Display
- **System settings** – Memory Information, Prompt Feedback, Language

Sound Settings

To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Tone, Speed Dependent Volume, Beep)
4. Using the touchscreen, press arrows to adjust the settings

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 21-23 or see your Owner's Manual.

UVO eServices / Android Auto™ / Apple CarPlay® Setup

UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the free Kia UVO eServices app.
2. Open the UVO eServices app and create an account by clicking on REGISTER. After entering your information and following the prompts to complete registration, go to your email and click on the confirmation link (You can also register an account by logging into MyUVO.com).
3. In the app, click CONTINUE, accept the terms and click CONTINUE once again.
4. Follow the app's IN-CAR SETUP instructions to connect your smartphone and complete UVO eServices activation.

Android Auto™*

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

How to start Android Auto™:

1. Press the SETUP key on your UVO eServices system's control panel.
2. Press the CONNECTIVITY button, select Android Auto™ then select ENABLE ANDROID AUTO.
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

Apple CarPlay®*

Setting up and starting Apple CarPlay®:

1. Connect the Apple CarPlay® compatible iPhone with the vehicle's USB port using the manufacture's cable provided with your iPhone.
2. On the UVO eServices System audio control unit, press the SETUP key.
3. Press the CONNECTIVITY button on the screen and select Apple CarPlay®.
4. Select ENABLE APPLE CARPLAY.
5. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

 
REMINDERS:

- Android Auto™ compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)

For further UVO eServices System operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 20-23.

UVO eServices System*

FM/AM/SiriusXM®/Media (Disc, USB, iPod®, My Music, Aux, BT Audio, Pandora®)

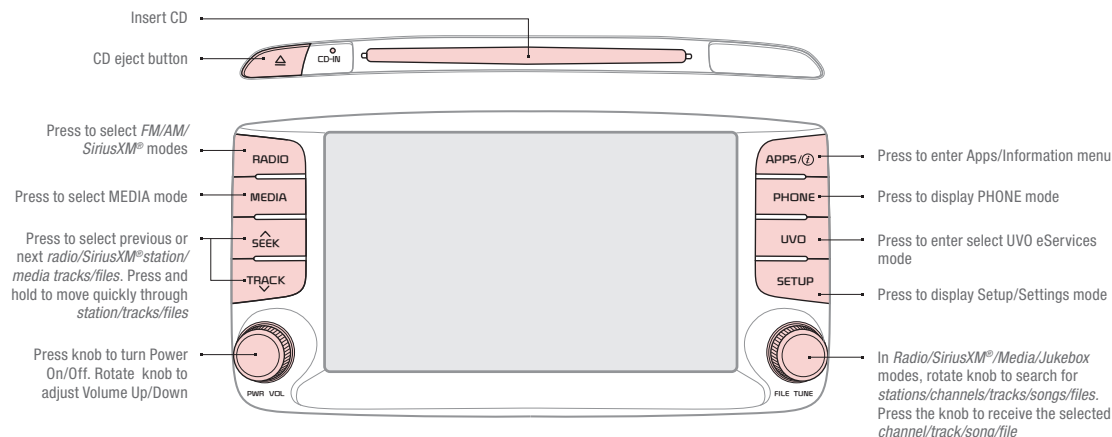

QR CODE

UVO eServices System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings

To adjust the UVO eServices System sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Tone, Advanced, Default)
4. Use the onscreen buttons to adjust settings
5. Press the return button to save settings

QUICK TIPS

 
- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones.
- When using the voice command feature, wait for the system BEEP before speaking the command
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the UVO eServices system in ACC mode may drain the vehicle's battery

Your vehicle's audio system may differ from that in the illustration. For further UVO eServices System operations, refer to the Car Multimedia System User's Manual. See your Owner's Manual for other details. For other audio system information, see pages 20-23.

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

UVO eServices with Premium Navigation*

FM/AM/SiriusXM®/Media (Disc, USB, iPod®, Aux, *Bluetooth*® Audio, My Music, Pandora®)

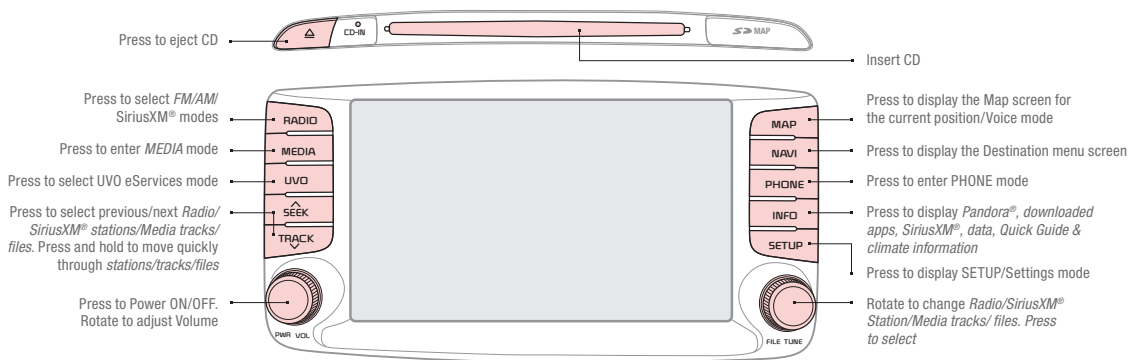

Sound Settings

To adjust the sound settings - Fader/Balance, Tone, Touch-Screen Beep ON/OFF and Speed-Dependent Volume Control ON/OFF - from any audio mode:

1. Press the SETUP button on the Audio Control Unit
2. Select the on-screen SOUND button
3. Select the menu item to change settings
4. Use the on-screen buttons to adjust settings
5. Press the return button to save settings

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Prolonged use of the UVO eServices with Premium Navigation system in ACC mode may drain the vehicle's battery.
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the steering wheel

Your vehicle's audio system may differ from that in the illustration. For further UVO eServices with Premium Navigation System operations, refer to the Car Multimedia System User's Manual. For other audio system information, see page 20-22.

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QR CODE

UVO eServices with Premium Navigation System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Surround View Monitor (SVM)*

The Surround View Monitor (SVM) is a parking support system that shows the areas around the front, rear, left, and right sides of the vehicle via four cameras displayed in the navigation* screen.

Front SVM operation:

 
- The camera view will display on the navigation screen in both Drive and Neutral
- In Drive, the camera view will continue to display until the vehicle is above approximately 13 mph
- The camera view will reappear on the navigation screen whenever the vehicle drops below approximately 13 mph

The Front SVM camera is ON when:

1. The Engine Start/Stop button is ON
2. The gear shift is in Drive or Neutral
3. The SVM button **A** is pressed ON



(Located next to gear shift)

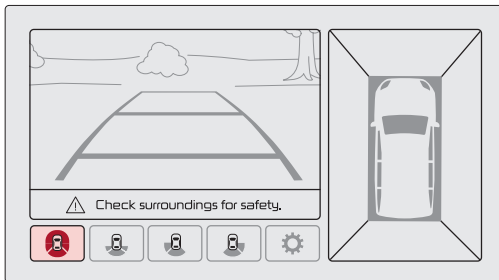

QUICK TIP

The Front SVM camera will turn off when the gear shift is moved into Park or Reverse or the SVM button is pressed.

Rear SVM operation:

- The camera view will automatically display on the navigation screen when the vehicle is shifted into Reverse
- The camera view will turn off when the vehicle is shifted out of Reverse

Camera View Modes – To change camera view modes, press the icons shown below on the navigation screen to select the mode.

Front SVM - when in Drive & Neutral:

- Displays the front side and SVM images simultaneously on the screen
- Displays the front side image on the screen
- Displays the front side and left side images simultaneously on the screen
- Displays the front side and right side images simultaneously on the screen

Rear SVM - when in Reverse:

- Displays the rear view and SVM images simultaneously on the screen
- Displays the rear side image on the screen
- Displays the rear and left side images simultaneously on the screen
- Displays the rear and right side images simultaneously on the screen

QR CODE

Surround View Monitor Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.

The Surround View Monitor system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

Automatic Gear Shift with Sportmatic® Shifting

P: Park

D: Drive

R: Reverse

[+]: Sport Mode Upshift

N: Neutral

 
[-]: Sport Mode Downshift

Sport Mode: To enter Sport mode, move shift lever from D to left gate.

To shift while in Sport mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS


- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

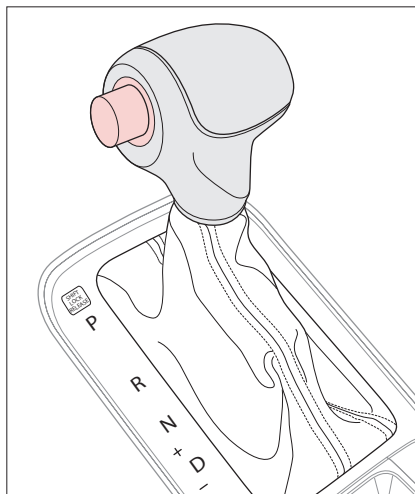

Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Sport mode).

 Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

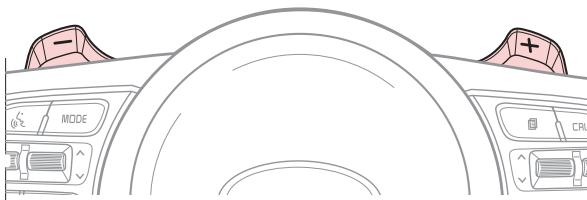

REMINDERS:

- The paddle shifters can be operated when the vehicle speed is more than 6 mph
- When in Sport mode, pulling the left and right paddle shifters at the same time will NOT shift gears

QR CODE

Sportmatic® Shifting Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos


Automatic Climate Control*

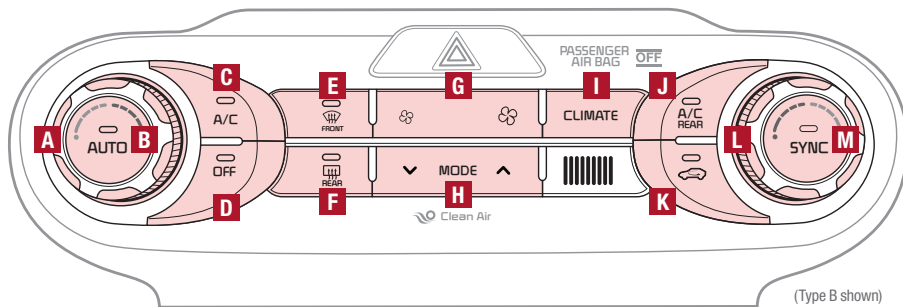

(Type B shown)

- A** Driver's temperature control knob
- B** AUTO (automatic control) button
- C** Air Conditioning ON button
- D** Air Conditioning OFF button
- E** FRONT windshield defroster button
- F** REAR window defroster button
- G** Fan speed control button
- H** MODE Selection button
- I** CLIMATE information screen selection button
- J** A/C Rear Control ON/OFF button
- K** Air intake control button
- L** Passenger's temperature control knob
- M** SYNC temperature control selection button
- N** 3rd Row air conditioning ON/OFF button
- O** 3rd Row fan speed control knob

 3rd Row Climate Control*

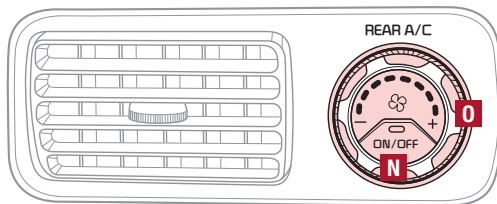


AWD (All-Wheel Drive) Lock*

When you select AWD Lock mode by pressing the AWD LOCK button, the AWD LOCK mode increases the drive power when driving on wet pavement, snow covered roads and/or off-road.

- This mode is used for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to maximize traction.
- This mode automatically begins to deactivate at speeds above 19 mph (30 km/h) and is shifted to AWD AUTO mode at speed above 25 mph (40 km/h). If the vehicle decelerates to speeds below approximate 25 mph (40 km/h), however, the transfer mode is shifted into AWD LOCK mode again.

 When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.

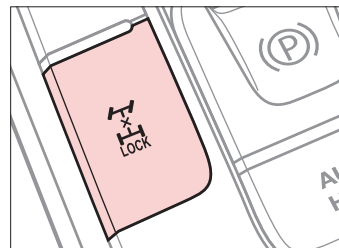

(Located next to gear shift)

Automatic Climate Control*

Climate Control Auto Function

1. Press **AUTO** to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected.
2. Set desired Temperature
3. Press **SYNC** to select Sync Temperature Control Operation


Defrost Outside Windshield:

1. Set Front **Fan Speed** to the highest position
2. Set **Temperature to Hot**
3. Press the **Front Defrost** button 

Defog Inside Windshield:

1. Set Front **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button 

QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Air Flow Modes

To select Air Flow Modes, press the mode buttons to cycle through to desired mode:



Face-Level



Floor-Level



Bi-Level



 
Floor/Defrost-Level

REMINDERS:

- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for DUAL Temperature Control


Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details

Manual Climate Control*

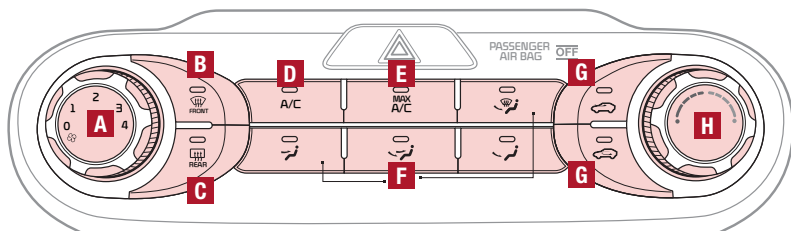

- A** Front fan speed control knob
- B** FRONT window defroster button
- C** REAR window defroster button
- D** Air conditioning button
- E** MAX A/C button
- F** Mode selection buttons
- G** Air intake control button
- H** Temperature control knob

Defrost Outside Windshield:

1. Set Front **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button 

 
Defog Inside Windshield:

1. Set Front **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button 

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Rear Climate Control*

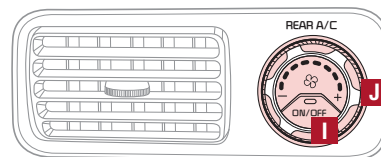

- I** 3rd Row air conditioning ON/OFF button
- J** 3rd Row fan speed control knob

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

Digital Clock

Standard Audio System*:

Press SETUP button on audio system, then press on-screen instructions to change clock settings.

UVO eServices System Clock Setup*:

Press the SETUP button, then press the on-screen Clock icon to enter clock settings.

 
UVO eServices with Premium Navigation System Clock Setup*:

Press the SETUP button, then press the on-screen Clock icon to enter clock settings.

QUICK TIPS

- Press the Return button on the navigation screen to ensure changes are saved.
- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (UVO eServices with Navigation System*)


Aux/USB/iPod® Ports, Power Outlets & AC Inverter*

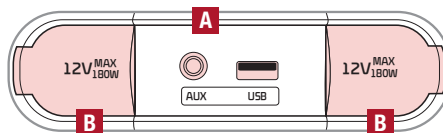

(Located on Center Console)

- A** Use the Aux port to connect audio devices and the USB port to connect USB audio devices, smartphones and iPod® devices.
- B** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

 USB Charger* & AC Inverter*

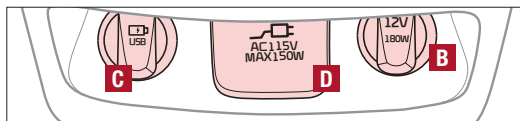

(Located on Back of Center Console)

- C** USB charger* and power ports are located in the Center Panel and rear of the Center Console
- D** AC Inverter*, 115V 150 watt, outlet is located in the rear of the Center console

QUICK TIP

The power outlets are inactive when the Engine Start/Stop button is OFF.

REMINDER: Using the Power Outlet (accessory plug) and USB charger for prolonged period time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged period time with the Engine Start/Stop button in the IGN Position (Engine OFF) could cause the battery to discharge.

For more information on the Aux/USB/iPod® Ports, Power Outlets and AC Inverter, refer to the Owner's Manual.

Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

Auto Hold*

 
The Auto Hold maintains the vehicle in a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal.

Depress the brake pedal, start the engine and then press the AUTO HOLD button **B**. The white Auto Hold indicator will come on indicating the system is in standby.


Before the Auto Hold will engage, the driver's door, engine hood and trunk must be closed and the driver's seat belt must be fastened.

When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green indicating the Auto Hold is engaged and EPB is applied. The vehicle will remain at a standstill even if you release the brake pedal.

If EPB is applied, Auto Hold will be released.

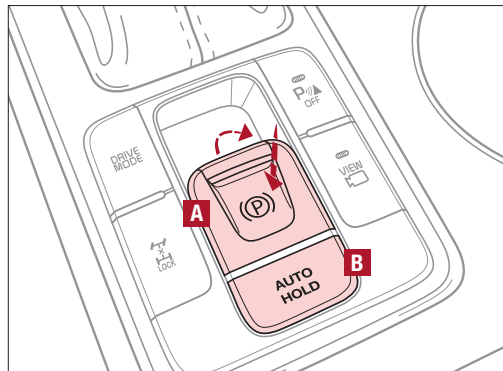

Heated Steering Wheel*

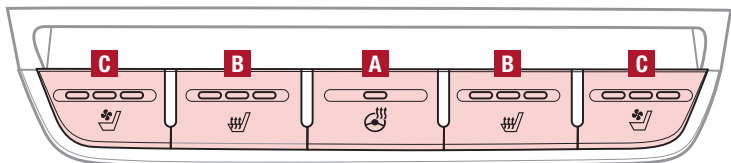 

(Buttons located below Gear Shift)

Press Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off, while the Engine Start/Stop button is in the ON position. Steering Wheel Heater will turn off automatically in 30 minutes, or when button **A** is pressed again to deactivate.

QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position
- System does NOT turn off when ignition is cycled. To turn off system, press the Heated Steering Wheel button **A**

Seat Warmers / Ventilated Seats*

B Seat Warmers

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

C Ventilated Seats

- Press button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature.
- System is OFF by default.

QR CODE

Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
Front Seat Headrest Adjustment

Type A*


- To raise headrest, pull headrest up to the desired position
- To lower headrest, press button, then press the headrest down

Type B/C*

- To raise headrest, pull headrest up to the desired position
- To lower headrest, press and hold the release button **A** and lower headrest to the desired position

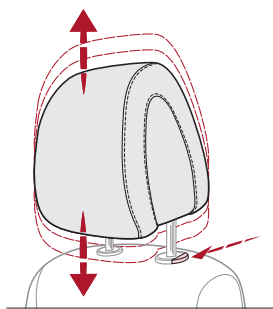

(Type A)

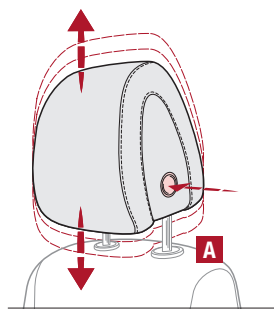 


(Type B/C)

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:


 
1. Adjust the Driver's Seat and the Outside Mirrors
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons **C** within 5 seconds. The system will beep twice when memory has been stored

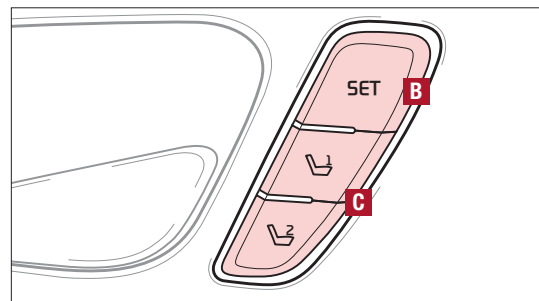

(Buttons located on Driver's Door Panel)

Power Adjustable Driver's Seat*

  Move/Press controls to adjust Seat, Seat Cushion, Seatback, Lumbar and Seat Cushion Extension

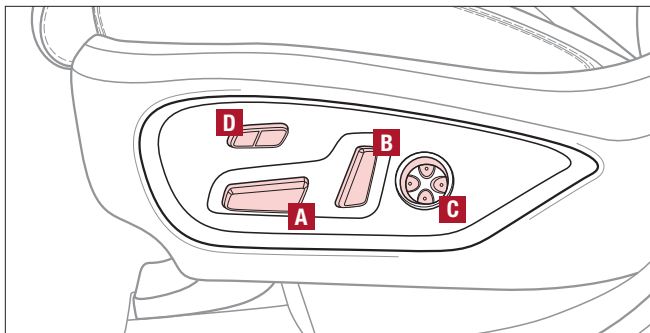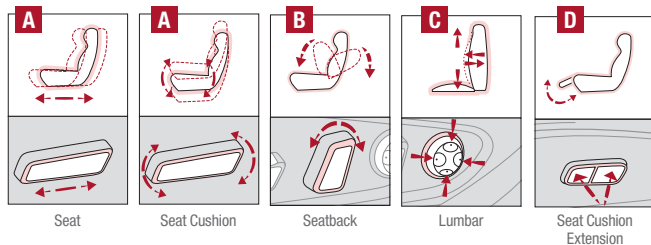


Manual Adjustable Driver's Seat*

Pull lever **E** to slide Seat forward/backward.

Pull/press lever **F** to adjust Seat height.

Pull lever **G** to adjust Seatback recline.

 Press **H** to adjust Lumbar support.

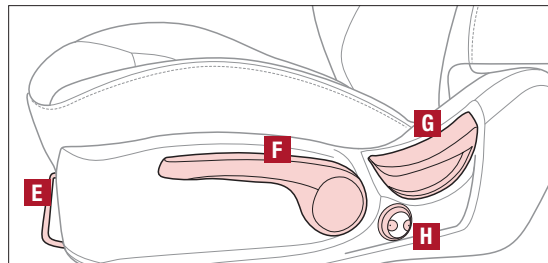

QUICK TIP

When adjusting seat forward or backwards, ensure seat clicks or locks into place before driving the vehicle.

 
2nd-Row Folding Seat

Folding 2nd-Row Seat

1. Lower the 2nd-Row Seat Headrest to the lowest position
2. Pull up on the Seatback folding lever **A** or strap* and fold the Seatback down

Unfolding 2nd-Row Seat

1. Lift the folding Seatback lever **A** and move the Seatback backward **B**
2. Then lift the lever again **A** or return it to an upright usable position **B**

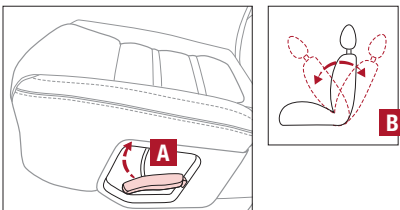


QUICK TIPS

- When you return Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- Lower Rear Headrests to the lowest position

2nd-Row Walk-In Seat*

To enter the 3rd-Row Seat* area, do the following steps:

 1. Place the Seatbelt into the guide clip and tighten the Seatbelt by pulling up
2. Pull lever **C** located on the 2nd-Row Seatback
3. Fold the Seatback forward and slide to the farthest forward position
4. Return Seatback to its original position and ensure it locks (clicks) into place

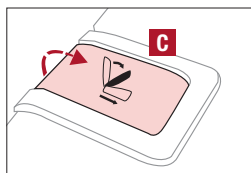


(Lever located on 2nd-Row Seatback)

For more information on 2nd-Row Walk-In Seat operation, refer to the Owner's Manual.

2nd-Row Auto-Folding Seat*

Pull lever **D** to release and automatically fold 2nd-Row Seatback down.

 For more information on 2nd-Row Auto Folding Seat operation, refer to the Owner's Manual.

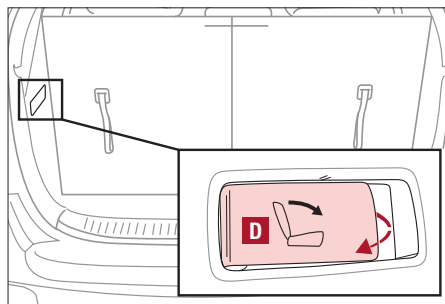

(Located on rear quarter-trim panels)

QR CODE

2nd & 3rd Row Folding Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

3rd-Row Folding Seat*

Folding 3rd-Row Seat


1. Fully lower headrest **A**
2. Pull Seat folding strap **B** located on the Seatback
3. Fold Seat down

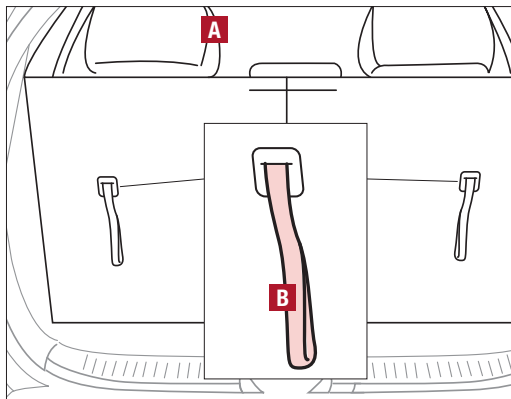

For more information on 3rd-Row Seat operation, refer to the Owner's Manual.

Unfastening Center Seat Belt

 1. If Seat Belt is buckled, press the release button on the buckle.
2. To retract the center seatbelt webbing **G** in 2nd and/or 3rd rows, use the lap belt tongue plate **H** to push the “release button” in the small slot on the center belt buckle **J**.

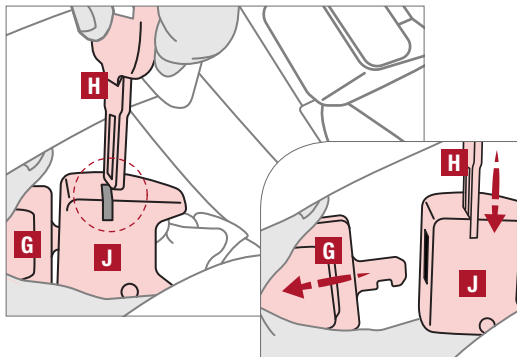

QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.

2nd & 3rd Row Folding Seats Video



 
2nd & 3rd Row Center Seatbelt Video



www.youtube.com/KiaFeatureVideos

Sunvisor

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

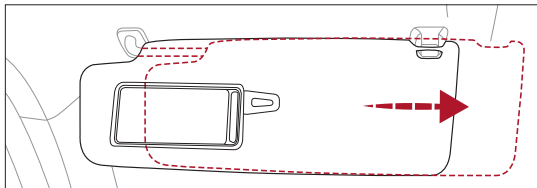

REMINDERS:

 
- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to and from the front or side windows

Sunglasses Holder

To open the sunglasses holder **F**, lightly press the cover and the holder will slowly open **G**.


Place your sunglasses with the lenses facing out.

To close the sunglasses holder push it up.

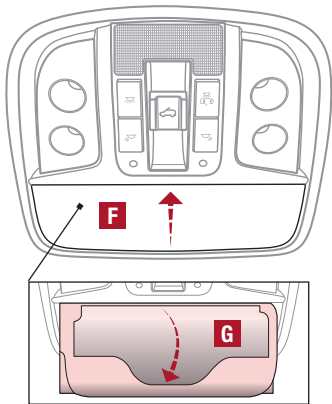

Remote Keyless Entry (Folding Key)*

 
- A** Press the release button to unfold the key
- B** Press to lock All Doors
- C** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch
- D** **Manual Liftgate***: Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate.
Power Liftgate*: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close.
- E** Press and hold more than a half second for Panic Alarm. To turn OFF Alarm, press any button

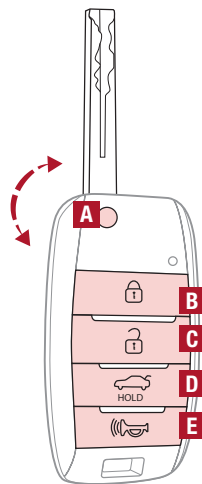

Remote button configuration may vary depending on vehicle options.

Double-Turn Lock/Unlock All

 - Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

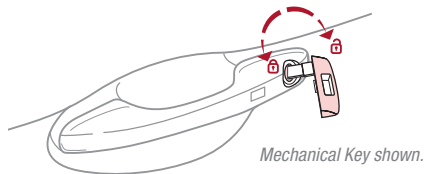

Mechanical Key shown.

Smart Key*

 
- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice within 4 seconds to unlock All Doors.
- C** **Manual Liftgate***: Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate.

REMINDERS:

- The Liftgate does not automatically open when the **C** button is pressed.
- The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle.

Power Liftgate*: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close.

- D** Press and hold for more than a half second for Panic Alarm. To turn OFF Alarm, press any button
- E** Press to release Mechanical Key
- F** Mechanical Key

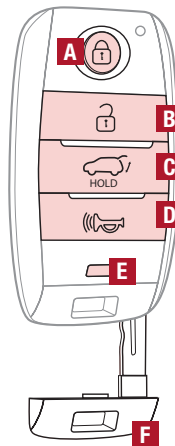

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Driver's Door Lock/Unlock button **G**:


- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

Remote button configuration may vary depending on vehicle options.

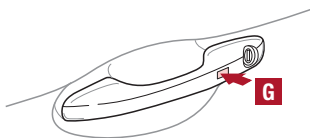

Mechanical Key **H**:

 - Press button on back of key fob to release Mechanical Key
- Use to lock/unlock driver's door

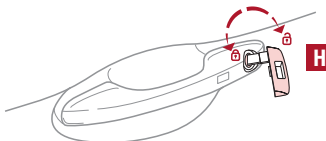

QUICK TIPS

- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

Power Liftgate*

Opening from Inside the Vehicle:

Press and hold the Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

REMINDER: Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Opening from Outside the Vehicle:

To open Power Liftgate automatically, press the Rear Hatch Release button **C** on exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **D**.

 
Power Liftgate Opening Height Adjustment

The height setting of a fully opened liftgate (tailgate) can be adjusted by the following steps:


1. Position the liftgate manually to the preferred height
2. Press Power Liftgate Close button **D** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.


For more information on the Power Liftgate operation, please refer to the Owner's Manual.

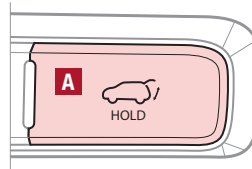


(Button located on Driver's Panel)

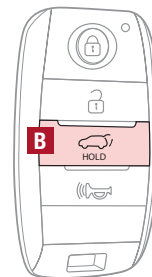 

 Remote button configuration may vary depending on vehicle options.

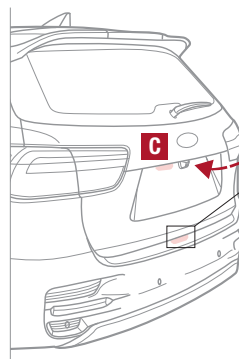

 (Located on Liftgate inside lip near latch)

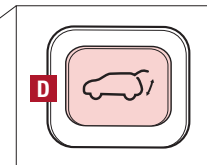

QR CODE

Power Liftgate Opening Height Adjustment Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
Smart Power Liftgate*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to User Settings in the LCD Instrument Cluster modes.

QUICK TIPS

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob.
- The open height can be adjusted. For information on how to set open height, see your owner's manual

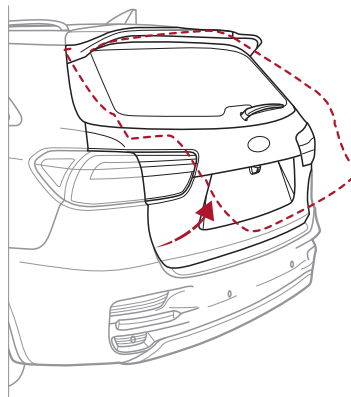

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function.
- When ignition is on, the Smart Power Liftgate will only operate with the gear shift in the Park (P) position.

For more information on the Smart Power Liftgate operation, please refer to the Owner's Manual.

QR CODE

Smart Power Liftgate Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

HomeLink® with Auto-Dimming Rearview Mirror*

- | | |
|---------------------------|---------------------------------|
| A HomeLink® button | E Glare detection sensor |
| B HomeLink® button | F Automatic dimming ON |
| C Indicator light | G Automatic dimming OFF |
| D HomeLink® button | |

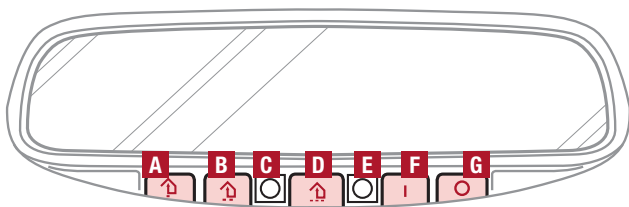 

The HomeLink® / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press **I** button **F**
- To turn automatic dimming OFF, press **O** button **G**

REMINDER: Mirror indicator light **C** will illuminate when automatic dimming is ON.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A B D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Map / Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

Press the button **A** to turn the Map Lamp ON/OFF. Press button **B** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

 
The Map Lamp turns ON when any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately.

Map/Room Lamp button **C** – When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.

Room Lamp – Press the lens **D** to turn the Room Lamp ON/OFF.

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

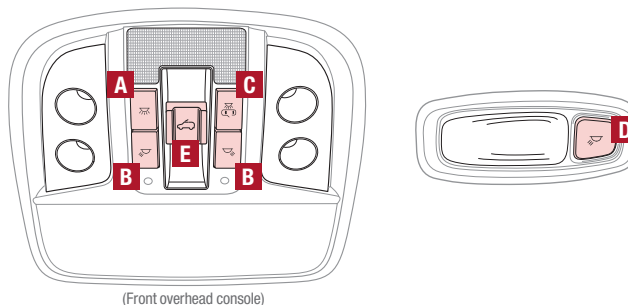

Panoramic Sunroof with Power Sunshade

The Sunroof and Sunshade operation is controlled through multidirectional lever **E**. The ignition needs to be ON to operate the sunroof/sunshade.

REMINDERS: The sunroof can be operated for approximately 30 seconds after the ignition is turned off. If the front door's are opened, the sunroof cannot be operated even within the 30 second period.

To slide the Sunshade and Sunroof:

- Auto Open: Slide the lever **E** backward to the farthest position and release
- Auto Close (Sunroof only): Slide the lever **E** forward to the farthest position (second detent) and release

Tilting the Sunroof open/closed:

- Open/Raise: Push lever **E** upward
- Close/Lower: Pull lever **E** downward
- Auto Close Sunroof and Sunshade: Slide the Sunroof lever **E** forward to the farthest position

REMINDERS: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving

QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.

Rear Parking Assist System *

The Rear Parking Assist System is not a safety device. The Rear Parking Assist System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

 
The Rear Parking Assist System is activated when ignition is on, and the button **A** is not depressed (LED not lit).

To deactivate the Rear Parking Assist System, press the button **A** (LED lit).

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

The Rear Parking Assist System is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear Parking Assist System may not detect every object behind the vehicle

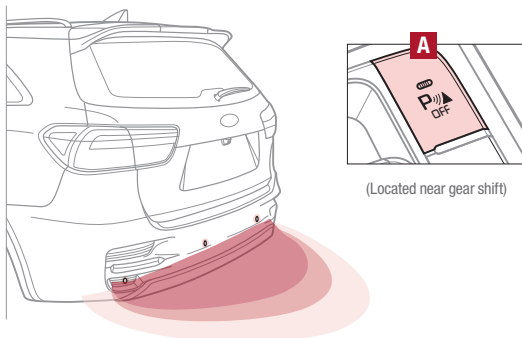


Rear-Camera Display

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Standard Audio System, UVO eServices with Premium Navigation* and UVO eServices System* while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

 - Ignition or the Engine Start/Stop button* (Green Light) is in the ON position
- Gear Shift Lever is in the R (Reverse) position

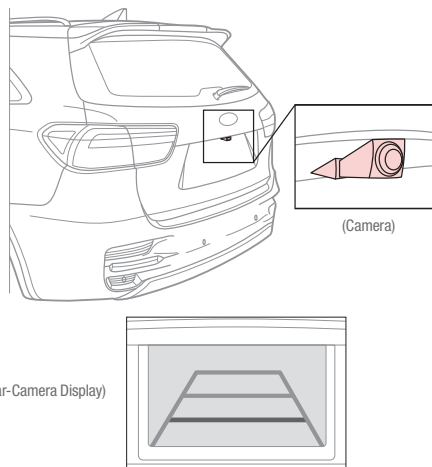

REMINER: While camera is active, only the volume controls on the Audio System can be operated.

 
The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Hood Release Lever and Latch


Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
3. It will open by itself after it has been raised about half way.

REMINDER: Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

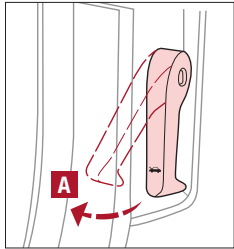

 (Lever located near floor below Driver's Panel)

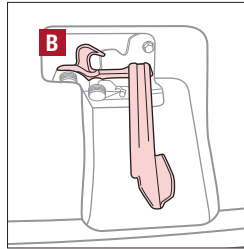


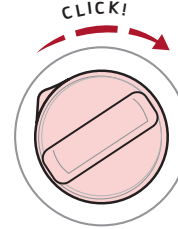 
(Latch located inside hood)

Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Fuel Cap / Malfunction Indicator (Check Engine Light)


Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.



 
REMINDER:

- The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel.
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back.

Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors, turn the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.

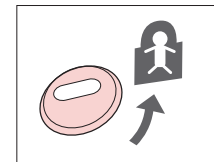

(Lock located on rear passenger inside door jamb)

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Occupant Detection System (ODS) / Passenger Airbag Off Indicator



ODS detects the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

 
- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

Seat Belts

To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

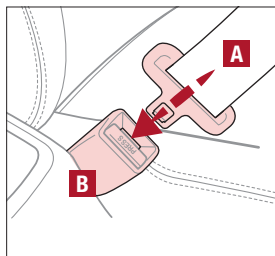

REMINDER: For maximum protection, always wear your seat belt.

 
QUICK TIP

The seat belt warning chime operates for driver's seat only.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seatbelt retractors will automatically lock the belts to reduce the risk of injury.

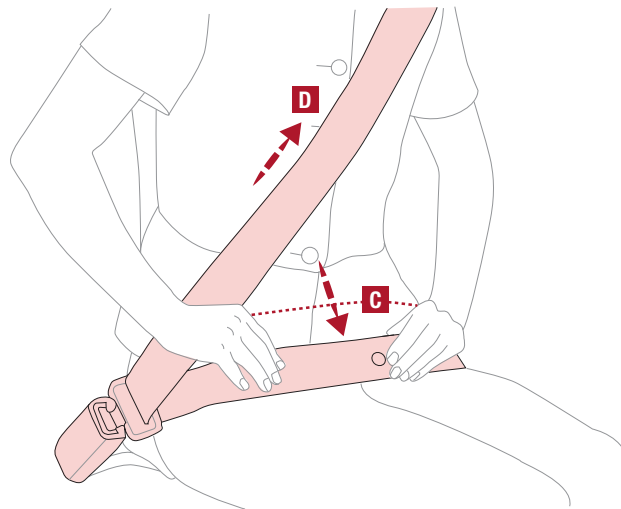

Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

7,500 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- Battery condition
- Air cleaner filter
- Vacuum hose

*And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

15,000 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Climate control air filter (For evaporator and blower unit)
- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- | | |
|--------------------------------|---|
| • Battery condition | • Front brake disc/pads, calipers |
| • Air cleaner filter | • Propeller shaft (AWD) |
| • Vacuum hose | • Rear brake disc/pads |
| • Air conditioning refrigerant | • Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint |
| • Brake hoses and lines | • Suspension mounting bolts |
| • Drive shafts and boots | |
| • Exhaust pipe and muffler | |

*And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO eServices only - See page 21 for setup information)

Normal Maintenance Schedule (continued)

22,500 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)
- Climate control air filter (For evaporator and blower unit)

INSPECT*

- Battery condition
- Air cleaner filter
- Vacuum hose

*And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

30,000 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Climate control air filter (For evaporator and blower unit)
- Air cleaner filter
- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- | | |
|-----------------------------------|---|
| • Battery condition | • Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint |
| • Air cleaner filter | • Suspension mounting bolts |
| • Vacuum hose | • Brake fluid |
| • Air conditioning refrigerant | • Fuel lines, fuel hoses and connections |
| • Brake hoses and lines | • Fuel tank air filter** ² |
| • Drive shafts and boots | • Parking brake |
| • Exhaust pipe and muffler | • Vapor hose and fuel filler cap, fuel tank |
| • Front brake disc/pads, calipers | |
| • Propeller shaft (AWD) | |
| • Rear brake disc/pads | |

*And, if necessary, adjust, correct, clean or replace. ** If equipped.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ² Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

Normal Maintenance Schedule (continued)

37,500 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- Battery condition
- Air cleaner filter
- Vacuum hose
- Rear axle oil (AWD)*²
- Transfer case oil (AWD)*²

*And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ² Transfer case oil and rear axle oil should be changed anytime they have been submerged in water.

45,000 miles

PERFORM

- Rotate tires
- Fuel additive¹ (Every 7,500 miles)

REPLACE

- Climate control air filter (for evaporator and blower unit)
- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)
- Spark plugs (iridium coated) - 2.0T-GDI

INSPECT*

- | | |
|--------------------------------|---|
| • Battery condition | • Front brake disc/pads, calipers |
| • Air cleaner filter | • Propeller shaft (AWD) |
| • Vacuum hose | • Rear brake disc/pads |
| • Air conditioning refrigerant | • Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint |
| • Brake hoses and lines | • Suspension mounting bolts |
| • Drive shafts and boots | |
| • Exhaust pipe and muffler | |

*And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

Normal Maintenance Schedule (continued)

52,500 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Engine oil and filter (Every 7,500 miles)
(2.0L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- Battery condition
- Air cleaner filter
- Vacuum hose

60,000 miles

PERFORM

- Rotate tires
- Add fuel additive¹ (Every 7,500 miles)

REPLACE

- Climate control air filter (For evaporator and blower unit)
- Air cleaner filter
- Engine oil and filter (Every 7,500 miles) – (2.0L Turbo-GDI – replace every 6,500 miles)
- Coolant (First, 60,000 miles, thereafter every 30,000 miles)

INSPECT*

- | | |
|-----------------------------------|---|
| • Battery condition | • Steering gear box, linkage & boots/lower arm ball joint, upper arm ball joint |
| • Air cleaner filter | • Suspension mounting bolts |
| • Vacuum hose | • Brake fluid |
| • Air conditioning refrigerant | • Fuel lines, fuel hoses and connections |
| • Brake hoses and lines | • Fuel tank air filter (if equipped)* ² |
| • Drive shafts and boots | • Parking brake |
| • Exhaust pipe and muffler | • Vapor hose and fuel filler cap, fuel tank |
| • Front brake disc/pads, calipers | • Valve clearance ³ |
| • Propeller shaft (AWD) | • Drive belts (First 60,000 miles, thereafter every 15,000 miles)* ⁴ |
| • Rear brake disc/pads | |

*And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

And, if necessary, adjust, correct, clean or replace.

¹ If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. ² Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details. ³ Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. ⁴ The drive belt should be replaced when cracks occur or tension is reduced excessively.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Airbags: For maximum protection, always wear your seat belt.

Android Auto™: Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Apps: All information contained herein was based upon the latest available information at the time of appstore registration. Descriptions are believed to be correct, and Kia makes every effort to ensure accuracy, however, accuracy cannot be guaranteed. From time to time, Kia may need to update or make changes to the vehicle features and other vehicle information reported in this app. Kia, by the publication and dissemination of this material, does not create any warranties, either express or implied, to any Kia products. Contact your local Kia dealer for the most current information.

Autonomous Emergency Braking System (AEB) / Forward Collision Warning System: These systems are not substitutes for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.

Bluetooth® Wireless Technology: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

Driver Assist Features - Blind Spot Detection (BSD) with Lane Change Assist, Rear Cross Traffic Alert (RCTA), Lane Departure Warning System, Rear-Camera Display: These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC): No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Engine Start/Stop Button with Smart Key: Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

Front Seat Headrest Adjustment: Never attempt to adjust headrests when vehicle is in motion.

Google Play™ Store is a trademark of Google, Inc. © 2012 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.

HomeLink®: Homelink® is a registered trademark of Gentex Corporation

iPhone®/iPod®, Apple CarPlay®: Apple CarPlay, iPhone, iPod are registered trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Navigation: Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Occupant Detection System (ODS): Kia vehicles use a number of different ODS types that vary by model.

Pandora® internet radio: Pandora® is a registered trademark of Pandora Media, Inc.

Roadside Assist: 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.

Seat adjustments: Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

Seat belts: For maximum protection, always wear your seatbelt.

Seat warmers: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2017 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

Power Liftgate (Tailgate)* / Smart Liftgate®: Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

Sportmatic® is a registered trademark of Kia Motors America.

Steering-wheel-mounted controls: Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

Sunvisors: Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

Tilt/Telescoping Steering Wheel: Never attempt to adjust steering wheel position when vehicle is in motion.

Tire Pressure Monitoring System (TPMS): Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

UVO eServices: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

UVO eServices app: App uses your smartphone data service. Normal cellular service rates will apply.

 
UVO eServices with Premium Navigation: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.



KEY FEATURE WALKTHROUGH

Standard Audio System* – page 20

For further operational information, refer to the Owner's Manual.

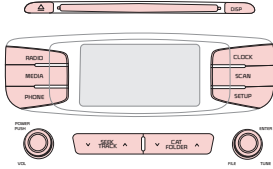


UVO eServices / Android Auto™/ Apple CarPlay® Setup* – page 21

For further UVO eServices System operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 20-23


UVO eServices System* – page 22

 For further operational information, refer to the Car Multimedia System User's Manual.

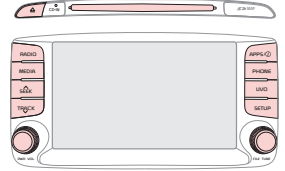


UVO eServices with Premium Navigation* – page 23

 
For further operational information, refer to the Car Multimedia System User's Manual.

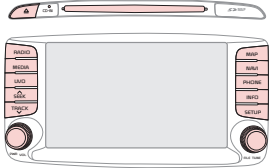

 ASCC / Cruise Control – pages 18-19
Demonstrate operation

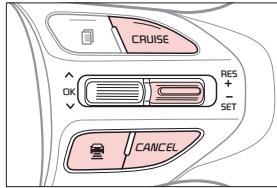

 Bluetooth® Wireless Technology – pages 16-17
Demonstrate operation

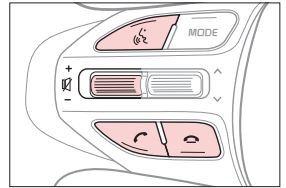

- Aux/USB/iPod® Ports, Power Outlets & AC Inverter* – page 29
- Blind Spot Detection (BSD)* – page 10
- Clock Setup – page 29
- Engine Start/Stop Button – page 13
- HomeLink® with Auto-Dimming Rearview Mirror – page 40
- Lane Departure Warning System (LDWS)* – page 11
- Passenger Airbag Off Indicator – page 44

- Panoramic Sunroof Operation* – page 41
- Rear-Camera Display* – page 42
- Seat Warmers / Ventilated Seats* – page 31
- Smart Key – page 37
- Sunvisor – page 36
- Tire Pressure Monitoring System (TPMS) – page 5

*if equipped

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours and Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



SORENTO CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- Test and confirm "Good Battery" using the Kia GR8-1299 battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any audio system user's manual.)

KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control - pages 26-28
Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

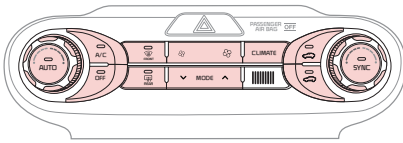


Automatic*

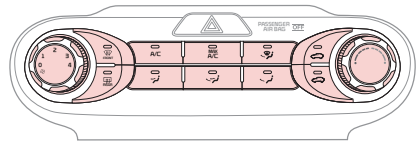 

Manual*

 - Front Seat Headrest Adjustment – page 32

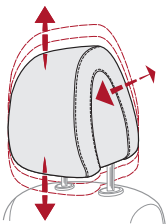


(Type A)

- Windshield/Rear Wipers & Washers – page 15


- Move lever Up/Down to change Wiper modes
- Push switch to adjust Intermittent Wipe
- Pull lever to spray and wipe

 - Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

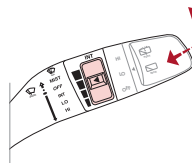

(front operation)

 - MIST: Single wipe
- OFF: Wiper off
- INT/AUTO: Intermittent wipe/
Rain Sensing*
- LO: Slow wipe
- HI: Fast wipe

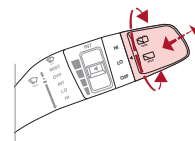

(rear operation)

- HI: Fast wipe
- LO: Slow wipe
- OFF: Wiper off



© 2017 Kia Motors America, Inc. All rights reserved.

Part Number: UX180-PS-004

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)