

The logo for the Kia Soul, featuring the word "Soul" in a stylized, lowercase, red font with a slight shadow effect.

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **SOUL**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

ESSENTIAL FEATURES

Air Conditioning / Climate Control*	26
Audio Systems – Standard Audio System*	21
Audio Systems - UVO eServices*	23
Audio Systems - UVO eServices/Premium Navigation*	24
Aux/USB/iPod® Port & Power Outlets	25
Bluetooth® Wireless Technology	18
Cruise Control*	17
Digital Clock	25
ECO Mode (Active ECO)*	08
Folding Rear Seatback	32
Manual Gear Shift*	29
Passenger Airbag Off Indicator	41
Smart Cruise Control (SCC)*	20
Tire Mobility Kit	38
Tire Pressure Monitoring System (TPMS)	05
Windshield/Rear Wipers & Washers	16

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



VIDEOS & QR CODES 02

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
LCD Instrument Cluster Modes*	06
Trip Modes / Trip Computer*	06
User Settings Mode*	07
Service Mode*	07
Drive Mode Integrated Control System*	08
ECO Mode (Active ECO)*	08

DRIVER'S PANEL

Lane Departure Warning System (LDWS)*	09
Autonomous Emergency Braking (AEB)* / Forward Collision Warning (FCW)*	09
Blind Spot Detection (BSD) System*	10
Electronic Stability Control (ESC)	11
Hill-Start Assist Control (HAC)	11
Instrument Panel Dimmer	11
Power Windows, Window Lock & Central Door Lock	12
Automatic Door Lock/Unlock	12
Power Folding Outside Mirrors*	12
Heated Outside Mirrors*	12
Engine Start/Stop Button*	13

STEERING WHEEL CONTROLS

Tilt/Telescoping Steering Wheel	14
Heated Steering Wheel Button*	14
Headlights & High Beams	15
Turn Signals & Fog Lights*	15
Windshield Wipers & Washers	16
Rear Wiper & Washer*	16
Audio Controls	17
Cruise Control*	17
Bluetooth® Wireless Technology	18
Smart Cruise Control (SCC)*	20

AUDIO SYSTEMS

Standard Audio System*	21
UVO eServices / Android Auto™ / Apple CarPlay® Setup*	22
UVO eServices*	23
UVO eServices with Premium Navigation*	24

CENTER PANEL

Advanced (Mood) Lighting Speaker*	25
Aux/USB/iPod® Port & Power Outlets	25
Digital Clock	25
Automatic Climate Control*	26
Manual Climate Control*	27
Automatic Gear Shift with Sportmatic® Shifting*	28
Dual Clutch Transmission (DCT)*	28
Manual Gear Shift*	29

SEATING

Seat Warmers / Ventilated Seats*	30
Power Adjustable Driver's Seat*	30
6-Way Manual Adjustable Driver's Seat	31
Front Seat Headrest Adjustment	31
Folding Rear Seatback	32

OTHER KEY FEATURES

Smart Key*	33
Remote Keyless Entry* (Folding Key)	34
Double-Turn Lock/Unlock All	34
Fuel Cap Open Warning Indicator*	34
Map/Room Lamps	35
Sunvisor	35
Panoramic Sunroof Operation*	36
Rear-Camera Display*	37
Hood Release Lever and Latch	38
Fuel Door Release Lever	38
Tire Mobility Kit	38
Liftgate Release Button	39
Child-Protector Rear Door Locks	39

SAFETY FEATURES

Seat Belts	40
Seat Belt Retractor Locks	40
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	40

NORMAL MAINTENANCE SCHEDULE . . . 41

LEGAL DISCLAIMERS (See Back Inside Cover Page)

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

 
QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well-lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet
3. When accessing videos on your mobile device, standard cellular data rates will apply

Instrument Cluster Overview

(Type A)


- A** Tachometer
- B** Speedometer
- C** Turn Signal Indicators
- D** Gear Shift Position
- E** Odometer
- F** Trip Modes / Trip Computer*
- G** Engine Temperature
- H** Fuel Gauge
- I** Exterior Temperature

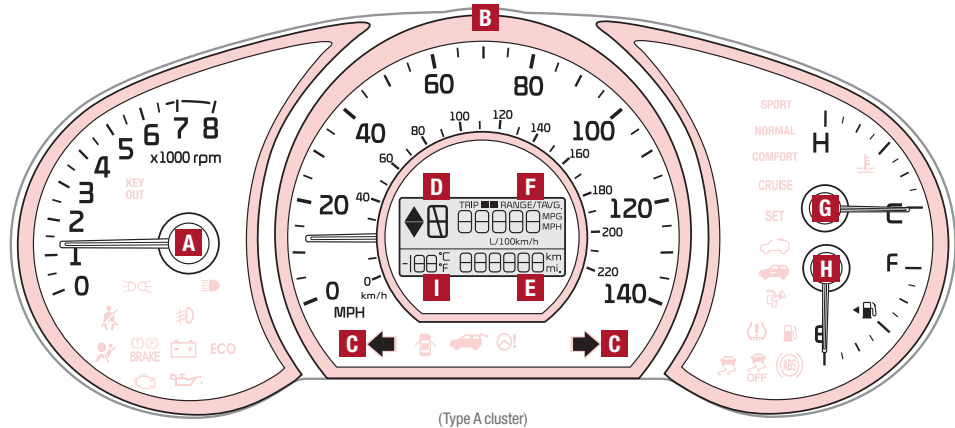

(Type A cluster)

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

 Indicators & Warning Lights

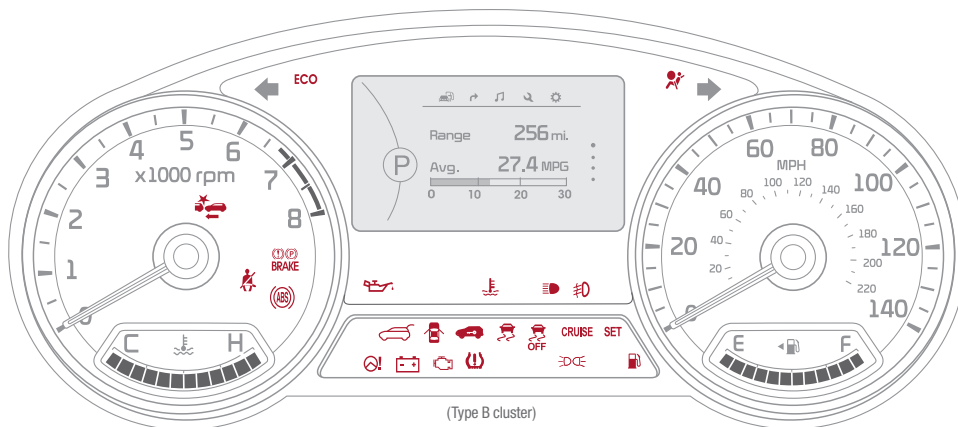

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.


	Forward Collision Warning System (FCWS) OFF / Warning Indicator*		Immobilizer Indicator Light*		Cruise SET Indicator Light*
	Seat Belt Warning Light		Fuel Cap / Malfunction Indicator (Check Engine Light)		Low Fuel Level Warning Light
	Parking Brake & Brake Fluid Warning Light		Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator		Airbag Warning Light
	Anti-lock Braking System (ABS) Warning Light		Engine Coolant Temperature Warning Light		Fuel Cap Open Warning Indicator (In cluster Type B. Displays in LCD)*
NORMAL SPORT	Drive Mode Indicators*		Electronic Stability Control (ESC) Indicator		Electronic Brakeforce Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)
	ECO Mode / Drive Mode Indicator		Electronic Stability Control (ESC) OFF Indicator*		
	Engine Oil Pressure Warning Light		Master Warning Light		Icy Road Warning Light*
	Electronic Power Steering Warning Light		High Beam Indicator		Sunroof Open Warning Light*
	Liftgate Open Warning Light		Light ON Indicator Light		KEY OUT Indicator Light*
	Charging System Warning Light		Front Fog Light Indicator*		Lane Departure Warning System (LDWS) Indicator Light*
	Door Ajar Warning Light		Cruise Indicator Light*		


Tire Pressure Monitoring System (TPMS)



The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator illuminates if one or more tires is significantly under inflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate - See dealer for service.

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jam, visible when the door is opened.
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range varies depending on a vehicle's fuel tank size, e.g., 12-gal.vs.24-gal. Even though the two vehicles, MPG may be the same, the vehicle with the larger tank will have the greater range.

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Tire Pressure Monitoring System



www.youtube.com/KiaFeatureVideos

Fuel Economy Video



www.youtube.com/KiaFeatureVideos

LCD Instrument Cluster Modes*

Press the Mode button **A** to cycle through different LCD Instrument Cluster Modes:



Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.



Turn-by-Turn Mode*: Displays the state of the Navigation system



Lane Departure Warning System (LDWS)*: Displays the state of the LDWS



User Settings Mode: Change settings of the doors, lights, sound, drivings assist, convenience, service and other features




Master Warning Mode: Informs of warning messages related to TPMS, Blind Spot Detection (BSD) system, etc.

Trip Modes / Trip Computer*

 
The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch is ON.

To cycle through the LCD Display modes, press the Mode/Select button **A**.


When in the Trip Computer mode , press the Move/Reset button **B** to cycle through the screens. When displaying the Tripmeter, press and hold the Move/Reset button **B** to reset the Tripmeter to zero.

REMINDERS:


- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

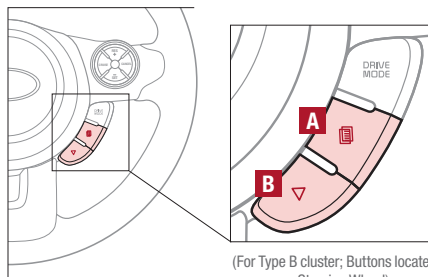

 Your vehicle's steering wheel buttons may differ from those in the illustrations.

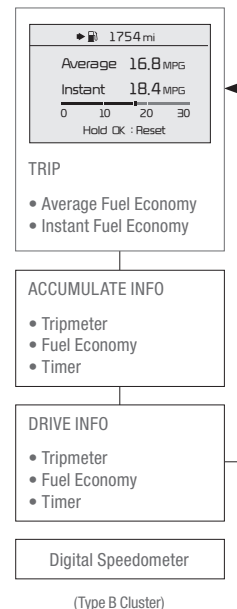

User Settings Mode*

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode/Select button **A** when the vehicle is at a standstill and with the Engine Start/Stop* button in the ON position and select User Settings .

You can navigate the selections on the display by pressing the Move/Reset button **B**, and then selecting the item by pressing the Mode/Select button **A**.

Driving Assist*:

- Rear Cross Traffic Alert*
- FCW (Forward Collision Warning)*
- BSD (Blind Spot Detection)*

Door/Liftgate:

- Auto Door Lock
- Auto Door Unlock
- Two Press Unlock
- Horn Feedback

Lights:

- One-Touch Turn Signal*
- Headlamp Delay*

Sound:

 
- Park Assist System Volume*
- Welcome Sound*

Service Interval:

- Set mileage/months
- ON/OFF

Convenience:

- Gear Position Pop-Up*

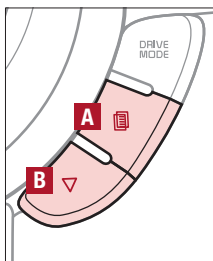

(For Type B cluster; Buttons located on Steering Wheel)



Other Features:

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit

Language:

- Language Setting

Service Mode*

To enter Service Mode, press the Mode/Select button **A** and select User Settings , then scroll to Service Mode  by pressing Move/Reset button **B**. Press the Mode/Select button **A** to enter. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following will be displayed:

Service Required.

 
 
 
To reset the Service Mode system, press and hold the Move/Reset button **B** for more than 1 second.

To turn **Service In** OFF, go to User Settings.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the Move/Reset button **B** and scroll to Service Interval. Press the Mode/Select button **A** to enter
- Press the Move/Reset button **B** and toggle to ON, then press the Move/Select button **A**. Then press the Move/Reset button **B** to scroll and select the desired miles or months for your next service
- Press the Mode/Select button **A** to enter

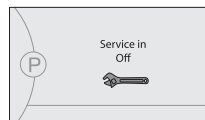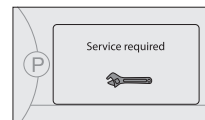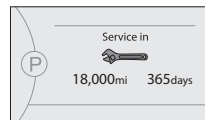

(Instrument cluster LCD screen shown)

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



www.youtube.com/KiaFeatureVideos

LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

 
 
Drive Mode Integrated Control System*

The Drive Mode may be selected based on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The instrument cluster will display SPORT or ECO when selected. When in NORMAL mode, it will not display in the instrument cluster.

REMINDERS:

- The system is turned ON and in NORMAL mode when ignition is in the ON position
- When ECO mode is selected, the indicator will display and system remains on, even when ignition is cycled. Otherwise the system will default to NORMAL.
- Steering effort may be slightly increased in Sport mode

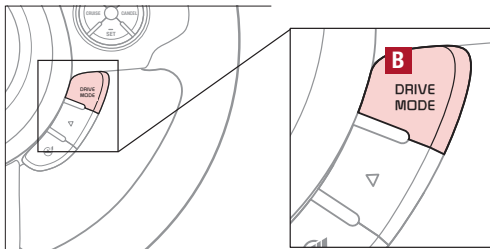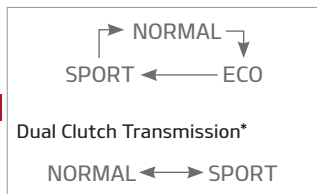

(Button located on Steering Wheel)

ECO Mode (Active ECO)*

Active ECO helps improve fuel economy by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **A**. The green ECO indicator light **B** in the instrument cluster will illuminate, indicating that Active ECO is operating.

 
The Active ECO System will remain on even when the ignition is cycled.

To turn Active ECO OFF, press the button **A** again.


QUICK TIPS

To help improve your fuel efficiency:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

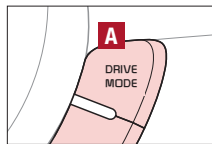

 (For Type B cluster; Button located on Steering Wheel)

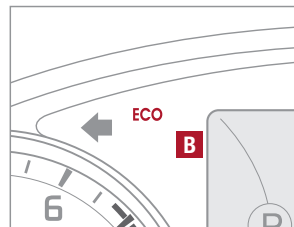

(Type B cluster)

QR CODE

Drive Mode Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details

Lane Departure Warning System (LDWS)*

 
With the Engine Start/Stop button in the ON position, press the LDWS button **A** (shown on previous page) to turn system ON. The instrument cluster indicator  will illuminate white.

If the LDWS detects that you are veering outside of your lane, the system may issue a warning on the LCD screen and an alert may sound, under these conditions:


- The vehicle exceeds approximately 40 mph
- The LDWS system recognizes the lane the vehicle is traveling in

If LDWS button is ON/OFF and ignition is cycled, the system returns to its previous state.


REMEMBER: LDWS will not issue a warning if the turn signal or hazard lights are activated.

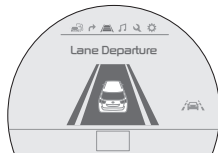

 
When the LDWS sensor detects the lane traveling in, the lane is illuminated

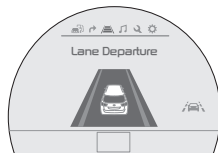

 When the LDWS sensor does not detect the lane traveling in the lanes is not illuminated

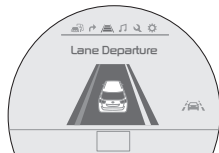

 When the LDWS sensor detects the vehicle veering outside of the lane traveling in, the lane the vehicle's crossing will blink (shown in both images above)

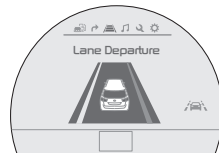

Autonomous Emergency Braking (AEB) / Forward Collision Warning (FCW)*

The AEB and FCWS help to alert the driver when rapidly approaching a vehicle that is slowing down, braking or stopped. A warning message will appear on the LCD screen and a chime will sound.

The FCWS will become active when the vehicle is traveling more than 10 mph. The AEB will become active when the vehicle is traveling more than 6 mph.

Select alert settings (Early, Normal, Late) in the User Settings in the instrument cluster LCD display. To turn the AEB/FCWS off, go to User Settings in the LCD Instrument Cluster modes.



The Autonomous Emergency Braking (AEB) / Forward Collision Warning (FCW)* are not substitutes for safe and proper driving. Always drive safely and use caution. The FCWS will be activated by default when the ignition is cycled ON, even when previous setting to OFF.

QR CODE

Lane Departure Warning System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMEMINDERS:

- The FCWS and AEB will be activated by default when vehicle power is cycled on, even when previous setting is off
- The FCWS will not operate when the vehicle is traveling more than approximately 50 mph

Blind Spot Detection (BSD) System*

The BSD system uses radar sensors to help alert the driver before changing lanes. The light on the BSD button **A** will illuminate when turned ON. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than 20 mph and will alert the driver if another vehicle is detected by the radar sensor, up to 230 feet away.

Blind Spot Detection (BSD)* / Lane Change Assist (LCA)*

1st-stage alert: When another vehicle is detected within the BSD System boundary **B**, or when a vehicle is detected within the LCA boundary approaches at a high speed, a yellow indicator will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

 
 
 
RCTA (Rear Cross Traffic Alert)

If the RCTA system sensors detect approaching vehicles from the left or right side **C**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, with these conditions:

- When the gear shift is in Reverse
- When the vehicle is moving less than 6 mph

REMINDERS:

- When the BSD is ON and the vehicle power is cycled to OFF then ON again, the BSD system returns to ON
- The RCTA feature can be turned OFF/ON in User Settings
- The FCWS will not operate when the vehicle is traveling more than approximately 50 mph

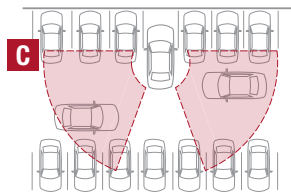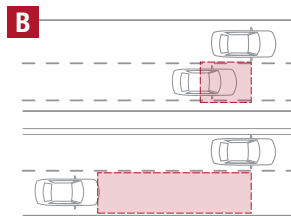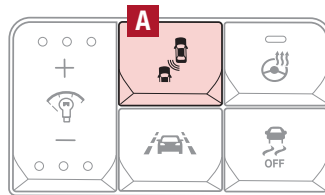

The above images are for illustration purposes only and may not reflect actual operation.

QR CODE

Blind Spot Detection w/ RCTA Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

For more information on the BSD System, refer to your Owner's Manual.

 
Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC button **A** to turn ESC OFF/ON.

REMEMINDERS:

- ESC is turned ON by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active

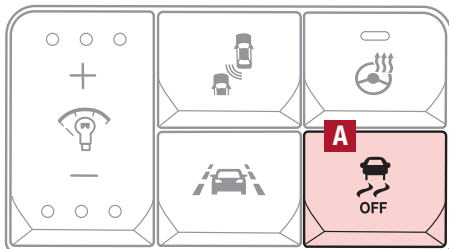

(Buttons located on left side of Driver's Panel)

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON, but does NOT activate when the ESC has malfunctioned.

REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

QUICK TIPS

 
- HAC provides a 2-second delay before the vehicle may start rolling backwards
- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator

Instrument Panel Dimmer

With parking lights / headlights ON, press switch **A** + or – to adjust display brightness of the instrument panel illumination.


REMININDERS:

- Door Mood Lamp is a fixed brightness and cannot be adjusted (not to be confused with Advanced Mood Lighting Speaker)
- The Instrument Panel Dimmer does not adjust brightness on the audio/navigation system* screens; use the SETUP modes to adjust brightness on the screen.

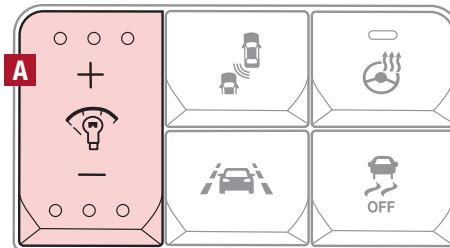

(Buttons located on left side of Driver's Panel)

 Power Windows, Window Lock & Central Door Lock

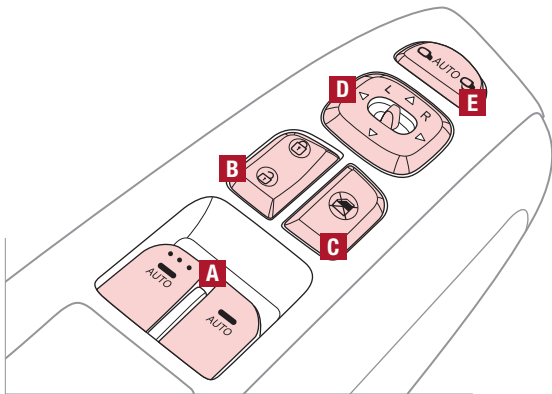

A Pull/Press to operate Driver's and Front Passenger's window Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows

REMINDER: When button **C** is pressed, window controls for the Rear Passenger Windows are disabled.

Button configuration may vary depending on vehicle model.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved in to or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Power Folding Outside Mirrors*

Toggle switch **D** left or right to select mirror. Then press arrows to adjust mirror position.

Toggle button **E** left/right to unfold/fold the outside rearview mirrors.

Toggle button **E** to center to automatically fold/unfold mirrors when:

- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed

REMINDEERS:

- To automatically fold mirrors when exiting vehicle, press the LOCK button on the Smart Key
- To lock position of mirrors, toggle the L/R mirror switch to the neutral (center) position

QUICK TIP

- The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle and the switch is in the AUTO position

Heated Outside Mirrors*

Mirror heaters controlled with Rear Defroster.

Engine Start/Stop Button*

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park) (light **B** will turn green)

To turn the engine OFF – Press the ENGINE START/STOP button again.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or inside the vehicle.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press

QUICK TIPS

To use electrical accessories:

 
ACC position

- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light **A**)

On position

- When already in the ACC position (amber light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (reddish-orange light **B**)
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (reddish-orange light **B**)

Keeping the vehicle in ACC or the ON position without engine running may discharge the vehicle's battery.

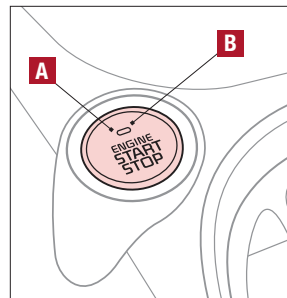

(Button located above Gear Shift)

QR CODE

Engine Stop/Start Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, push down the lock-release lever **A** and adjust to desired angle **B** and distance **C**.

When finished, pull up the lock-release lever **A** to lock Steering Wheel in place.

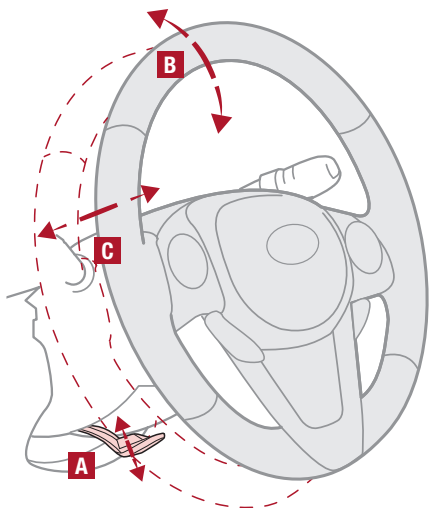


QUICK TIPS

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle..

Heated Steering Wheel Button*

 Press button **D** to turn ON/OFF steering wheel heater, while the Engine Start/Stop Button is in the ON position. Steering wheel heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

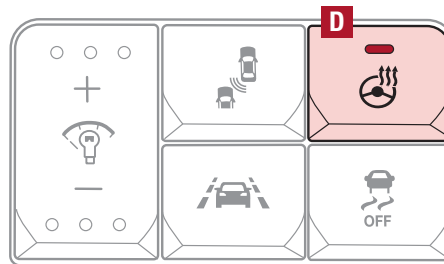

(Buttons located on left side of Driver's Panel)

QUICK TIP

 
If ignition is turned OFF, then ON again, within 30 minutes of steering wheel heater being turned on, system will automatically be set ON again.

Headlights & High Beams

To operate:

- Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

AUTO Light* function — When the light switch is in the AUTO light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

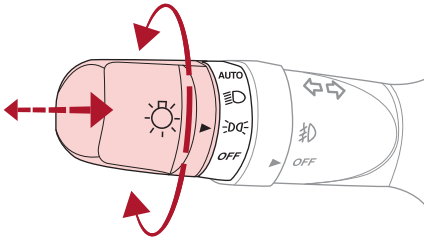

- AUTO* Automatic Headlights position
- ☰ Headlight position
- ☰ Parking Light position
- OFF OFF position

Turn Signals & Fog Lights*

 
To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate lever ring to turn Fog Lights ON/OFF

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode* in the LCD Instrument Cluster modes (Type B cluster).

REMINDER: Headlights must be ON for Fog Light operation

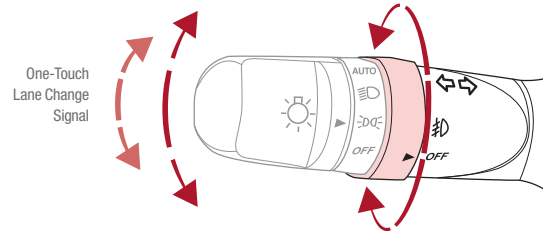


For more information on the User Settings Mode, please refer to your Owner's Manual.

Windshield Wipers & Washers

To operate:

 - Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

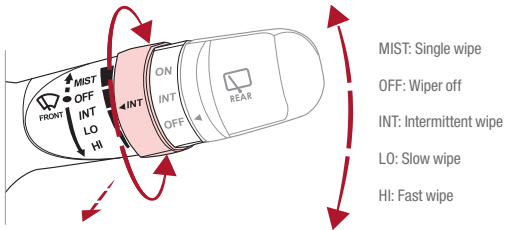


QUICK TIPS

- Rotating INT switch up increases Intermittent wipe frequency and wipe speed. Rotating INT switch down decreases frequency of wipes.
- Set the wiper to OFF position when the wiper is not in use

Rear Wiper & Washer*

To operate:

 - Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

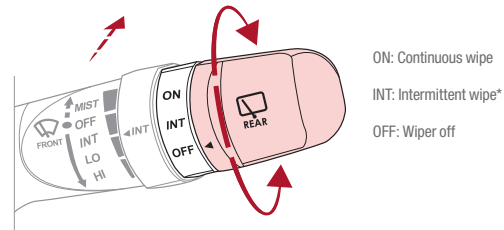


QUICK TIP

On Rear Wipers, intermittent wipe function is not adjustable.

Audio Controls

 Cruise Control*

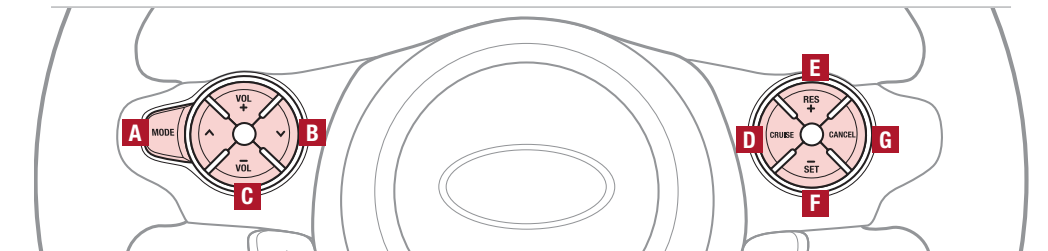

- A Audio MODE button:** Press to cycle through FM/AM/SiriusXM®/Media modes
Audio System ON/OFF: Press and hold to turn power on; Press to turn power off

- B Seek/Presets buttons**
FM/AM/SiriusXM® Modes: Press \wedge \vee to advance through Preset Stations. Press and hold to Auto Seek
Media Mode: Press to move track up/down. Press & hold to fast forward/rewind

- C Volume buttons:** Press VOL^+ / VOL^- to raise/lower volume
Mute audio: To mute the audio system, hold the VOL^- button volume **C**

QUICK TIP

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

- D CRUISE Control On/Off button:** Press to turn the Cruise Control on/off
E Resume Cruising Speed button: Press to resume or increase Cruising Speed
F SET Cruising Speed button: Press to set or decrease Cruising Speed
G Cruise Control CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

 
QUICK TIPS

- Cruise Control is designed to function above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

REMINDER: Standard Cruise Control is a part of the Smart Cruise Control (SCC)* and can be set as the operating mode. To switch from SCC to Standard Cruise Control, press and hold the CRUISE button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details. For other audio system operations, refer to pages 20-23.

Bluetooth® Wireless Technology

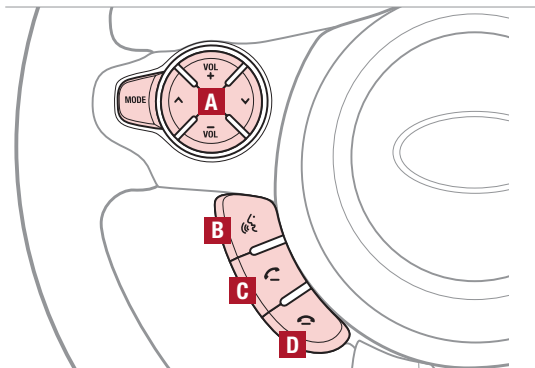

A Volume button: Press up/down to raise/lower speaker volume

Mute audio: To mute the audio system, hold the **vol -** button volume

B Voice button: (Standard Audio System, with iPhone only): Press to activate Siri. Press and hold to cancel Siri

Talk button: (UVO eServices): Press to activate voice recognition

C Call button: (Standard Audio System): Press the button to display the Dial Number screen. Press again to display the most recently made call number. Press a third time to initiate making the call to the number displayed

Receive/Place Call button: (UVO eServices): Press to receive/place/answer calls. In vehicles with navigation, if no phone is paired, press button to pair a phone

D End Call button: (Standard Audio System): Press to end a call or reject an incoming call
End Call button (UVO eServices): Press to end a call or cancel a function

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Standard Audio Systems* – See your Owner's Manual for more details.

UVO eServices* and UVO eServices with Premium Navigation* – For more information, refer to the Car Multimedia System User's Manual.

For Bluetooth® Wireless Technology FAQs, go to kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

QUICK TIPS

- To use Siri with the Standard Audio System, pair and connect your iPhone to the Bluetooth® Wireless Technology system
- When using the voice command feature, wait for the system BEEP before speaking the command.
- Phonebook transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

REMINDER: Microphone is located in the overhead console

Bluetooth® Wireless Technology (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future *Bluetooth®* connection requests.

How to Place a Call

Below are methods for placing a call using the Steering Wheel controls:

Standard Audio System*

- Option 1: Press the Talk button **B** to activate Siri* (iPhone only)
- Option 2: Press the Call button **C** to display the dial number screen. Press again to display the most recently made call number. Press a third time to initiate making the call to the number displayed

UVO eServices / UVO eServices with Premium Navigation*

When using the voice command feature, waiting for the system BEEP before speaking the command.

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or Dial {number} followed by contact name or number

Voice Recognition* and Phone Contact Tips (UVO eServices / UVO eServices with Premium Navigation)

To help optimize the Bluetooth® Wireless Technology Voice Recognition system, below are some tips and reminders. Improve the performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

The system may have difficulty understanding some accents or uncommon names. Below are other tips to optimize using the voice recognition.

QUICK TIPS

- To use Siri with the Standard Audio System, Type B, pair and connect your iPhone to the *Bluetooth®* Wireless Technology system
- *Bluetooth®* Music Streaming – If the *Bluetooth®* music is inaudible or too low, turn up the volume on the connected phone.
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too soft or too loud
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, eather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Smart Cruise Control (SCC)*

The Smart Cruise Control (SCC)* system allows you to set the vehicle to maintain a speed so long as it is not limited by traffic. When traffic is encountered, the vehicle will be slowed to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

 
 
To set/adjust the SCC speed:

- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed and press the RES+ / SET- buttons **B**

To set the vehicle-to-vehicle distance, press the SCC button **C** on the steering wheel. The images on the LCD screen **D** and the Instrument Cluster **E** will change when scrolling through the settings. Each time the button is pressed, the vehicle-to-vehicle distance changes.

To cancel SCC operation: Press the CANCEL button **G**. The LCD screen will display a message that the SCC operation is canceled **H**.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

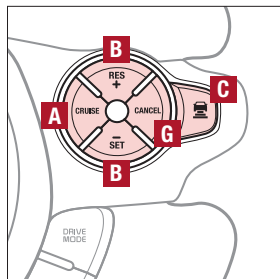

(Vehicle-to-vehicle distance settings; may vary per vehicle)

QR CODE

Smart Cruise Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
 
QUICK TIPS

To change the Cruise Control mode from SCC to standard Cruise Control, press and hold button **A**. Repeat to switch modes again (The SCC system must not be activated to change modes).

For the SCC System to operate:

- When no vehicle is in front, you must be travelling at a minimum speed of 19 mph
- When following a vehicle, there is no minimum speed requirement

When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle in front. It will even bring the vehicle to a complete stop if necessary.

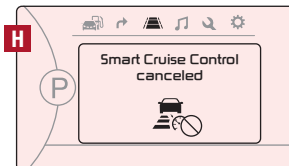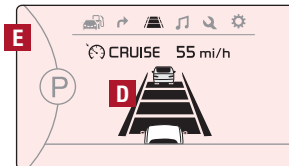


REMINDERS:

- Cruise Control button must be ON in order to turn SCC ON/OFF
- SCC system is activated when ignition is turned on. Speed will need to be reset when ignition is cycled on
- The distance settings are approximations and may vary depending on factory settings at the time. See owner's manual for more information
- In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not apply brakes to slow down automatically in order to turn SCC ON/OFF
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive) and various other conditions. See owner's manual for other conditions.

Standard Audio System*

 – FM/AM/SiriusXM®/Media (USB, iPod®, Aux, Bluetooth® Audio, My Music)

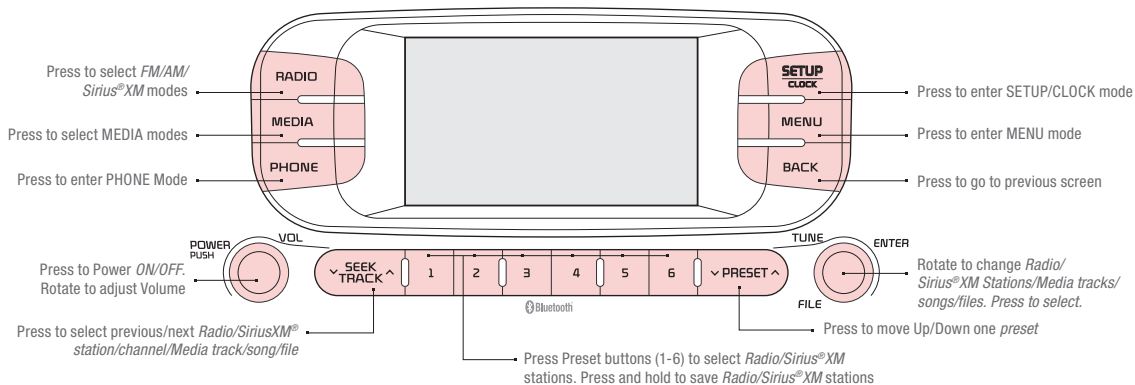

QR CODE

Standard Audio System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Audio System Set-up Options

Press the SETUP button, then use the TUNE knob to cycle through the available menu for each equipped audio option. Press the TUNE knob to adjust the audio option selected. Audio options may include the following:

- **Display settings** - Mode, Illumination, Screen Saver
- **Sound settings** - Position, Tone, Speed Dependent Volume
- **Date/Time settings** - Set Time, Time Format
- **Bluetooth® settings** – Connections, Auto Connection Priority, Download Contacts, Bluetooth® Voice Prompts
- **System settings** - Memory Information, Language, Default, System Information
- **Display Off setting** - Turn display on/off

To adjust the Sound settings (position, tone, speed dependent

volume) – Select SOUND in the SETUP menu. Then use the TUNE knob to cycle to the selection and then press the TUNE knob to select. Turn the TUNE knob left/right to adjust sound setting.

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 22-24. See your Owner's Manual for more details.

UVO eServices / Android Auto™ / Apple CarPlay® Setup

UVO eServices Registration/Activation – To use UVO eServices:


1. On your Smartphone, go to an app store or marketplace to download the free Kia UVO eServices app.
2. Open the UVO eServices app and create an account by clicking on REGISTER. After entering your information and following the prompts to complete registration, go to your email and click on the confirmation link (You can also register an account by logging into MyUVO.com).
3. Follow the app's IN-CAR SETUP instructions to connect your smartphone and complete UVO eServices activation.

Android Auto™*

Setting up Android Auto™:


1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

How to start Android Auto™:

1. Press the SETUP key on your audio system's control panel.
2. Press the **Phone Projection** button , select Android Auto™ then select ENABLE ANDROID AUTO. Accept all terms, conditions and requests on the head unit and phone in order to use Android Auto.™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

 
Apple CarPlay®*

Setting up and starting Apple CarPlay®:

1. Connect the Apple CarPlay® compatible iPhone with the vehicle's USB port using the manufacture's cable provided with your iPhone.
2. On the audio control unit, press the SETUP key.
3. Press the **Phone Projection** button  on the screen and select Apple CarPlay®.
4. Select ENABLE APPLE CARPLAY. Accept all terms, conditions and requests on the head unit and phone in order to use Apple CarPlay®.
5. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps.

REMINDERS:


- Android Auto compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay compatibility requirements: Apple Lightning cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

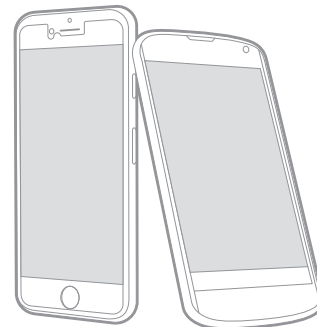


For further UVO eServices operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 21-24.

UVO eServices*

 – FM/AM/SiriusXM®/Media (USB, iPod®, Aux, Bluetooth® Audio, My Music)

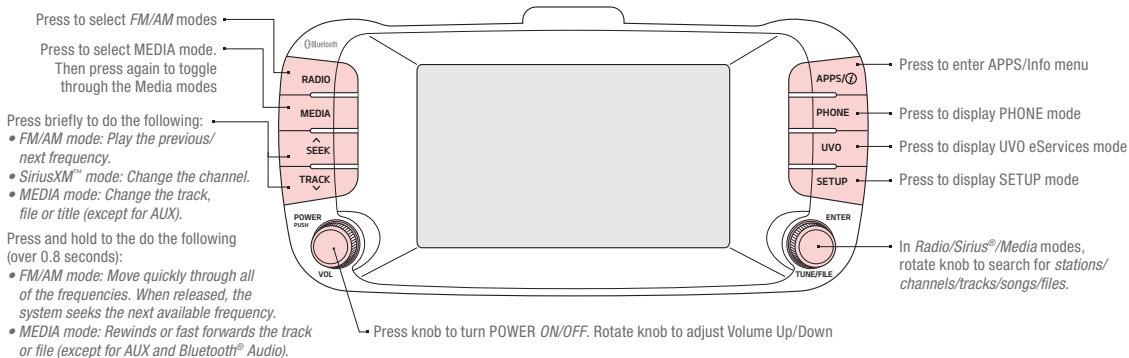

Sound Settings: To adjust the audio control unit sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Tone, Advanced, Default)
4. Use the onscreen buttons to adjust settings
5. Press the return button  to save settings

Radio Presets: You can listen to FM, AM and SiriusXM radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM Smart Favorites: For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QUICK TIPS

- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones.
- When using the voice command feature, wait for the system BEEP before speaking the command
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the Steering Wheel
- Prolonged use of the UVO eServices System in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO eServices should be operated when the engine is running to prevent battery discharge

Your vehicle's audio system may differ from that in the illustration. For further UVO eServices operations, refer to the UVO System User's Manual. For other audio system operations, refer to pages 21-24.

QR CODE

UVO eServices System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

UVO eServices with Premium Navigation*

– FM/AM/SiriusXM®/Media (Aux, USB, iPod®, Bluetooth® Audio)

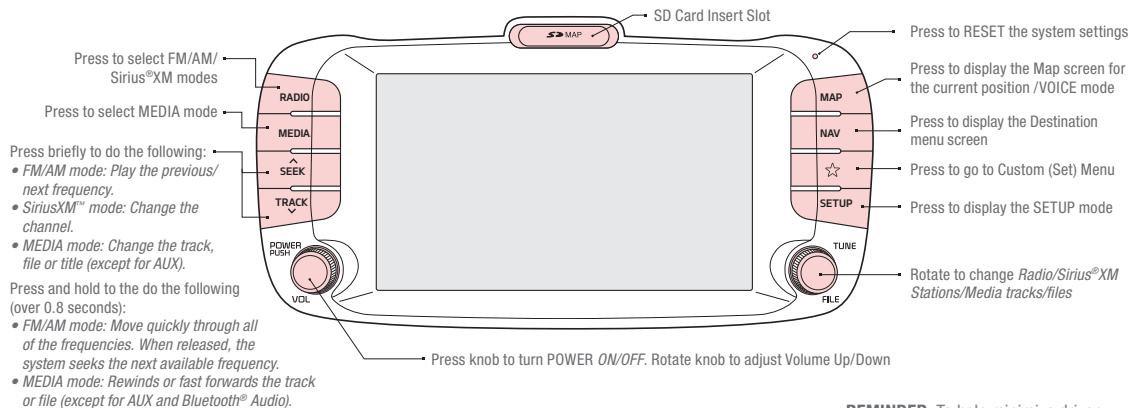

Sound Settings: To adjust the audio control unit's sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Tone, Advanced, Default, Beep)
4. Use the onscreen buttons to adjust settings; press the return button \Rightarrow to save settings

Radio Presets: You can listen to FM, AM and SiriusXM radio and save frequently used stations.

To Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM Smart Favorites: For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom button ☆ – A programmable key to provide quick access to one of several available system features.

To Program the Custom Key: Press the SETUP key, then press the Custom button ☆. Select one of the available features you would like the Custom button to open.

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- At any time, you can interrupt the Command Feedback by pressing the TALK button on the Steering Wheel
- Prolonged use of the UVO eServices with Premium Navigation in ACC mode may drain the vehicle's battery.
- A warning screen may appear periodically to remind users that the UVO eServices System should be operated when the engine is running to prevent battery discharge

Your vehicle's audio system may differ from that in the illustration. For more information, refer to the Car Multimedia System User's Manual. For other audio system operations, refer to pages 21–23.

QR CODE

UVO eServices with Premium Navigation Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Advanced (Mood) Lighting Speaker*

 
The Advanced (Mood) Lighting Speaker that lights around the front speaker is controlled by turning the knob and pressing the buttons (located to the left of the steering wheel).

MOOD: Light intensity and color changes automatically at regular intervals.

MUSIC: Speaker light pulses and changes intensity according to the audio sound (audio must be on for this feature to work).

OFF: Speaker light turns OFF.

+/- : When light is ON, press illumination buttons to adjust light intensity.

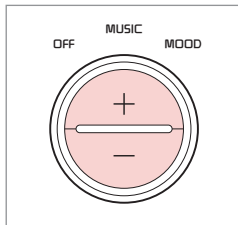

(Knob located on left side of Driver's Panel)

QUICK TIPS

- Door must be closed for this feature to work
- Prolonged use of lighting speaker in ACC mode may drain the vehicle's battery

Aux/USB/iPod® Port & Power Outlets

Use the Aux port to connect audio devices and the USB port to connect USB audio devices, smartphones and iPod® devices. Two USB chargers* are located in the center console.

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

REMINDERS:

- For the Tire Mobility Kit, only use the **12V/15A/180W** Power Outlet, located on the right side of the outlet/aux. port area.
- Use manufacturer cables only that came with your device. Third party cables may cause damage to device

Digital Clock

UVO eServices* / UVO eServices with Premium* Clock Setup:

 
Press the SETUP key, then the CLOCK button to display the Clock Settings screen. Then use the on-screen buttons to navigate through setup and return \Rightarrow to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly.
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO eServices with Premium Navigation*).

Standard Audio System* Clock Setup*:

4. Press the SETUP key to enter clock settings
5. Press DATE/TIME to enter settings
6. Use the touchscreen buttons to adjust the time




(Ports and power outlets located on lower part of Center Panel)

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

Automatic Climate Control*

 (Type B)

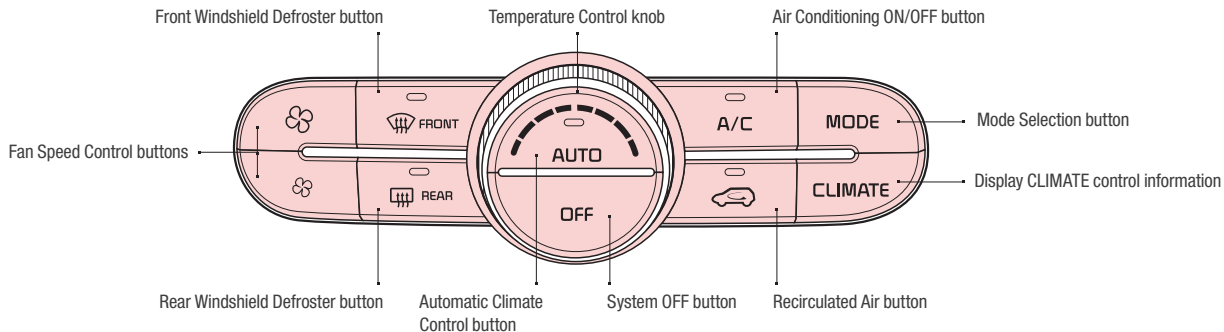

Air Flow Modes

To select Air Flow Modes, press the mode selection buttons:

-  Face-Level
-  Face/Floor-Level
-  Floor-Level
-  Floor/Defrost-Level

Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected

2. Set desired Temperature


Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature to Hot**
3. Press the **Defrost button** 

Defog Inside Windshield:

1. Set desired **Fan Speed**
2. Set desired **Temperature**
3. Press the **Defrost button** 

QUICK TIPS

 
- Keep inside glass as clean as possible to reduce window fogging
- Defrost mode  activates A/C and opens Fresh Air Vent
- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically engage at any time to reach desired temperature and reduce humidity

REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display

Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details

Manual Climate Control*

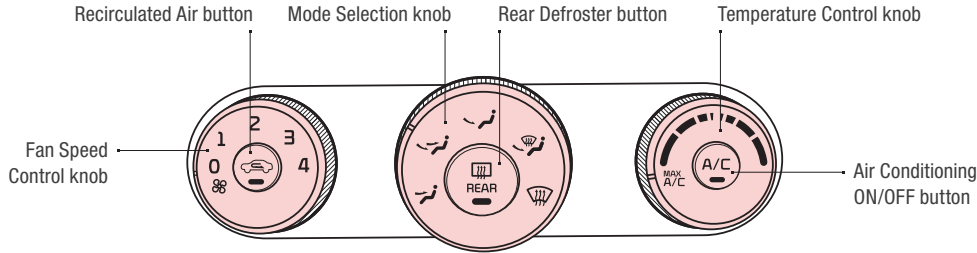

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Rotate knob to the **Front Defroster** mode

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Rotate knob to the **Front Defroster** mode

QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

- Face-Level
- Face/Floor-Level
- Floor-Level
- Floor/Defrost-Level
- Defrost-Level

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details

Automatic Gear Shift with Sportmatic® Shifting*

P: Park

R: Reverse

N: Neutral

D: Drive

[+]: Sport Mode Upshift

[-]: Sport Mode Downshift

 
Sport Mode:

To enter Sport mode, move shift lever from D to left gate

To shift while in Sport mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

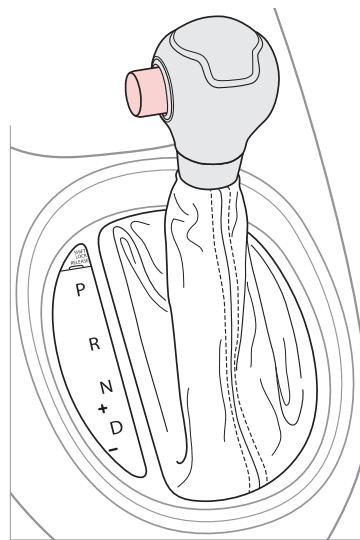

QR CODE

Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

Dual Clutch Transmission*

Some Kia vehicles are equipped with Dual Clutch Transmission (DCT) for both automatic and manual transmissions.

The following are unique driving tips of the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from stand still during aggressive acceleration maneuvers

If the clutch is over-heating an amber-colored warning light  will be displayed in the instrument cluster. **Should this condition occur, pull over and place the vehicle in Park and idle the engine.**

Refer to the Owner's Manual for additional information on DCT operation or call Kia Consumer Affairs for additional information.

 
 
 
 
 
Manual Gear Shift*

Starting the Engine

1. Pull up to apply Parking Brake **A**
2. Fully depress Clutch and Brake Pedals to floor **B**
3. Shift into Neutral **C**
4. Turn Ignition to START

Shifting into Reverse

1. Fully depress Clutch and Brake Pedals to floor **B**
2. Shift into Neutral **C**
3. Pull up on Shift Lever Ring **D**
4. Shift into Reverse **E**

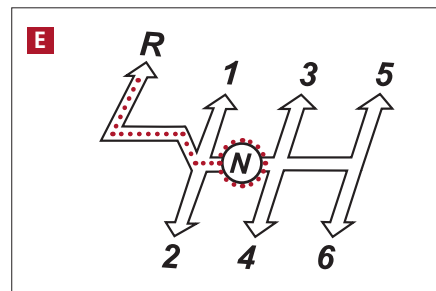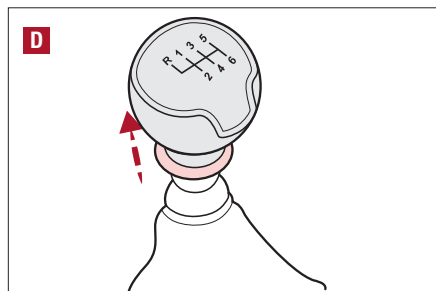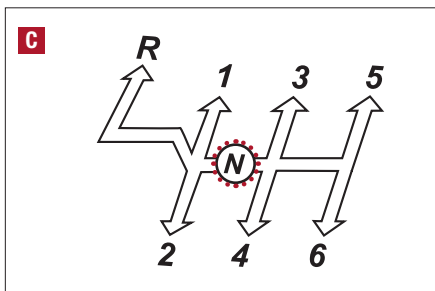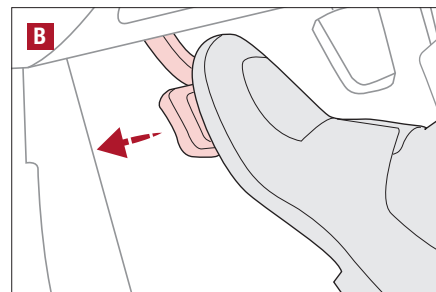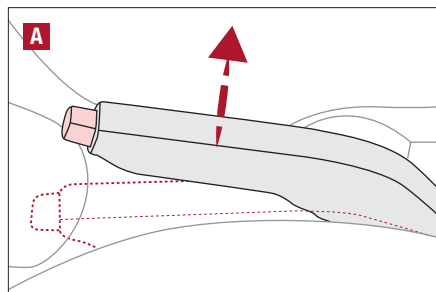


QUICK TIP

When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever Ring.

Seat Warmers*

 Press button once for high setting (2 LEDs lit). Press button twice for low setting (1 LED lit). Press again to turn OFF.

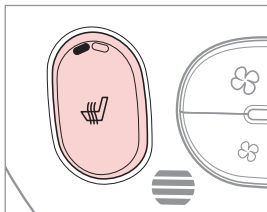


(Type A; Button located on Center Panel)

Seat Warmers / Ventilated Seats*

Seat Warmers – Press top of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

 Ventilated Seats – Press bottom of button once for high setting (3 LEDs lit). Press twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

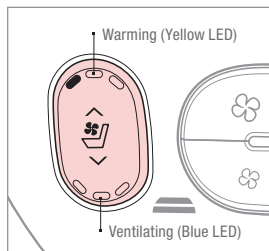


(Button located on Center Panel)

QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature


Power Adjustable Driver's Seat*

 Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar forward/backward.

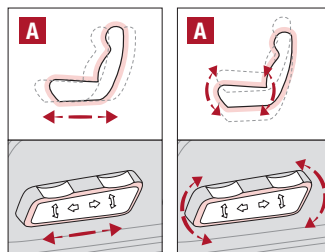

Seat

 Seat Cushion

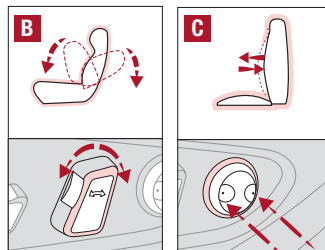

Seatback

Lumbar

QR CODE

 
Heated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

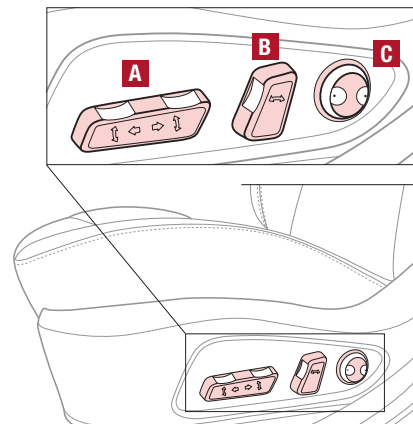


6-Way Manual Adjustable Driver's Seat*

Pull lever **A** to slide Seat forward/backward.

Pull/press lever **B** to adjust Seat Height.

 Pull lever **C** to adjust Seatback Recline.

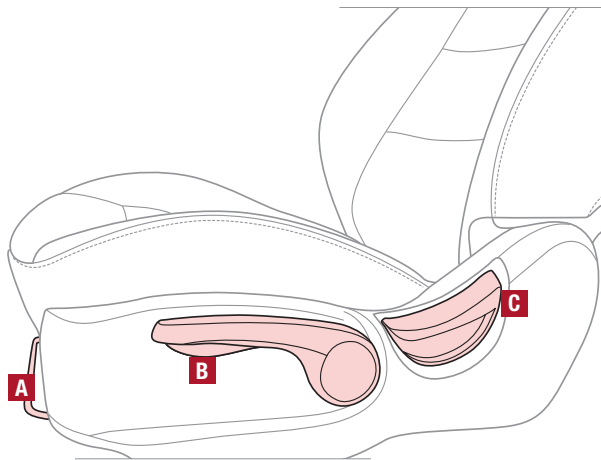


QUICK TIPS

- When adjusting seat forward or backwards, ensure seat clicks or locks into place before driving the vehicle.
- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

Front Seat Headrest Adjustment

To raise headrest: Pull headrest up.

 To lower headrest: Press lock release, then press the headrest down.

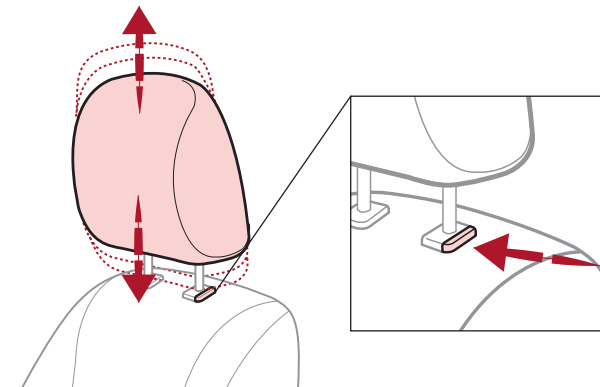

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

Folding Rear Seatback

To Fold:

1. Adjust the Front Seatback to the upright position and/or slide the Front Seat forward
2. Insert the rear seat belt buckle into the pocket* between the Rear Seatback and Seat Cushion. Insert the rear seat belt strap into the guide on the side panel next to the Seatback.
3. Lower the Rear Headrests to the lowest position
4. Pull on the Rear Seatback folding lever **A**, then fold the seat towards the front

 
REMINDER: Always make sure the Seatback is locked in place when unfolded.

To Unfold:

1. Lift and pull the Seatback backward by pulling on the folding lever **A**. Pull the Seatback firmly until it clicks and is locked into place
2. Return the rear seat belt to the proper position

QUICK TIP

It may be necessary to remove the headrests and/or adjust the front seatbacks to fully lower rear seats

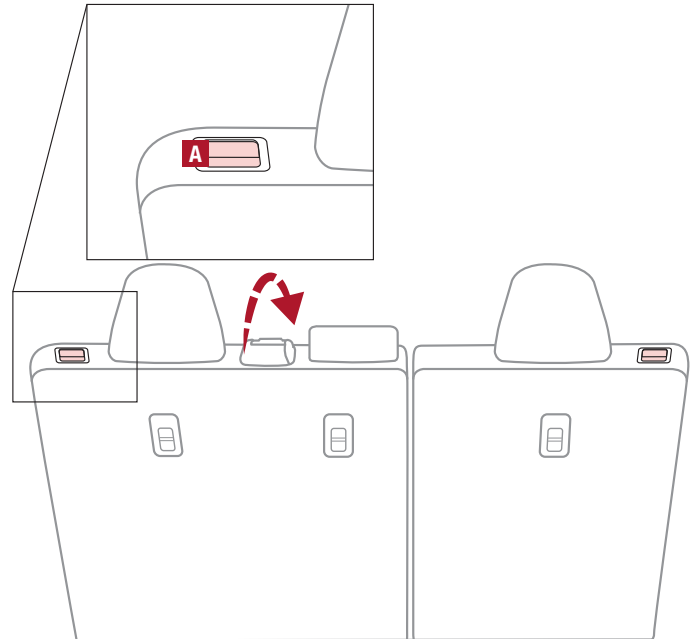

Smart Key*

Smart Key Fob:

- A** Press to lock All Doors; Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate.

REMINDER: The Liftgate unlocks when the Smart Key fob is within close proximity of the rear liftgate.

- D** Press and hold more than 1 second for Panic Alarm.
To turn off Alarm, press any button
- E** Press to release Mechanical Key (button located on back of Smart Key)

REMINDER: If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

Driver's Door Lock/Unlock button **F**:

 
- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

Mechanical Key **G**:

- Use to lock/unlock driver's door (only)
- Use to turn Child-Protector Rear Door Lock

REMINDER: Remote button configuration may vary depending on vehicle options.

For more information on the Mechanical Key, please refer to your Owner's Manual.

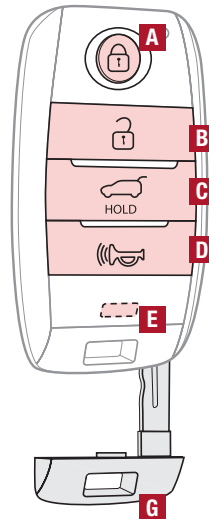

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Smart Key's signal can be blocked by the normal operation of a cell or smart phone. To help prevent this, store each device separately.

Remote Keyless Entry*

- A** Press the release button to unfold the key
- B** Press to Lock All Doors
- C** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Liftgate
- D** Press and hold for more than 1 second to unlock Liftgate and manually open
- E** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

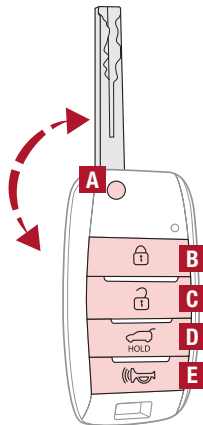

REMINDERS:

 
- The Liftgate does not automatically open when the button **D** is pressed
- The Liftgate unlocks when the Smart Key fob is within close proximity of the rear liftgate
- Remote button configuration may vary depending on vehicle options

Double-Turn Lock / Unlock All

- Turn counterclockwise once to unlock Driver's Door
- Turn counterclockwise again within 4 seconds to unlock All Doors
- Turn clockwise once to Lock All Doors


Fuel Cap Open Warning Indicator*

Tighten for ONE CLICK to prevent Fuel Cap Open Warning Indicator or from illuminating.

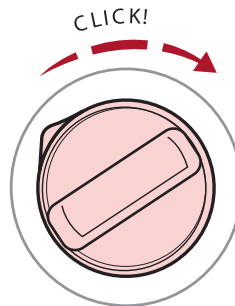

REMINDERS:

 - The Fuel Door Release Lever is located on the lower part of the driver's door sill
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back.

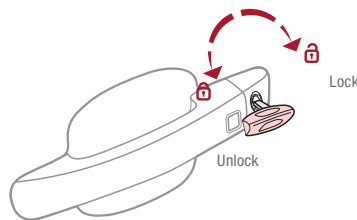

(Driver's door only)

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Map/Room Lamps

Push the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or personal lamp for the driver or front passenger.

When the DOOR button **B** is pressed, the Map Lamp turns ON when any door is opened.

 
When the ROOM button **C** is pressed, the Map and Room Lamps turn ON.

Room Lamp


When the Room Lamp button **D** is pressed, the lamp turns ON.

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine System Start/Stop button* is OFF.

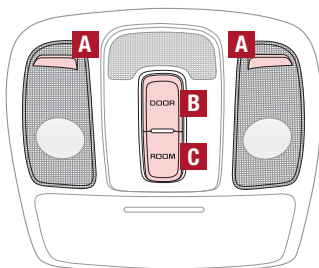

(Type A)

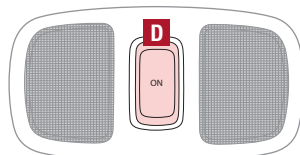 


(Type A)

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunvisor

 Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

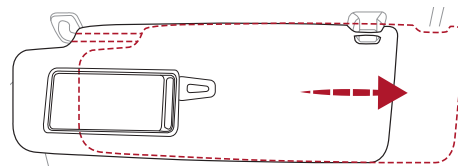

REMINDERS:

- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly. Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows.

Panoramic Sunroof Operation*

The sunroof and sunshade operation is controlled through a multi-directional button/lever **A**. The ignition needs to be in the ON position to operate the Sunroof and Sunshade.

To slide the Sunshade and Sunroof:

 
- Open automatically: Slide the lever **A** backward to the farthest position (second detent)
- Close automatically: Slide the lever **A** forward to the farthest position (second detent)

Tilt the Sunroof:

- Raise: Push lever **A** upward again
- Lower: Push lever **A** upward again
- Auto Close: Slide the lever **A** forward

REMINDERS:

- If open, the Sunroof will also close when the toggle button is pressed
- Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving

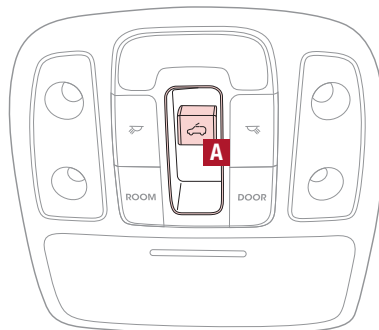


QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the sunroof control lever in any direction (one detent).

Sunroof Open Warning*

If the Sunroof is not fully closed, the warning will chime and display on the LCD screen* **C** when:

 - The ignition is turned off (Smart Key*)
- The ignition key is removed
- The driver's door is opened

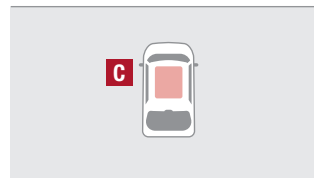


Rear-Camera Display*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Standard Audio System*, UVO eServices* and the UVO eServices with Premium Navigation* screens while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

 1. Engine Start/Stop button* is in the ON position (green light)
2. Gear Shift Lever is in the R (Reverse) position

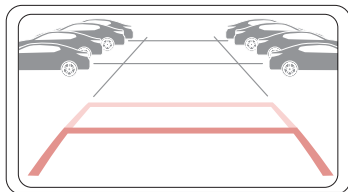


(Rear-Camera Display)

REMINDERS:

- While camera is active, only the volume controls on the audio system can be operated
- Standard Audio System / UVO eServices System – While camera is active, only the volume controls on the Audio System can be operated
- UVO eServices with Premium Navigation System — While camera is active, only the Audio System can be operated on the Steering Wheel and Audio Control Unit. Navigation features are disabled


 
The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

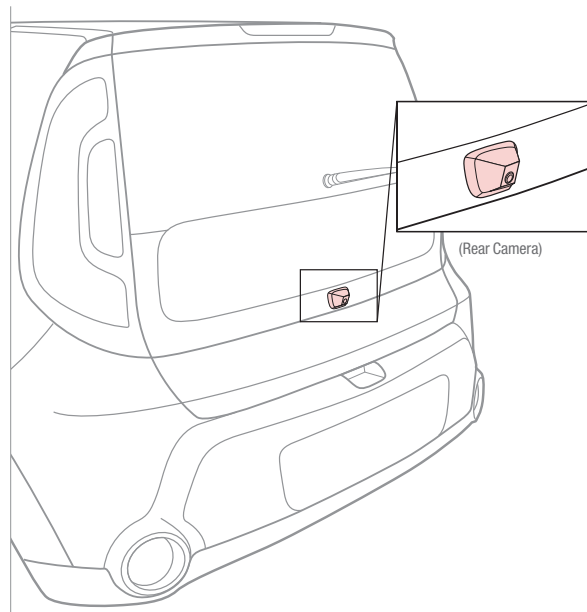

Hood Release Lever and Latch

Opening the Hood:

  1. Located on the bottom left of the driver's panel, pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** up inside of the Hood's center and lift the Hood

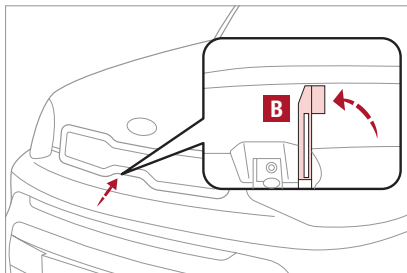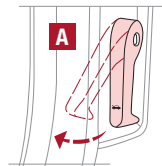

Closing the Hood:

 
Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMEMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

Fuel Door Release Lever

Lift the **C** lever upwards to release the fuel door.



(Lever located on the driver's floor near door sill)

 
Tire Mobility Kit

The Tire Mobility Kit may temporarily seal certain types of tire damage.

For operational information, please refer to section 6 of your Owner's Manual.

A Sealant Bottle

B Compressor

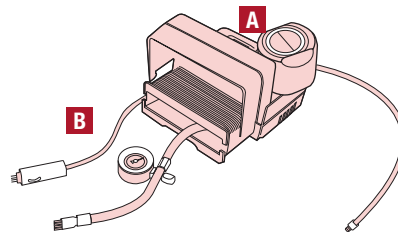

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/ inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if a tire is damaged beyond repair

QR CODE

Tire Mobility Kit Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

REMEMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet/ aux port area
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for no longer than a maximum distance of 120 miles

Liftgate Release Button

With Liftgate unlocked, press the Liftgate Release button **A** and pull the Liftgate lid up by the handle to open.

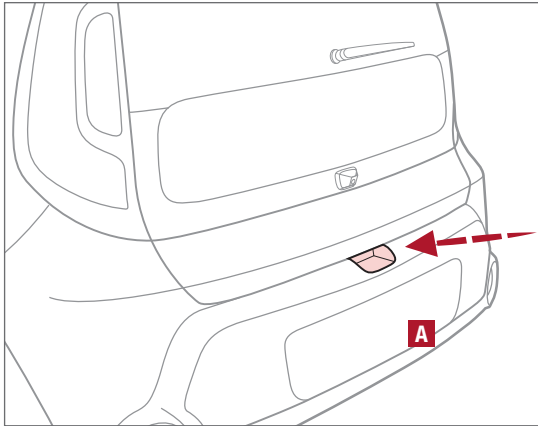


(Button is located underneath the Liftgate lid)

QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The Liftgate unlocks automatically and then can be opened manually when the Smart Key* is within close proximity to the vehicle

Child-Protector Rear Door Lock

 Located on the rear edge of the rear passenger doors, adjust switch **A** to the LOCK position to disable the inner door handles from opening the rear doors.

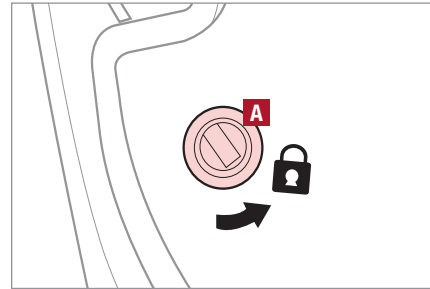

REMINDER: Child-Protector Rear Door Lock is located on rear passenger door jamb.

Seat Belts

 
To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

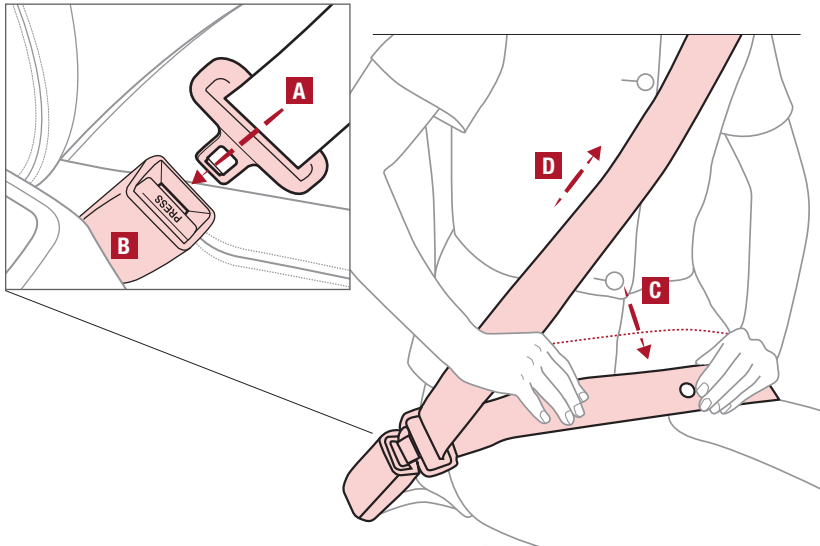

Occupant Detection System (ODS) / PASSENGER AIRBAG OFF Indicator

ODS detects the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate.



Seat Belt Retractor Locks

- Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort
- During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury

Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

7,500 miles

PERFORM

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Engine oil and filter (1.6L/2.0L, every 7,500 miles; 1.6L Turbo-GDI, every 6,500 miles)

INSPECT*

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and pads**
- Drive shaft and boots
- Drum brake and linings**
- Fuel lines, hoses and connections
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel tank, cap, lines and hoses
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

2. Inspect "Water Pump" when replacing the drive belt or timing belt.

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO eServices only - See page 22 for setup information)

15,000 miles

PERFORM

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Climate control air filter**
- Engine oil and filter (1.6L/2.0L, every 7,500 miles; 1.6L Turbo-GDI, every 6,500 miles)

INSPECT*

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and pads**
- Drive shaft and boots
- Drum brake and linings**
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel lines, hoses and connections
- Fuel tank, cap, lines and hoses
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

2. Inspect "Water Pump" when replacing the drive belt or timing belt.

22,500 miles**PERFORM**

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Engine oil and filter (1.6L/2.0L, every 7,500 miles; 1.6L Turbo-GDI, every 6,500 miles)

INSPECT*

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and pads**
- Drive shaft and boots
- Drum brake and linings**
- Fuel lines, hoses and connections
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel tank, cap, lines and hoses
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolt

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
2. Inspect "Water Pump" when replacing the drive belt or timing belt.

30,000 miles**PERFORM**

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Climate control air filter**
- Air cleaner filter
- Engine oil and filter (1.6L/2.0L, every 7,500 miles; 1.6L Turbo-GDI, every 6,500 miles)

INSPECT*

- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and pads**
- Drive shaft and boots
- Drum brake and linings**
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel Filter³
- Fuel lines, hoses and connections
- Fuel tank air filter³
- Fuel tank, cap, lines and hoses
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Lubricate all locks and hinges
- Manual transaxle fluid** (Every 37,500 miles)
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts
- Vapor hose and fuel filler cap

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
2. Inspect "Water Pump" when replacing the drive belt or timing belt.
3. Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

MAINTENANCE

37,500 miles

PERFORM

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Engine oil and filter (1.6L/2.0L, every 7,500 miles; 1.6L Turbo-GDI, every 6,500 miles)

INSPECT*

- Battery condition
- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance**
- Cooling system²
- Drive shaft and boots
- Brake fluid / clutch fluid**
- Fuel lines, hoses and connections
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Drum brake and linings**
- Disc brakes and pads**
- Exhaust pipe and muffler
- Front suspension ball joints
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Fuel tank, cap, lines and hoses
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

2. Inspect "Water Pump" when replacing the drive belt or timing belt.

45,000 miles

PERFORM

- Rotate tire - including tire pressure and tread wear
- Fuel additive¹

REPLACE

- Climate control air filter (For evaporator and blower unit)**
- Engine oil and filter (1.6L/2.0L, every 7,500 miles; 1.6L Turbo-GDI, every 6,500 miles)
- Spark plugs, iridium coated (1.6L Turbo-GDI)

INSPECT*

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and pads**
- Drive shaft and boots
- Drum brake and linings**
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel lines, hoses and connections
- Fuel tank, cap, lines and hoses
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

2. Inspect "Water Pump" when replacing the drive belt or timing belt.

52,500 miles**PERFORM**

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Engine oil and filter (Every 7,500 miles; 1.6L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- Air cleaner filter
- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and linings**
- Drive shaft and boots
- Drum brake and pads**
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel lines, hoses and connections
- Fuel tank, cap, lines and hoses
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

2. Inspect "Water Pump" when replacing the drive belt or timing belt.

60,000 miles**PERFORM**

- Rotate tire - including tire pressure and tread wear
- Add fuel additive¹

REPLACE

- Climate control air filter**
- Air cleaner filter
- Engine oil and filter (Every 7,500 miles; 1.6L Turbo-GDI – replace every 6,500 miles)

INSPECT*

- Air conditioning compressor, air conditioner refrigerant and performance**
- Battery condition
- Brake fluid / clutch fluid**
- Brake pedal and operation
- Chassis/body, nuts and bolts
- Cooling system²
- Disc brakes and pads**
- Drive belt⁴ (First, 60,000 miles, after every 15,000 miles)
- Drive shaft and boots
- Drum brake and linings**
- Exhaust pipe and muffler
- Front suspension ball joints
- Fuel filter³
- Fuel lines, fuel hoses and connections
- Fuel tank air filter³
- Fuel tank, cap, lines and hoses
- Intercooler, in/out hose, air intake hose (1.6L Turbo GDI)
- Lubricate all locks and hinges
- Parking brakes
- Steering operation and linkage
- Suspension mounting bolts
- Valve clearance (1.6L GDI)*⁵ (every 60,000 miles)
- Vapor hose and fuel filler cap

*And, if necessary, adjust, correct, clean or replace.**If equipped

1. If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

2. Inspect "Water Pump" when replacing the drive belt or timing belt.

3. Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

4. The drive belt should be replaced when cracks occur or tension is reduced excessively.

5. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Airbags: For maximum protection, always wear your seat belt.

Android Auto™: Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Apple CarPlay®: Apple CarPlay® a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Apps: All information contained herein was based upon the latest available information at the time of appstore registration. Descriptions are believed to be correct, and Kia makes every effort to ensure accuracy, however, accuracy cannot be guaranteed. From time to time, Kia may need to update or make changes to the vehicle features and other vehicle information reported in this app. Kia, by the publication and dissemination of this material, does not create any warranties, either express or implied, to any Kia products. Contact your local Kia dealer for the most current information.

Bluetooth® Wireless Technology: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

Driver Assist Features - Blind Spot Detection (BSD) with Lane Change Assist, Rear Cross Traffic Alert (RCTA), Lane Departure Warning System, Rear-Camera Display: These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC): No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Engine Start/Stop Button with Smart Key: Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

Forward Collision Warning System: These systems are not substitutes for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.

Front Seat Headrest Adjustment: Never attempt to adjust headrests when vehicle is in motion.

Google Play™ Store is a trademark of Google, Inc. © 2012 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.

iPhone® is a registered trademark of Apple Inc. The iPhone® mobile digital device is sold separately.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately, and connectivity requires the Kia accessory cable.

Navigation: Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

Occupant Detection System (ODS): Kia vehicles use a number of different ODS types that vary by model.

Roadside Assist: 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.

Seat adjustments: Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

Seat belts: For maximum protection, always wear your seatbelt.

Seat warmers: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2017 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

Sportmatic® is a registered trademark of Kia Motors America.

Steering-wheel-mounted controls: Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

Sunvisors: Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

Tilt/Telescoping Steering Wheel: Never attempt to adjust steering wheel position when vehicle is in motion.

Tire Pressure Monitoring System (TPMS): Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

UVO eServices: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

UVO eServices app: App uses your smartphone data service. Normal cellular service rates will apply.

UVO eServices with Premium Navigation: Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

 


SOUL CUSTOMER DELIVERY CHECKLIST

KEY FEATURE WALKTHROUGH

Demonstrate UVO eServices features and functions with the customer. Discuss UVO eServices setup.


- Standard Audio System* – page 21
For more information, refer to the Car Multimedia System User's Manual.

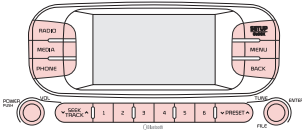


- UVO eServices / Android Auto™ / Apple CarPlay® Setup* – page 22

For further UVO eServices operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 20-23

 
- UVO eServices* – page 23
For more information, refer to the Car Multimedia System User's Manual.

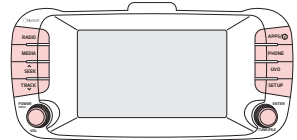

 
- UVO eServices with Premium Navigation* – page 24
For further system operation, refer to the Car Multimedia System User's Manual.

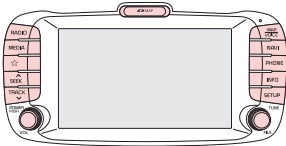

 - Cruise Control* – page 17
Demonstrate operation

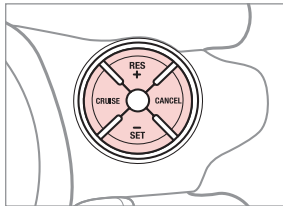

 - Bluetooth® Wireless Technology – page 18
Demonstrate operation

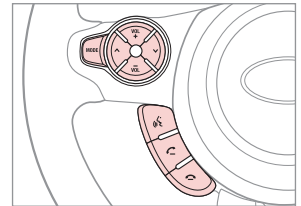

- ECO Mode (Active ECO)* – page 8
- Aux/USB/iPod® Port – page 25
- Digital Clock – page 25
- Engine Start/Stop Button* – page 13
- Folding Rear Seatback – page 32
- Panoramic Sunroof Operation* – page 36
- Passenger Airbag Off Indicator – page 40

- Rear-Camera Display* – page 37
- Seat Warmers / Ventilated Seats* – page 30
- Smart Key* – page 33
- Tire Mobility Kit – page 38
- Tire Pressure Monitoring System (TPMS) – page 5

*IF EQUIPPED

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours & Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



SOUL CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____

 
 
BEFORE DELIVERY

- Test and confirm "Good Battery" using the Kia GR8-1299 battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual.)

KEY FEATURE WALK-THROUGH


- Air Conditioning / Climate Control – pages 26-27

Demonstrate Air Flow Modes, Defog and Defrosting Windshield.

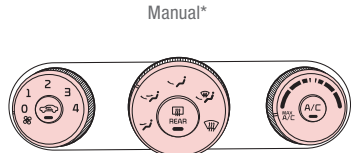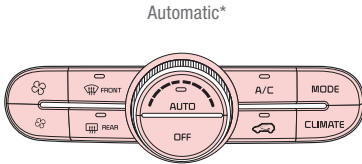

- Manual Gear Shift* – page 29

 
Demonstrate lifting ring for reverse gear

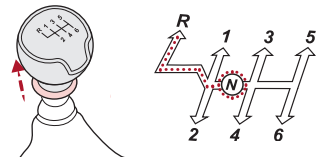

- Windshield/Rear Wipers & Washers – page 16

To operate:

 
- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull to spray and wipe

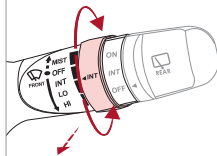

- MIST: Single wipe
- OFF: Wiper off
- INT: Intermittent wipe
- L0: Slow wipe
- H1: Fast wipe

To operate:

 - Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

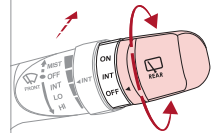

- ON: Normal wipe
- INT: Intermittent wipe
- OFF: Wiper Off



© 2017 Kia Motors America, Inc. All rights reserved.

Part Number: UG180-PS-004R1

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)