

CADENZA

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **CADENZA**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance¹⁸
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

ESSENTIAL FEATURES

Air Conditioning / Automatic Climate Control	29
Android Auto™ / Apple CarPlay® Setup	24
Audio System – UVO eServices System*	25
Audio System – UVO eServices / Premium Navigation*	26
Audio System – UVO eServices Activation	24
Aux/USB/iPod®* Port* & Power Outlets*	28
<i>Bluetooth</i> ® Wireless Technology	20
Cruise Control*	23
Clock	28
ECO Mode (Active ECO)	08
Passenger Airbag Off Indicator	46
Service Mode	07
Smart Cruise Control (SCC) with Stop & Go*	22
Smart Key	37
Tire Pressure Monitoring System (TPMS)	05
Trip Modes / Trip Computer	06
User Settings	07
Windshield Wipers & Washers	19

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



LEGAL DISCLAIMERS	Inside Back Cover
------------------------------------	-------------------

MAINTENANCE CHART	Back Cover
------------------------------------	------------

VIDEOS & QR CODES	02
----------------------------------------	----

INSTRUMENT CLUSTER	
Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
LCD Instrument Cluster Modes	06
Trip Modes / Trip Computer	06
User Settings / Service Mode	07
Drive Mode Integrated Control System*	08
ECO Mode (Active ECO)	08

DRIVER'S PANEL	
Head-Up Display (HUD)*	09
Electronic Stability Control (ESC)	10
Hill-Start Assist Control (HAC)	10
Blind-Spot Collision-Avoidance Assist-Rear (BCA-R)*	10
Blind-Spot Collision Warning (BCW) w/ RCCW*	11
Lane Keeping Assist (LKA)*	12
Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW)	13
Power Windows, Window Lock & Central Door Lock	13
Power Folding Outside Mirrors*	14
Power/Heated Outside Mirrors	14
Automatic Door Lock/Unlock	14
Fuel Door Release Button	14
Reverse Parking Aid Function*	14
Trunk Release Button	15
Instrument Panel Dimmer	15
Engine Start/Stop Button	15

STEERING WHEEL CONTROLS	
Manual Tilt/Telescoping Steering Wheel*	16
Power Tilt/Telescoping Steering Wheel*	16
Headlights & High Beams	17
Turn Signals & Fog Lights	18
Windshield Wipers & Washers	19
<i>Bluetooth</i> ® Wireless Technology	20
Smart Cruise Control (SCC) with Stop & Go	22
Audio Controls	23
Cruise Control	23

AUDIO SYSTEMS	
UVO eServices Activation	24
Android Auto™ / Apple CarPlay® Setup*	24
UVO eServices*.	25
UVO eServices with Premium Navigation*	26

CENTER PANEL	
Surround View Monitoring (SVM) System*	27
Clock	28
Aux/USB/iPod® Port & Power Outlets	28
Automatic Climate Control	29
Automatic Gear Shift / Sportmatic® Shifting	30
Paddle Shifters*	30
Electric Parking Brake (EPB)*	31
Auto Hold*	31
Wireless Smartphone Charging System*	32
Heated Steering Wheel*	33
Power Rear Sunshade*	33
Seat Warmers / Ventilated Seats*	34

SEATING	
Power Adjustable Driver's Seat	35
Front Seat Headrest Adjustment	36
Driver Position Memory System*	36

OTHER KEY FEATURES	
Smart Key	37
HomeLink® with Auto-Dimming Rearview Mirror*	38
Map/Room Lamps	39
Panoramic Sunroof Operation*	40
Sunvisor	40
Rear-Camera Display	41
Parking Distance Warning-Reverse*	41
Power Trunk / Smart Power Trunk*	42
Trunk Release Button	43
Fuel Cap / Malfunction Indicator (Check Engine Light)	43
Child-Protector Rear Door Locks	43
Hood Release Lever and Latch	44
Driver Attention Warning (DAW)*	45

SAFETY FEATURES	
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	46
Seat Belts	47
Seat Belt Retractor Locks	47

*IF EQUIPPED

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning.
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet
3. When accessing videos on your mobile device, standard cellular data rates will apply

Instrument Cluster Overview


- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators and Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer/Trip Computer/Tripmeter
- H** Fuel Gauge

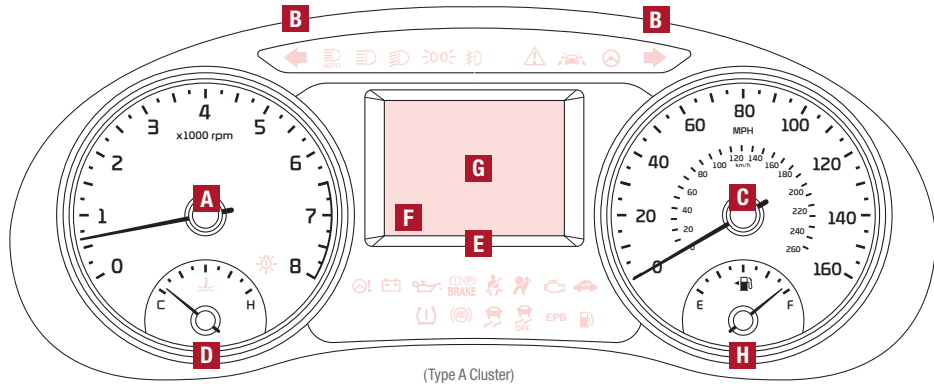

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

 Indicators and Warning Lights

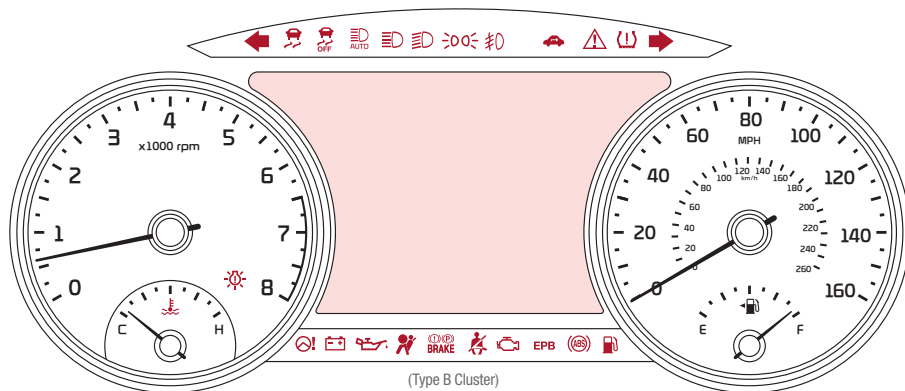




Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

- | | | | | | |
|--|-----------------------------------------------------|--|------------------------------------------------------------------------------------------------------------------------------------|--|--------------------------------------------------------------|
| | ECO Mode Indicator* | | Low Tire Pressure Indicator / Tire Pressure Monitoring System (TPMS) Malfunction Indicator | | Smart Cruise Control (SCC) with Stop & Go Radar Warning* |
| | SPORT Mode Indicator* | | Electronic Stability Control (ESC) Indicator | | Smart Cruise Control (SCC) with Stop & Go Warning Indicator* |
| | SMART Mode Indicator* | | Electronic Stability Control (ESC) OFF Indicator | | Front Fog Light Indicator* |
| | High Beam Assist Indicator* | | Parking Brake & Brake Fluid Warning Indicator | | Door Ajar Warning Indicator |
| | High Beam Indicator | | Electronic Power Steering (EPS) Warning Indicator | | Trunk Open Warning Indicator |
| | Light ON Indicator | | Airbag Warning Indicator | | Immobilizer Indicator* |
| | Master Warning Indicator* | | Anti-Lock Braking System (ABS) Warning Indicator | | Auto Hold Indicator* |
| | Forward Collision-Avoidance Assist (FCA) Indicator* | | Electric Parking Brake (EPB) Warning Indicator* | | CRUISE Indicator* |
| | Engine Oil Pressure Warning Indicator | | Electronic Brakeforce Distribution (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time) | | Cruise SET Indicator |
| | Charging System Warning Indicator | | Adaptive Front Lighting System (AFLS) Warning Indicator* | | Low Fuel Level Warning |
| | Seat Belt Warning Indicator | | Lane Keeping Assist (LKA) Indicator* | | Icy Road Warning* |
| | Malfunction Indicator | | | | LED Headlamp Warning* |


Tire Pressure Monitoring System (TPMS)*†27

 
 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) are underinflated.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light **A**. See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute then illuminate. See dealer for service.

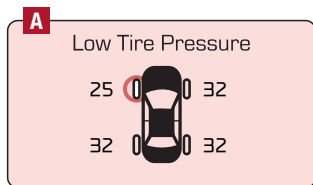

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jam, visible when the door is open.
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

Tire Pressure Monitoring System Video



www.youtube.com/KiaFeatureVideos

 
Fuel Economy Video



www.youtube.com/KiaFeatureVideos

LCD Instrument Cluster Modes*

Press Mode button **A** to scroll through different LCD Instrument Cluster Modes:

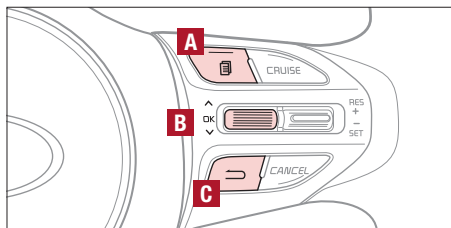

(Type A; Controls located on Steering Wheel)



Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.



Turn-by-Turn Mode*: Displays the state of the navigation system



Smart Cruise Control (SCC) w/ Stop and Go / Lane Keeping Assist (LKA)*: Displays the state of the SCC and LKA



User Settings Mode: Change settings of the doors, lamps and other features



Master Warning Mode: Informs of warning messages related to washer fluid or malfunction of Blind-Spot Collision Warning (BCW), etc.


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Trip Modes / Trip Computer

 
 
The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A**.


When in the Trip Computer mode , press the Select/Reset button **B** up/down to cycle to the desired menu. When displaying the Tripmeter screen, press and hold the Select/Reset button **B** to reset the Tripmeter to zero. Press the Return button **C** to go back to the previous mode/item (button only available with Type A cluster).


REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

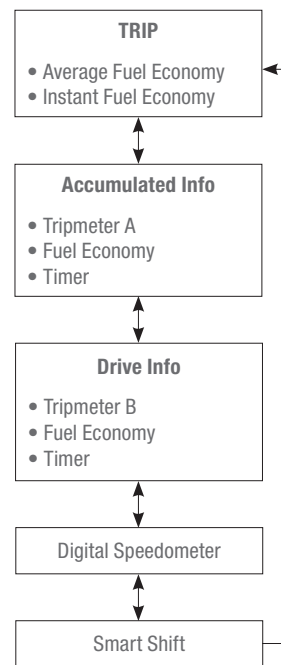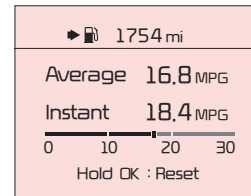

User Settings

 To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill and with the Engine Start/Stop button in the ON position and select User Settings .

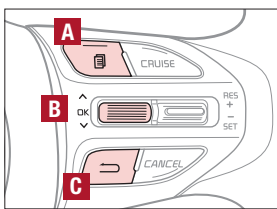

(Type A; Buttons located on right side of steering wheel)

You can navigate the selections on the display by pressing the Select/Reset button **B** up or down, and then pressing again to enter.

Head-Up Display*:

- Display Height
- Rotation
- Brightness
- Contents Select
- Speedometer Size
- Speedometer Color

Sound:

- Park Assist System Volume*
- Cluster Voice Guide Volume*
- Welcome Sound*

Door:

- Two Press Unlock
- Auto Door Lock & Unlock
- Door Lock Sound*
- Smart Power Trunk*

Lights:

- One-Touch Turn Signal
- Headlamp Escort*
- Welcome Light*

Driving Assist:

- Smart Cruise Control Response*
- Forward Collision-Avoidance Assist (FCA)*
- FCW (Forward Collision Warning)*
- Lane Keeping Assist (LKA)*
- Rear Cross-Traffic Collision Warning (RCCW)*
- Blind-Spot Collision Warning (BCW)*

Convenience:

- Seat Easy Access*
- Steering Easy Access*
- Wireless Smart Phone Charging System*
- Wiper/Light Display*
- Gear Position Popup*

 
Service Interval:

- Service Interval
- Adjust Interval
- Reset

Service Mode

To enter Service Mode, press the Mode button **A**, scroll to Service Interval by pressing Select/Reset button **B** up or down. Then press the OK button **B** to enter. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following will be displayed: **Service required**.

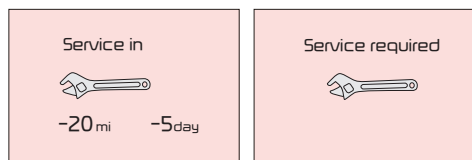

To reset the Service Mode system, press and hold the OK button **B** for more than 1 second.

To turn **Service In** OFF, go to User Settings.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the Select/Reset button **B** up/down and scroll to Service Interval. Press again to enter
- Press the Select/Reset button **B** and toggle to ON, then press again to set. Then press the Select/Reset button **B** to scroll and select the desired miles or months for your next service
- Press the OK button **B** to enter

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

LCD Display Video



www.youtube.com/KiaFeatureVideos

 
LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System

SMART, COMFORT, SPORT and ECO drive modes **A** may be changed according to the driver's preference or road conditions. To cycle through drive modes, press the DRIVE MODE button **B**.

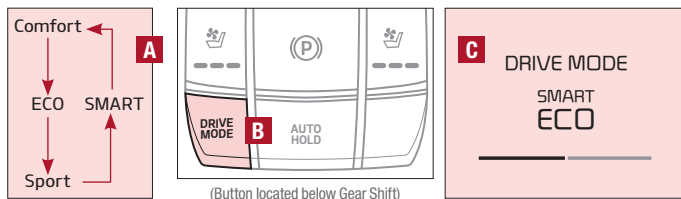

COMFORT Mode – The system's default mode is COMFORT mode and may not display on the instrument cluster nor the audio system's screen.

ECO Mode – An ECO indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

SPORT Mode – A SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

SMART Mode* – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (blue, white, orange) depends on the current driving style. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

For more information on ECO Mode, refer to your Owner's Manual or contact your local dealership.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

ECO Mode (Active ECO)*

The Active ECO system is designed to improve fuel economy by controlling several vehicle components. When activated, it modifies drivetrain operations such as engine power and transmission.

To turn ON, press the DRIVE MODE button **B** and scroll through options until in the ECO mode. The ECO mode indicator light in the LCD cluster will illuminate, indicating that the vehicle is in ECO mode and Active ECO is operating. The Active ECO system will remain on even when the ignition is cycled.

To turn the Active ECO system OFF, press the DRIVE MODE button **B** again and change to another mode.

REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- Steering effort may be slightly increased in Sport mode
- When SPORT mode is selected, fuel economy may decrease

QR CODE

Drive Mode Integrated Control System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

When the Engine Start/Stop button is turned off, the system will default to COMFORT mode if the vehicle was last in Sport mode.

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

Head-Up Display (HUD)*†12

The Head-Up Display (HUD) is a transparent display that projects a snippet of information from the instrument cluster and navigation system onto the windshield glass.

Drivers can turn the HUD display on or off in User Settings.

 
The HUD displays:

- Turn By Turn (TBT) navigation information
- Road signs*
- Speedometer
- Cruise setting speed
- Smart Cruise Control (SCC) with Stop & Go information*
- Blind-Spot Collision Warning (BCW) information*
- Warning lights (low fuel, BCW)
- AV Mode information

Head-Up Display (HUD) Display Settings

Drivers can adjust the HUD settings from the LCD Instrument Cluster modes in User Settings. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Select: Activate or deactivate HUD content (TBT, SCC, LDW, BCW)
- Speedometer Size: Choose the size of the HUD speedometer (Small, Medium, Large)
- Speedometer Color: Choose the color of the HUD speedometer (White, Orange, Green)

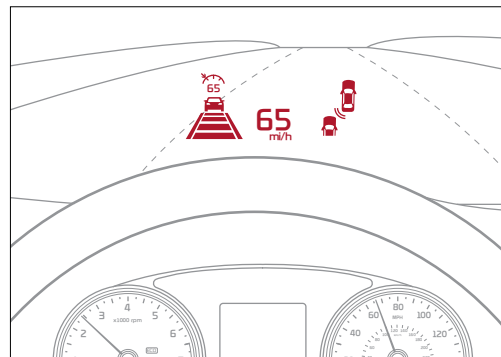

REMINDERS:

The HUD image on the windshield glass may not be visible when:

- The driver has poor sitting posture
- The driver is wearing polarized sunglasses
- There is an object covering the HUD
- Driving on a wet road
- Excessive lighting inside or outside the vehicle
- Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass.
- If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD.

 
The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.

Electronic Stability Control (ESC)*†7

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.


Press ESC button **A** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press again to turn ON.

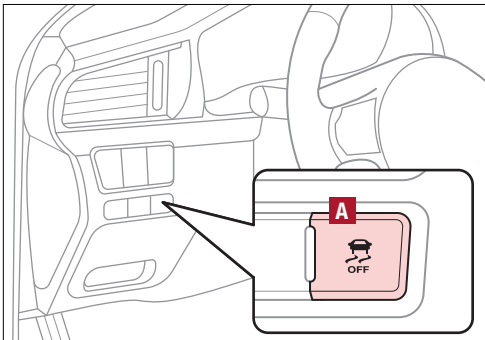

(Button panel located left of Steering Wheel)

REMEMINDERS:

- ESC is active by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)*†7

HAC is designed to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMEMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position. HAC does not replace the need to apply brakes while stopped on an incline.

QUICK TIP

When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.

Blind-Spot Collision-Avoidance Assist-Rear (BCA-R)*†6

The Blind-Spot Collision-Avoidance Assist-Rear (BCA-R) uses a camera on the upper front windshield and radar sensors for the side and rear areas. The BCA-R may activate the ESC light when detecting an approaching vehicle while changing lanes to help prevent a possible collision.

The BCA-R is activated when BCA-R is in ON position and with the following conditions:

 
- Vehicle speed is above approximately 40 mph and both lanes are detected
- The system detects both of the lane lines
- An approaching vehicle is detected next to and/or behind the vehicle

When an approaching vehicle is detected within sensor areas next to or behind the vehicle, the BCA-R may apply the brakes to help keep you within the lane markers. The ESC instrument cluster indicator will illuminate to inform the driver of the system activation.

The Blind-Spot Collision-Avoidance Assist-Rear (BCA-R)* may apply braking power, when an approaching vehicle is detected within a certain distance next to/behind your vehicle.

REMEMINDER: The BCA-R system are supplemental systems. Do not solely rely on these systems and always pay attention to drive safely.

For more information on when the BCA-R automatically deactivates, see your Owner's Manual.

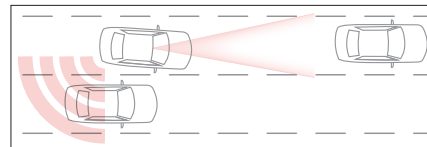

Blind-Spot Collision Warning (BCW) w/RCCW*†6

The BCW System uses radar sensors in the rear bumper to monitor and warn the driver if it detects an approaching vehicle in the driver's blind spot area. It is designed to help alert the driver before changing lanes. The BCW System is ON when the button **A** is pressed – the button light will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than approximately 18 mph and will alert the driver if another vehicle is detected by the radar sensor.

1st-stage alert: When another vehicle is detected within the BCW system boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

Rear Cross-Traffic Collision Warning (RCCW)*

 
If the RCCW system sensors detect approaching vehicles from the left or right side **C**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, when these conditions are met:

- When the gear shift is in moved into (R) Reverse
- When the vehicle is moving less than 6 mph



REMINDERS:

- When the BCW system is ON and the ignition is cycled to OFF then ON again, the BCW system returns to ON
- The RCCW feature can be turned OFF/ON in User Settings and will remain in OFF/ON as selected
- When vehicle power is cycled, the RCCW will remain in the previous state
- The RCCW system will show a warning if the approaching vehicle speed is between 2.5-22 mph within sensing range. See owner's manual for other conditions.
- The BCW and RCCW systems are supplemental systems. Do not solely rely on these systems and always pay attention to drive safely

For more information on the Blind-Spot Collision Warning (BCW), please refer to the Owner's Manual.

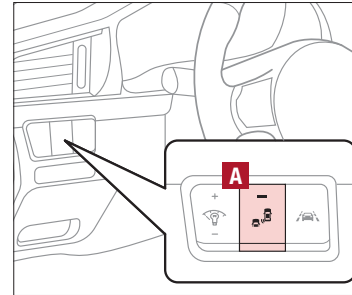

(Located left of Steering Wheel)

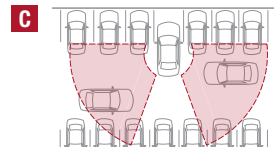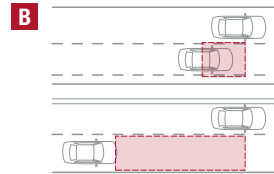  

QR CODE

Blind-Spot Collision Warning w/ RCCW Video


To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Lane Keeping Assist (LKA)*†6

With the Engine Start/Stop button in the ON position, press the LKA button **G** to turn system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when vehicle is traveling less than 40 mph and the system does not detect the lane markers. When system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

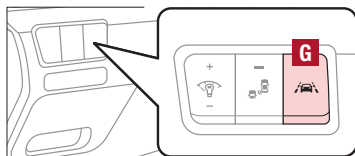

(Button panel located left of Steering Wheel)

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display a LDW (Lane Departure Warning) alert on the instrument cluster. If the vehicle continues to move outside of the lane, the LKA will apply a slight adjustment to the steering, trying to prevent the vehicle from moving outside its lane.

Standard LKA is the operating mode by default when the button is depressed to ON. To switch between modes (Standard LKA, Active LKA and Lane Departure), go to User Settings in the Instrument Cluster.

All systems will operate under the following conditions:

- The vehicle exceeds approximately 37 mph
- The LKA system recognizes both lane markers the vehicle is traveling in
- The vehicle is between the lane markers



When the LKA sensor detects the lane traveling in, both lanes are illuminated



When the LKA sensor does not detect the lane traveling in the lanes are not illuminated



When the LKA sensor detects the vehicle moving outside of the lane traveling in, a yellow indicator will illuminate either on the left or right lane (shown in both images above)

REMINDERS:

- LKA will not issue a warning if the turn signal or hazard signal is activated
- If the LKA button is ON and ignition is cycled, the system will turn ON again. If the LKA button is OFF, the system remains OFF
- The LKA/LDW are not substitutes for safe and proper driving. Always drive safely and use caution.
- LKA/LDW may not always alert the driver if the vehicle about to be driven outside of its lane. Refer to the Owner's Manual for more information.

QR CODE

Lane Keeping Assist (LKA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW)^{†9}

The FCA is designed to alert the driver, and if necessary apply emergency braking, when rapidly approaching a vehicle that is slowing down, braking or stopped.

Initially, the Forward Collision Warning (FCW) will provide a warning when it detects a potential collision with a vehicle in front emitting an audible warning and visual alert on the instrument cluster. Adjust the alert settings (Early, Normal, Late) in the User Settings. To turn the FCA/FCW off, go to User Settings again and turn off.

If the collision risk increases, the Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, helping to minimize the effects of a possible collision.

FCA can be turned ON in the User Settings menu on the Instrument Cluster display. The FCA/FCW will become active when the:

 
- Engine Start/Stop button is ON
- Vehicle is traveling more than 5 mph
- Electronic Stability Control (ESC) is ON

Adjust the alert settings (Early, Normal, Late) in the User Settings. To turn the FCA/FCW off, go to User Settings again and turn off.

REMINDERS:

- The FCA/FCW will be activated by default when the ignition is cycled ON, even when previous setting to OFF
- The FCA/FCW will not operate when the vehicle is traveling more than approximately 50 mph

The Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning System (FCWS) are not substitutes for safe and proper driving. Always drive safely and use caution. FCA and FCW may not always alert the driver when the vehicle is approaching another vehicle.*

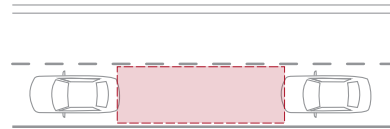

QR CODE

Forward Collision Warning Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Driver's & Passenger's Window Auto Up/Down*

 
QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows and Rear Sunroof passenger controls

REMINDER: When pressed **C**, window controls for the Rear Passenger Windows are disabled.

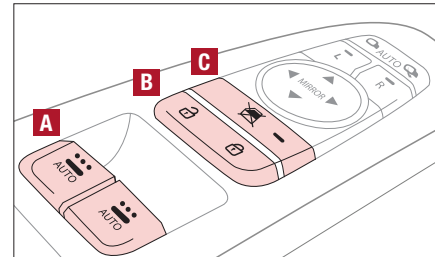

(Button/switch panel located on Driver's Door)

 
Button configuration may vary depending on vehicle model.

Power Folding Outside Mirrors*

Press the L or R buttons **A** to select the mirror to adjust. Press button arrows **B** left/right or up/down to adjust mirror position.

Toggle button **C** left/right to unfold/fold the outside rearview mirrors.

- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed
- Driver approaches the vehicle with the Smart Key*

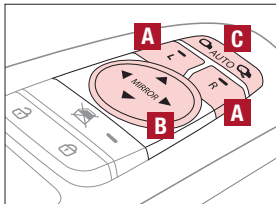

(Button/switch panel located on Driver's Door)

Button configuration may vary depending on vehicle model.

QUICK TIP

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMINDER: When mirror button **C** is in the center, press the Lock button on the Smart Key to automatically fold the mirrors

Power/Heated Outside Mirrors*

 
Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button* is located on climate control system panel.

Automatic Door Lock/Unlock

When the gear shift is moved into or out of P (PARK), all doors will Lock/Unlock. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Fuel Door Release Button

Press the Fuel Door Release button **D** to release the fuel door.

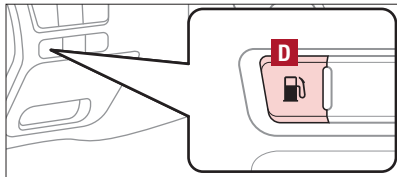

(Button located left of Steering Wheel)

Reverse Parking Aid Function*

 
 
When the gear shift lever is moved into R (Reverse) and with the L or R mirror buttons **E** will rotate downward to aid in reverse parking.

To turn ON the Reverse Parking Aid Function, depress either L or R mirror buttons **F**.

To turn OFF, depress the same buttons again.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- The L or R mirror buttons are not depressed.

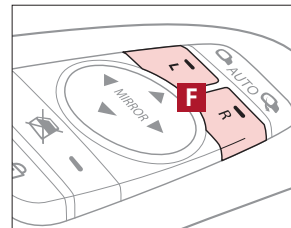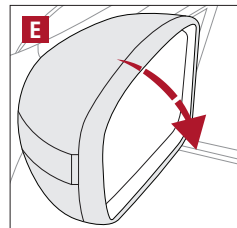


(Buttons panel located on Driver's Door)

REMINDER: When the outside rearview mirror buttons are not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Trunk Release Button

 Press the **C** button to open the trunk.

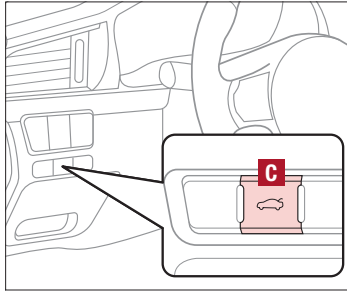


(Button panel located left of Steering Wheel)

Instrument Panel Dimmer

With parking lights/headlights ON, press button **E** (+) or (-) to adjust the brightness of the instrument panel illumination.

 REMINDER: Dimmer does not change brightness when lights are turned off.

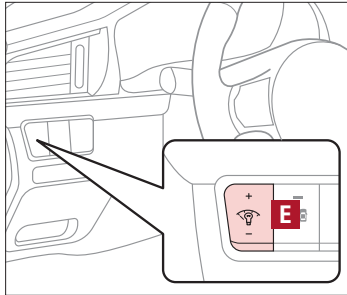

(Button panel located left of Steering Wheel)

 
Engine Start/Stop Button*+8

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in (P) Park or (N) Neutral

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.

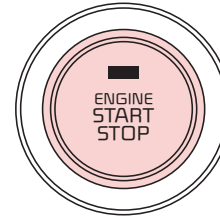

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light)

ON position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the ENGINE START/STOP button again (red light)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (red light)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning engine on may discharge the vehicle's battery.

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDEES:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press

 
Manual Tilt/Telescoping Steering Wheel^{*†26}

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and then distance **C**.

When finished, pull the Lock-Release Lever **A** up to lock Steering Wheel in place.

QUICK TIP


It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

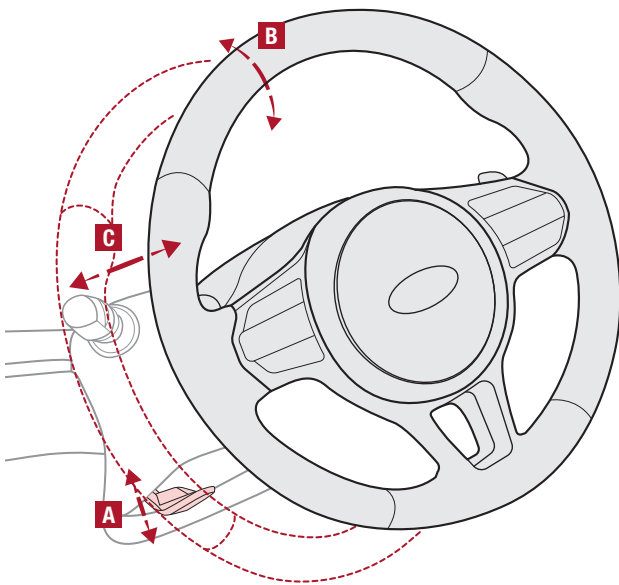

Power Tilt/Telescoping Steering Wheel^{*†26}

To adjust the Steering Wheel angle **D**, move the switch **E** up or down.

 
To adjust the Steering Wheel distance **F**, move the switch **E** forward or backward.

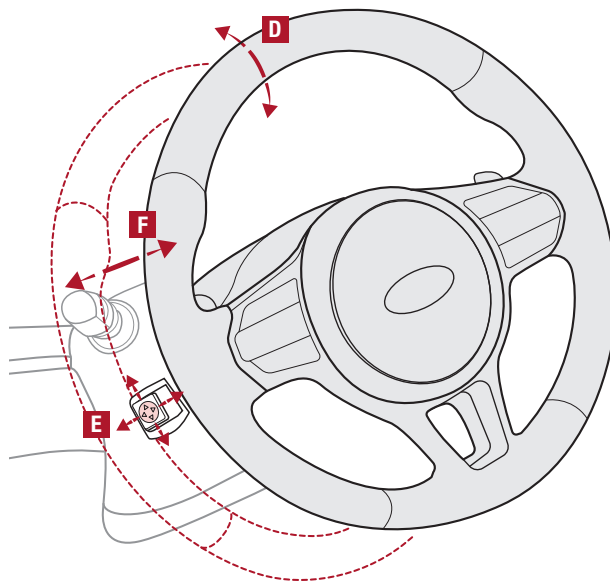



Headlights & High Beams

 To operate:

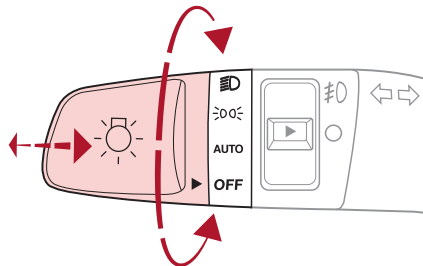- Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams



-  Headlight position
-  Parking light position
- AUTO** Auto Light / AFS-R / High Beam Assist*
- OFF** OFF position

AUTO Light position — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Adaptive Front-Lighting System-Height (AFS-H)*


The Adaptive Front-Lighting System-Height (AFS-H) can help improve visibility during nighttime driving by aiming the low beam headlights toward the direction the vehicle is moving. AFS-H controls the aiming direction based on steering angle and speed.

When the light switch is in the AUTO Light position, the AFS-H will activate.

REMINDER: When the AFS-H indicator illuminates on the Instrument Cluster, the AFS-H is not working properly. See authorized Kia dealer for service.

High Beam Assist (HBA)*

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

REMINDEERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off low beams will be on continuously

Turn Signals & Fog Lights

To operate:

 
- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Push toggle switch **A** to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to User Settings Mode in the LCD Instrument Cluster modes.

For more information on the User Settings Mode, please refer to your Owner's Manual.

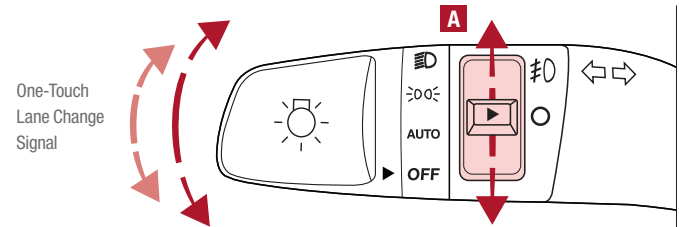

Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change Wiper modes
- Press button **A** to adjust intermittent Wipe
- Pull lever to spray and wipe

 
Auto Control (Rain Sensing)*

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To adjust the Auto Rain Sensing speed setting, move the speed control switch **A** up/down.

QUICK TIPS

- With the ENGINE START/STOP button in the ON position and the wiper switch is in AUTO mode, the wiper will operate once to perform a self-check of the system
- Moving lever to HI increases Intermittent wipe frequency and wipe speed. Moving lever to LO decreases frequency of wipes.
- When in AUTO mode, pressing button **A** up increases Intermittent wipe frequency and wipe speed. Pressing button down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

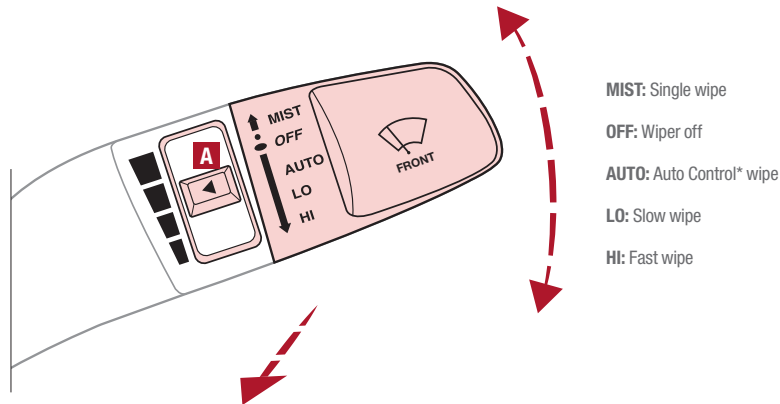


Wiper Service Mode:


To inspect or replace the windshield wiper blades to prevent damaging the hood, the blades need to be moved to the service position **A**.

With the ignition ON, then turning the ignition OFF, within 20 seconds move the wiper switch to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

 To return wipers to normal position, turn the ignition ON, then activate MIST.

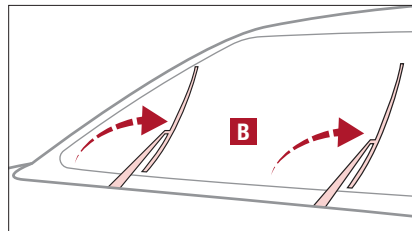

Bluetooth® Wireless Technology*†5,24

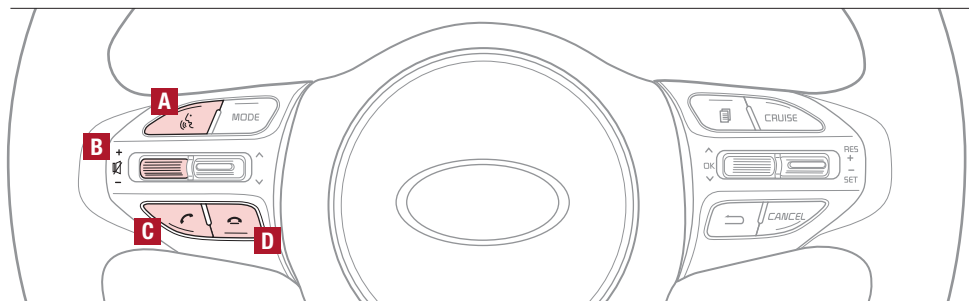 

(Type A shown)

- A Talk button:** Press to activate voice recognition
- B Volume button:** Press to raise/lower speaker volume
Mute button: Press to mute the microphone during a call
- C Receive/Place Call button:** Press to receive/place/transfer calls. In vehicles with navigation, if no phone is paired, press button to pair a phone
- D End Call button:** Press to end a call or cancel a function

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command.
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, if equipped, refer to the Car Multimedia System User's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology*†5,24 (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Multimedia System User's Manual or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- **Option 1:** Press the Receive/Place Call button **C** (displays the keypad or call history)
- **Option 2:** Press the Talk button **A**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

Voice Recognition and Phone Contact Tips

To help optimize the Bluetooth® Wireless Technology Voice Recognition system, below are some tips and reminders. Improve the performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emoji's or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

The system may have difficulty understanding some accents or uncommon names. Below are other tips to optimize using the voice recognition.

QUICK TIPS

- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too soft or too loud
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video*

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Smart Cruise Control (SCC) with Stop & Go*†6,24

The Smart Cruise Control (SCC) with Stop & Go system is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed.

To set/adjust the SCC speed:

- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Move the SCC lever **B** to set or adjust speed. The SET indicator light, set speed and vehicle-to-vehicle distance will illuminate on the instrument cluster's LCD screen

To set the vehicle-to-vehicle distance, press the SCC button **C** on the steering wheel. The image on the LCD screen **D** will change when scrolling through the settings. Each time the button **C** is pressed, the vehicle-to-vehicle distance changes.

To cancel SCC operation: Press the CANCEL button **E** or the brake pedal. The LCD screen will display a message that the SCC operation is canceled.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

 
QUICK TIPS

To change the Cruise Control mode from SCC to standard Cruise Control, press and hold button **C**. Repeat to switch modes again (The SCC system must not be activated to change modes).


For the SCC System to operate:

- When no vehicle is in front, you must be travelling at a minimum speed of 20 mph
- When following a vehicle, there is no minimum speed requirement


When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary.

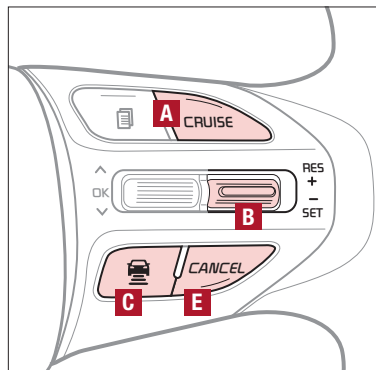

 (Type B; Buttons located on right side of Steering Wheel)



 (Distances are approximate and vary depending on vehicle speed)

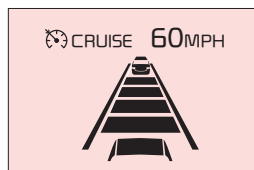

(Display on LCD screen)

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

QR CODE

Smart Cruise Control (SCC) with Stop & Go Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

REMINDERS:

- To turn the SCC ON, press the CRUISE button
- The SCC system remains ON when ignition is cycled. The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on factory settings at the time. See owner's manual for more information
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See owner's manual for other conditions.
- If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of.

Audio Controls†24

Cruise Control†24

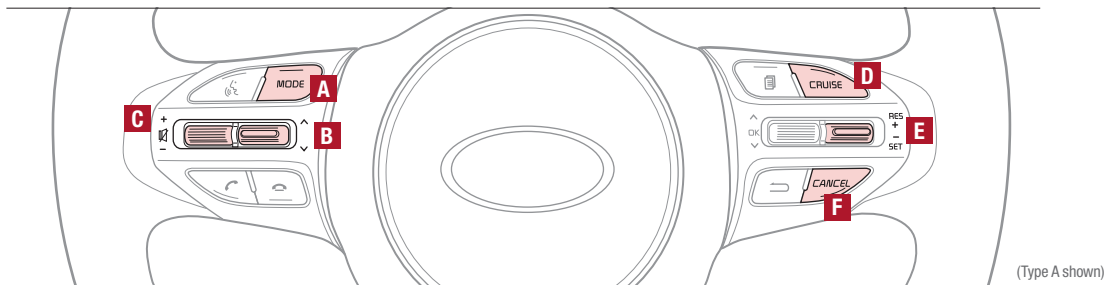

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®/Media Modes

B Seek/Preset button:

FM/AM/SiriusXM® – Press up/down to advance through Preset Stations. Press and hold to auto seek

Media Modes – Press up/down to move track up/down. Press and hold to fast forward / rewind

C Volume buttons: Press to raise/lower volume
Mute button: Press to mute all audio

QUICK TIP

Pressing the Audio System MODE button for more than 1 second will turn Audio Mode ON/OFF.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. For further audio system operations, refer to pages 24–26.

D CRUISE Control ON/OFF button: Press to turn the Cruise Control ON/OFF

E Resume Cruising Speed button: Press up to resume preset speed or increase cruising speed

Set Cruising Speed button: Press down to set or decrease cruising speed

F CRUISE Control CANCEL button: To cancel Cruise Control setting, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Cruise Control is a part of Smart Cruise Control (SCC) with Stop & Go and can be set as the operating mode. To switch from SCC to Cruise Control, press and hold the CRUISE button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

UVO eServices Activation*†1

1. Using a compatible smartphone to access your app store or marketplace, download the Kia UVO app.
2. In your smartphone's settings, *ensure that location services are enabled*.
3. Using the Kia UVO app, register for a new MyUVO.com account
4. Follow the In Car Setup Instructions on the Kia UVO app to complete the UVO eServices Activation


Android Auto™†3 / Apple CarPlay®†4 Setup*

Android Auto™*

 
Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store†11.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

How to start Android Auto™:


1. Press the SETUP key on your audio system's control panel.
2. Press the Phone Projection button , select Android Auto™ then select ENABLE ANDROID AUTO. Accept all terms, conditions and requests on the head unit and phone in order to use Android Auto.™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

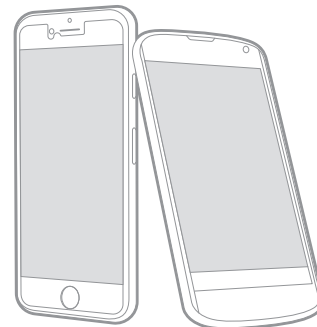

Apple CarPlay®*

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key.
2. Press the Phone Projection button , select Apple CarPlay® then select ENABLE APPLE CARPLAY. [Accept all terms, conditions and requests on the head unit and phone in order to use Apple CarPlay®]
3. Connect the Apple CarPlay® compatible iPhone with the vehicle's USB port using the manufacturer's cable provided with your iPhone
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay compatibility requirements: Apple Lightning cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

*For further UVO eServices operations, refer to the Car Multimedia System User's Manual.
For other audio system information, refer to pages 25-26.*

UVO eServices*†1

FM/AM/SiriusXM®†22/Media (USB, iPod®†14, Aux, Bluetooth® Audio, My Music)

Press briefly to do the following:

- FM/AM mode: Play the previous/next frequency.
- SiriusXM® mode: Change the channel.
- MEDIA mode: Change the track, file or title (except for AUX).

Press and hold to do the following (over 0.8 seconds):

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency.
- MEDIA mode: Rewinds or fast forwards the track or file (except for AUX and Bluetooth® Audio).

Press to Power ON/OFF. Rotate to adjust Volume

 
Press and hold to reset the system settings

Press to select FM/AM/SiriusXM® modes

Press to select MEDIA mode

Press to enter PHONE Mode

Press to enter APPS/Info menu

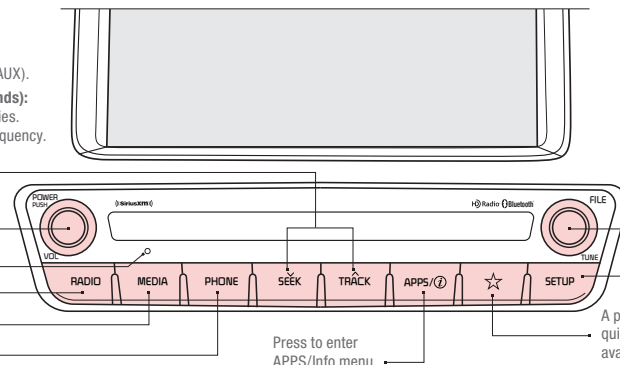

Your vehicle's audio system may differ from that in the illustrations.

Rotate to change Radio/SiriusXM® Station/Media tracks/files

Press to display SETUP/Settings mode

A programmable key to provide quick access to one of several available system features

QR CODE

UVO eServices Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button \Rightarrow to save settings.

Radio Presets: You can listen to FM, AM and SiriusXM radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot SiriusXM®

Smart Favorites: For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. In **Radio** mode, choose SiriusXM, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Button ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Button: Press the SETUP button, then press the Custom button. Select one of the available features you would like the Custom button to open.

QUICK TIPS

- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones
- When using the voice command feature, wait for the system to BEEP before speaking the command
- At any time, you can interrupt Command Feedback by pressing the TALK button
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO eServices should be operated when the engine is running to prevent battery discharge

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For further UVO eServices operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 24-26.

UVO eServices with Premium Navigation*†1,15

FM/AM/SiriusXM®†22/Media (Disc, USB, iPod®†14, My Music, Aux, Bluetooth® Audio)

Press briefly to do the following:

- FM/AM mode: Play the previous/next frequency.
- SiriusXM® mode: Change the channel.
- MEDIA mode: Change the track, file or title (except for AUX).

Press and hold to do the following (over 0.8 seconds):

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency.
- MEDIA mode: Rewinds or fast forwards the track or file (except for AUX and Bluetooth® Audio).

 
A programmable key to provide quick access to one of several available system features

Press and hold to reset the system settings

Press to Power ON/OFF.
Rotate to adjust Volume

Press to select FM/AM /SiriusXM® modes

Press to select MEDIA mode

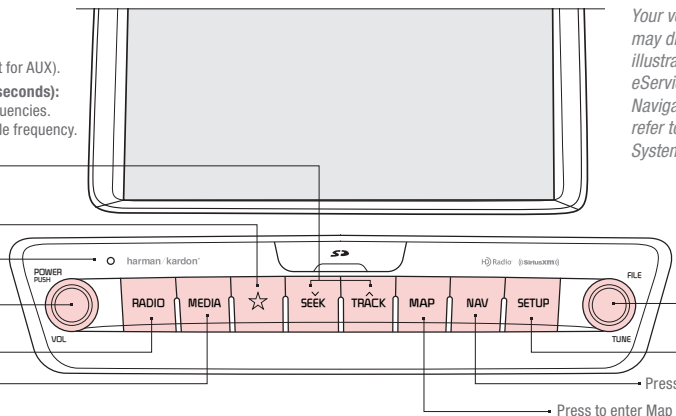

Your vehicle's audio system may differ from that in the illustrations. For further UVO eServices with Premium Navigation operations, refer to the Car Multimedia System User's Manual.

QR CODE

UVO eServices with Premium Navigation Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Navigation, Advanced, Default)
4. Use the onscreen buttons to adjust settings.

Radio Presets: You can listen to FM, AM and SiriusXM radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot SiriusXM®

Smart Favorites: For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. In **Radio** mode, choose SiriusXM, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Button ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Button: Press the SETUP button, then press the Custom button. Select one of the available features you would like the Custom button to open.

QUICK TIPS

- At any time, you can interrupt the Voice Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command

 
REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For other audio system information, refer to pages 24-25.

Surround View Monitoring (SVM) System*

The Surround View Monitoring (SVM) System is a parking support system that shows the areas around the front, rear, left, and right sides of the vehicle via four cameras displayed onto the navigation screen. The SVM system will turn on when the SVM button **A** is pressed, the gear shift is in N (Neutral) or D (Drive) and the LED is illuminated.

- The Front SVM camera is ON when the ENGINE START/STOP button is On, the gear shift is in Drive or Neutral and the SVM button is pressed ON
- Rear SVM: The rear camera view will automatically display on the navigation screen when the vehicle is shifted into Reverse. The rear camera view will turn off when the vehicle is shifted out of Reverse
- Front SVM: The camera view will display on the navigation screen in both Drive and Neutral. In Drive, the camera view will continue to display until the vehicle is above approximately 12 mph.

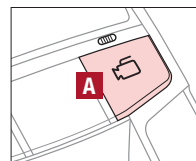

(Button located on gear shift)

QUICK TIP

The Front SVM camera will turn off when the gear shift is moved into Park or Reverse or the SVM button is pressed.

Camera View Modes – To change camera view modes, press the icons shown below on the navigation screen to select the mode.

Front SVM - when in Drive & Neutral:

- Displays the front side and SVM images simultaneously on the screen
- Displays the front side image on the screen
- Displays the front side and left side images simultaneously on the screen
- Displays the front side and right side images simultaneously on the screen

Rear SVM - when in Reverse:

- Displays the rear view and SVM images simultaneously on the screen
- Displays the rear side image on the screen
- Displays the rear and left side images simultaneously on the screen
- Displays the rear and right side images simultaneously on the screen

QR CODE

Surround View Monitor Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.

The Surround View Monitor system is only a supplemental system and may not display all objects around the vehicle. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the the left/right and rear.

Clock

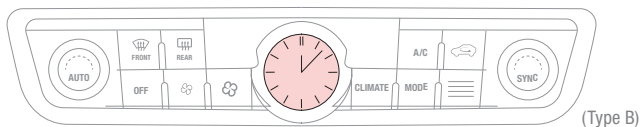

Audio Control Unit Clock Setup:

Press the Setup button and select the Clock icon. Use the on-screen buttons to navigate through setup.

Center Panel Clock Setup (Type B):

Clock setup is done through the audio control unit. See below or refer to the Car Multimedia System User's Manual for more information.

QUICK TIPS

- Daylight Savings must be enabled or disabled in the Clock Settings screen
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO eServices with Premium Navigation*)

REMINDER: The Center Panel Digital Clock and Navigation System* Clock are not synchronized and may differ slightly

Aux/USB/iPod® Port & Power Outlets

 
Aux/USB/iPod® Port **A**

Use the Aux port to connect audio devices and the USB port to connect USB audio devices, smartphones and iPod® devices.

If equipped, additional power outlets are located inside the center console.

Power Outlets **B**

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

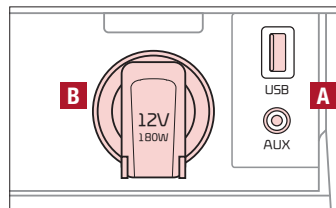

QUICK TIP

 
The power outlets are inactive when the ENGINE START/STOP button is OFF

REMINDEES:

- Using the power outlets (accessory plugs) for prolonged periods of time with the ENGINE START/STOP button in the ACC position (Engine OFF) may cause the battery to discharge
- Use manufacturer cables only that came with your device. Third party cables may cause damage to device.

For more information on the Aux/USB/iPod® Port & Power Outlets, refer to the Owner's Manual.

Automatic Climate Control

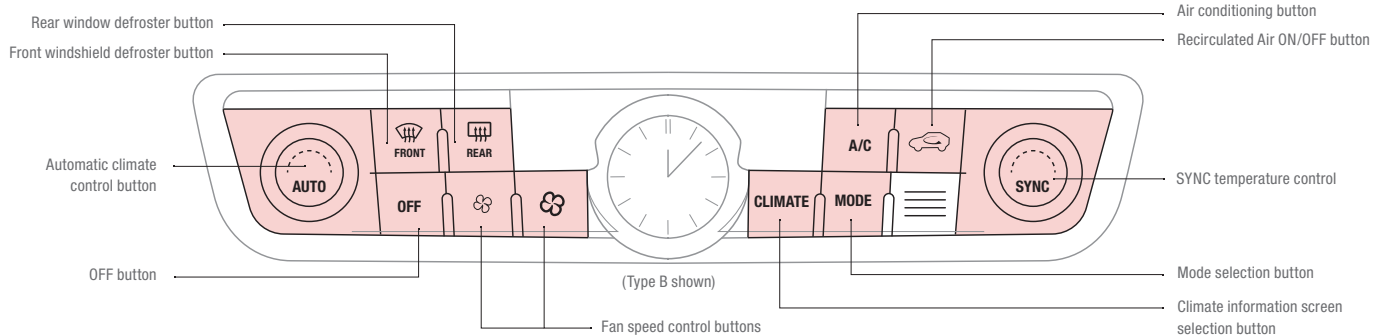

Climate Control Auto Function

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature
3. Press **SYNC** to select Sync Temperature Control Operation which synchronizes the passenger's temperature to the driver's setting

Air Flow Modes

To select Air Flow Modes, press the **MODE** button to cycle through to desired mode:



Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for DUAL Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Automatic Gear Shift with Sportmatic®†‡ Shifting

P: Park

R: Reverse

N: Neutral

D: Drive

[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode: To enter Manual mode, move shift lever from D to left gate.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS

 
 
- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears

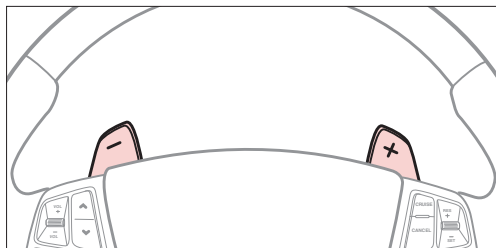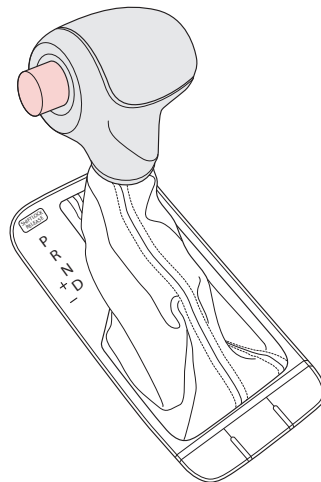

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

Sportmatic® Shifting Video



www.youtube.com/KiaFeatureVideos

Paddle Shifters Video




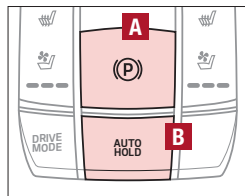 
www.youtube.com/KiaFeatureVideos

Electric Parking Brake (EPB)*

The Electric Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake


Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light  is illuminated on the instrument cluster.



(Buttons located below Gear Shift)

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal, then press the EPB switch **A** with the ignition switch in the ON position. Ensure that the indicator light  is OFF.

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving, unless there is an emergency situation
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline

Auto-Hold*

Auto-Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto-Hold can be turned ON/OFF using the AUTO HOLD switch **B** on the driver's panel. Before Auto-Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle at a standstill, and AUTO HOLD switch **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto-Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto-Hold indicator changes from white to green.

OFF (not illuminated) - The indicator will turn OFF when the AUTO HOLD switch **B** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDER: To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle.

Refer to page 4 for location of Instrument Cluster indicators.

QR CODE

Electric Parking Brake (EPB) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Wireless Smartphone Charging System*

Charge a compatible smartphone wirelessly by placing it on the tray **A** at the front of the console, near the USB/Aux ports and the charging indicator, while the ignition is on.

 
Indicator light **B** will change to amber once the wireless charging begins. Once charging is complete, the orange light will change to green.

QUICK TIPS

- Wireless charging must be enabled in user settings
- For wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad.
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area.

REMINDERS:

- The smartphone must be a compatible phone with Qi function available.
- Avoid placing other metal items in the bin while charging as to not impede the charging area.
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging, however, device compatibility varies. See your owner's manual for more detailed information and the back page for legal disclaimers.
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use.
- Charging Performance: Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness

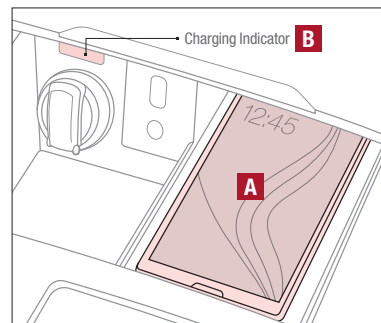

QR CODE

Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

Heated Steering Wheel*

Press Heated Steering Wheel button **A** to turn ON/OFF Steering Wheel Heater, while the Engine Start/Stop button is in the ON position. Steering Wheel Heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position
- System does NOT turn off when ignition is cycled. To turn off system, press the Heated Steering Wheel button

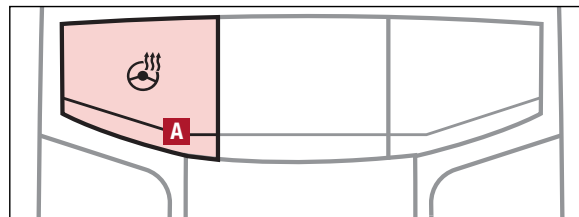


(Buttons located below Gear Shift)

Power Rear Sunshade*

Press the Power Rear Sunshade button **B** to raise/lower sunshade, while the Engine Start/Stop button is in the ACC/ON position.

QUICK TIPS

 1. The Power Rear Sunshade will lower when the Gear Shift is moved into the R (Reverse) position
2. Then when the Gear Shift is moved into D (Drive) and vehicle's traveling more than 12 mph, the Power Rear Sunshade will unfold automatically

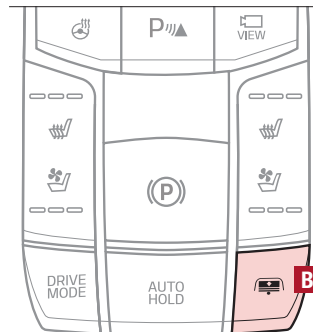


(Buttons located below Gear Shift)

Seat Warmers / Ventilated Seats*†21

Seat Warmers only*

 - Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LED lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Hold button to turn heated seats off

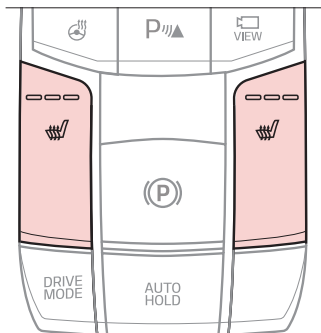

(Buttons located below Gear Shift)

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System turns OFF when ignition is cycled. To turn system ON again, press the Heated Steering Wheel button

 
Seat Warmers / Ventilated Seats*

Seat Warmers

- Press top of button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Hold button to turn seat warmers off

Ventilated Seats

- Press bottom of button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Hold button to turn ventilated seats off

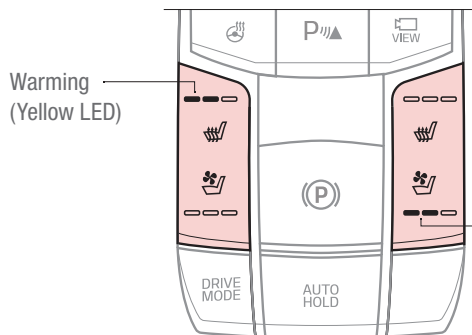

Warming
(Yellow LED)

Ventilating (Blue LED)

(Buttons located below Gear Shift)

QR CODE

Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
 
Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Power Adjustable Driver's Seat†19

Move/Press controls to adjust Seat, Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward, Lumbar up/down/forward/backward or Seat Cushion Extension forward/backward

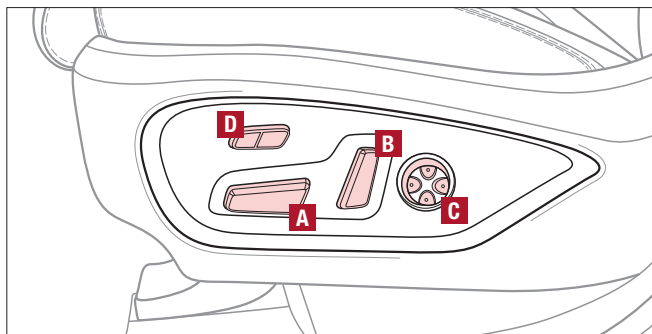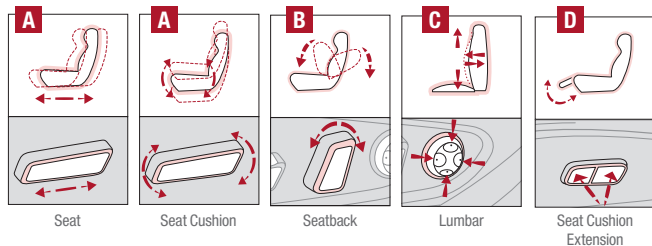


REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Front Seat Headrest Adjustment^{†10}

To raise headrest: Pull headrest up.

 To lower headrest: Press lock **A**, then press the headrest down.

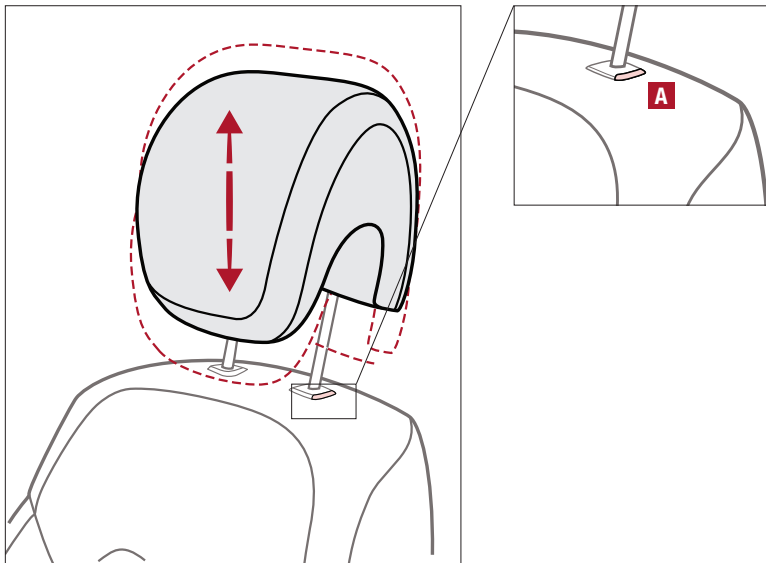

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath

 
REMINDER: Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat, Outside Rearview Mirrors and the Steering Wheel.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

1. Adjust the Driver's Seat, Outside Mirrors and the Steering Wheel
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons **C** within 5 seconds. The system will beep twice when memory has been stored
4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen

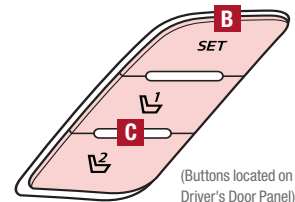

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Smart Key^{†8}

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold to unlock Trunk. Then lift lid by the handle to manually open Trunk

REMINDERS:

- Trunk lid will partially open. To fully open, lift up manually
- The Trunk unlocks when the Smart Key is within close proximity of the vehicle

- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key (Button on reverse side of fob)

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine.
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDER: Remote button configuration may vary depending on vehicle options

Driver's Door Lock/Unlock button **G**:

To unlock door(s):

- Press button once to unlock Driver's door
- Press again within 4 seconds to unlock all doors

To lock all doors - Press again to lock all doors

 
 


Mechanical Key **F**:

Use to unlock/lock Driver's Door

1. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown
2. Insert Mechanical Key and turn right to Unlock Driver's Door. Turn twice within 4 seconds to Unlock all doors
3. Insert Mechanical Key and turn left to Lock Driver's Door
4. Return keyhole cover to its original position

Use to lock and unlock the glove box

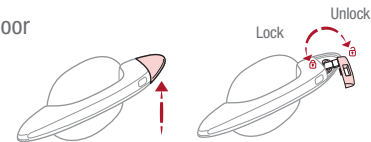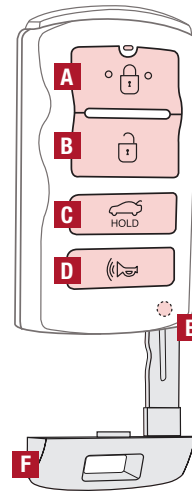

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

Engine Start/Stop Button & Smart Key Video










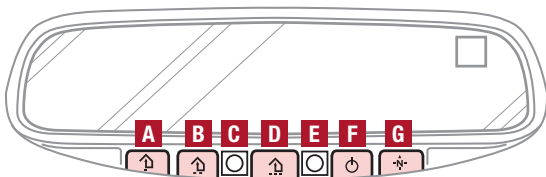 
Kia Key Fob Video



www.youtube.com/KiaFeatureVideos

HomeLink®+13 with Auto-Dimming Rearview Mirror*

- A** HomeLink® button 
- B** HomeLink® button 
- C** Indicator light 
- D** HomeLink® button 
- E** Glare detection sensor 
- F** Automatic dimming ON/OFF 
- G** Compass control button 



The HomeLink® / Auto-Dimming Rearview Mirror is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

REMINDER: Mirror indicator light **C** will illuminate when automatic dimming is ON.

How to Sync Transmitter with HomeLink®

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B** or **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®: Press one of the programmed HomeLink® buttons.

Erasing programmed buttons: Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

QR CODE

HomeLink Setup Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

Press the buttons **A** to turn the Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

 
 
Room Lamp - Press the button **B** to turn the Room Lamp ON/OFF.

The Map and Room Lamps turn ON when button **C** is pressed any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately. The Map and Room Lamps turn ON for approximately 30 seconds.

REMINDER: When Room Lamp lens is pressed ON it will remain ON, even when the Map Lamp switch is in the OFF position.

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

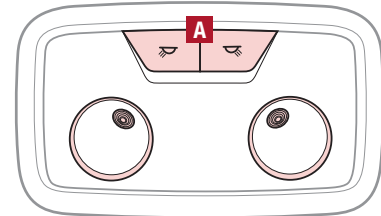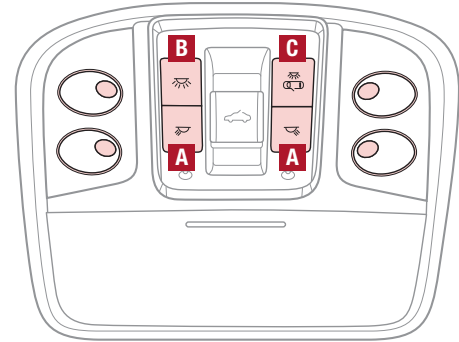

Panoramic Sunroof Operation*

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever **A**. The ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the Sunshade and Sunroof:

- Auto Open: Slide lever backward to the farthest position and release
- Auto Close: Slide the lever forward to the farthest position and release

Slide the Sunshade:

- Auto Open: Slide the lever partially backward to the first detent position
- Auto Close: Slide the lever forward to the farthest position

Slide the Sunroof (with Sunshade open):

- Open: Slide the lever backward to the farthest position and release
- Auto Close: Slide the lever forward to the first detent position or pull the lever downward

Tilt the Sunroof:

 
- Raise: Push lever upward
- Lower: Push lever forward
- Auto Close Sunroof and Sunshade: Slide the lever forward to the farthest position

REMINDERS:

- Sunshade needs to remain OPEN while sunroof is open
- Sunshade cannot slide when it is in the tilt position or tilt while in an open or slide position
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle


QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.

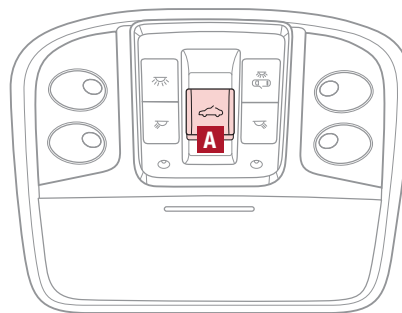

Sunvisor†25

 Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

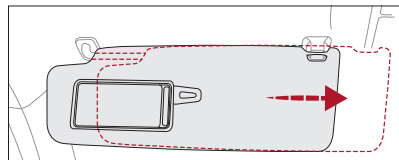

REMINDERS:

- Do not operate the vehicle if Sunvisor is impairing your visibility
- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows

QR CODE

Sunroof Operation Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

Rear-Camera Display

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation screen while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

- Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the R (Reverse) position

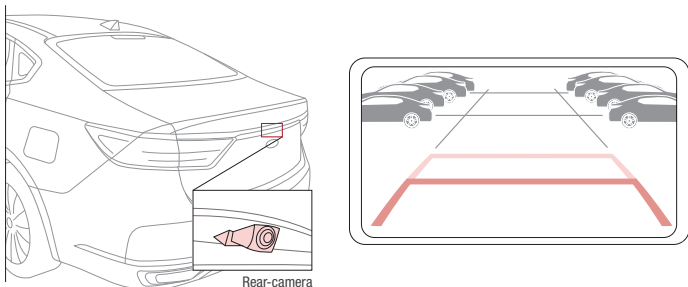

REMINDER: While camera is active, only the audio controls on the audio system can be operated.

The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

 
Parking Distance Warning-Reverse^{*†6}

The Parking Distance Warning-Reverse is not a safety device. The Parking Distance Warning-Reverse is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

REMINERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

The Parking Distance Warning-Reverse is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Distance Warning-Reverse may not detect every object behind the vehicle

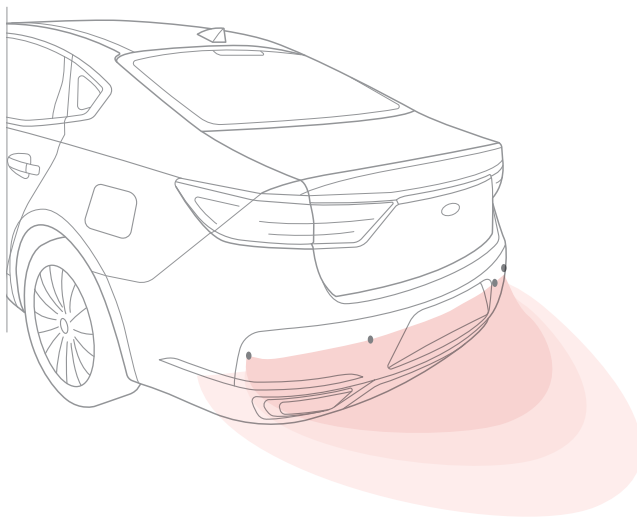

Power Trunk / Smart Power Trunk*+17

 
Opening from Inside the Vehicle:

Press the Power Trunk Open/Close button* **A** to automatically open/close the Trunk.

Opening from Outside the Vehicle:

To open Power Trunk* automatically, press the Trunk Release button **B** on exterior of the Trunk.


Automatically close by holding Power Trunk Close button* **C**.
Press the Lock All Doors button* **D** to automatically close the Power Trunk and lock all doors.

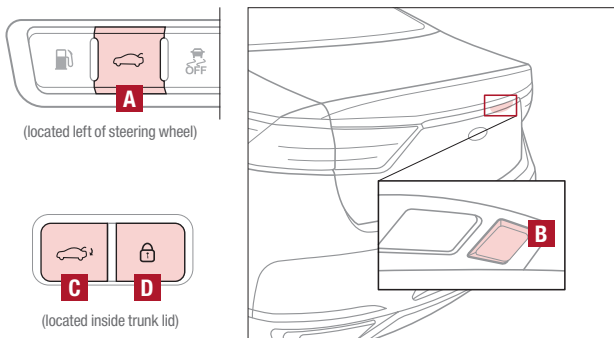

Smart Key:

To open the Power Trunk*, press and hold the Smart key Trunk button **E** until the Trunk begins opening.

 REMINDER: Pulling the Trunk upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Trunk.

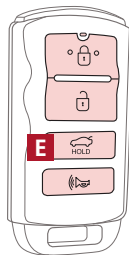


Smart Power Trunk*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Trunk* is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Trunk* **F**.

 The Smart PowerTrunk* feature is OFF by default. To enable the Smart Power Trunk*, go to User Settings in the LCD Instrument Cluster modes.

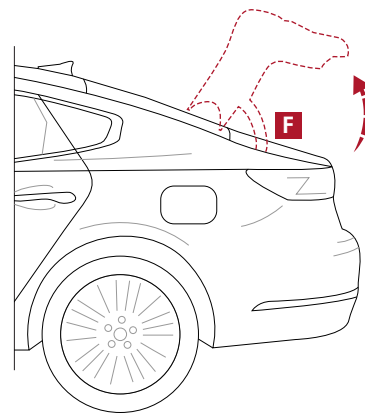

QUICK TIPS

- During the Smart Power Trunk alert, the Smart Power Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

 
REMINDEES:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when the following occurs:
 - Doors are recently closed and locked and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Ensure obstacles and people are out of the way of the Smart Power Trunk

For more information on the Smart Power Trunk operation, please refer to the Owner's Manual.

Trunk Release Button


Located underneath the Trunk lid. With Trunk unlocked, press the Trunk Release button **A** and pull the Trunk lid up by the handle to open.

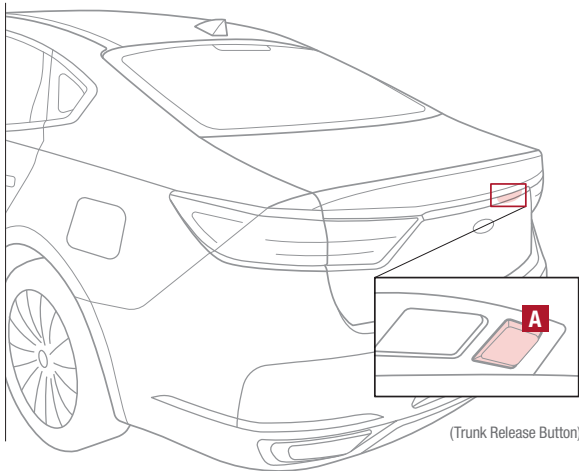


QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key* - The Trunk unlocks automatically, and can then be opened manually, when the Smart Key fob* is within close proximity to the vehicle


Fuel Cap/Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

 
REMINDER: The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel.

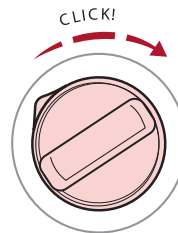

Child-Protector Rear Door Locks

Located on the rear edge of the rear passenger doors, turn the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

 REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.

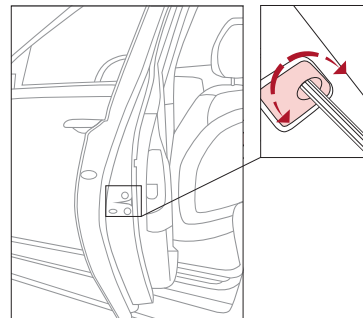

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

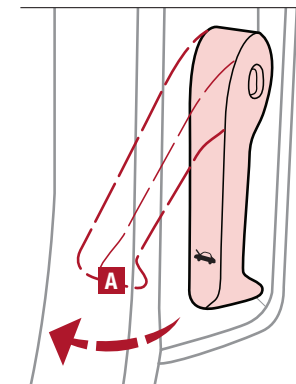

 (Lever located near floor below Driver's Panel)

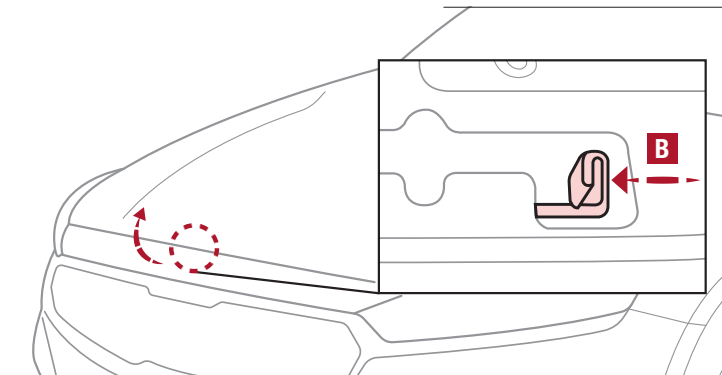

Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

REMINDER: While lowering and closing, keep hands away from under the Hood

Driver Attention Warning (DAW)*

The DAW system is designed to alert the driver if it detects a drowsy or fatigued driver and, in certain situations, can give a warning signal to take a break if needed.


The DAW System is set to OFF by default. To turn the DAW System ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driving Assist and select Driver Attention Warning. Set the DAW System to Normal or High Sensitivity.

Driver Attention Warning (DAW) System modes:

OFF: The Driver Attention Warning system is deactivated **A**

Normal Sensitivity: The Driver Attention Warning system alerts the driver of his/her fatigue level or inattentive driving practices.

High Sensitivity: The Driver Attention Warning system alerts the driver of his/her fatigue level or inattentive driving practices faster than Normal mode.

If the DAW System is activated, the DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below one bar **C**.



REMINDERS:

- The set-up of the DAW System will be maintained, as selected, when the ignition is cycled
- When activated, the DAW System does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- The DAW System will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Occupant Detection System (ODS) / Passenger Airbag Off Indicator†2,16

 
ODS is designed to detect the presence and position of the front passenger and is designed to adjust or turn off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASS AIR BAG OFF” light will illuminate.

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

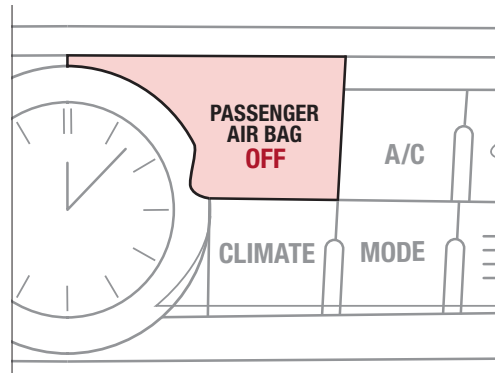


Seat Belts^{†20}

To properly fasten your seat belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion to the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

 REMINDER: For maximum protection, always wear your seat belt.

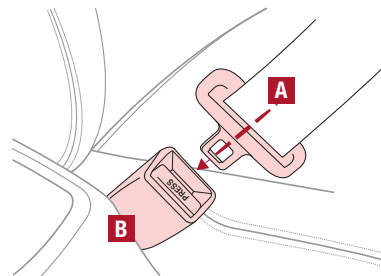


Seat Belt Retractor Locks^{†20}

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seatbelt retractors will automatically lock the belts to reduce the risk of injury.

QUICK TIP

 The seat belt warning chime operates for driver's seat only.

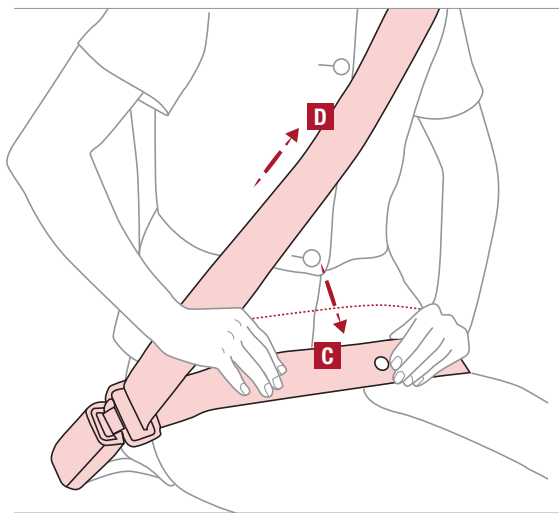

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

 
- 1. UVO eServices:** Purchase/lease of a new 2019 Kia Cadenza vehicle with UVO eServices includes a complimentary 5 year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 5 year UVO eServices subscription expires, your access to UVO eServices will immediately terminate. Use of UVO eServices is subject to agreement to the UVO Privacy Policy (available at <https://www.myuvo.com/legal/privacy-policy.shtml>) and Terms of Service (available at <https://www.myuvo.com/legal/terms-of-service.shtml>). UVO eServices is transferrable to subsequent owner during the original UVO eServices service term. Only use UVO eServices when safe to do so. UVO eServices App is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO eServices at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO eServices features may vary by model, model year, and trim level. Features and specifications are subject to change. For more on details and limitations, visit <https://www.myuvo.com/> or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 4. Apple CarPlay®:** Apple CarPlay® a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Blind-Spot Collision Warning with Lane Change Assist, Blind-Spot Collision-Avoidance Assist-Rear (BCA-R), Rear Cross-Traffic Collision Warning (RCW), Lane Keeping Assist (LKA), Rear-Camera Display, Parking Distance Warning-Reverse, Smart Cruise Control (SCC) with Stop & Go:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Electronic Stability Control (ESC) / Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.
- 8. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 9. Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW):** These systems are not substitutes for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution. FCA and FCW may not always alert the driver when the vehicle is approaching another vehicle.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play™ Store** is a trademark of Google, Inc. ©2018 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 13. HomeLink®:** Homelink® is a registered trademark of Gentex Corporation
- 14. iPhone®/iPod®:** iPhone and iPod are registered trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 15. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 16. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 17. Power Trunk / Smart Power Trunk*:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 18. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 19. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 20. Seat belts:** For maximum protection, always wear your seatbelt.
- 21. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 22. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2018 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 23. Sportmatic®** is a registered trademark of Kia Motors America.
- 24. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 25. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 26. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 27. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.




KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- Android Auto™ / Apple CarPlay® Setup* – page 24
- UVO eServices /Activation* – page 24

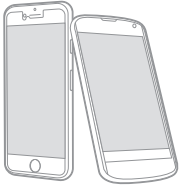

 
- UVO eServices* – page 25
- For further operational information, refer to the Car Multimedia System User's Manual

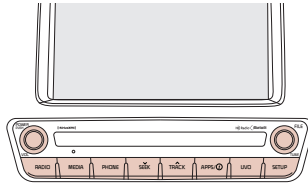

 
- UVO eServices with Premium Navigation* – page 26.
- For further operational information, refer to the Car Multimedia System User's Manual

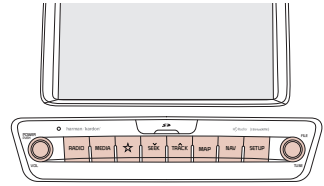

 - Smart Cruise Control with Stop & Go* – pages 22 - 23
- Demonstrate operation

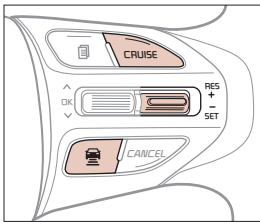

 - Bluetooth® Wireless Technology – pages 20-21
- Demonstrate operation

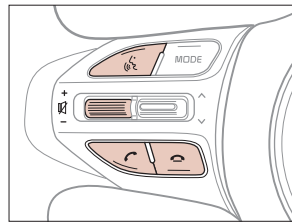

- Tire Pressure Monitoring System (TPMS) – page 5
- Blind-Spot Collision Warning (BCW)* – page 11
- Lane Keeping Assist (LKA)* – page 12
- Engine Start/Stop Button – page 15
- Surround View Monitoring (SVM) System* – page 27
- Clock Setup – page 28
- Electric Parking Brake (EPB) / Auto-Hold* – page 31

- Seat Warmers / Ventilated Seats* – page 34
- Smart Key – page 37
- HomeLink® with Auto-Dimming Rearview Mirror – page 38
- Panoramic Sunroof Operation* – page 40
- Sunvisor – page 40
- Rear-Camera Display* – page 41
- Passenger Airbag Off Indicator – page 46 *if equipped

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours and Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



CADENZA CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY

- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual.)


KEY FEATURE WALKTHROUGH

- Air Conditioning / Automatic Climate Control - page 29 – Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

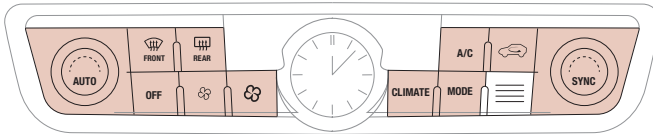


Automatic*

 - Front Seat Headrest Adjustment – page 36

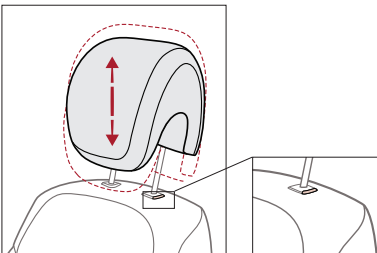

- Windshield Wipers & Washers – page 19

- Move lever Up/Down to change Wiper modes
- Press button to adjust intermittent Wipe
- Pull lever to spray and wipe

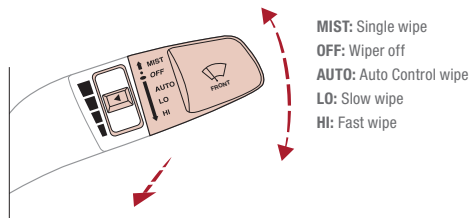


CADENZA NORMAL MAINTENANCE SCHEDULE

P=Perform • R=Replace • I=Inspect^B

 (up to 60,000 miles)^A
MAINTENANCE INTERVALS (MILES)

MAINTENANCE ITEMS	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Drive shafts and boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R
Brake fluid		I		I		I		I
Fuel tank air filter ^D		I		I		I		I
Parking brake (foot type)		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Cooling System				I		I		I
Fuel lines, fuel hoses and connections				I				I
Valve clearance ^E								I
Drive belts (First 60,000 miles, then every 15,000 miles) ^F								I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO eServices App or your account on MyUVO.com (Vehicles equipped with UVO eServices only – See page 24 for setup information)

[‡] If equipped.

^A See the Owner's Manual for complete maintenance schedule.

^B And, if necessary, adjust, correct, clean or replace.

^C If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

^D Fuel filter & fuel tank air filter are generally considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

^E Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

^F The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

 © 2018 Kia Motors America, Inc. All rights reserved.
 Consumer - Roadside Assistance^{†15}: 1-800-333-4KIA (4542)

Part Number: UC190-PS-004

[†]LEGAL DISCLAIMERS ON BACK INSIDE COVER