

CADENZA

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **CADENZA**

Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance^{†16}
1-800-333-4KIA (4542)

See Back Page for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

ESSENTIAL FEATURES

Air Conditioning / Automatic Climate Control	36
Android Auto™ / Apple CarPlay® Setup	30
Audio System – UVO link with Navigation	32
Audio System – UVO link Activation/UVO Assistance*	31
Multimedia USB Port & Power Outlets*	34
Bluetooth® Wireless Technology	28
Cruise Control*	24
Clock	34
ECO Mode (Active ECO)	10
Passenger Airbag Off Indicator	52
Service Interval Mode	09
Smart Cruise Control (SCC) with Stop & Go*	25
Smart Key	42
Tire Pressure Monitoring System (TPMS)	05
Trip Modes / Trip Computer	08
Vehicle Settings	11
Windshield Wipers & Washers	23

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

*IF EQUIPPED



VIDEOS & QR CODES	02
-----------------------------	----

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
Highway Driving Assist (HDA)*	06
Safe Exit Assist (SEA)*	07

VEHICLE SETTINGS*

LCD Instrument Cluster Modes	08
Trip Modes / Trip Computer	08
Service Interval Mode	09
Drive Mode Integrated Control System*	10
ECO Mode (Active ECO)	10
Vehicle Settings	11
Sound Mood Lamp* (Vehicles with Navigation System)	11

DRIVER'S PANEL

Electronic Stability Control (ESC)	12
Hill-Start Assist Control (HAC)	12
Blind-Spot Collision-Avoidance Assist (BCA)	13
Rear Cross-Traffic Collision-Avoidance Assist (RCCA)	14
Blind-Spot View Monitor (BVM)*	15
Lane Keeping Assist (LKA)	16
Lane Following Assist (LFA)	17
Forward Collision-Avoidance Assist (FCA)	18
Power Windows, Window Lock & Central Door Lock, Rear Door Locks	19
Power Folding Outside Mirrors	19
Power/Heated Outside Mirrors	19
Automatic Door Lock/Unlock	19
Fuel Filler Door Release Button	19
Reverse Parking Aid Function*	19
Trunk Release Button	20
Instrument Panel Dimmer	20
Engine Start/Stop Button	20

STEERING WHEEL CONTROLS

Manual Tilt/Telescoping Steering Wheel*	21
Power Tilt/Telescoping Steering Wheel*	21
Headlights & High Beams	22
Turn Signals	22
Heated Steering Wheel*	22
Windshield Wipers & Washers	23
Lifting Wipers/Wiper Service Mode	23
Cruise Control	24

STEERING WHEEL CONTROLS (CONTINUED)

Smart Cruise Control (SCC) with Stop & Go	25
Navigation-Based Smart Cruise Control (NSCC)*	26
Audio Controls	27
Bluetooth® Wireless Technology	28

AUDIO SYSTEM

Android Auto™ / Apple CarPlay® Setup	30
UVO link Activation	31
UVO Assistance*	31
UVO link with Navigation	32

CENTER PANEL

Surround View Monitoring (SVM) System*	33
Clock	34
Multimedia USB Port, Power Outlets & USB Charger Ports	34
Electric Parking Brake (EPB)	35
Auto Hold	35
Automatic Climate Control	36
Automatic Gear Shift / Sportmatic® Shifting	37
Wireless Smartphone Charging System	38
Heated Steering Wheel*	39
Seat Warmers / Ventilated Seats*	39

SEATING

Power Adjustable Driver's Seat	40
Driver Position Memory System*	40
Front Seat Headrest Adjustment	41

OTHER KEY FEATURES

Smart Key	42
HomeLink® with Auto-Dimming Rearview Mirror	43
Map/Room Lamps	44
Panoramic Sunroof with Power Sunshade	45
Sunvisor	46
Rear View Monitor (RVM)	46
Parking Distance Warning-Reverse	47
Reverse Parking Collision-Avoidance Assist (PCA)*	47
Trunk / Smart Trunk*	48
Child-Protector Rear Door Locks	49
Fuel Cap / Malfunction Indicator (Check Engine Light)	49
Hood Release Lever and Latch	50
Driver Attention Warning (DAW)	51

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	52
Seat Belts	52

LEGAL DISCLAIMERS	Inside Back Cover
-----------------------------	-------------------

MAINTENANCE CHART	Back Cover
-----------------------------	------------

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning.
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet


Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators and Warning Lights
- F** LCD – Gear Shift Position, Odometer, Trip Modes / Trip Computer, Driving Assist
- G** Fuel Gauge

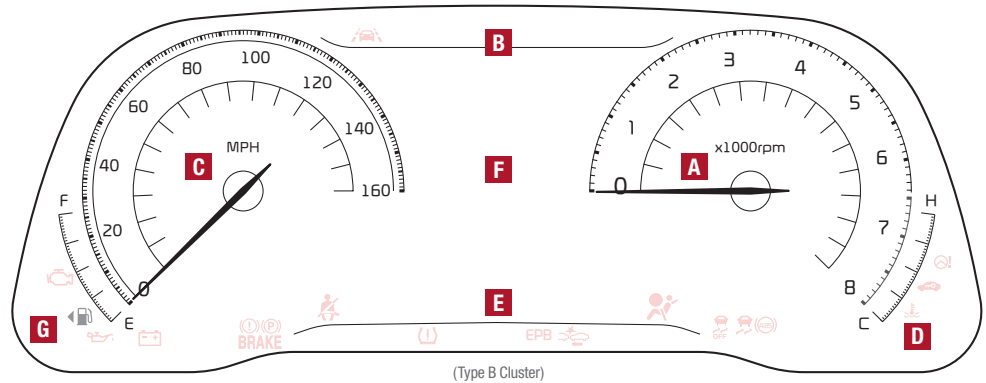


Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

  This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

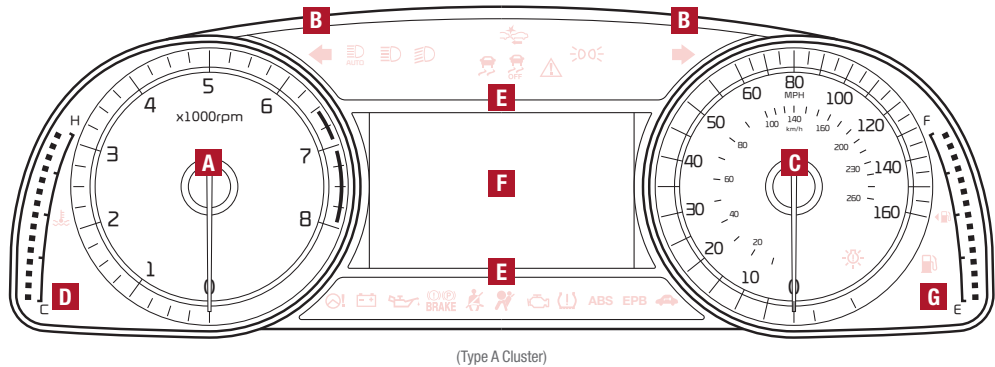



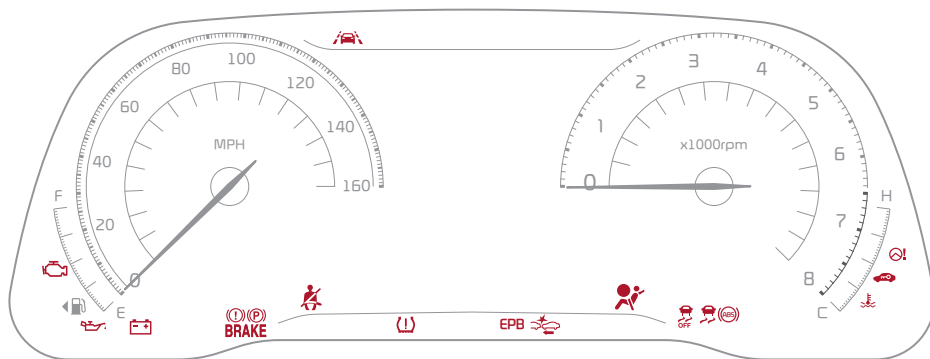




































Indicators and Warning Lights






Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

 ECO Mode Indicator*	 Low Tire Pressure Indicator / Tire Pressure Monitoring System (TPMS) Malfunction Indicator	 Smart Cruise Control (SCC) with Stop & Go Radar Warning*
 SPORT Mode Indicator*	 Electronic Stability Control (ESC) Indicator	 Smart Cruise Control (SCC) with Stop & Go Warning Indicator*
 SMART Mode Indicator*	 Electronic Stability Control (ESC) OFF Indicator	 Door Ajar Warning Indicator*
 High Beam Assist Indicator*	 Parking Brake & Brake Fluid Warning Indicator	 Trunk Open Warning Indicator*
 High Beam Indicator Light	 Electronic Power Steering (EPS) Warning Indicator	 Immobilizer Indicator*
 Low Beam Indicator Light	 Airbag Warning Indicator	 Auto Hold Indicator*
 Light ON Indicator	 ABS Anti-Lock Braking System (ABS) Warning Indicator	 CRUISE Cruise Indicator*
 Master Warning Indicator*	 EPB Electric Parking Brake (EPB) Warning Indicator*	 SET Cruise SET Indicator
 Engine Oil Pressure Warning Indicator	 ABS  Electronic Brakeforce Distribution (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)	  Low Fuel Level Warning
 Charging System Warning Indicator	  Lane Keeping Assist (LKA) Indicator*	  Icy Road Warning*
 Seat Belt Warning Indicator	  Forward Collision-Avoidance Assist (FCA) Indicator*	  LED Headlamp Warning*
 Malfunction Indicator		


Tire Pressure Monitoring System (TPMS)^{†24}

 
 The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator  illuminates if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS, or the outside temperature becomes significantly lower.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator **A** showing which tire is underinflated.

Inflate tire(s) to specifications using an accurate tire pressure gauge to turn off Low Tire Pressure Light **A**. See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate; see dealer for service.

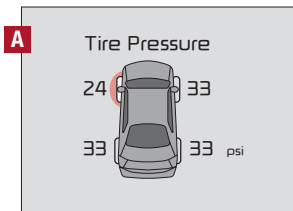

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can snap the QR Code to view a video or refer to the Owner's Manual. Images are for illustrative purposes only. Actual image or feature may vary.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for at least 20 minutes. Tires are not hot in temperature from direct sunlight or heat.
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle.
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather.

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened.
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

Tire Pressure Monitoring System Video



www.youtube.com/KiaFeatureVideos

Fuel Economy Video



www.youtube.com/KiaFeatureVideos

Highway Driving Assist (HDA)*†6a

The Highway Driving Assist (HDA) system is designed to adjust the speed of the vehicle when driving on limited/controlled access highways. The system can adjust the vehicle's speed based on available highway speed information. The automatic speed setting mode is designed to set the speed automatically by adjusting to the current speed limits of the highway vehicle is travelling on.

To enable the HDA system, go to Vehicle Settings* in the audio head unit. Go to Drive Assistance > Driving Assist > Highway Driving Assist.

To activate the HDA, turn Smart Cruise Control (SCC) on by pressing the Cruise button **A** on the Steering Wheel controls.

The HDA system will operate only when these conditions are met:

- When the SCC speed is set to current highway and controlled/limited access roads
- The vehicle is traveling slower than 95 mph
- When driving on limited access highways, such as, Interstate, Federal and State freeways
- When SCC is on and operating

When the HDA system is activated and the conditions are met, the Instrument Cluster indicator light **B** will illuminate green. If the conditions are not met, the HDA system will be in standby mode and the indicator light **B** will illuminate white.

 
When in operation, and if both lanes are recognized, a display **C** will show the lanes illuminated white and the steering wheel indicator illuminated green.

If HDA is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit), the HDA system will enter the automatic speed setting mode. The set speed will be displayed **D** in green and an audible alert will sound.



REMINDERS:

- If HDA is enabled, Lane Following Assist (LFA) automatically activates. To disable LFA temporarily, press the LFA button on the Steering Wheel controls **E**
- Current highway speeds and controlled or limited access roads information may vary. Future navigation updates may change this information. See owner's manual for more information
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode
- When the ignition is cycled, the system returns to its previous state, on or off

Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. See the Owner's Manual for more detailed information, limitations and conditions.

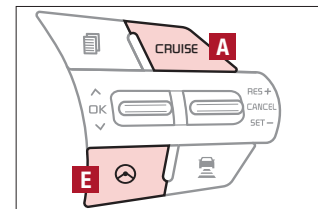

(Type B Steering Wheel controls)

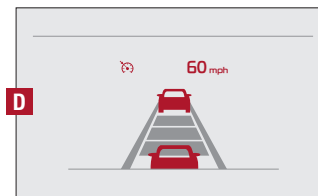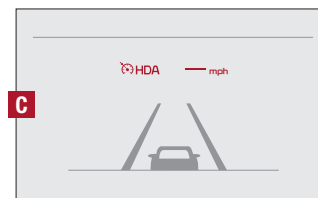  


Images are for illustrative purposes only and may not reflect actual feature or operation.

Safe Exit Assist (SEA)^{†6}

The Safe Exit Assist (SEA) System can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster **A** and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped.

To turn on the SEA System, go to the Vehicle Settings on the audio head unit, select Driver Assistance, then Blind-Spot, and select Safe Exit Assistance.

 
For more information on the Safe Exit Assist (SEA) System, refer to the Owner's Manual.

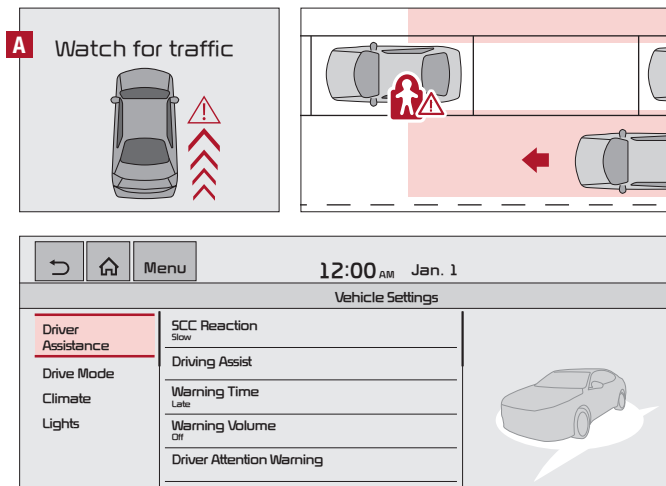



Images are for illustrative purposes only and may not reflect actual feature or operation.


LCD Instrument Cluster Modes*


Press Mode button **A** to scroll through different LCD Instrument Cluster Modes:

 
 **Trip Computer Mode:** Displays driving information for Fuel Economy, Accumulated Info, Drive Info, Digital Speedometer and Drive Mode

 **Turn-by-Turn Mode:** Displays information on Route Guidance, Destination Info

 **Driving Assist Mode:** System settings for Smart Cruise Control (SCC)*, Lane Keeping Assist (LKA), Lane Following Assist (LFA)*, Highway Driving Assist (HDA)*, Driver Attention Warning (DAW) and TPMS

 **Theme Selection Mode:** Select from various themes for the Instrument Cluster display – Auto, Pure Insight, Empowered Red, Refreshing Green

 **Master Warning:** Informs of warning messages related to the vehicle when the systems are not operating normally (only appears when there's a feature malfunction)

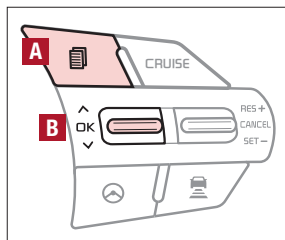

(Type A; Controls located on Steering Wheel)


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Trip Modes / Trip Computer

 
The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A**.

When in the Trip Computer mode , press the Select/Reset/OK button **B** up/down to cycle to the desired menu. When displaying the Tripmeter screen, press and hold the OK button **B** to reset the Tripmeter to zero.

REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

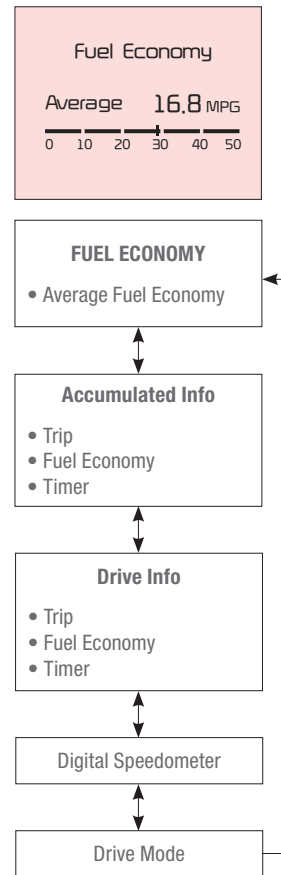

Service Interval Mode

To enter Service Interval Mode, go to the Vehicle Settings on the audio head unit, press Vehicle > Cluster > Service Interval. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following will be displayed: **Service required.**

 
To reset the Service Interval Mode system, press and hold the OK button **B** for more than 1 second.

To turn **Service In OFF**, go to User Settings.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the Select/Reset button **B** up/down and scroll to Service Interval. Press again to enter
- Press the Select/Reset button **B** and toggle to ON, then press again to set. Then press the Select/Reset button **B** to scroll and select the desired miles or months for your next service
- Press the OK button **B** to enter

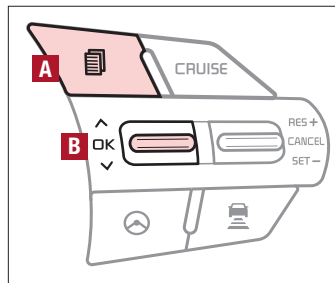

(Type A; Controls located on Steering Wheel)

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

LCD Display Video



www.youtube.com/KiaFeatureVideos

 
LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System

SMART, ECO, COMFORT and SPORT drive modes **A** may be changed according to the driver's preference or road conditions. To cycle through drive modes, rotate the DRIVE MODE knob **B**.

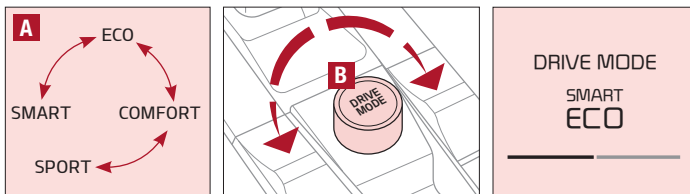

(Knob located below Gear Shift)

COMFORT Mode – The system's default mode is COMFORT mode and may not display on the instrument cluster nor the audio system's screen. (If set to ECO and ignition is cycled, the system will return to ECO mode).

ECO Mode – An ECO indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **B** again to change the selection to another setting.

SPORT Mode – A SPORT indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **B** again to change the selection to another setting.

SMART Mode – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). A SMART indicator will illuminate on the instrument cluster and change colors or shades, depending on the current driving style. To deactivate, rotate the DRIVE MODE knob **B** again to change the selection to another setting.

For more information on ECO Mode, refer to your Owner's Manual or contact your local dealership.

ECO Mode (Active ECO)

The Active ECO system is designed to improve fuel economy by controlling several vehicle components. When activated, it modifies drivetrain operations such as engine power and transmission.

To turn ON, rotate the DRIVE MODE knob **B** and scroll through options until in the ECO mode. The ECO mode indicator light in the LCD cluster will illuminate, indicating that the vehicle is in ECO mode and Active ECO is operating. The Active ECO system will remain on even when the ignition is cycled.

To turn the Active ECO system OFF, rotate the DRIVE MODE knob **B** again and change to another mode.

REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- Steering effort may be slightly increased in Sport mode
- When SPORT mode is selected, fuel economy may decrease

QR CODE

Drive Mode Integrated Control System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

When the Engine Start/Stop button is turned off, the system will default to COMFORT mode if the vehicle was last in Sport mode.

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

Vehicle Settings

To enter the Vehicle Settings mode in the audio head unit screen, press the SETUP key on the audio head unit. Then press the Vehicle icon **A**, which will take you to the Vehicle Settings screen **B**. Use the touchscreen to navigate through the menus.

Vehicle Settings modes:

Driver Assistance: SCC Reaction, Driving Assist, Warning Time, Warning Volume, Driver Attention Warning, Forward Safety, Lane Safety, Blind-Spot Safety, Parking Safety

Drive Mode*: Drive Mode Change Alert* (Detailed Alert, Simple Alert, Off)

Climate: Recirculate Air, Defog/Defrost Options, Climate Features*

Lights: Ambient Light, One Touch Turn Signal*, Headlight Delay*, High Beam Assist*

Door: Auto Lock, Auto Unlock, Two-Press Unlock, Smart Trunk

Cluster: Service Interval, Energy Consumption Reset, Content Selection, Cluster Voice Guidance Volume*, Welcome Sound

Convenience: Welcome Mirror/Light

Seat: Seat Position Change Alert, Smart Posture Care*, Heated/Ventilated Features*, Seating Easy Access, Rear Seat Heating Control*

Reset: Reset Vehicle Settings to Factory Defaults

For more information, refer to the Car Infotainment System Quick Reference Guide.

Sound Mood Lamp*

The vehicle's speaker lights can be customized, including setting the lights to change according to the mood of the music playing.

 
To change the settings, go to All Menus in the audio head unit. Select Sound Mood Lamp and adjust the different settings **C**.

QUICK TIP


To reset back to the default settings, press the Reset button on the audio head unit screen.

REMINDERS:

- Mood Lights cannot be changed while vehicle is moving
- Park vehicle in a safe location before changing the settings
- When any door is opened, the lighting turns off

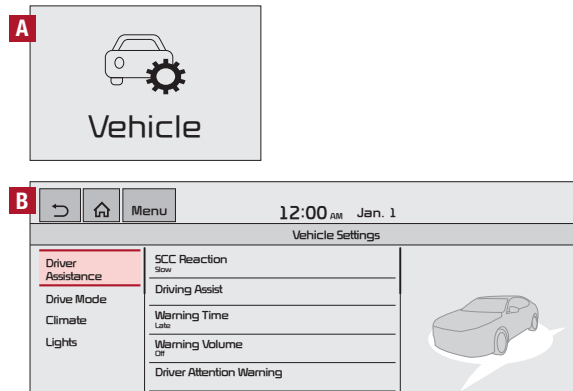

Images are for illustration purposes only and may not reflect actual operation.

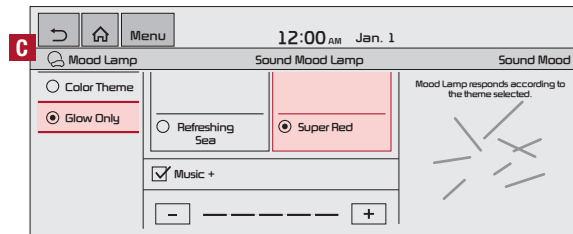 


Images are for illustration purposes only and may not reflect actual operation.

Electronic Stability Control (ESC)*†8

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press ESC button **A** to disable Traction Control in ESC (a “Traction Control Disabled” message appears).

 To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press again to turn ON.

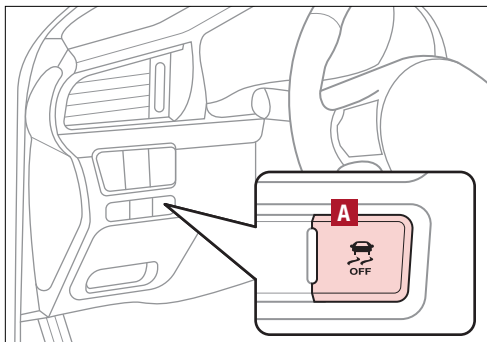

(Button panel located left of Steering Wheel)

REMINDERS:

- ESC is active by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)*†8

HAC is designed to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position. HAC does not replace the need to apply brakes while stopped on an incline.

QUICK TIP

When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.

Blind-Spot Collision-Avoidance Assist (BCA)^{†6a}

The BCA system is designed to help alert the driver before changing lanes. The BCA system uses a camera on the front windshield and rear radar sensors in the rear bumper to help alert the driver and temporarily apply braking in certain situations if it detects an approaching vehicle in the driver's blind spot area.

To turn the BCA system on, go to Vehicle Settings* on the audio head unit. Select Driver Assistance > Blind Spot Safety. Then select Active Assist, Warning Only or Off.

Deactivate the BCA system by pressing the BCA off button **A** on the Driver's Panel.

Warning Only – The Warning Only setting will activate the 1st and 2nd stage alerts:

1st-stage: When another vehicle is detected within the BCA system warning boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors **C**.

2nd-stage: When the 1st stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

To set the initial warning activation time, go to the settings > Driver Assistance > Warning Time. Then select the Normal or the Late option.

Active Assist – When Active Assist is selected in the settings, the BCA may activate the Electronic Stability Control (ESC) and temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle. A warning message may appear on the Instrument Cluster LCD.

Conditions for the BCA system to operate:

 
 
 
- Warnings - When the vehicle is traveling faster than 20 mph
- Active Assist - When the vehicle is traveling at least 40 mph
- Other vehicle detected on the side of or the rear of the vehicle

QUICK TIP

The BCA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit

REMINDERS:

- The BCA system will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCA is ON and the ignition is cycled, the BCA system returns to its previous state

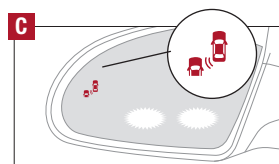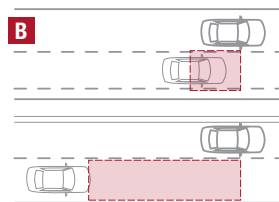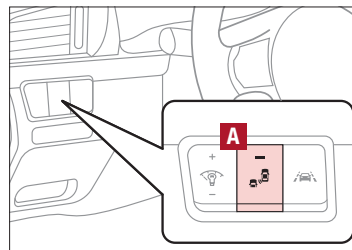

QR CODE

Blind-Spot Collision-Avoidance Assist (BCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

The BCA system is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

For more information, please refer to the Owner's Manual.

Images are for illustrative purposes only and may not reflect actual operation.

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)^{†6}

If the RCCA system sensors detect approaching vehicles from the left or right side **A**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen **B**.

 
 
RCCA is designed to operate under the following conditions::

- When the gear shift is moved into (R) Reverse
- When the vehicle is moving less than 6 mph

REMINDERS:

- When the BCW system is ON and the ignition is cycled to OFF then ON again, the BCW system returns to ON
- The RCCA feature can be turned OFF/ON in User Settings and will remain in OFF/ON as selected
- When vehicle power is cycled, the RCCA will remain in the previous state
- The RCCA system will show a warning if the approaching vehicle speed is between 2.5-22 mph within sensing range. See owner's manual for other conditions.

The RCCA system is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. For more information, please refer to the Owner's Manual.

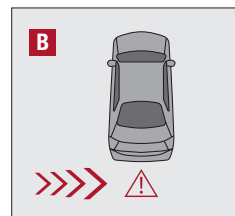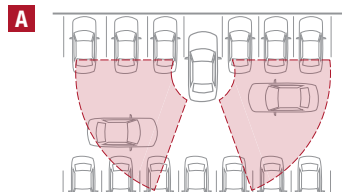

Above images are for illustrative purposes only and may not reflect actual operation.

 
 
Blind-Spot View Monitor (BVM)*†6

The Blind-Spot View Monitor (BVM) system is designed to display the rear and side of the vehicle blind spot areas in the Instrument Cluster LCD when the system is activated.

To turn the BVM system on, go to the Vehicle Settings **A** on the audio head unit and select Vehicle > Driver Assistance. Then select Blind-Spot Safety > Blind-Spot View.

The BVM system will operate when the Engine Start/Stop button is on and the turn signal is activated.


The BVM system will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

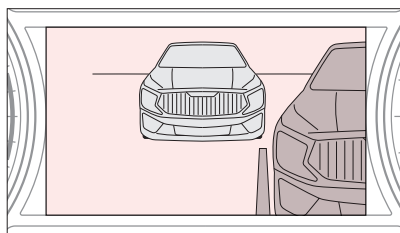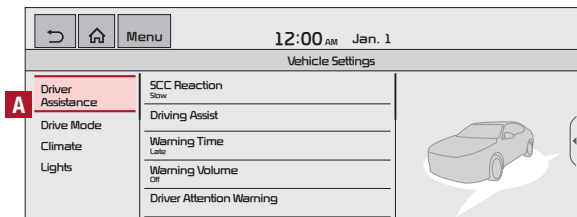


(Instrument Cluster Display)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Lane Keeping Assist (LKA)^{†6}

 With the Engine Start/Stop button in the ON position, press the LKA button **A** to turn system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when vehicle is traveling less than 40 mph and the system does not detect the lane markers. When system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

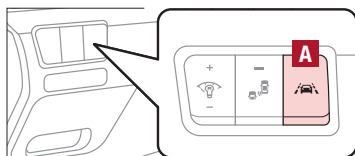

(Button panel located left of Steering Wheel)

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning (LDA) alert on the instrument cluster. If the vehicle continues to move outside of the lane, the LKA may apply steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the button is depressed to ON. To switch between LKA modes, go to Vehicle Settings on the audio head unit, select Vehicle, Driver Assistance and Lane Safety. Then select Lane Keeping Assist / Lane Departure Warning / Off.

All systems will operate under the following conditions:

- The vehicle exceeds approximately 40 mph
- The LKA system recognizes both lane markers the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIP

The LKA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit



When the LKA sensor detects the lane traveling in, both lanes are illuminated



When the LKA sensor does not detect the lane traveling in the lanes are not illuminated



When the LKA sensor detects the vehicle moving outside of the lane traveling in, a yellow indicator will illuminate either on the left or right lane (shown in both images above)



REMINDERS:

- LKA will not issue a warning if the turn signal or hazard signal is activated
- If the LKA button is ON and ignition is cycled, the system will turn ON again. If the LKA button is OFF, the system remains OFF
- The LKA/LDW are not substitutes for safe and proper driving. Always drive safely and use caution.
- LKA/LDW may not always alert the driver if the vehicle about to be driven outside of its lane. Refer to the Owner's Manual for more information.

QR CODE

Lane Keeping Assist (LKA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

The Lane Keeping Assist (LKA) / Lane Departure Warning are not substitutes for safe and proper driving. Always drive safely and use caution. LKA/LDW may not always alert the driver if the vehicle is about to be driven outside of its lane.


Images are for illustrative purposes only and may not reflect actual feature or operation.

Lane Following Assist (LFA)^{†6}

The Lane Following Assist (LFA) system monitors lane lines and adjusts the steering to help position the vehicle in the center of the lane.

To enable or disable the LFA system, go to Vehicle Settings on the audio head unit. Press Settings, Vehicle > Driver Assistance > Driving Assist > Lane Following Assist.

To activate or deactivate the LFA system press the LFA button **A** on the Steering Wheel.

When the LFA system is activated and detects lane markers and/or a preceding vehicle, the LFA indicator  will illuminate green if the steering assist mode is on, or white if the steering assist mode is off.

 
The LFA system will operate only when these conditions are met:

- When the Smart Cruise Control is on and operating
- The vehicle is traveling slower than 95 mph


REMINDERS:

- If the ignition is cycled, the LFA returns to its previous state, on or off
- The LFA system recognizes the lane the vehicle is traveling in
- The LFA system is not a substitute for safe and proper driving. Always drive safely and use caution

See the Owner's Manual for more detailed information, limitations and conditions.

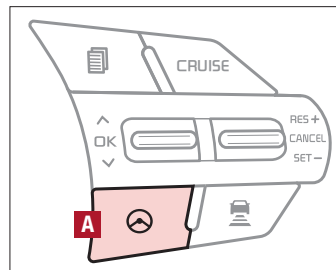

(Button on right of steering wheel)

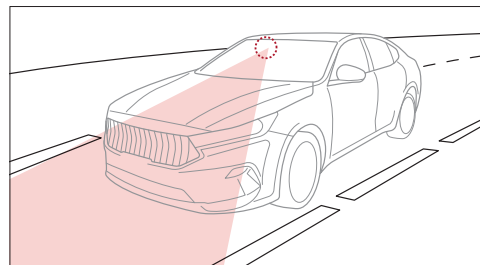 

Images are for illustrative purposes only and may not reflect actual feature or operation.

Forward Collision-Avoidance Assist (FCA)^{†6}

FCA is designed to help alert the driver and, under certain conditions, temporarily apply braking when rapidly approaching a vehicle that is slowing down, braking or stopped or if it detects a pedestrian in front of the vehicle. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front, emitting an audible warning and visual alert on the instrument cluster.

If the system detects that the collision risk has increased, the FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA can be enabled by going to the Vehicle Settings in the audio head unit. Go to Vehicle > Driver Assistance > Forward Safety and select Active Assist, Warning Only or Off.

The Warning Time can be adjusted by going to Vehicle > Driver Assistance > Warning Time and Normal or Late.

The FCA/FCW will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling more than 5 mph
- Electronic Stability Control (ESC) is ON

QUICK TIP

The FCA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit

The Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW) are not substitutes for safe and proper driving. Always drive safely and use caution. FCA and FCW may not always alert the driver when the vehicle is approaching another vehicle.*

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Driver's & Passenger's Window Auto Up/Down*

 
QUICK TIP

Press button again to stop Auto Up/Down function.


B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows and Rear Sunroof passenger controls

REMINDER: When pressed **C**, window controls for the Rear Passenger Windows are disabled.

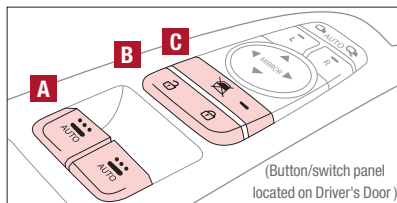

 Button configuration may vary depending on vehicle model.



QR CODE

Forward Collision-Avoidance Assist (FCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

Rear Door Locks

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.

QUICK TIP

To open the Rear Doors, pull the inner door handles two times

 
Power Folding Outside Mirrors

Press the L or R buttons **A** to select the mirror to adjust. Press button arrows **B** left/right or up/down to adjust mirror position.

Toggle button **C** left/right to unfold/fold the outside rearview mirrors.

Mirrors fold/unfold with the following conditions:

- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed
- Driver approaches the vehicle with the Smart Key*

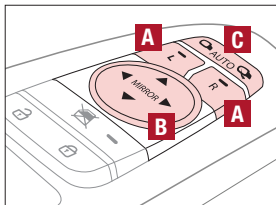

(Button/switch panel located on Driver's Door)

Button configuration may vary depending on vehicle model.

QUICK TIP

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMEMINDER: When the mirror button **C** is in the center, press the Lock button on the Smart Key to automatically fold the mirrors

Power/Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button* is located on climate control system panel.

 
Automatic Door Lock/Unlock

When the gear shift is moved into or out of P (PARK), all doors will Lock/Unlock. Go to the Vehicle Settings in the audio head unit, then select Vehicle > Door > Auto Lock / Auto Unlock to turn Auto Door Lock/Unlock on/off.

Fuel Filler Door Release Button

Press the Fuel Door Release button **D** to release the fuel door.

(Button located left of Steering Wheel)

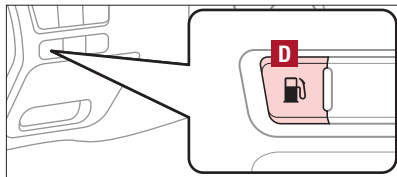

Reverse Parking Aid Function*

 
 
When the gear shift lever is moved into R (Reverse) and with the L or R mirror buttons **E** will rotate downward to aid in reverse parking.

To turn ON the Reverse Parking Aid Function, depress either L or R mirror buttons **F**.

To turn OFF, depress the same buttons again.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- The L or R mirror buttons are not depressed.

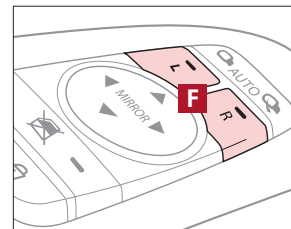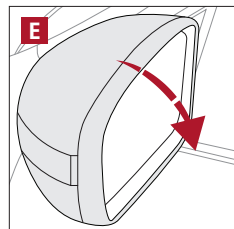


(Buttons panel located on Driver's Door)

REMEMINDER: When the outside rearview mirror buttons are not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Trunk Release Button

 Press the **C** button to open the trunk.

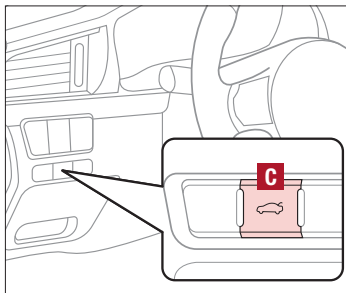


(Button panel located left of Steering Wheel)

Instrument Panel Dimmer

Press the button **E** (+) or (-) to adjust the brightness of the instrument panel illumination.

 REMINDER: Dimmer does not change brightness when lights are turned off.

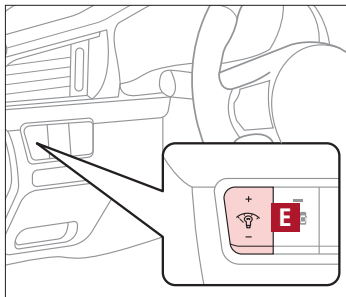

(Button panel located left of Steering Wheel)

 
Engine Start/Stop Button*†9

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in (P) Park or (N) Neutral

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, the Smart Key fob must be in the vehicle.

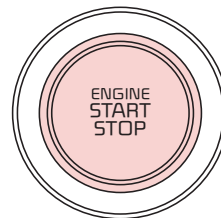

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once

ON position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the ENGINE START/STOP button again (red light)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (red light)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning engine on may discharge the vehicle's battery.

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDEES:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press

STEERING WHEEL CONTROLS

 
Manual Tilt/Telescoping Steering Wheel^{†*†23}

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and then distance **C**.

When finished, pull the Lock-Release Lever **A** up to lock Steering Wheel in place.

QUICK TIP


It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

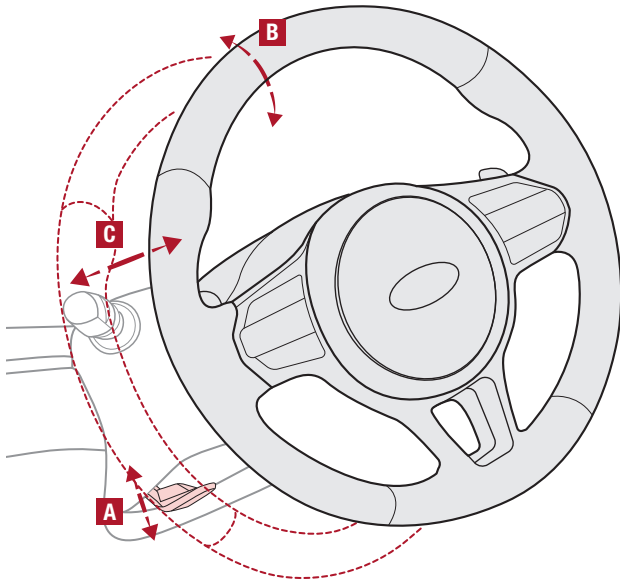

Power Tilt/Telescoping Steering Wheel^{†*†23}

To adjust the Steering Wheel angle **D**, move the switch **E** up or down.

 
To adjust the Steering Wheel distance **F**, move the switch **E** forward or backward.

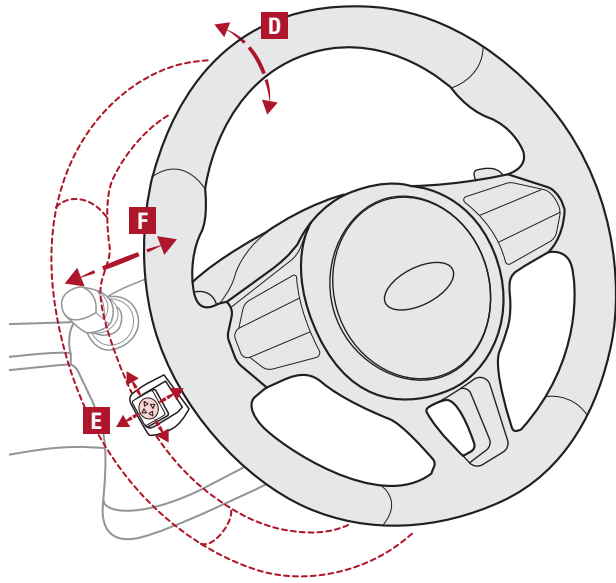

Headlights & High Beams

To operate:

 - Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

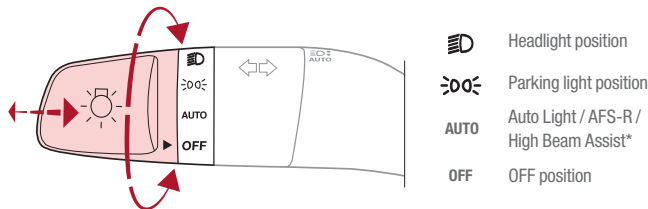


AUTO Light position — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light from other vehicles and road conditions.

To enable HBA, go to the audio head unit Vehicle Settings > Vehicle > Lights > HBA

 
To activate HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

REMEMINDERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA flash the high beams
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

Turn Signals

To operate Turn Signals – Move lever Up/Down for Right/Left Turn Signal.

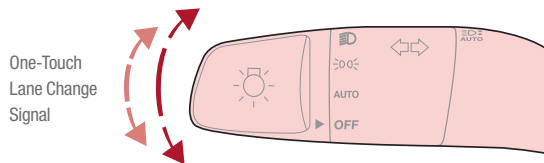

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to Vehicle Settings in the audio head unit and then Vehicle > Lights > One-Touch Turn Signal.

 
For more information on the Vehicle Settings, please refer to the Car Infotainment System Quick Reference Guide.

Heated Steering Wheel*

While the Engine Start/Stop button is in the ON position, press **B** to turn the steering wheel heater ON. The button indicator will illuminate.

The steering wheel heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

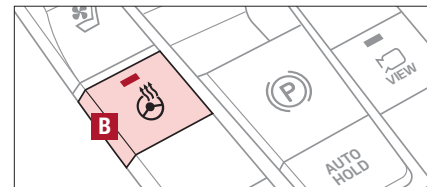

(Button located below gear shift)

Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change Wiper modes
- Press button **A** to adjust intermittent Wipe
- Pull lever to spray and wipe

 
Auto Control (Rain Sensing)

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To adjust the Auto Rain Sensing speed setting, move the speed control switch **A** up/down.

QUICK TIPS

- With the ENGINE START/STOP button in the ON position and the wiper switch is in AUTO mode, the wiper will operate once to perform a self-check of the system
- Moving lever to HI increases Intermittent wipe frequency and wipe speed. Moving lever to LO decreases frequency of wipes.
- When in AUTO mode, pressing button **A** up increases Intermittent wipe frequency and wipe speed. Pressing button down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

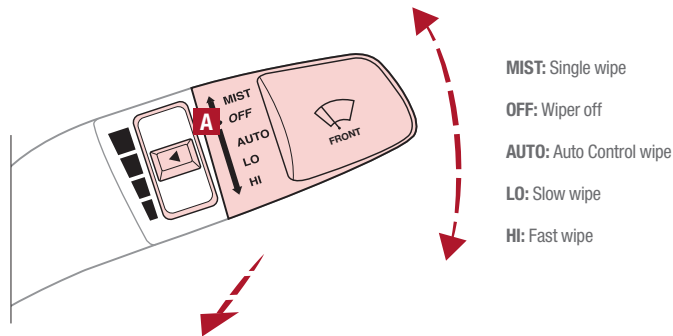


Lifting Wipers / Wiper Service Mode


To inspect or replace the windshield wiper blades to prevent damaging the hood, the blades need to be moved to the service position **A**.

With the ignition ON, then turning the ignition OFF, within 20 seconds move the wiper switch to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

 To return wipers to normal position, turn the ignition ON, then activate MIST.

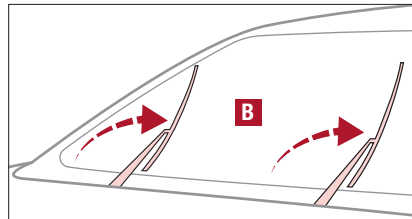

Cruise Control^{†21}

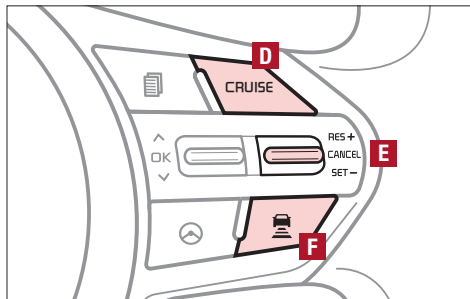 

(Type A shown)

D Cruise Control ON/OFF button: Press to turn the Cruise Control on/off

E Cruising Speed button: Press + up to increase and set speed.
Press – down to decrease and set speed

F Pause/Resume button*: Press to pause Cruise Control. Press again to resume Cruise Control

F Switch modes: To switch between standard Cruise Control and Smart Cruise Control (SCC), press and hold for more than two seconds

QUICK TIPS

- Cruise Control is designed to function above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

Images are for illustrative purposes only. Buttons and button arrangement may vary on actual vehicle.

Smart Cruise Control (SCC) with Stop & Go*†6a,21

The Smart Cruise Control (SCC) with Stop & Go system is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With the SCC on and activated and the vehicle-to-vehicle distance set, when the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

To set/adjust the SCC speed:

- Accelerate/decelerate to the desired speed
- Press the CRUISE button **A** to turn system ON and set speed. The CRUISE indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- Press the +/- button **B** up/down to increase/decrease the set speed. The indicator light, set speed and vehicle-to-vehicle distance will illuminate on the instrument cluster's LCD screen

To adjust the sensitivity of the SCC system: Press the mode button **C** on the Steering Wheel. With the Move/OK button **D**, select Drive Assistance, then SCC Response. Then select Fast, Normal or Slow.

To set the vehicle-to-vehicle distance: Press the SCC button **E** on the steering wheel. Scroll through the selections and the vehicle-to-vehicle distance changes and displays on the Instrument Cluster LCD.

To pause/resume SCC operation: Press the button **B** to pause or resume Cruise Control.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

To switch modes: Press and hold button **E** for more than two seconds to switch between standard Cruise Control and Smart Cruise Control (SCC).

QUICK TIPS

- Pressing the brake pedal cancels the SCC operation
- For the SCC System to operate:
 - When no vehicle is in front, you must be traveling at a minimum speed of 20 mph
 - When following a vehicle, there is no minimum speed requirement
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle detected in front stops for more than 3 seconds, the SCC system will disable

QR CODE

Smart Cruise Control (SCC) with Stop & Go Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

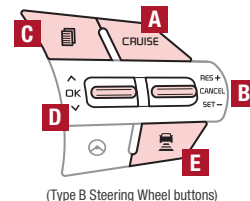

REMINDERS:

- If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See Owner's Manual for other conditions
- CRUISE indicator must be ON in order to operate SCC
- The cruise control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starting
- Keep the system off when not in use to avoid setting a speed which the driver is not aware of

Navigation-Based Smart Cruise Control (NSCC)*†6

Navigation-Based Smart Cruise Control (NSCC)* can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

To turn on the NSCC system, go to Vehicle Settings in the audio head unit, by selecting Driving Assistance, Driving Assist then Highway Auto Curve Slowdown. When the SCC is on and operating, and NSCC is turned on, then NSCC is enabled and the AUTO icon* **A** will illuminate white on the Instrument Cluster.

 
When the NSCC detects a curve ahead, activates and reduces the vehicle speed, the AUTO icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

REMINDERS:

- NSCC operates only when SCC is turned on and operating
- When the ignition is cycled, the system returns to its previous on or off state
- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways


For further system operation, refer to the Owner's Manual. For more setting information, refer to the Car Infotainment System Quick Reference Guide.

The NSCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

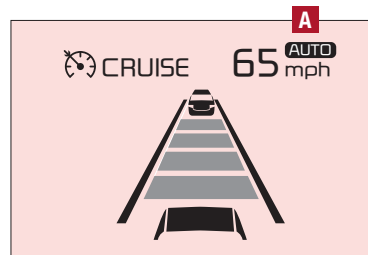

(Display on LCD screen)

 Audio Controls†21

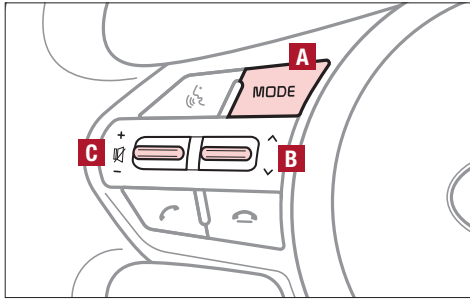

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®†19/Media Modes

Audio System ON: Press to turn power on

B Seek/Preset button:

FM/AM/SiriusXM® – Press up/down to advance through Preset Stations. Press and hold to auto seek

Media Modes – Press up/down to move track up/down. Press and hold to fast forward / rewind (except for *Bluetooth®* Audio)

 
C Volume buttons: Press up/down to raise/lower volume

Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details. For further audio system operations, refer to pages 30-32.

Bluetooth® Wireless Technology†5,21

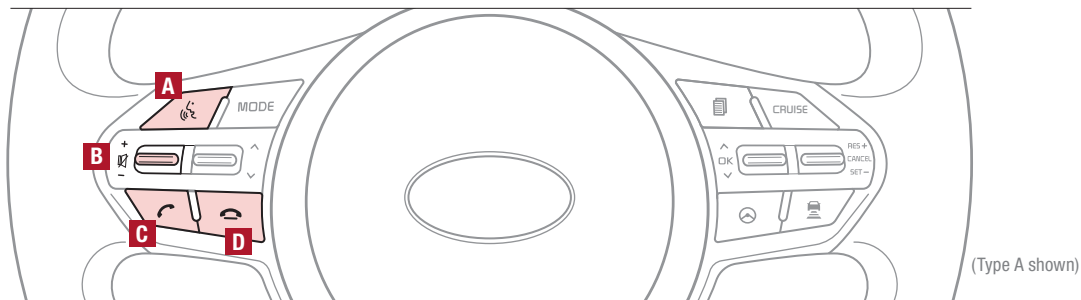

- A Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition
- B Volume button:** Press to raise/lower speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth*® streaming media
- C Receive/Place Call button:** Press to receive/place calls. In vehicles with navigation, if no phone is paired, press button to pair a phone
- D End Call button:** Press to end a call or cancel a function

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, if equipped, refer to the Car Infotainment System Quick Reference Guide. For *Bluetooth*® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for *Bluetooth*® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific *Bluetooth*® Wireless Technology phone pairing and operation instructions.

QUICK TIPS

- The system can register or pair multiple *Bluetooth* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- When using the voice command feature, wait for the system BEEP before speaking the command.
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and *Bluetooth*® Wireless Technology chip programming, functionality may differ from one phone to another

Bluetooth® Wireless Technology^{+5,21} (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- **Option 1:** Press the Receive/Place Call button **C** (displays the keypad or call history)
- **Option 2:** Press the Talk button **A**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips: :

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emoji's or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Bluetooth® Music Streaming: If the Bluetooth® music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too soft or too loud
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Android Auto™†3 / Apple CarPlay® Setup†4

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store†11
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device

How to start Android Auto™:

 
1. Press the SETUP key on your audio system's control panel
2. Press the DEVICE CONNECTION button, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

For further system operation, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key
2. Press the DEVICE CONNECTION button, select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

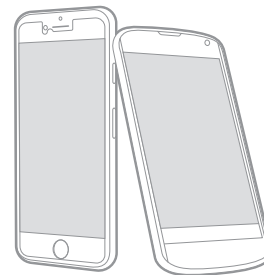

REMINDERS:

- Android Auto™ compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s)
- Apple CarPlay® compatibility requirements: Apple Lightning cable, latest iOS software (above iOS 10) and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

UVO link Activation^{†1}

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press UVO or Service Activation
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter Smartphone Phone Number or Email address to receive a verification code, then press SUBMIT

4a. Follow these steps if using your phone number to receive your verification code

- a. Check your phone for an SMS (text message)
- b. Open the link in your SMS. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the phone number as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press “I have entered my PIN.” A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

REMINDER: This vehicle is not equipped with over-the-air system updates.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For more UVO link information, refer to the Car Infotainment System Quick Reference Guide.


4b. Follow these steps if using your email to receive your verification code:

- a. Check your email. The email may be from reset@notifications.myuvo.com
- b. Open link inside email. A page will open requesting that you create your account


Note: If you already have a Kia Owners Portal account using the email as your login ID, you will need to provide your password prior to receiving the verification code

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press “I have entered my PIN.” A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

 
UVO Assistance*

Virtual Assistant  **A** - Press to connect to the UVO Center to hear information about the UVO features

UVO Voice Local Search  **B** - Press to connect to the search function to find points of interest or other locations, like “cafe”


Roadside Assist  **C** - Press to connect to the UVO Center where you can request vehicle towing services

REMINDER: These buttons may be located in the rearview mirror or the overhead console.

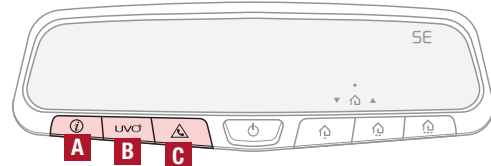

UVO link^{†1} with Navigation^{†13}

 FM/AM/SiriusXM^{®†19}/Media (USB, *Bluetooth*[®] Audio)

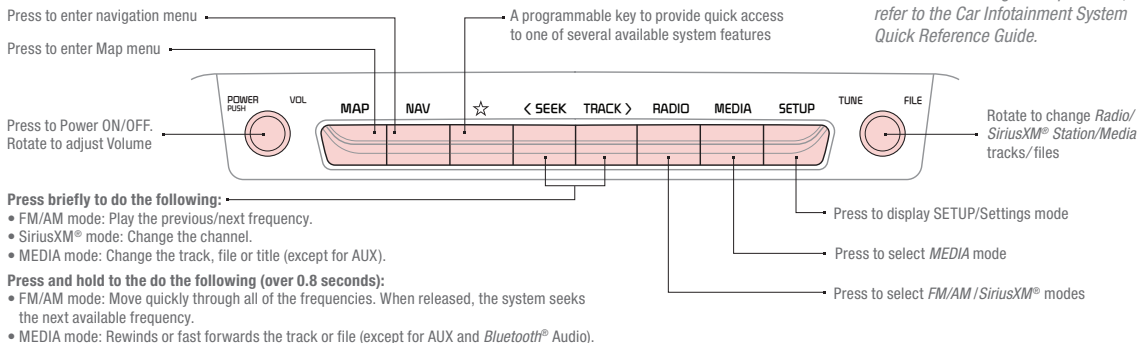

Your vehicle's audio system may differ from that in the illustrations. For further UVO link with Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

QR CODE

UVO link with Navigation Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio control unit or the on-screen SETUP button in ALL MENUS
2. Select the on-screen SOUND button, or SOUND SETTINGS. Select the menu item to change settings
3. Use the on-screen buttons to adjust settings. Press the Return button to save settings.

Radio Presets: You can listen to FM, AM and SiriusXM[™] radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot SiriusXM[™].

SiriusXM[™] Smart Favorites: For the first ten favorite SiriusXM[™] channels, you may play live or repeat from the beginning of a song or a program segment. In **Radio** mode, choose SiriusXM[™], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: A programmable key to provide quick access to one of several available system features. **To Program the Custom Key:** Press the SETUP button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

QUICK TIPS

 
- The volume level for each source (FM, AM, SiriusXM, USB, etc.) can be set individually in system sound settings. When the source is changed, the volume level will revert to the previously set volume for that source
- At any time, you can interrupt the Voice Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Surround View Monitoring (SVM) System*

The Surround View Monitoring (SVM) System is a parking support system that shows the areas around the front, rear, left, and right sides of the vehicle via four cameras displayed onto the audio head unit screen. The SVM system will turn on when the SVM button **A** is pressed, the gear shift is in N (Neutral) or D (Drive) and the LED is illuminated.

- The Front SVM camera is ON when the Engine Start/Stop button is On, the gear shift is in Drive or Neutral and the SVM button is pressed ON
- Rear SVM: The rear camera view will automatically display on the navigation screen when the vehicle is shifted into Reverse. The rear camera view will turn off when the vehicle is shifted out of Reverse
- Front SVM: The camera view will display on the navigation screen in both Drive and Neutral. In Drive, the camera view will continue to display until the vehicle is above approximately 9 mph.

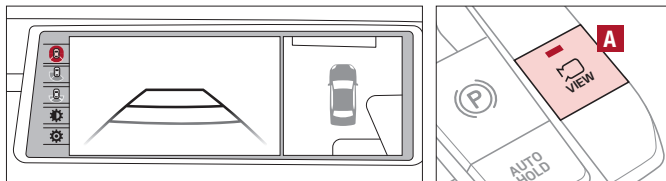

(Button located below gear shift)

QUICK TIP

The Front SVM camera will turn off when the gear shift is moved into Park or Reverse or the SVM button is pressed.

Camera View Modes – To change camera view modes, press the icons shown below on the navigation screen to select the mode.

Front SVM - when in Drive & Neutral:

- Displays the front wide view and top view (default)
- Displays the top view and zoomed-in front top view
- Displays the front blind spot view and top view
- Used to adjust the brightness and contrast of the camera images.
- Displays the surround view settings

Rear SVM - when in Reverse:

- Displays the rear wide view and top view (default)
- Displays the top view and the zoomed in top view
- Displays the rear blind spot view and top view
- Used to adjust the brightness and contrast of the camera images.
- Displays the surround view settings

QR CODE

Surround View Monitoring (SVM) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.

The Surround View Monitor system is only a supplemental system and may not display all objects around the vehicle. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the the left/right and rear.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Clock

Select SETUP key on audio head unit. Select General, then scroll to and select DATE/TIME, and adjust.

QUICK TIPS

- Daylight Savings must be enabled or disabled in the Clock Settings screen
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO eServices with Premium Navigation*)

 
Refer to the Car Infotainment System Quick Reference Guide for more information.

Multimedia USB Port, Power Outlets & USB Charger Ports

Multimedia USB Port A: Use the Multimedia USB Port to connect USB audio and smartphone devices.

USB Charger Ports B: Use the USB Charger Ports to charge devices. Two USB Charger Ports are located in the back of the center console.

Power Outlet C: Use the power outlet for devices designed to operate on a 12V (180W max) power outlet.

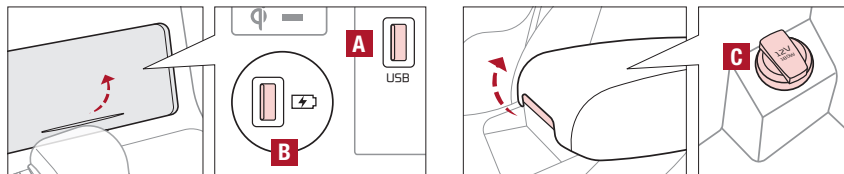

QUICK TIPS

- The power outlet is inactive when the Engine Start/Stop button is off
- The USB Charger Ports do not support data transfer

REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle
- The USB data port (Multimedia USB port) is located near the Power Outlets. The USB Charger ports do not support data transfer


For more information on the Multimedia USB Port, Power Outlets & USB Charger Ports, refer to the Owner's Manual.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Electric Parking Brake (EPB)*


The Electric Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

 
Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light  is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light  is OFF.

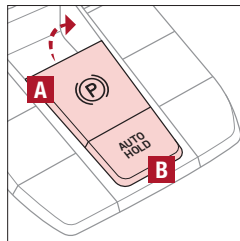

(Buttons located below Gear Shift)

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving, unless there is an emergency situation
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Auto-Hold*

Auto-Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto-Hold can be turned ON/OFF using the AUTO HOLD button **B** on the center console. Before Auto-Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle at a standstill, and AUTO HOLD switch **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto-Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto-Hold indicator changes from white to green.

OFF (not illuminated) - The indicator will turn OFF when the AUTO HOLD switch **B** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Auto Hold turns off when ignition is cycled
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

QR CODE

Electric Parking Brake (EPB) Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Automatic Climate Control

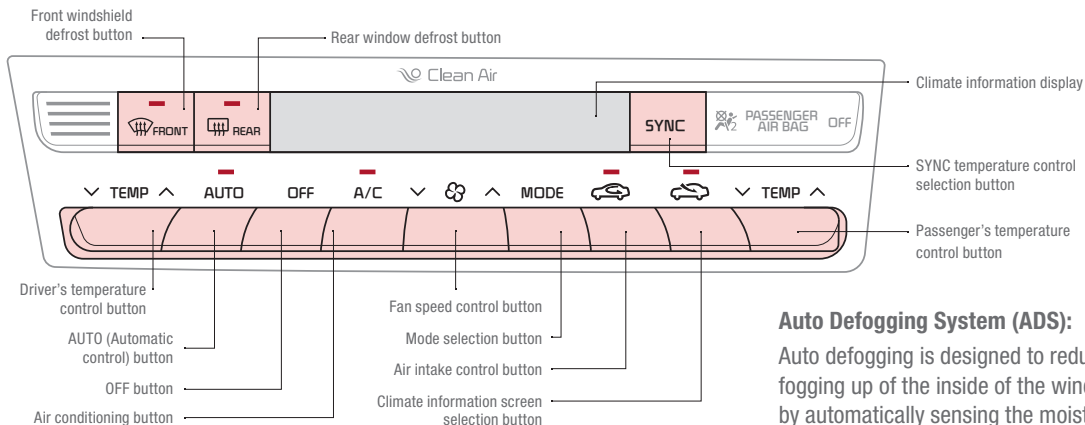

Climate Control Auto Function

1. Press **AUTO** to select Full Auto Operation: The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature
3. Press **SYNC** to select Sync Temperature Control Operation which synchronizes the passenger's temperature to the driver's setting

Air Flow Modes: To select Air Flow Modes, press the **MODE** button to cycle through to desired mode:



Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details

QR CODE

Auto Defogging System (ADS) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

Defrost Outside Windshield:


1. Set **Fan Speed** to the highest position
2. Set **Temperature to Hot**
3. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set **Fan Speed** to highest position
2. Set **Temperature** to highest position
3. Press the **Front Defrost** button

Automatic Climate Control (continued)

QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate, unless set temperature is below cabin temperature. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for DUAL Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

Automatic Gear Shift with Sportmatic®+20 Shifting

P: Park

R: Reverse

N: Neutral

D: Drive

[+]: Manual Mode Upshift

 
[-]: Manual Mode Downshift

Manual Mode: To enter Manual mode, move shift lever from D to left gate.


To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS

- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

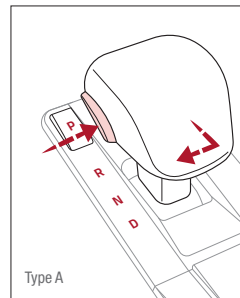

Type A

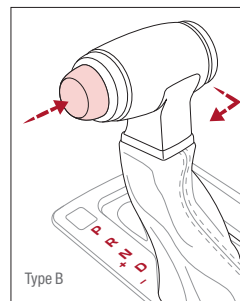 

Type B

QR CODE

Auto Defogging System (ADS) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation. Your actual display, buttons and/or features may vary.

Wireless Smartphone Charging System*

 
1. Slide the access cover open
2. Enable Wireless Charging in the Vehicle Settings in the audio control unit.
Go to Vehicle > Convenience > Wireless Charging System
3. Place a compatible smartphone on the center of the charging pad **A**
4. Indicator light **B** may change to amber once wireless charging begins
5. Once charging is complete, the amber light may change to green

QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- For wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber

REMINDERS:

- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging, however, device compatibility varies. See your owner's manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance: Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled

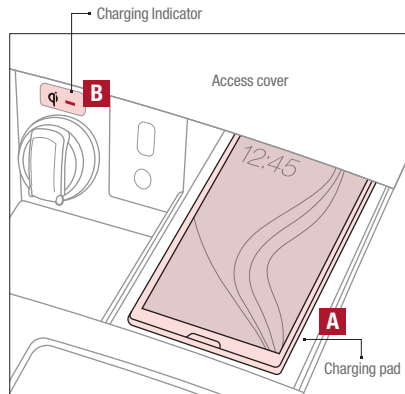

Configuration may vary depending on vehicle model.

QR CODE

Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Heated Steering Wheel*

Press Heated Steering Wheel button **A** to turn ON/OFF Steering Wheel Heater, while the Engine Start/Stop button is in the ON position. Steering Wheel Heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

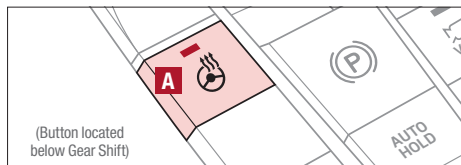

Auto Comfort Control* (for driver's seat)

The Heated Steering Wheel system automatically adjusts the steering wheel temperature depending on the ambient temperature, when the ignition is on. The Auto Comfort Control is activated or deactivated when you select or deselect it in the Vehicle Settings on the audio head unit. Go to Settings, Vehicle, Seat, Heated/Ventilated Features, Auto Comfort Control and then Steering Wheel Warmer.

 
QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position
- System does NOT turn off when ignition is cycled. To turn off system, press the Heated Steering Wheel button

Seat Warmers⁺¹⁸ / Ventilated Seats*

Seat Warmers only **B** *

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LED lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Hold button to turn heated seats off

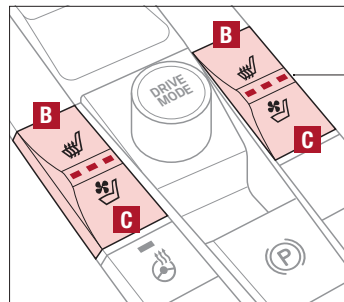

Seat Warmers Only:
Warming (Yellow LED)

Seat Warmers / Ventilated Seats:
Warming (Yellow LED)
Ventilating (Blue LED)

(Buttons located below Gear Shift.
Configuration may vary depending
on vehicle model.)

Seat Warmers **B** / Ventilated Seats **C** *

Seat Warmers:

- Press top of button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Hold button to turn seat warmers off

Ventilated Seats:

- Press bottom of button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Hold button to turn ventilated seats off

QR CODE

Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
 
www.youtube.com/KiaFeatureVideos

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System turns OFF when ignition is cycled. To turn system ON again, press the Heated Steering Wheel button

Power Adjustable Driver's Seat^{†17}

Move/Press controls to adjust Seat, Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward, Lumbar up/down/forward/backward or Seat Cushion Extension forward/backward

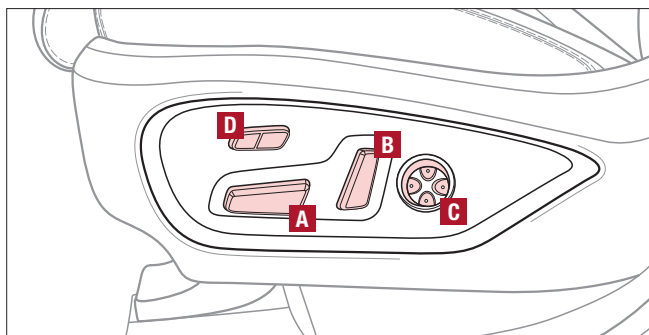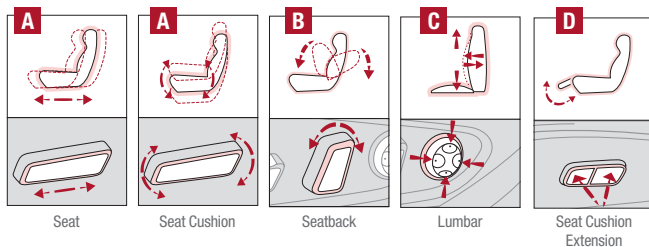


REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat, Outside Rearview Mirrors and the Steering Wheel.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

 1. Adjust the Driver's Seat, Outside Mirrors and the Steering Wheel
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons **C** within 5 seconds. The system will beep twice when memory has been stored
4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen

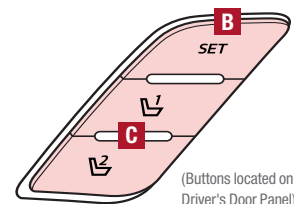


REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Front Seat Headrest Adjustment^{†10}

To raise headrest: Pull headrest up.

 To lower headrest: Press lock **A**, then press the headrest down.

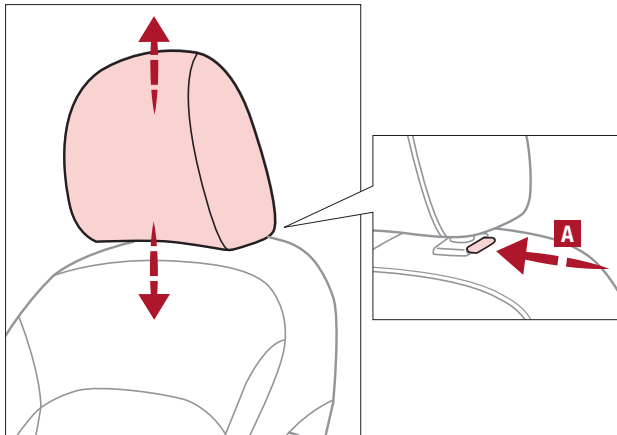

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath

REMINDERS:

- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- The headrest only moves up and down as described above. It does not adjust forward or backward

Smart Key^{†9}

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold to unlock Trunk. Then lift lid by the handle to manually open Trunk

REMINDERS:

- Trunk lid will partially open. To fully open, lift up manually
 - The Trunk unlocks when the Smart Key is within close proximity of the vehicle
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
 - E** Press to release Mechanical Key (Button on reverse side of fob)
 - F Remote Start Button***: Within four (4) seconds after locking doors, press Remote Start button for more than two (2) seconds to start the vehicle. Press once to turn off

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine.
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

Driver's Door Lock/Unlock button **H**:

To unlock door(s):

- Press button once to unlock Driver's door
- Press again within 4 seconds to unlock all doors

To lock all doors: Press again to lock all doors

 
 


Mechanical Key **G**:

Use to unlock/lock Driver's Door

1. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown
2. Insert Mechanical Key and turn right to Lock Driver's Door.
3. Insert Mechanical Key and turn left to Unlock Driver's Door
4. Return keyhole cover to its original position

Use to lock and unlock the glove box

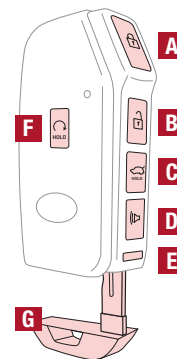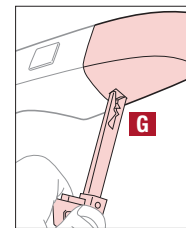

QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed websites.

Refer to page 2 for more information.

 
Engine Start/Stop Button & Smart Key Video



Kia Key Fob Video




www.youtube.com/KiaFeatureVideos

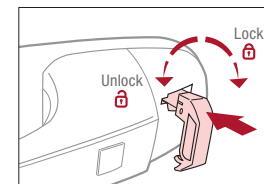

HomeLink®⁺¹³ with Auto-Dimming Rearview Mirror

 - 1 Virtual Assist button
- 2 UVO button
- 3 Roadside Assist button
- 4 Homelink® Channel 1 button
- 5 Homelink® Channel 2 button
- 6 Homelink® Channel 3 button
- 7 Garage Door Closing/Closed Status Light
- 8 Homelink® Operation Light
- 9 Garage Door Opening/Open Status Light
- 10 Homelink® User Interface Light
- 11 Compass Display

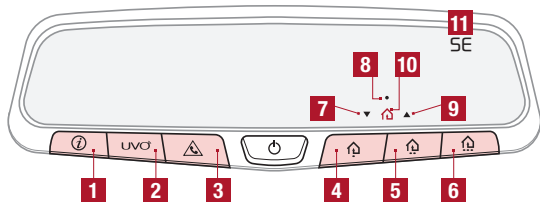

The HomeLink® / Auto-Dimming Rearview Mirror is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

REMINDER: Mirror indicator light **8** will illuminate when automatic dimming is ON.

How to Sync Transmitter with HomeLink®

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and release one of the Homelink® buttons. The indicator light will turn orange
2. Press and hold the desired Homelink® button you're programming for 15-25 seconds until the orange indicator flashes several times. Hold the original garage door opener transmitter approximately 1 to 3 inches away from the mirror and press and hold the transmitter button. The HomeLink® Indicator light **8** will turn green and flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®: Press one of the programmed HomeLink® buttons.

Erasing programmed buttons: Press and hold Homelink® buttons **1** and **3** simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds. The indicator above the Homelink® buttons will turn orange for about 10 seconds, then turn green and flash rapidly.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

QR CODE

HomeLink® Setup Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Map/Room Lamps

Automatic turn off function

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

Press the buttons **A** to turn the Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

 
Room Lamp* – Press the button **B** to turn the Room Lamp ON/OFF.

The Map and Room Lamps turn ON when button **C** is pressed any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately. The Map and Room Lamps turn ON for approximately 30 seconds.


QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

REMINDER: When Room Lamp lens is pressed ON it will remain ON, even when the Map Lamp switch is in the OFF position.

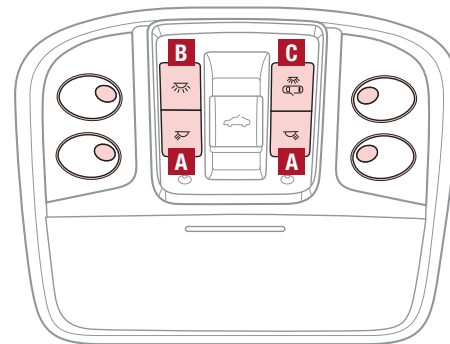

(Type B shown)

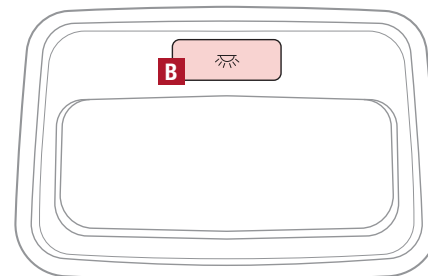 

Panoramic Sunroof Operation with Power Sunshade

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever **A**. The ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the Sunshade and Sunroof:

- Auto Open: Slide lever backward to the farthest position and release
- Auto Close: Slide the lever forward to the farthest position and release

Slide the Sunshade:

- Auto Open: Slide the lever partially backward to the first detent position
- Auto Close: Slide the lever forward to the farthest position

Slide the Sunroof (with Sunshade open):

 
- Open: Slide the lever backward to the farthest position and release
- Auto Close: Slide the lever forward to the first detent position or pull the lever downward

Tilt the Sunroof:

- Raise: Push lever upward
- Lower: Push lever forward
- Auto Close Sunroof and Sunshade: Slide the lever forward to the farthest position

REMINDERS:

- Sunshade needs to remain OPEN while sunroof is open
- Sunshade cannot slide when it is in the tilt position or tilt while in an open or slide position
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

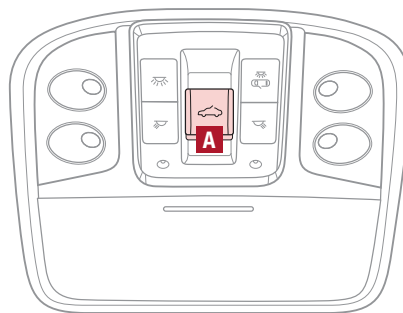

(Type B shown)

QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle.

QR CODE

Sunroof Operation Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sunvisor†22

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

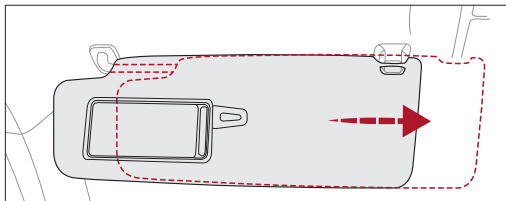

REMINDERS:

 
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows

Rear View Monitor (RVM)†6

The Rear View Monitor (RVM) system is a supplemental system that displays the view behind the vehicle through the audio head unit screen while the vehicle is in Reverse.

The Rear View Monitor (RVM) activates when the:

- Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the R (Reverse) position

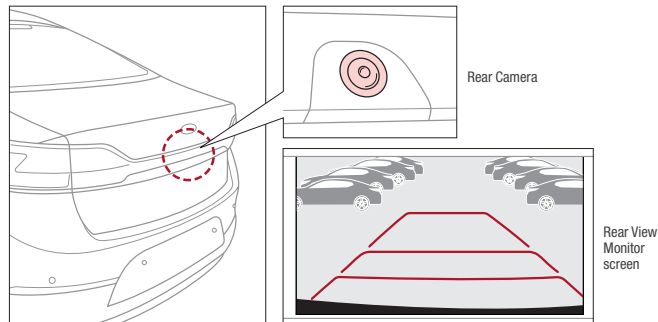

REMINER: Always drive carefully and use caution when backing up.

The Rear View Monitor (RVM) is not a substitute for proper and safe backing-up procedures. The Rear View Monitor (RVM) may not display every object behind the vehicle. Always drive safely and use caution when backing up.

 
Parking Distance Warning-Reverse^{*†6}

The Parking Distance Warning-Reverse is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

The Parking Distance Warning-Reverse is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Distance Warning-Reverse may not detect every object behind the vehicle

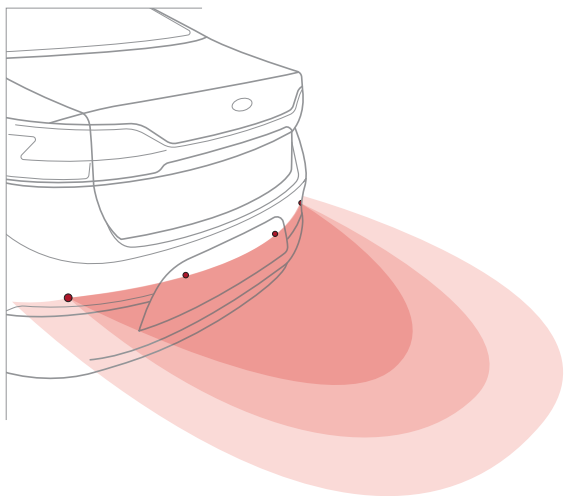

Reverse Parking Collision-Avoidance Assist (PCA)^{*†6}

 
Reverse Parking Collision-Avoidance Assist (PCA) is designed to detect certain objects/pedestrians behind the vehicle and issues an audible warning and/or apply emergency braking to reduce the possibility of a collision when the vehicle is in reverse.

Reverse PCA can be turned on in the Vehicle Settings* in the audio head unit by selecting Driver Assistance, Parking Safety then one of the following: Active Assist, Warning Only, Off

When a potential collision is detected, the system applies emergency braking for about two seconds. A warning message on the Instrument Cluster will display **A** reminding the driver to press the brake immediately.

REMINDERS:

- The Reverse PCA system is operational when Active Assist is selected in the Vehicle Settings
- The Reverse PCA system will only operate when the:
 - Vehicle speed is below 6 mph
 - The trunk is closed
 - The gear shift is in R (Reverse)
 - Other system such as Rear View Monitor are operating under normal conditions

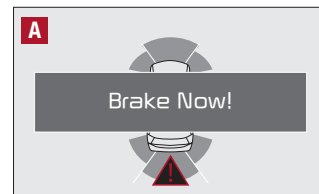


Trunk / Smart Trunk^{†15}

Opening from Inside the Vehicle:

Press the Smart Power Trunk Open button* **A** to automatically open the Trunk.

Opening from Outside the Vehicle:

 Located on the center of the trunk lid and with the trunk lid closed, press the trunk release button **B** at the center of the KIA badge and pull the trunk lid by the handle to open.

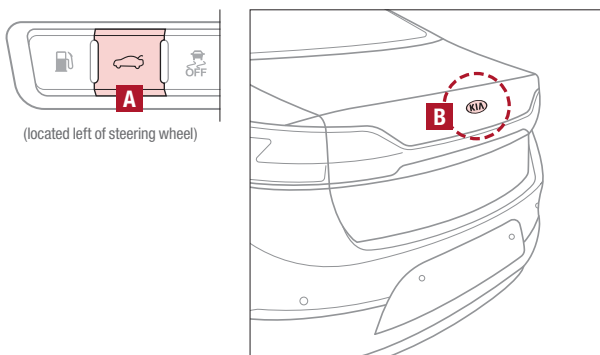


(Note: The KIA badge is the trunk release button)

Smart Trunk

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Trunk is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Trunk **F**.

 The Smart Trunk feature is OFF by default. To enable the Smart Trunk, go to the Vehicle Settings in the audio head unit, select Settings, Vehicle, Door and Smart Trunk.

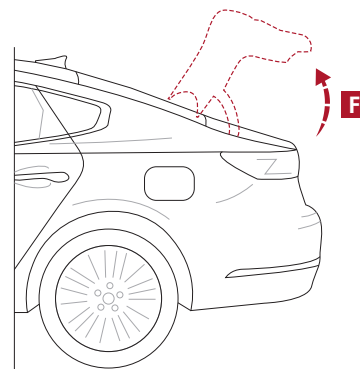

QUICK TIPS

- During the Smart Trunk alert, the Smart Trunk can be deactivated with the Smart Key by pressing any button on the key fob.


REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Trunk feature will not operate when the following occurs:
 - Doors are recently closed and locked and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Ensure obstacles and people are out of the way of the Smart Trunk


For more information on the Smart Trunk operation, please refer to the Owner's Manual.

Images are for illustration purposes only and may not reflect actual operation.

Child-Protector Rear Door Locks

Located on the rear edge of the rear passenger doors, turn the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

 
REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.

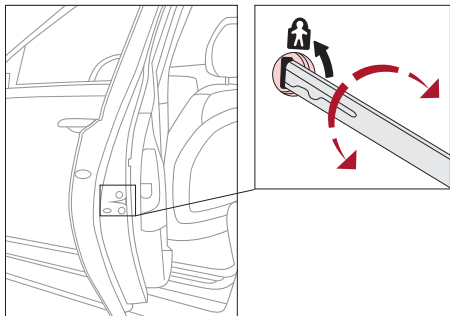

Fuel Cap / Malfunction Indicator (Check Engine Light)

To access the Fuel Cap, press the Fuel Filler Door button on the Driver's Panel.

 Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

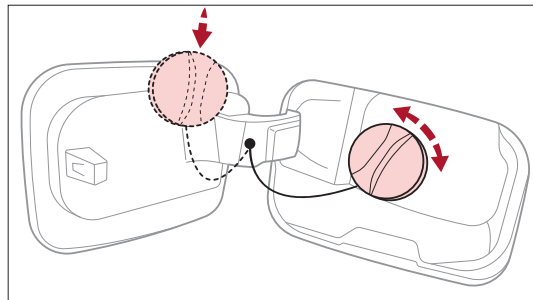

REMINDEERS:

- The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel.
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back.

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

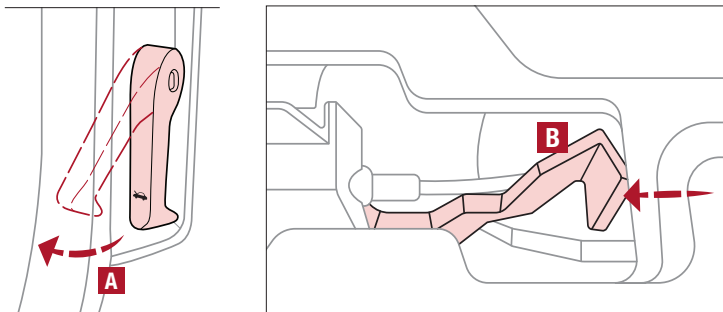

(Lever located near floor below
Driver's Panel)

Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

Driver Attention Warning (DAW)*†7

The DAW system is designed to detect inattentive driving practices, in certain situations, can give a warning signal to take a break from driving.

 
 
The DAW system is set to ON by default. To turn the DAW system OFF, turn the ignition on and go to Vehicle Settings in the audio head unit. Select Vehicle > Driver Assistance > Driver Attention Warning > Inattentive Driving Warning. The Warning Time* can be set.

Normal (Default): The Driver Attention Warning system alerts the driver of his/her inattentive driving practices.

Late: The Driver Attention Warning system alerts the driver of his/her inattentive driving practices later than Normal mode.

If the DAW System is activated, the DAW information will appear on the LCD Display **A** when you select the ASSIST mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below one bar **B**.

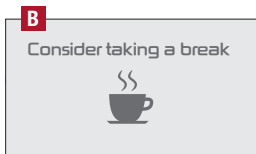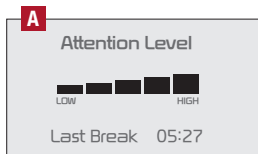

REMINDERS:

- The set-up of the DAW System will be maintained, as selected, when the ignition is cycled
- When activated, the DAW System does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- The DAW System will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

 
Occupant Detection System (ODS) / Passenger Airbag Off Indicator^{†2,14}

ODS is designed to detect the presence and position of the front passenger and is designed to adjust or turn off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASS AIR BAG OFF” light will illuminate.

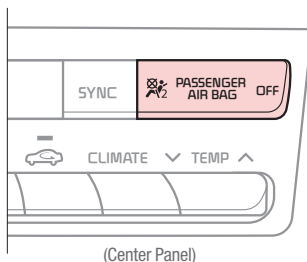

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual.

Seat Belts

To properly fasten your seat belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion to the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**.

QUICK TIP

 
 
The seat belt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seatbelt retractors will automatically lock the belts to reduce the risk of injury.

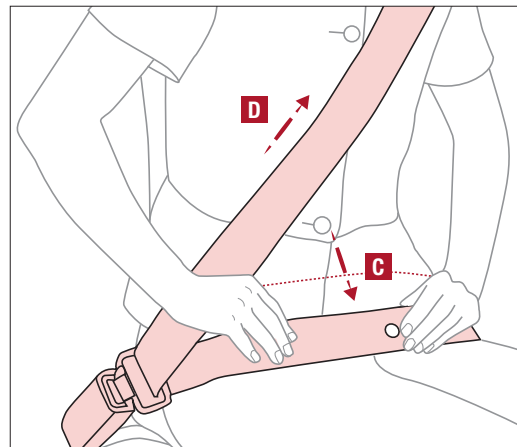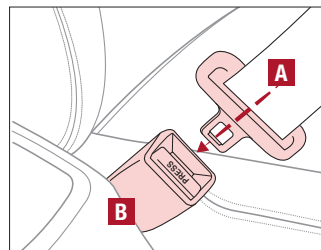

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

- 1. UVO link:** Purchase/lease of certain 2019 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO link is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 4. Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Blind-Spot Collision-Avoidance Assist-Rear (BCA-R), Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Lane Keeping Assist (LKA), Lane Following Assist (LFA), Rear View Monitor (RVM), Parking Distance Warning-Reverse, Smart Cruise Control (SCC) with Stop & Go, Safe Exit Assist (SEA) System, Highway Driving Assist (HDA) System, Reverse Parking Collision-Avoidance Assist (PCA), Navigation-Based Smart Cruise Control (NSCC):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW) – Driver Attention Warning** is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play™ Store** is a trademark of Google, Inc. ©2020 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. HomeLink®:** Homelink® is a registered trademark of Gentex Corporation
- 13. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 14. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 15. Smart Trunk:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 16. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 17. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 18. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 19. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2020 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 20. Sportmatic®** is a registered trademark of Kia Motors America.
- 21. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 22. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 23. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 24. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



 
KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- Android Auto™ / Apple CarPlay® Setup – page 30
- UVO link Activation / UVO Assistance* – page 31




- UVO link with Navigation – page 32.
- For further operational information, refer to the Car Infotainment System Quick Reference Guide



 - Smart Cruise Control with Stop & Go / Navigation-Based Smart Cruise Control (NSCC)* – pages 25-26
- Demonstrate operation

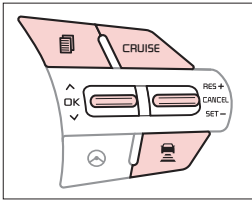

 - Bluetooth® Wireless Technology – pages 28-29
- Demonstrate operation

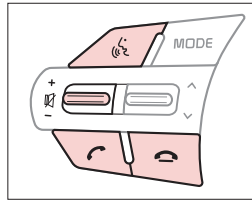

- Tire Pressure Monitoring System (TPMS) – page 5
- Blind-Spot Collision-Avoidance Assist (BCA) – page 13
- Lane Keeping Assist (LKA) / Lane Following Assist (LFA)* – page 16
- Engine Start/Stop Button – page 20
- Surround View Monitoring (SVM) System* – page 33
- Clock Setup – page 34
- Electric Parking Brake (EPB) / Auto-Hold – page 35

- Seat Warmers / Ventilated Seats* – page 39
- Smart Key – page 42
- HomeLink® with Auto-Dimming Rearview Mirror – page 43
- Panoramic Sunroof Operation – page 45
- Sunvisor – page 46
- Rear View Monitor (RVM) – page 46
- Passenger Airbag Off Indicator (ODS) – page 52

*if equipped

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



CADENZA CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual.)

KEY FEATURE WALKTHROUGH

- Air Conditioning / Automatic Climate Control - page 36 – Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

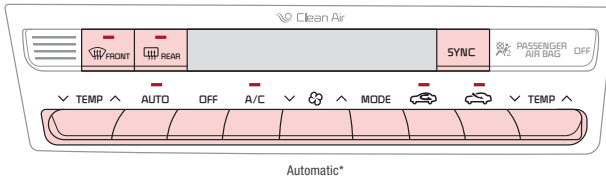


 - Front Seat Headrest Adjustment – page 41

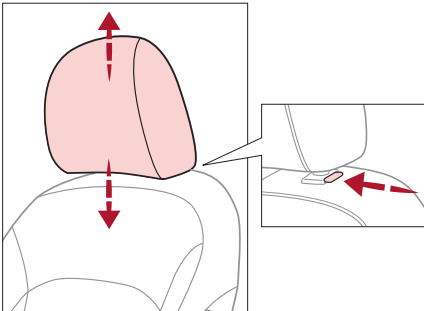

- Windshield Wipers & Washers – page 23

 - Move lever Up/Down to change Wiper modes
- Press button to adjust intermittent Wipe
- Pull lever to spray and wipe

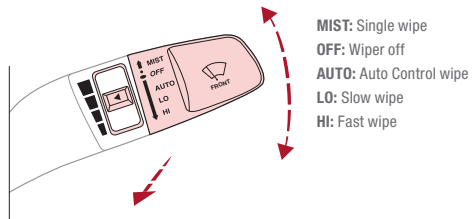

(up to 60,000 miles)^A
MAINTENANCE INTERVALS (MILES)

MAINTENANCE ITEMS	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Drive shafts and boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R
Brake fluid	I	I	I	R	I	I	I	R
Fuel tank air filter ⁹		I		I		I		I
Parking brake (foot type)		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Cooling System				I		I		I
Fuel lines, fuel hoses and connections				I				I
Valve clearance ^E								I
Drive belts (First 60,000 miles, then every 15,000 miles) ^F								I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into the Kia Access with UVO link app or your account on <https://owners.Kia.com> (Vehicles equipped with UVO link only – See page 31 for setup information)

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

F. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2020 Kia Motors America, Inc. All rights reserved.
 Consumer - Roadside Assistance¹⁶: 1-800-333-4KIA (4542)

Part Number: UC200-PS-004

†LEGAL DISCLAIMERS ON BACK INSIDE COVER