

FORTE

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **FORTE**

Congratulations on Your New Kia Lease/Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This Features & Functions Guide, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance¹⁶
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

ESSENTIAL FEATURES

Air Conditioning / Climate Control*	27
Audio System — Android Auto™/Apple CarPlay® Setup	22
Audio System — UVO eServices* Activation	22
Audio System — UVO link* Activation	23
Audio System — Standard Audio System*	24
Audio System — UVO eServices*	25
Audio System — UVO link with Navigation*	26
Aux/Multimedia USB Port, Power Outlets & USB Charger Ports	30
Bluetooth® Wireless Technology	20
Cruise Control System*	19
Digital Clock	30
Folding Rear Seats	35
Fuel Economy	07
Manual Gear Shift*	32
Passenger Airbag Off Indicator	43
Rear View Monitor	41
Smart Key*	37
Tire Pressure Monitoring System (TPMS)	07
Windshield Wipers & Washers	16
Wiper Service Mode	16

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



FORTE FEATURES & FUNCTIONS GUIDE

VIDEOS & QR CODES	02
-------------------	----

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
LCD Instrument Cluster Modes	05
Trip Modes / Trip Computer	05
User Setting Mode	06
Service Interval Mode	06
Fuel Economy	07
Tire Pressure Monitoring System (TPMS)	07
Drive Mode Integrated Control System	08

DRIVER'S PANEL

Electronic Stability Control (ESC)	09
Instrument Cluster Control	09
Hill-start Assist Control (HAC)	09
Blind-Spot Collision Warning (BCW)*	10
Rear Cross-Traffic Collision Warning (RCCW)	10
Lane Keeping Assist (LKA) / Lane Departure Warning (LDW)*	11
Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped)*/ Forward Collision Warning (FCW)	12
Engine Start/Stop Button*	13
Power Windows, Window Lock & Central Door Lock	14
Power Outside Mirrors	14
Heated Outside Mirrors*	14
Automatic Door Lock/Unlock	14

STEERING WHEEL CONTROLS

Headlights & High Beams	15
Turn Signals & Fog Lights*	16
Windshield Wipers & Washers	16
Wiper Service Mode	16
Tilt/Telescoping Steering Wheel	17
Audio Controls	18
Cruise Control System*	18
Smart Cruise Control (SCC)	19
Bluetooth® Wireless Technology	20

AUDIO SYSTEMS

Android Auto™ / Apple CarPlay® Setup*	22
UVO eServices* Activation	22
UVO link* Activation	23
Standard Audio System*	24
UVO eServices*	25
UVO link with Navigation*	26

*IF EQUIPPED

CENTER PANEL

Automatic Climate Control*	27
Manual Climate Control*	28
Wireless Smartphone Charging System*	29
Aux/Multimedia USB Port, Power Outlets & USB Charger Port*	30
Digital Clock	30
Automatic Gear Shift with Sportmatic® Shifting*	31
Paddle Shifters*	31
Manual Gear Shift*	32

SEATING

6-Way Manual Adjustable Driver's Seat*	33
Seat Warmers* / Ventilated Seats*	33
10-way Power Adjustable Driver's Seat*	34
Front Seat Headrest Adjustment	34
Folding Rear Seats	35

OTHER KEY FEATURES

Map/Room Lamps*	36
Sunroof Operation*	36
Smart Key	37
Remote Keyless Entry (Folding Key)*	38
Double-Turn Lock/Unlock All	38
Tire Mobility Kit*	38
Smart Trunk*	39
Hood Release Lever and Latch	40
Sunvisor	40
Trunk Release Lever and Button*	40
Fuel Filler Lid Release Lever	40
Rear View Monitor	41
Fuel Cap / Malfunction Indicator (Check Engine Light)	41
Parking Distance Warning-Reverse*	41
Driver Attention Warning (DAW)*	42

SAFETY FEATURES

Seat Belts	43
Child-Protector Rear Door Locks	43
Seat Belts Retractor Locks	43
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	43

MAINTENANCE SCHEDULE - TURBO	44
------------------------------	----

MAINTENANCE SCHEDULE - NON-TURBO	Back Cover
----------------------------------	------------

LEGAL DISCLAIMERS	Inside Cover Page
-------------------	-------------------

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

 
1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning.
 - Try another QR Code Reader app; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet

Instrument Cluster Overview


- A** Tachometer
- B** Speedometer
- C** Turn Signal Indicators
- D** LCD Screen/Odometer/Tripmeter
- E** Gear Shift Position Indicator
- F** Fuel Gauge
- G** Engine Coolant Temperature Gauge

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

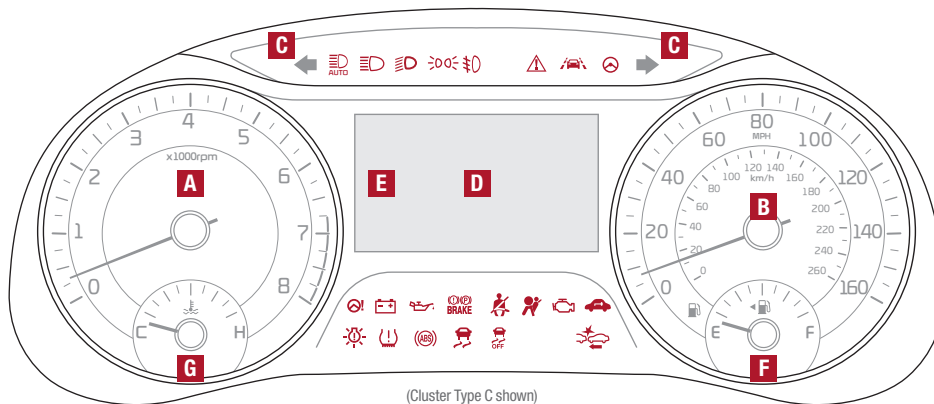

Indicators & Warning Lights

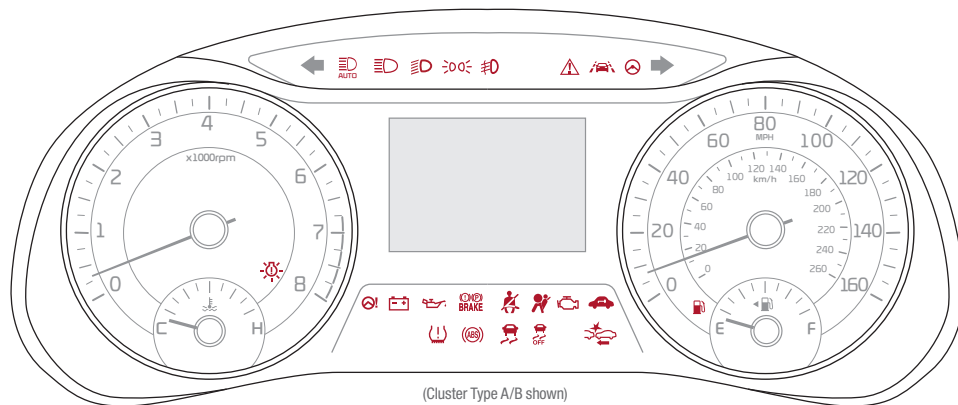 

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

- | | | | | | |
|--|--|--|---|--|--|
| | Low Tire Pressure Indicator / TPMS Malfunction Indicator | | Door Ajar Warning Indicator | | Electronic Brake Force (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time) |
| | Electronic Stability Control OFF Indicator | | Airbag Warning Indicator | | Icy Warning Indicator* |
| | Anti-Lock Brake System (ABS) Indicator | | Charging System Warning Indicator | | Low Beam Indicator |
| | Trunk Open Indicator | | High Beam Indicator | | High Beam Assist Indicator* |
| | Immobilizer Indicator | | Low Fuel Level Warning Indicator | | Parking Brake & Brake Fluid Warning Light |
| | Electronic Stability Control Indicator | | Cruise Control ON Indicator* | | LED Headlamp Warning Light* |
| | Malfunction Indicator* | | SET Cruise Control Set Indicator* | | SMART Mode Indicator* |
| | Light on Indicator | | AFLS Adaptive Front Lighting System Warning Indicator* | | Hood Open Warning Light* |
| | KEY OUT Indicator* | | Master Warning Mode* | | Sunroof Open Warning Light* |
| | Electronic Power Steering (EPS) Warning Indicator* | | SPORT Mode Indicator* | | |
| | Front Fog Lights Indicator* | | LKA (Lane Keeping Assist) Indicator* | | |
| | Engine Oil Pressure Warning Indicator | | Forward Collision-Avoidance Assist Warning Light (FCA)* | | |
| | Safety Belt Warning Indicator | | Washer Fluid Warning Indicator | | |

LCD Instrument Cluster Modes*


(Type B and C Clusters)

Press Mode button **A** to scroll through the different LCD modes:

 
 **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.

 **Turn-by-Turn Mode*:** Displays the state of the navigation

 **Assist Mode*:** Displays information about Lane Keeping Assist, Driver Attention level & tire pressure

 **Master Warning Mode:** Displays warning messages including those related to Blind-Spot Collision Warning (BCW)* Malfunction, Cruise Control, Lamp Malfunction, LED Lamp Malfunction*, and Engine Oil Shortage

 **User Settings Mode:** Change settings of the driver assistance features, doors, lamps and other features

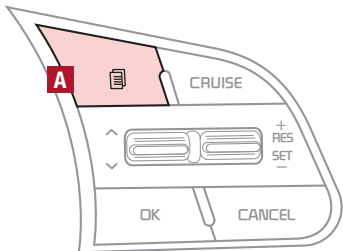


(Button panel located on Steering Wheel, Type B)

 
Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving

Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch or the Engine Start/Stop button* is in the ON position.

Instrument Cluster Type A – To toggle through the different Trip Computer modes, press the Trip button **A**. When in Tripmeter, press the Trip button **A** again to select Trip A or Trip B. Press and hold the Reset button (not shown - Type A Steering Wheel) to reset the Tripmeter to zero.


Instrument Cluster Type B/C – To scroll through the different LCD Instrument Cluster modes, press the Mode button **A**. To display the Tripmeter, press the Mode button **A** and select Trip Computer . Then press the Move button **B** up/down to scroll to Drive Info screen and press OK button **C** to enter. Then scroll to Tripmeter and press OK button again. Press and hold the OK button **C** to reset the Tripmeter to zero.

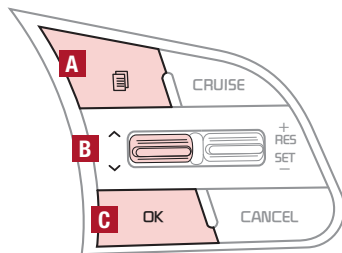

(Located on Type B steering wheel)

REMINDERS:

 - Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

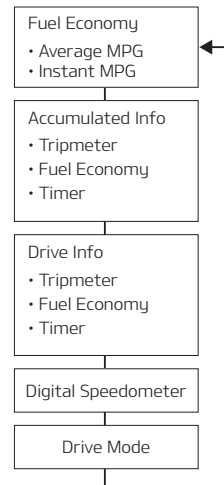


(Type B/C cluster shown)

For illustrative purposes only. Your actual display, buttons and/or features may vary.

User Settings Mode

(Type B/C settings)

To enter the User Settings mode on the LCD screen, press the Mode button **A** when the vehicle is in P (or N for manual transmissions) and with the ignition or the Engine Start/Stop button* in the ON position and select User Settings .

You can navigate the selections on the display by pressing the Move button **B**, and then selecting the item by pressing the OK button **C**.

User Settings Modes:

Driving Assistance*:

- Lane Safety*
- Driver Attention Warning
- Forward Collision-Avoidance Assist (FCA)
- Forward Collision Warning (FCW)
- Blind-Spot Collision Warning Sound*
- Rear Cross-Traffic Collision Warning

Doors:

- Automatically Lock
- Automatically Unlock
- Smart Trunk*
- Two Press Unlock*
- Horn Feedback*

Sound:

 
- Parking Distance Warning* Volume
- Welcome Sound*

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Language*:

- Choose Language

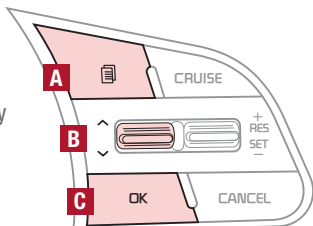

(Button panel located on Steering Wheel, Type B)

Convenience:

- Welcome Mirror/Light*
- Wireless Charging System*
- Wiper/Light Display*
- Gear Position Pop-up*
- Icy Road Warning*

Other Features:

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit*

Lights:


- One-Touch Turn Signal*
- Headlamp Delay*

Reset:

- Reset Menu

Service Interval Mode

 
(Type B/C Cluster settings)

To enter Service Interval Mode, press the Mode button **A**, scroll to the User Settings Mode . Press Move button **B** to scroll to the Service Interval menu and press OK button **C** to enter. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following screen will be displayed: **Service Required**.

To reset the Service Interval Mode system, press and hold the Set/Reset (OK) button **C** for more than 1 second.

To turn Service In OFF, go to User Settings.



Service Interval Setting:

To set the service interval when in User Settings mode:

- Press the Move button **B** up/down and scroll to Service Interval. Press the OK button **C** to enter
- Press the Move button **B** and toggle to ON, then press the Select/Reset button **C**. Then press the Move button **B** up/down to scroll and select the desired miles or months for your next service
- Press the Select/Reset button **C** to enter

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos


Fuel Economy


Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to improve fuel economy:

 
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads



For more information on Fuel Economy, you can snap the QR Code at right to view a video or refer to the Owner's Manual.

Tire Pressure Monitoring System (TPMS)^{†25}

The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

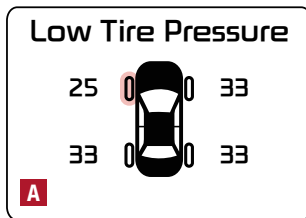 The TPMS indicator is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower. The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.



- Inflate tire(s) to specifications to turn off the Low Tire Pressure Light  using an accurate tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate - See dealer for service

REMINDERS:

- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s).
- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is opened.
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for approximately 20 minutes, and tires that are not hot in temperature from direct sunlight or heat.
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Fuel Economy Video



Tire Pressure Monitoring System Video



www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System

SMART, NORMAL and SPORT drive modes **A** may be changed according to the driver's preference or road conditions. To cycle through drive modes, press the DRIVE MODE button **B**.

NORMAL Mode – The system's default mode is NORMAL mode and is not displayed on the instrument cluster nor the audio system's screen.

 
 
SPORT Mode – A red SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

SMART Mode – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, aggressive). A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (green, blue, red) depends on the current driving style. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

REMINDERS:

- When SPORT mode is selected, fuel economy may decrease
- Steering effort may be slightly increased in Sport mode

For illustrative purposes only. Your actual display, buttons and/or features may vary.

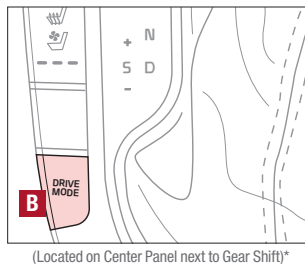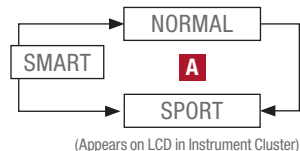

QR CODE

Drive Mode Integrated Control System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos


QUICK TIPS

- In SPORT mode, when engine is turned off, the system will default to NORMAL mode and SPORT mode will need to be selected again when the vehicle restarts.
- To help improve your fuel economy:
 - Drive at a moderate speed, accelerating smoothly and at a moderate rate
 - Keep tires inflated to the recommended pressure
 - Be sure the wheels are properly aligned

Electronic Stability Control (ESC)^{†8}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible. Press ESC button **A** to turn ESC OFF/ON.

REMINDERS:

 
- ESC is turned ON by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will be lit momentarily whenever ESC is active

For more information on Electronic Stability Control (ESC) and its specific features and operation, please refer to your Owner's Manual.

Instrument Cluster Control

With parking lights/headlights ON, press button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDER: The Instrument Cluster Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

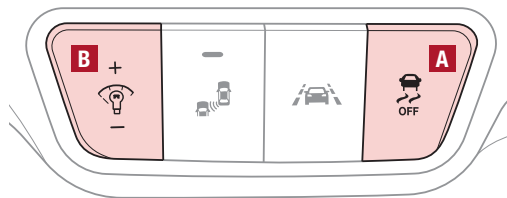

(Located left of steering wheel)

For more information on Electronic Stability Control (ESC) and its specific features and operation, please refer to your Owner's Manual

Hill-start Assist Control (HAC)^{†8}

HAC is designed to help prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see Authorized Kia Dealer for service

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a 2-second delay before the vehicle may start rolling backwards

HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Blind-Spot Collision Warning (BCW)*†6

The BCW System uses radar sensors to help alert the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area before changing lanes. The BCW System is ON when the button **A** is pressed – the button light will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than approximately 20 mph and will alert the driver if another vehicle is detected by the radar sensor.

Blind-Spot Collision Warning (BCW) / Lane Change Assist (LCA)*

1st-stage alert: When another vehicle is detected within the BCW system boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors **C**.

2nd-stage alert: When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

REMINDER: If the BCW is turned ON and the ignition is cycled, the BCW system returns to ON

 
Rear Cross-Traffic Collision Warning (RCCW)*†6

If the RCCW system sensors detect approaching vehicles from the rear left or rear right side of the vehicle **D**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, when these conditions are met:




- When the gear shift is moved into (R) Reverse
- When the vehicle is moving less than 6 mph

REMINDEES:

- The RCCW feature can be turned OFF/ON in User Settings and will remain in OFF/ON as selected
- When vehicle power is cycled, the RCCW will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling between 2.5 and 22 mph, the RCCW system will show a warning. See Owner's Manual for other conditions

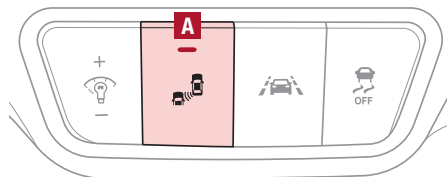

(Located left of steering wheel)

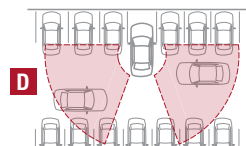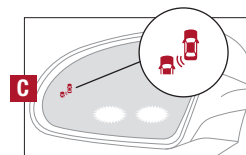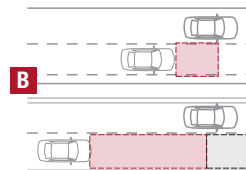   

QR CODE

Blind-Spot Collision Warning w/ RCCW Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

For more information on the Blind-Spot Collision Warning (BCW) and Rear Cross-Traffic Collision Warning (RCCW), please refer to the Owner's Manual.

The BCW and RCCW systems are supplemental systems. Do not solely rely on these systems and always pay attention to the road and its conditions.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Lane Keeping Assist (LKA)*†6 / Lane Departure Warning (LDW)*†6

With the Engine Start/Stop button in the ON position, press the LKA button **A** to turn system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling less than 40 mph and the system does not detect the lane markers. When the LKA system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, the vehicle crossing lane indicator will blink and the system issues an audible warning and display an LDW alert on the instrument cluster. If the vehicle continues to move outside of the lane, the LKA will apply a slight adjustment to the steering, trying to prevent the vehicle from moving outside its lane.

Standard LKA is the operating mode by default when the button is depressed to ON. To switch between modes (Standard LKA, Active LKA and Lane Departure), go to User Settings in the Instrument Cluster.

All systems will operate under the following conditions:

 
- The vehicle speed is above 40 mph
- The LKA system recognizes both sides of lane markers the vehicle is traveling in
- The vehicle is between the lane markers

REMINDERS:

- LKA/LDW will not issue a warning if the turn signal or hazard signal is activated
- LKA/LDW will return to its previous state when the ignition is cycled

The LKA/LDW are not substitutes for safe and proper driving. Always drive safely and use caution. LKA/LDW may not always alert the driver if the vehicle is driven outside of its lane.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

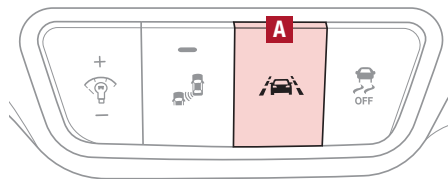

When the LKA sensor detects the lane traveling in, both lanes are illuminated



When the LKA sensor does not detect the lane traveling in, the lanes are not illuminated



When the LKA sensor detects the vehicle veering outside of the lane traveling in, a vehicle crossing lane indicator will illuminate, either on the left or right lane (shown in both images above)

QR CODE

Lane Keeping Assist (LKA) / Lane Departure Warning (LDW) System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped)^{*†6} / Forward Collision Warning (FCW)^{†6}

The FCA-Ped and Forward Collision Warning systems are designed to detect slowing or stopped traffic ahead and, under certain conditions, can apply the brakes in order to help avoid or reduce the effects of a potential collision. Initially, the Forward Collision Warning (FCW) will provide a warning when it detects a pedestrian or a potential collision with a vehicle in front, emitting an audible warning and visual alert on the instrument cluster **A**.

Adjust the alert settings (Early, Normal, Late) in the User Settings. To turn the FCA-Ped/FCW off, go to User Settings to turn it off.

If the system detects that the collision risk has increased, the Forward Collision-Avoidance Assist- Pedestrian (FCA-Ped) automatically applies the brakes to reduce your speed, potentially helping to avoid or reduce the effects of a possible collision. FCA-Ped can be turned ON in the User Settings menu on the Instrument Cluster display.

The FCA-Ped/FCW will become active when the:

 
- Engine Start/Stop button is ON
- Vehicle is traveling more than 6 mph
- Electronic Stability Control (ESC) is ON

REMINDERS:

- The FCA-Ped/FCW systems will be activated by default when the ignition is cycled ON, even when previous setting to OFF
- If the FCA-Ped / FCW systems are operating and the ESC (Electronic Stability Control) is turned off, the systems are automatically turned off
- When the FCA-Ped / FCW systems are off, the FCA-Ped / FCW systems warning indicator is on in the Instrument Cluster

The Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped) / Forward Collision Warning (FCW) are not substitutes for safe and proper driving and may not detect all objects surrounding the vehicle. Always drive safely and use caution. FCA-Ped and FCW may not always alert the driver when the vehicle is approaching another vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

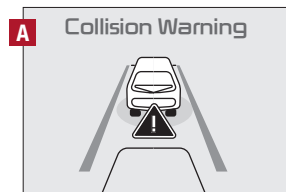

QR CODE

Forward Collision Warning Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Engine Start/Stop Button*†9

To start the engine:

1. Depress the brake pedal and/or clutch pedal*
2. Press the ENGINE START/STOP button while the gear shift is in Park (or while in Neutral for Manual Gear Shift)

To turn the vehicle OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, the Smart Key fob must be in the vehicle.

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once **A**

ON position

 
 
- When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice

Keeping the vehicle in ACC or the ON position without turning the engine on may discharge the vehicle's battery.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, you can still start the engine by pressing the ENGINE START/STOP button with the Lock-button end of the Smart Key. The Smart Key must contact the ENGINE START/STOP button directly, at a right angle

For illustrative purposes only. Your actual display, buttons and/or features may vary.

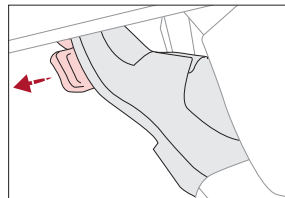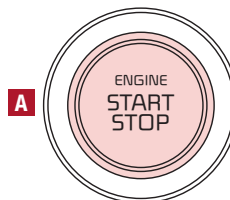

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Driver's & Passenger's Window Auto Up/Down*

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows

QUICK TIP

Press button **A** again to stop Auto Up/Down function.

REMINDER: When button **C** is pressed, the rear window controls for the Rear Passenger Windows are disabled.

Button configuration may vary depending on vehicle model.

Power Outside Mirrors

Toggle **D** left or right to select mirror. Then press one of the points **E** to adjust mirror position.

 
Heated Outside Mirrors*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button* is located on climate control system panel.

Automatic Door Lock/Unlock

When the gear shift is moved into or out of P (PARK), all doors will Lock/Unlock. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

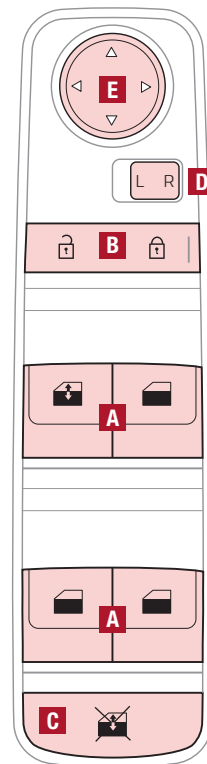


(Driver's Door)

Button configuration may vary depending on vehicle model.

Headlights & High Beams

To operate:

 - Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

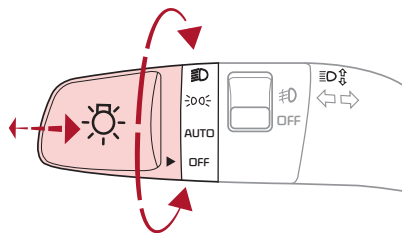

- AUTO Auto Light / AFS-H / High Beam Assist*
- ☰ Headlight position
- ☰ Parking light position
- DRL OFF DRL OFF position

AUTO Light Position* — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Adaptive Front-Lighting System-Height (AFS-H)* — The Adaptive Front-Lighting System-Height (AFS-H) is designed to help improve visibility during nighttime driving by aiming the low beam headlights toward the direction the vehicle is moving. AFS-H controls the aiming direction based on steering angle and speed.

When the headlight switch is in the AUTO Light position, the AFS-H will activate.

REMINDER: When the AFS-H indicator illuminates on the instrument cluster, the AFS-H is not working properly. See authorized Kia dealer for service.

Daytime Running Lights (DRL)* — DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Engine is turned off
- Parking brake is applied
- Switch is in the DRL OFF position

High Beam Assist (HBA)* — High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions. To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDEES:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Fog Lights - Rotate switch to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

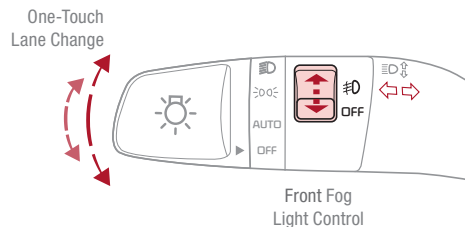

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal lever up or down and then releasing. The lane change signal will blink 3-7 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster modes.

 
For more information on the User Settings Mode, please refer to your Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

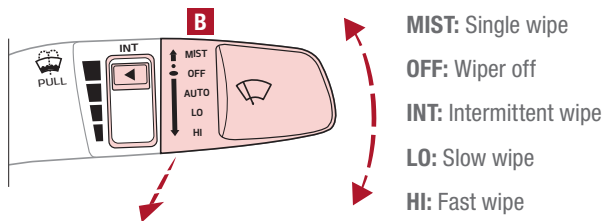

QUICK TIPS

 
- Rotating INT switch up increases Intermittent wipe frequency and wipe speed. Rotating INT switch down decreases frequency of wipes.
- Set the wiper to OFF position when the wiper is not in use

Wiper Service Mode

To inspect or replace the windshield wiper blades to prevent damaging the hood, the blades need to be moved to the service position **A**.

With the ignition ON, then turning the engine OFF, within 20 seconds move the wiper switch to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

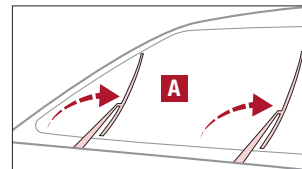

QR CODE

Wiper Service Mode Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
Tilt/Telescoping Steering Wheel†24

To adjust the Steering Wheel, push down the Lock-Release Lever **A** and adjust to desired angle **B** and distance **C**.

When finished, pull up the Lock-Release Lever **A** to lock Steering Wheel in place.


QUICK TIP

It may be helpful to pull/push bottom of the Steering Wheel towards/away from you to adjust desired distance.

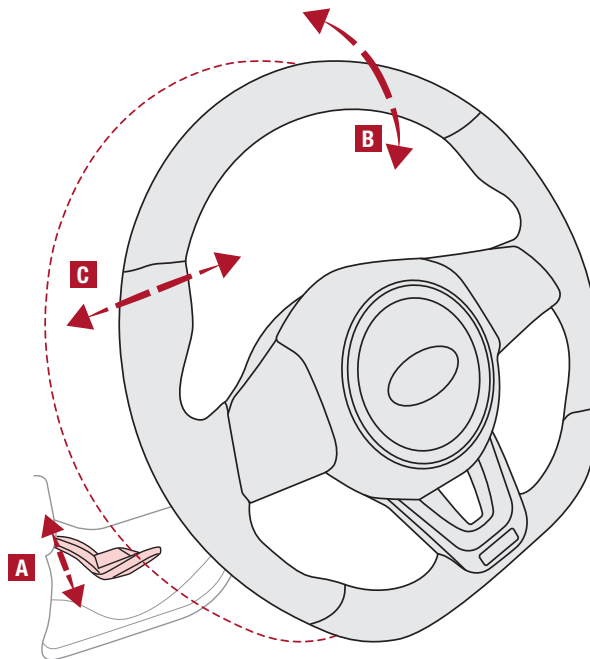

For illustrative purposes only; your steering wheel may differ.

 Audio Controls†22

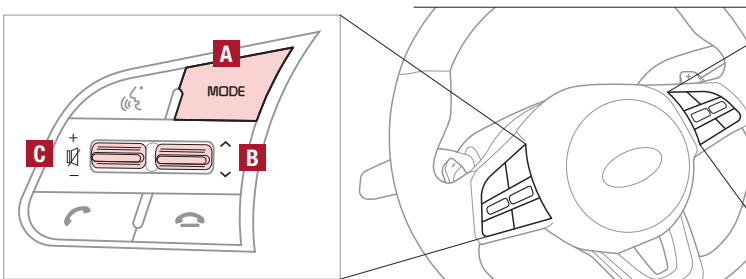

- A Audio MODE button:** Press to cycle through the FM/AM/SiriusXM®/Media modes
Audio System ON/OFF: Press to turn power on; Press and hold to turn power off

- B Seek/Presets button:**
Radio Mode - Press to advance through the Preset Stations. Press and hold to Auto Seek
Media Mode - Press to move track forward/back. Press & hold to fast forward/rewind (except for *Bluetooth®* Audio)

- C Volume button:** Press up/down to raise/lower volume
Mute button: Press to mute all audio

 
QUICK TIP

Press and hold the Audio Mode button to turn the Audio Mode ON or OFF

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Cruise Control†22

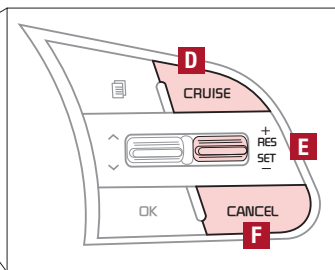

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

(Type B)

- D CRUISE Control ON/OFF button:** Press to turn the Cruise Control ON/OFF

- E Resume Cruising Speed button:** Press up to resume, set speed or increase Cruising Speed
Set Cruising Speed button: Press down to set or decrease Cruising Speed

- F Cruise Control Cancel button:** To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function above 19 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Standard Cruise Control is a part of Smart Cruise Control (SCC) with Stop & Go* and can be set as the operating mode. To switch from SCC to standard Cruise Control, press and hold the SCC button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

Smart Cruise Control (SCC)*†6,22

The Smart Cruise Control (SCC) is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed.

To set/adjust the SCC speed:

- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Press button **B** down to set the speed. Press the RES+/SET- button **B** up/down to increase/decrease the set speed. The SET indicator light, set speed and vehicle-to-vehicle distance will illuminate on the instrument cluster's LCD screen

 
To set the vehicle-to-vehicle distance: Press the SCC button **D** on the steering wheel. The image on the LCD screen **E** will change when scrolling through the settings. Each time the button **D** is pressed, the vehicle-to-vehicle distance changes.

To cancel SCC operation: Press the CANCEL button **C** or the brake pedal. The LCD screen will display a message that the SCC operation is canceled.


To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

QUICK TIPS

- To change the Cruise Control mode from SCC to standard Cruise Control, press and hold button **D**. Repeat to switch modes again (The SCC system must not be activated to change modes).
- For the SCC System to operate, the vehicle must be traveling at a minimum speed of 20 mph.
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front.

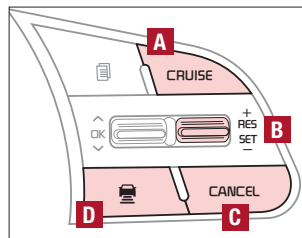

 (Type B; Buttons located on right side of Steering Wheel)



(Distances are approximate and vary depending on vehicle speed)

REMINDERS:

- The distance settings are approximations and may vary depending on vehicle speed and factory settings at the time. See owner's manual for more information
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), and various other conditions. See owner's manual for other conditions.
- Keep the system off when not in use to avoid setting a speed which the driver is not aware of.
- Cruise Control button must be ON in order to turn SCC ON/OFF
 - The SCC System is operating when driving above the speed of 6.0 mph
 - SCC system is activated when ignition is turned on. Speed will need to be reset when ignition is cycled on
 - The SCC system remains ON when ignition is cycled. The speed setting will need to be reset when ignition is cycled.
- In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not apply brakes to slow down automatically.

QR CODE

 
Smart Cruise Control (SCC) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

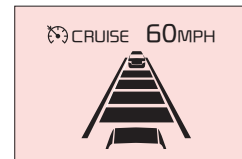


(Display on LCD screen)

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 Bluetooth® Wireless Technology†5,22

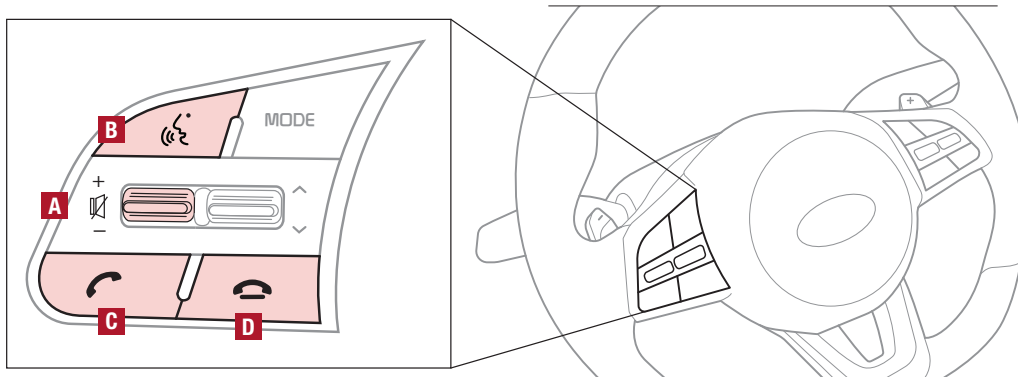

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

(Type B)

A Volume button: Press up/down to raise/lower speaker volume

Mute button: Press to mute sound and the microphone during a call

B Talk button: Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition.

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

C Receive/Place Call button: Press to receive/place/transfer calls. Press to place a call using voice command prompts from the system, or to answer an incoming call. If no phone is paired, press button to pair a phone.

D End Call button: Press to end a call, reject an incoming call or cancel a function

QUICK TIPS

- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

*For more information, if equipped, refer to the Car Infotainment System User's Manual. For **Bluetooth®** Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for **Bluetooth®** Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific **Bluetooth®** Wireless Technology phone pairing and operation instructions.*

Bluetooth® Wireless Technology^{+5,22} (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth®** connection requests.

How to Place a Call

When using the voice command feature, waiting for the system BEEP before speaking the command.

- Option 1: Press the Receive/Place Call button **C** (displays the call history)
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or Dial {number}

Voice Recognition* and Phone Contact Tips

To help optimize the **Bluetooth®** Wireless Technology Voice Recognition system, below are some tips and reminders. Improve the performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

The system may have difficulty understanding some accents or uncommon names.

QUICK TIPS

- **Bluetooth®** Music Streaming – If the **Bluetooth®** music is inaudible or too low, you may need to turn up the volume on the connected phone.
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos


Android Auto™+3 / Apple CarPlay®+4 Setup*

Android Auto™**

Setting up Android Auto™:


1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store†11.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

 
How to start Android Auto™:

1. Press the SETUP key on your audio system's control panel.
2. Press the PHONE PROJECTION button  or DEVICE CONNECTION button, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™.
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

Apple CarPlay®**

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key.
2. Press the PHONE PROJECTION button  or DEVICE CONNECTION button, select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®.
3. Connect the Apple CarPlay® compatible iPhone®+12 with the vehicle's USB port using the manufacturer's cable provided with your iPhone.
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps.

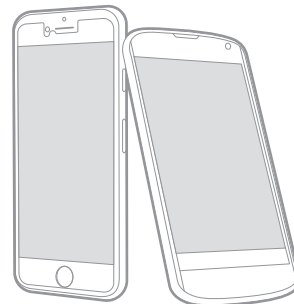

REMINDERS:

- Android Auto compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay compatibility requirements: Apple Lightning cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

UVO eServices Activation*†1 (Systems equipped with UVO eServices only)

1. Using a compatible smartphone to access your app store or marketplace, download the Kia UVO eServices app†1.
2. In your smartphone's settings, ensure that location services are enabled.
3. Using the Kia UVO eServices app†1, register for a new <https://owners.kia.com/> account
4. Follow the In Car Setup Instructions on the Kia UVO eServices app to complete the UVO eServices Activation

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further UVO eServices/UVO link operation, refer to the Car Multimedia/Infotainment System User's Manual. For other audio system information, refer to pages 23-26.

UVO link Activation^{*†1b} (Systems equipped with UVO link only)

1. Follow these steps to activate UVO on your vehicle head unit:
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press UVO or SERVICE Activation
2. Review the Terms of Service and Privacy Policy, and agree by pressing SUBMIT
3. Enter Smartphone Number or Email address to receive a verification code, then press SUBMIT

4. Follow these steps if using your phone number to receive your verification code:

- a. Check your phone for an SMS (text message)
- b. Open the link in your SMS. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the phone number as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT.
A page will open displaying your verification code.
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press “I have entered my PIN”

A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

4. Follow these steps if using your email to receive your verification code.

- a. Check your email. The email will be from reset@notifications.myuvo.com
- b. Open link inside email.

A page will open requesting that you create your account.

 
Note: If you already have a Kia Owners Portal account using the email as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT.

A page will open displaying your verification code

- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press “I have entered my PIN.”

A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

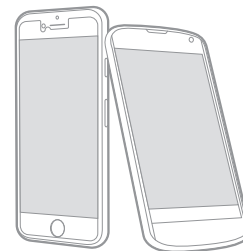


Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further UVO link operation, refer to the Car Infotainment System User's Manual.
For other audio system information, refer to pages 22-26.

Standard Audio System*

 FM/AM/Media (USB, Aux, *Bluetooth*[®]+5 Audio, My Music)*

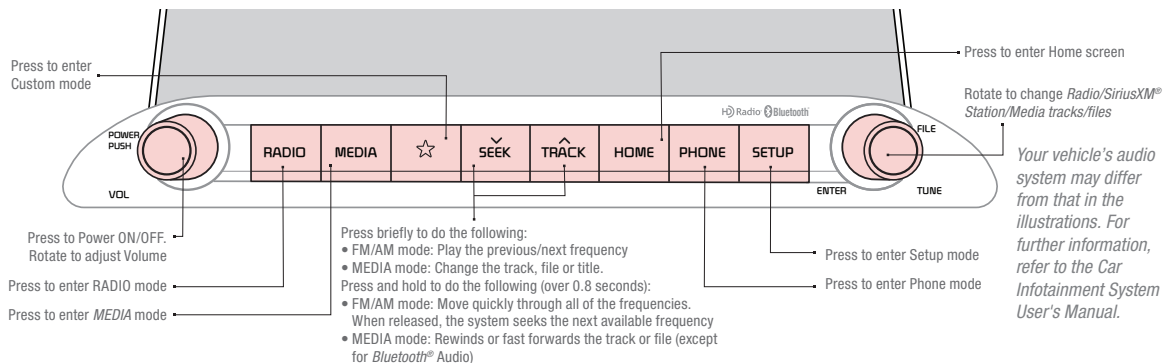

QR CODE

Standard Audio System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button to save settings.

Radio Presets: You can listen to FM and AM radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot.

Custom Key ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Key: Press and hold the Custom button. Select one of the available features you would like the Custom button to open.

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 22-26 or see your Car Infotainment System User's Manual.

 
QUICK TIPS

- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

UVO eServices^{*†1a}

– FM/AM/SiriusXM^{®†20}/Media (USB, Aux, *Bluetooth*^{®†5} Audio, My Music)

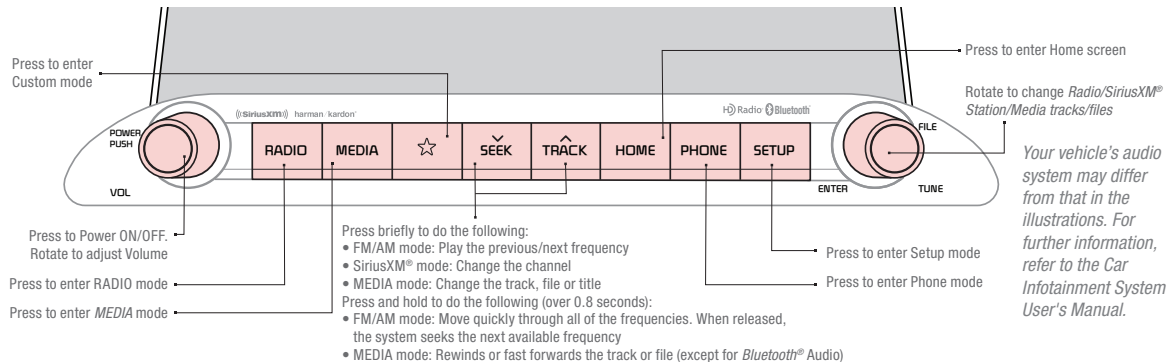

QR CODE

UVO eServices Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button \Rightarrow to save settings.

Radio Presets: You can listen to FM, AM and SiriusXM radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot SiriusXM[®].

Smart Favorites: For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Button ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Button: Press and hold the Custom button. Select one of the available features you would like the Custom button to open.

QUICK TIPS

- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones
- When using the voice command feature, wait for the system to BEEP before speaking the command
- At any time, you can interrupt Command Feedback by pressing the TALK button
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO eServices should be operated when the engine is running to prevent battery discharge

 
REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For further UVO eServices operation, refer to the Car Infotainment System User's Manual. For other audio system information, refer to pages 22-26.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

UVO link with Navigation*†1b,13

– FM/AM/SiriusXM®+20/Media (USB, Aux, *Bluetooth*®+5 Audio, My Music)

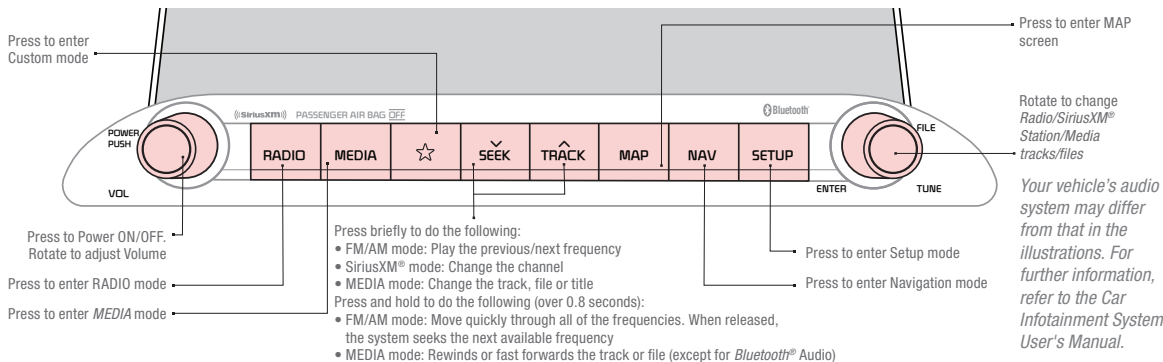

QR CODE

UVO link with Navigation Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Navigation, Advanced, Default)
4. Use the onscreen buttons to adjust settings.

Radio Presets: You can listen to FM, AM and SiriusXM radio and save frequently used stations.

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot SiriusXM®

Smart Favorites: For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Button ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Button: Press and hold the Custom button. Select one of the available features you would like the Custom button to open.

 
QUICK TIPS

- At any time, you can interrupt the Voice Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For further UVO link operations, refer to the Car Infotainment System User's Manual. For illustrative purposes only. Your actual display, buttons and/or features may vary. For other audio system information, refer to pages 23-24.

Automatic Climate Control*

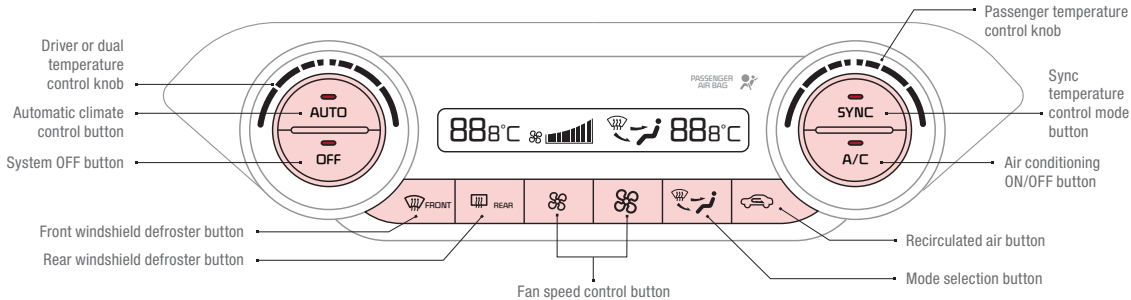

Air Flow Modes

To select Air Flow modes, press the MODE selection button:



Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature**
3. Rotate Passenger Temperature knob to select Dual Temperature Control Operation

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

Auto Defogging System:

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Auto Defogging System Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display

Manual Climate Control*

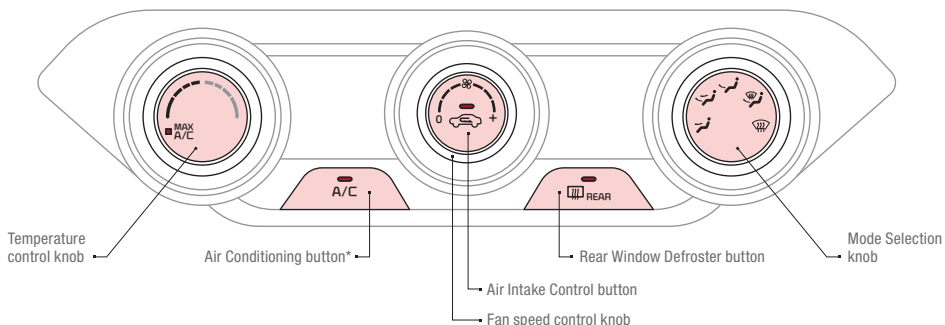

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

- Face-Level
- Bi-Level
- Floor-Level
- Floor/Defrost-Level
- Defrost-Level

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- Keep inside glass as clean as possible to reduce window fogging
- MAX A/C mode automatically engages Recirculated Air

REMINDER:

Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).

Wireless Smartphone Charging System*

Charge a compatible smartphone wirelessly by placing it on the tray **A** at the front of the console, near the Multimedia USB / Aux ports and the charging indicator, while the ignition is on.

The indicator light **B** may change to amber once the wireless charging begins. Once charging is complete, the orange light may change to green.

 
QUICK TIPS

- Wireless charging must be enabled in user settings
- For wireless charging to occur, all doors must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad.
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area.

REMINDERS:

- If driver door is opened, charging will be disabled
- The smartphone must be compatible with Qi charging in order to wirelessly charge
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging, however, device compatibility varies. See your owner's manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through a cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance: Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness

For illustrative purposes only. Your actual display, buttons and/or features may vary.

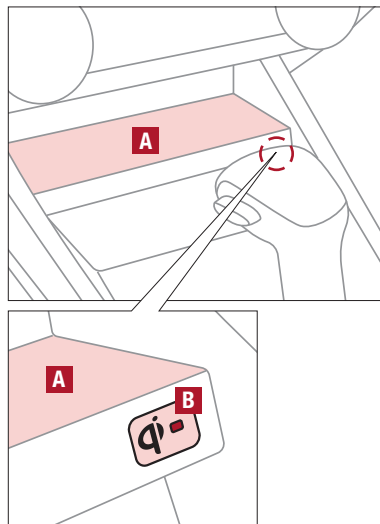

QR CODE

Wireless Charging Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Aux / Multimedia USB Ports, Power Outlets & USB Charger Port*

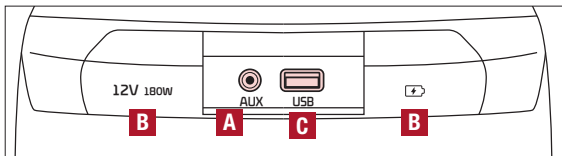

(Ports and power outlets located on lower part of Center Panel; power ports may be configured differently on your vehicle)

Aux / Multimedia USB Port*, A

Use the Aux port to connect audio devices and the Multimedia USB port to connect USB audio devices and smartphones.

Power Outlets B

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

USB Charger Port*

The USB Charger Port is located inside the Center Console.

REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time, with the Engine Start/ Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to your device
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer

For more information on the Aux / Multimedia USB Port, Power Outlets & Charger Ports, refer to the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Digital Clock

 
 
Press the SETUP key, then the Date/Time button to display the Clock setting screen. Then use the onscreen buttons to adjust time.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access the manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO link with Navigation* function only)

Automatic Gear Shift with Sportmatic®†21 Shifting*

- P:** Park
- R:** Reverse
- N:** Neutral
- D:** Drive

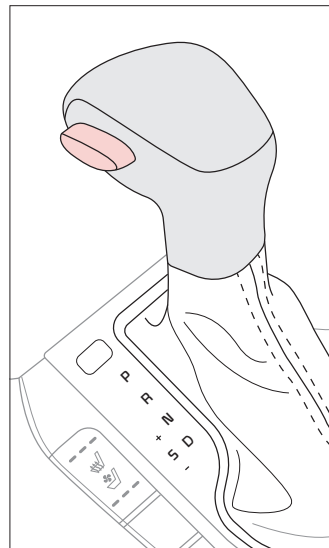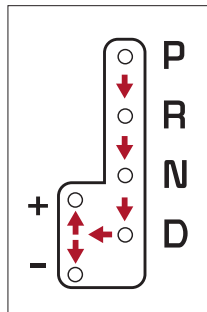

[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode: To enter Manual Mode, move shift lever from **D** to left gate.

To shift while in Manual Mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS

 
- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Manual Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

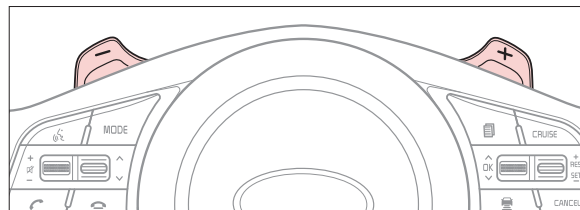

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Sportmatic Shifting Video



Paddle Shifters Video

 
 
 


www.youtube.com/KiaFeatureVideos

Manual Gear Shift*

Starting the Engine

1. Apply Parking Brake **A**
2. Fully depress Clutch and Brake Pedals **B**
3. Shift into Neutral **C**
4. Turn Ignition to Start/ON

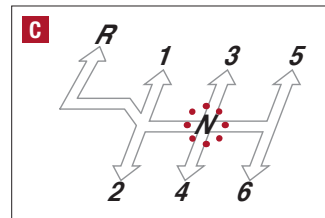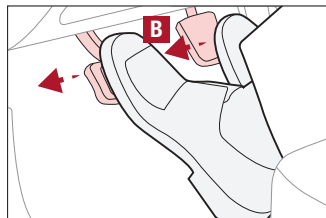
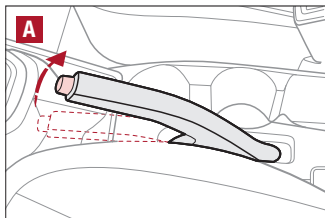


Shifting into Reverse

1. Fully depress Clutch and Brake Pedals **B**
2. Shift into Neutral **C**
3. Press Shift Lever button **D** in
4. Shift into Reverse **E**

QUICK TIP

  When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever button.

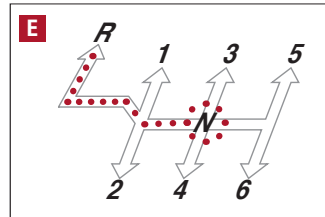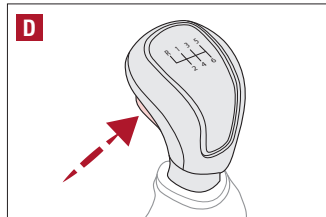

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
6-Way Manual Adjustable Driver's Seat^{*†17}

Pull lever **A** to slide Seat forward/backward.

Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback Recline.

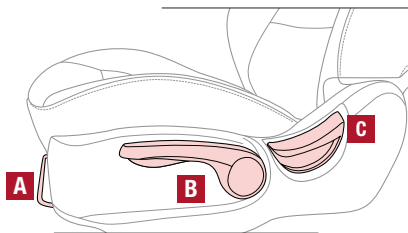

QUICK TIP

 
When adjusting the seat forward or backwards, ensure the seat clicks or locks into place before driving the vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Seat Warmers^{*†19} / Ventilated Seats^{*}

Seat Warmers button - Press the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit). Press the button a third time for low setting (1 LED lit) and again to turn OFF. Hold button to turn off Seat Warmer.

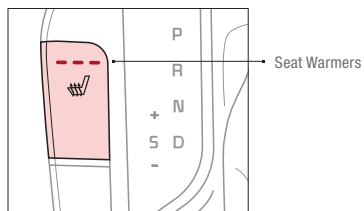

(Buttons located near Gear Shift Lever)

Seat Warmers / Ventilated Seats* button - Press top/ bottom of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF. Hold button to turn off the Seat Warmers / Ventilated Seats.



(Buttons located near Gear Shift Lever)

QR CODE

Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
 
QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF when ignition is cycled

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

10-way Power Adjustable Driver's Seat*†17

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline and Lumbar support* forward/backward.

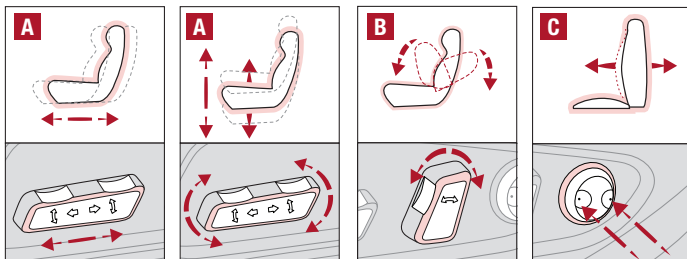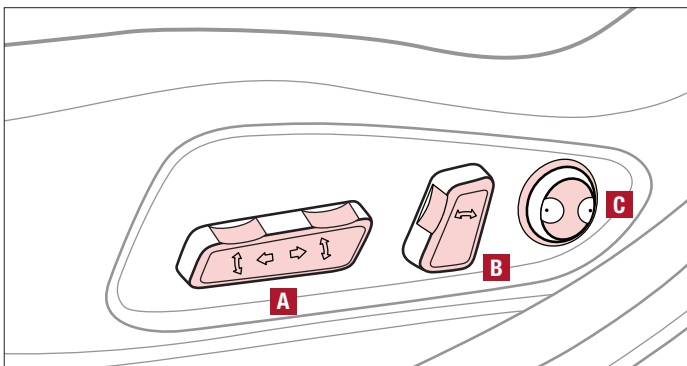

Seat forward/
backward

Seat Cushion

Seatback

Lumbar

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
Front Seat Headrest Adjustment†10

To raise Headrest: Pull Headrest up.

To lower Headrest: Press lock, then press the Headrest down.

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

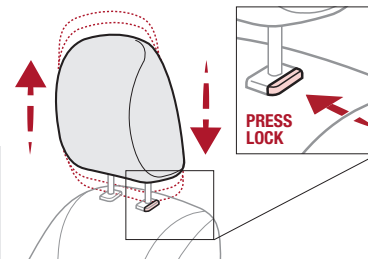

REMINDER: Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

Folding Rear Seats

 
 
1. Lower Rear Headrests to the lowest position
2. Pull Seatback Lock Release Lever **A** to release Rear Seatback (Lever located in trunk)
3. Fold Seatback **B** down
4. To return seat back, push back to its original position and ensure it latches

QUICK TIP

It may be necessary to remove the headrests and/or adjust the front seatbacks to fully lower rear seats

REMINDER: Always make sure the Seatback is locked in place when unfolded.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

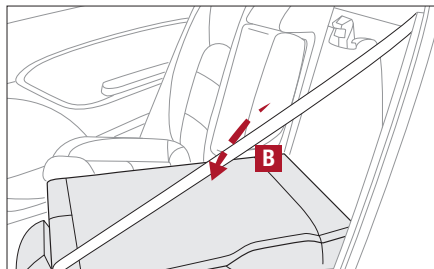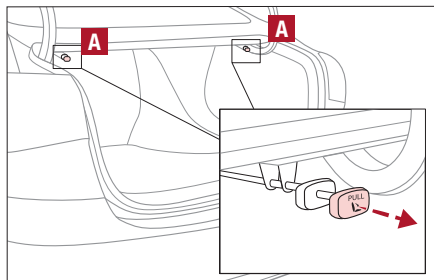

Map/Room Lamps*

Map/Personal Lamp

Push the lens **B** to turn the map/personal lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

Map/Personal Lamp switch **C**

DOOR – In the DOOR position, the lamp turns on when any door is opened.

ON – In the ON position, the lamps stay on continuously.

OFF – In the OFF position, the lamp is off even if the door is opened.

Room Lamp switch **D**

Press the switch to turn Room Lamp ON/OFF.

If vehicle is not equipped with Map Lamp, the Room Lamp will operate as follows:

- The lamp turns ON when any door is opened, and turns OFF after 30 seconds
- The lamp turns ON, when doors are unlocked with a key fob or Smart Key
- The lamp stays ON continuously when the ignition is in the ON position and a door is open
- The lamp stays ON for about 20 minutes when the ignition is in the ACC or LOCK/OFF position and a door is open

QUICK TIPS

- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunroof Operation*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.

Slide the Sunshade and Sunroof:

 
- Auto Open: Slide lever **A** backward to the farthest position and release.
- Auto Close (Sunroof only): Slide the lever **A** forward to the farthest position and release.

Slide the Sunroof (with Sunshade open):

- Open: Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature).
- Close: Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

Tilt the Sunroof:

- Raise: Push lever **A** upward.
- Lower: Push lever **A** forward.

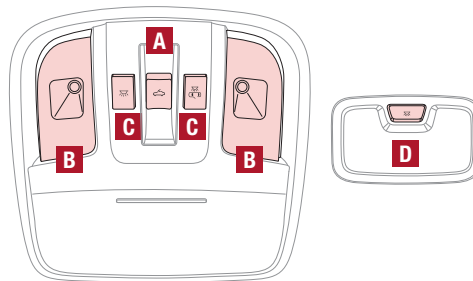

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Sunroof Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

QUICK TIP

To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction.

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle.

Smart Key*†9

Smart Key Fob:

- A** Press to lock All Doors; Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door; Press twice within 4 seconds to unlock All Doors
- C** Press and hold to open Trunk. Then lift lid by the handle to manually open Trunk.

REMINDERS:

- Trunk lid will partially open. To fully open, lift up manually
- The Trunk unlocks when the Smart Key is within close proximity of the vehicle
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key

Driver's Door Lock/Unlock button **F**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

REMINDER: Remote button configuration may vary depending on vehicle options

 
 
Mechanical Key **G**:

- Use to unlock Driver's Door (To remove keyhole cover, insert Mechanical Key into dent under cover and pull door handle)
- Use to turn the Child-Protector Rear Door Locks on or off

REMINDER: When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound.

For more information on the Mechanical Key, please refer to your Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

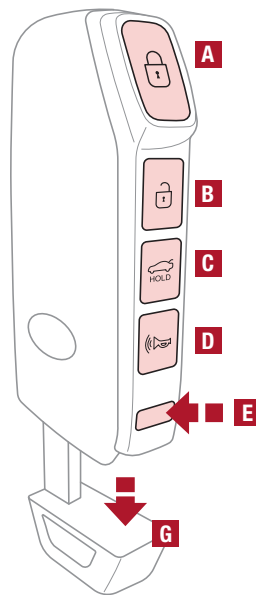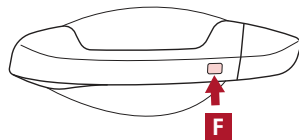

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Engine Start/Stop Button & Smart Key Video



Kia Key Fob Video

 


www.youtube.com/KiaFeatureVideos

Remote Keyless Entry* (folding key)

(Type A)


- A** Press the release button to release the key
- B** Press to lock all doors; Press twice within two seconds to sound the horn
- C** To unlock Driver's Door, press once. Press twice within 4 seconds to unlock All Doors
- D** Press and hold more than 1 second to unlock Trunk*
- E** Press and hold more than 1 second for Panic Alarm*. To turn off Alarm, press any button

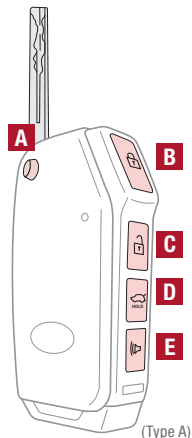

REMINDER: Remote button configuration may vary depending on vehicle options.

Double-Turn Lock/Unlock All

 - To remove keyhole cover, insert Mechanical Key into opening under cover and pull door handle
- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock All Doors

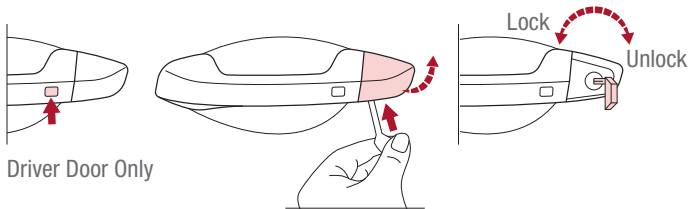


Driver Door Only

Tire Mobility Kit*

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage, enabling you to drive to the nearest service center. As a result, not all types of tire damage will require towing.

For operational information, please refer to section 6 of your Owner's Manual.

 - G** Sealant Bottle
- H** Compressor

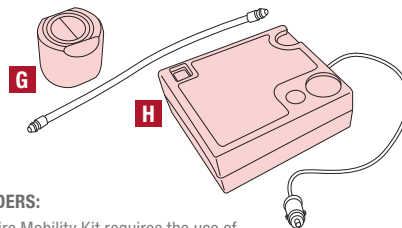

REMINDEMS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet/aux port area
- After the tire is properly sealed, drive cautiously, keeping vehicle speed below 50 mph and driving no more than 120 miles.

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if a tire is damaged beyond repair

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Tire Mobility Kit Video



Kia Key Fob Video



www.youtube.com/KiaFeatureVideos

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Smart Trunk*⁺¹⁵

Smart Key:


To open the Smart Trunk, press and hold the Trunk button **A** until the Trunk begins opening. Press again to cancel.

REMINDER: Pulling the Trunk upward by the handle or pressing the button a second time will interrupt the automatic opening of the Smart Trunk.

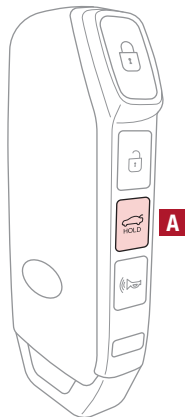

Outside the Vehicle:

 To open Trunk, press the Trunk Release button **B**.

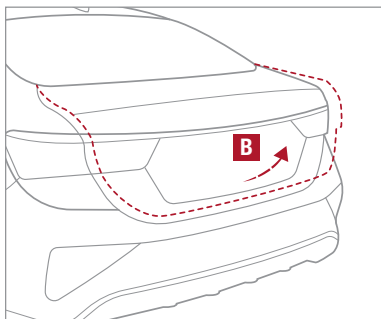

Smart Trunk*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Trunk is about to open. Then the alert system will blink and chime two additional times before opening the Smart Trunk.

The Smart Trunk feature is off by default. To enable the Smart Trunk, go to User Settings in the LCD Instrument Cluster modes.

QUICK TIP

During the Smart Trunk alert, the Smart Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

REMINERS:

- The trunk can be opened with no-touch activation after about 15 seconds of all doors being closed and locked
- The Smart Trunk feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected near the vehicle after 15 seconds or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- The Smart Key must be outside of the vehicle for the Smart Trunk to operate
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Trunk function.
- Ensure obstacles and people are out of the way of the Smart Trunk

 
For more information on the Smart Trunk operation, please refer to the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

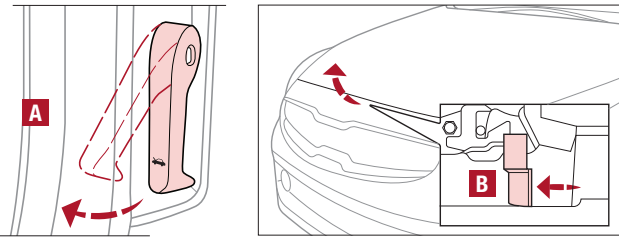

Closing the Hood:

 
Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMEMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Sunvisor^{t23}

Use the Sunvisor to shield direct light through the front or side windows.

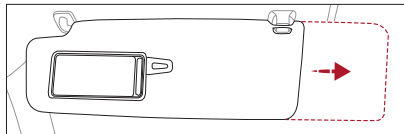


REMEMINDERS:

- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows
- Sunvisor may impair visibility if not adjusted properly

Trunk Release Lever and Button*

Trunk Release Lever C - To unlock the trunk from inside the vehicle, lift the Trunk Release Lever and manually open the trunk.

 Trunk Release Button* D - Press the Trunk Release Button and manually pull the trunk lid up (vehicles with Smart Key only).

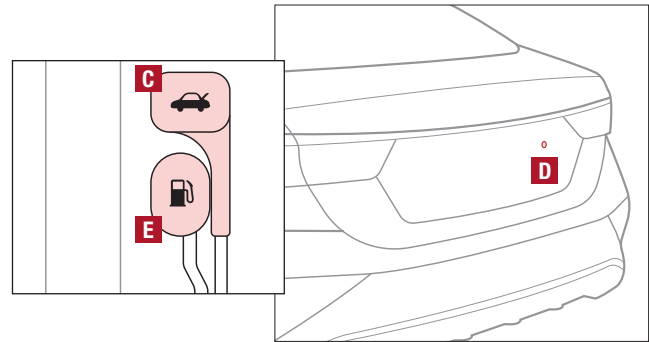

(Type A; Located under the trunk lid)

QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key* - The Trunk unlocks automatically, and can then be opened manually when the Smart Key fob* is within close proximity to the vehicle

Fuel Filler Lid Release Lever

From inside the vehicle, pull the lever **E** up to unlock and open the Fuel Filler Lid.

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Rear View Monitor†6

The Rear View Monitor system is a supplemental system that displays the view behind the vehicle through the audio control unit screens while the vehicle is in Reverse.

The Rear View Monitor activates when the:

1. Engine is ON
2. Gear Shift Lever is in the R (Reverse) position

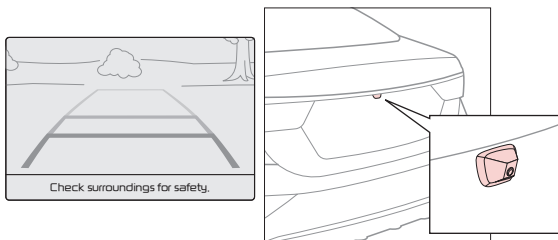

REMINDER: Always drive carefully and use caution when backing up

The Rear View Monitor is not a substitute for proper and safe backing-up procedures. The Rear View Monitor may not display every object behind the vehicle.

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMINERS:

- The Fuel Door Release Lever is located on the lower part of the driver's door sill
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

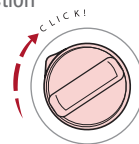


Parking Distance Warning-Reverse*†6

The Parking Distance Warning-Reverse is a supplemental system that is designed to assist the driver by chiming if an object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

REMINERS:

 - If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

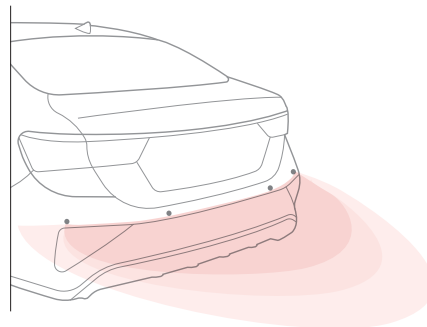

The Parking Distance Warning-Reverse is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Distance Warning-Reverse may not detect every object behind the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Driver Attention Warning (DAW)*†7

The DAW system is designed to detect certain inattentive driving practices and, in certain situations, can give a warning signal to the driver to take a break from driving.


The DAW System is set to OFF by default. To turn the DAW System ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driving Assist and select Driver Attention Warning. Set the DAW System to Normal or High Sensitivity.

Driver Attention Warning (DAW) System modes:

OFF: The Driver Attention Warning system is deactivated **A**

Normal Sensitivity: The Driver Attention Warning system alerts the driver of inattentive driving practices.

High Sensitivity: The Driver Attention Warning system alerts the driver of inattentive driving practices faster than Normal mode.

If the DAW System is activated, the DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below one bar **C**.



REMINDERS:

- The set-up of the DAW System will be maintained, as selected, when the ignition is cycled
- When activated, the DAW System does not display the “Consider taking a break” message when the total trip driving time is less than 10 minutes
- The DAW System will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

 
Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Seat Belts†2,18

To properly fasten your Seat Belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

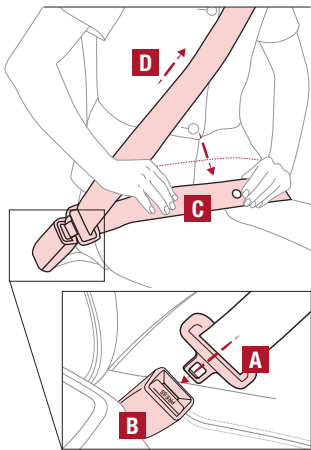

QUICK TIP

The Seat Belt warning chime operates for the driver's seat only.

 
 
REMINDER: For maximum protection, always wear your seatbelt.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Child-Protector Rear Door Locks

Locate these locks on the rear edge of the rear passenger doors. Turn the safety lock to the LOCK position to disable the inner door handles from opening the rear doors.

REMINDER: Child-protector rear door lock is located on rear passenger door jamb.

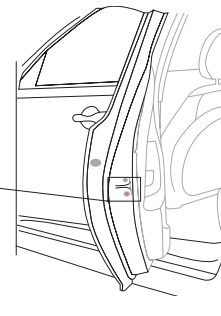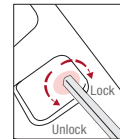

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

Occupant Detection System (ODS) / Passenger Airbag Off Indicator†2,13

ODS is designed to detect the presence of the front passenger. Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)



(Located above Climate Control panel)

If the system determines that the airbag should not be deployed, the Passenger Airbag Off light **E** will illuminate.

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual.

(up to 60,000 miles)^A For Non-Turbo maintenance, see back cover

MAINTENANCE ITEMS - TURBO	MAINTENANCE INTERVALS (MILES)										
	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000	
Add fuel additive ^C	P	P	P	P	P	P	P	P	P	P	
Rotate tires	P	P	P	P	P	P	P	P	P	P	
Engine Oil & Oil Filter	R	R	R	R	R	R	R	R	R	R	
Climate control air filter	R	R	R	R	R	R	R	R	R	R	
Battery condition	I	I	I	I	I	I	I	I	I	I	
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I	
Brake discs and pads	I	I	I	I	I	I	I	I	I	I	
Vacuum hose	I	I	I	I	I	I	I	I	I	I	
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I	
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I	I	I	
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I	
Exhaust system	I	I	I	I	I	I	I	I	I	I	
Air cleaner filter	I	I	I	R	I	I	I	R	I	I	
Driveshaft and boots		I		I		I		I		I	
Brake fluid		I		I		I		I		I	
Fuel tank air filter ^{†D}		I		I		I		I		I	
Parking brake (hand type)		I		I		I		I		I	
Vapor hose and fuel filler cap		I		I		I		I		I	
Cooling System						I		I		I	
Dual clutch transmission fluid ^{‡E} / Manual Transmission Fluid ^{‡E}				I				I			
Fuel lines, hoses and connections				I				I			
Spark Plugs							R				
Valve clearance ^F										I	
Drive belts (First 60,000 miles, then every 12,000 miles) ^G										I	

QUICK TIP Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices / UVO link account by logging into your UVO eServices / UVO link App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO eServices / UVO link only – See page 22-23 for setup information).

- A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- E. Manual transmission fluid (or Dual clutch transmission (DCT) fluid) should be changed anytime the transmission has been submerged in water.
- F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
- G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

‡ If equipped.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. UVO eServices:** Purchase/lease of a new 2020 Kia Forte vehicle with UVO eServices includes a complimentary 5-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 5-year UVO eServices subscription expires, your access to UVO eServices will immediately terminate. Use of UVO eServices is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO eServices is transferable to subsequent owner during the original UVO eServices service term. Only use UVO eServices when safe to do so. UVO eServices App is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO eServices at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO eServices features may vary by model, model year, and trim level. Features and specifications are subject to change. For more on details and limitations, visit <https://owners.kia.com/> or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 1b. UVO link:** Purchase/lease of a new 2020 Kia Forte vehicle with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to UVO link will require a paid subscription at the then current subscription rate or your use of UVO link will immediately terminate. Use of UVO link is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. UVO link is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com/> or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply. Android Auto is a trademark of Google LLC.
- 4. Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Blind-Spot Collision Warning with Lane Change Assist, Rear Cross-Traffic Collision Warning (RCCW), Lane Keeping Assist (LKA), Lane Departure Warning (LDW), Rear View Monitor, Parking Distance Warning-Reverse, Smart Cruise Control (SCC), Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play® Store** is a trademark of Google, Inc. ©2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 13. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 14. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 15. Power Trunk / Smart Trunk™:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 16. Roadside Assist 24-hour Enhanced Roadside Assistance** is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 17. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 18. Seat belts:** For maximum protection, always wear your seatbelt.
- 19. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 20. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2019 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 21. Sportmatic®** is a registered trademark of Kia Motors America.
- 22. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 23. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 24. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 25. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

 


KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer

- Standard Audio System* – page 24

For further operational information, refer to the Car Infotainment System User’s Manual or Owner’s Manual.

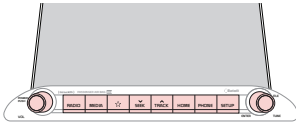


- UVO eServices* – page 25

For further operational information, refer to the Car Infotainment System User’s Manual.




- Android Auto™ / Apple CarPlay® Setup – page 22

 - UVO eServices/UVO link Activation* – page 22-23

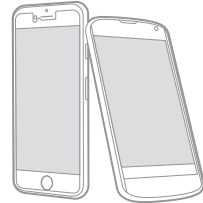


- UVO link with Navigation* – page 26

 For further operational information, refer to the Car Infotainment System User’s Manual.

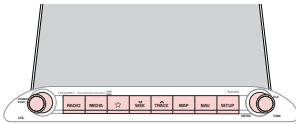


- Cruise Control* – page 18

 Demonstrate operation.

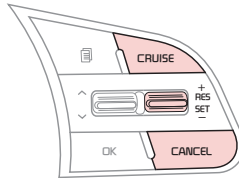

- Bluetooth® Wireless Technology* – page 20

 Demonstrate operation.

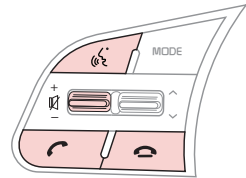

- Tire Pressure Monitoring System (TPMS) – page 7

- Engine Start/Stop Button* – page 13

- Digital Clock – page 30

- Aux/Multimedia USB Port*, Power Outlets & Charger Ports – page 30

- Seat Warmers / Ventilated Seat* – page 33

- Folding Rear Seats* – page 35

- Sunvisor – page 40

- Smart Key* – page 37

- Rear View Monitor – page 41

- Passenger Air Bag Off Indicator – page 43

DURING DELIVERY

*if equipped

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



FORTE CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____

 
BEFORE DELIVERY

- Confirm "Good Battery" with a Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF_____ LR_____ RF_____ RR_____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any supplemental audio user's guides)


KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control – pages 27-28
Demonstrate Air Flow Modes, Defog and Defrosting Windshield.


Automatic*

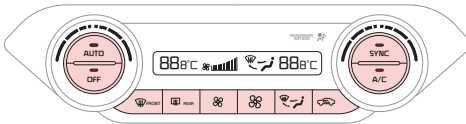


Manual*

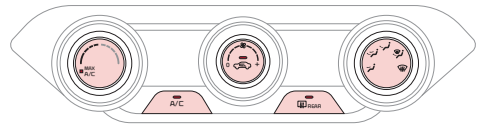 

 - Manual Gear Shift* – page 32
Demonstrate pressing button for reverse gear.

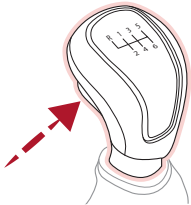

 - Windshield Wipers & Washers - page 16
Rotate INT switch to adjust Intermittent Wipe Speed.

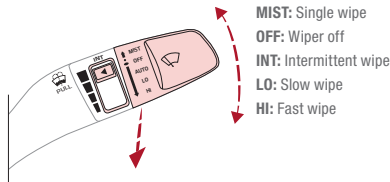

Pull to spray and wipe.

KIA FORTE NORMAL MAINTENANCE SCHEDULE NON-TURBO

P=Perform • R=Replace • I=Inspect^B

(up to 60,000 miles)^A

For Turbo maintenance, see page 44

MAINTENANCE INTERVALS (MILES)

MAINTENANCE ITEMS	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Driveshaft and boots		I		I		I		I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R
Brake fluid		I		I		I		I
Fuel tank air filter ^D		I		I		I		I
Parking brake (hand type)		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Cooling System				I		I		I
Manual transmission fluid [‡]				I				I
Fuel lines, fuel hoses and connections				I				I
Drive belts (First 60,000 miles, then every 15,000 miles) ^E								I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices/UVO link account by logging into your UVO eServices/UVO link App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO eServices or UVO link only – See page 22-23 for setup information)

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2019 Kia Motors America, Inc. All rights reserved.
Consumer - Roadside Assistance^{†16}: 1-800-333-4KIA (4542)

Part Number: UD200-PS-004

†LEGAL DISCLAIMERS ON BACK INSIDE COVER