

K900

FEATURES & FUNCTIONS GUIDE





GETTING TO KNOW YOUR K900

Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow. This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact, and assumes no liability in connection with such changes.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com

Consumer Affairs - Roadside Assistance^{††}: 1-855-4KIAVIP (855-454-2847) or 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

See Back Pages for Vehicle Maintenance Schedule.

† LEGAL DISCLAIMERS ON BACK INSIDE COVER

Essential Features

Automatic Climate Control System	38	Smart Cruise Control (SCC) with Stop & Go	26
Automatic Transmission (Shift by Wire)	40	Smart Key	48
Multimedia USB Port, Power Outlets & USB Charger Ports	35	Smart Power Trunk	50
Bluetooth® Wireless Technology	28	Steering Wheel Adjustment	23
Driver Information System (DIS) Controls	34	Surround View Monitor (SVM)	43
Head-Up Display (HUD)	11	Tire Pressure Monitoring System (TPMS)	07
Power Front Seat Headrest Adjustment	46	UVO link with Navigation.	33
Rear Passenger's Climate Control	39	Windshield Wipers and Washers.	25

Videos & QR Codes 02

Instrument Cluster 03-12

Instrument Cluster Overview.	03
Indicators & Warning Lights	04
Drive Mode Integrated Control System	05
Fuel Economy	06
Driver Attention Warning (DAW)	06
Tire Pressure Monitoring System (TPMS)	07
LCD Instrument Cluster Modes	08
Trip Information / Trip Computer	08
Service Interval Mode	09
Safe Exit Assist (SEA)	09
Forward Collision-Avoidance Assist (FCA)	10
Head-Up Display (HUD)	11
Highway Driving Assist (HDA) System	12

Driver's Panel 13-22

Idle, Stop and Go (ISG) System	13
Instrument Cluster Control	14
Electronic Stability Control (ESC) / Traction Control System (TCS).	14
Hill-Start Assist Control (HAC)	14
Blind-Spot Collision Avoidance (BCA)	15
Rear Cross-Traffic Collision Avoidance Assist (RCCA)	16
Blind-Spot View Monitor System	16
Lane Keeping Assist (LKA)	17
Lane Follow Assist (LFA).	18
Reverse Parking Aid Function	19
Fuel Door Release Button	19
Parking Distance Warning-Reverse/Forward	20
Rear View Monitor	20
Power Windows, Window Lock & Central Door Lock	21
Power Folding Outside Mirrors	21
Heated Outside Mirrors	21
Auto Door Lock/Unlock	21
Engine Start/Stop Button	22

Steering Wheel Controls 23-30

Power Tilt/Telescoping Steering Wheel	23
Heated Steering Wheel	23
Headlights & High Beams	24
Turn Signals	25
Windshield Wipers & Washers	25
Lifting Wipers (Wiper Service Mode).	25
Smart Cruise Control (SCC) with Stop & Go	26
Bluetooth® Wireless Technology	28
Audio Controls	30

Center Panel 31-44

UVO link Activation.	31
UVO Assistance	31
Android Auto™ / Apple CarPlay® Setup	32
UVO link with Navigation.	33
Driver Information System (DIS) Controls	34
Clock	35
Multimedia USB Port, Power Outlets & USB Charger Ports	35
Vehicle Settings Mode (User Settings)	36
Wireless Smartphone Charging System	37
Automatic Climate Control System	38
Automatic Transmission (Shift by Wire)	40
Paddle Shifters (Manual Mode)	40
Electronic Parking Brake (EPB)	41
Auto Hold	42
Surround View Monitor (SVM)	43
Seat Warmers / Ventilated Seats	44
Power Rear Curtain	44

Seating 45-47

Power Adjustable Driver's Seat	45
Power Front Seat Headrest Adjustment	46
Driver Position Memory System	46
Power Reclining Rear Seats	47

Other Key Features 48-55

Smart Key	48
HomeLink® with Auto-Dimming Rearview Mirror	49
Smart Power Trunk	50
Map/Room Lamps	52
Sunroof Operation	53
Sunvisor	54
Hood Release Lever and Latch	54
Fuel Cap/Malfunction Indicator (Check Engine Light)	55

Safety Features 55-57

Child-Protector Rear Door Lock	55
Seat Belts	56
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	57

Normal Maintenance Schedule 58

Legal Disclaimers Inside Back Cover

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Videos & QR Codes

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, two-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader app. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Kia One-Click Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an App Store or Marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader app

ONE-CLICK FUEL CAP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Quick Tips

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connecting" message appears and then nothing happens or there's a "connection error" message. These messages typically indicate that your device is having trouble connecting to the Internet

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

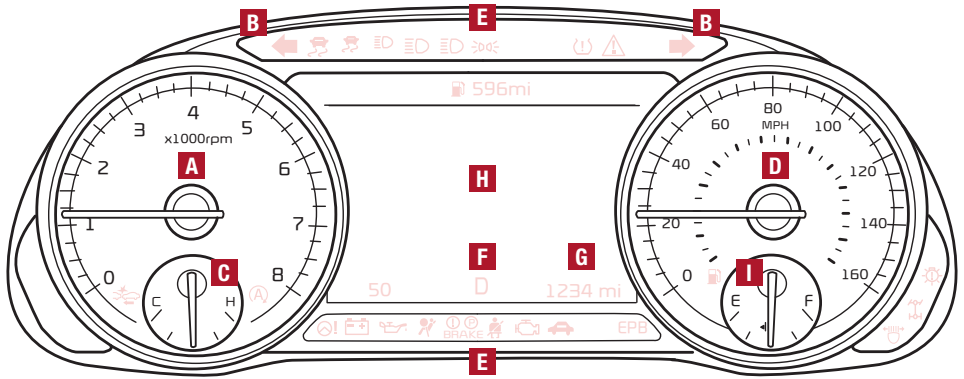


(Type A instrument cluster shown)

Instrument Cluster Overview

- | | | |
|---------------------------------|--|------------------------|
| A Tachometer | D Speedometer | G Odometer |
| B Turn Signal Indicators | E Indicator & Warning Lights | H Trip Computer |
| C Temperature Gauge | F Gear Shift Position Indicator | I Fuel Gauge |

 Your vehicle's instrument cluster & indicator light locations may differ from those in the images. Type B cluster not shown. See your Owner's Manual for more information.

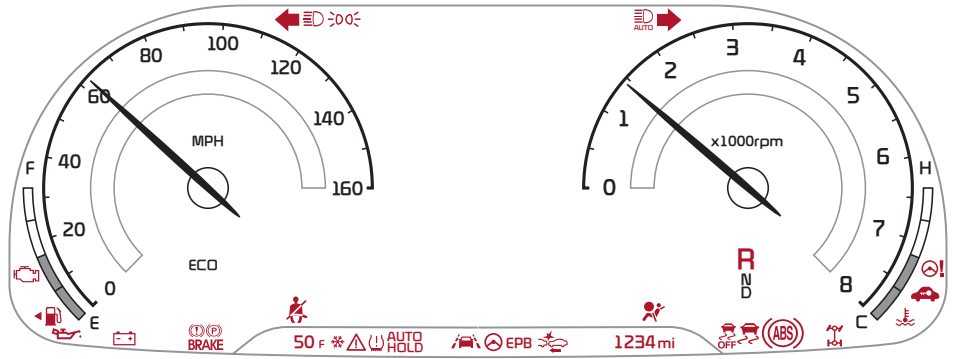


(Type B instrument cluster shown)

Indicators & Warning Lights

- | | | | | | |
|--|--|--|---|--|---|
| | Light ON Indicator | | Parking Brake & Brake Fluid Warning Light | | Forward Collision-Avoidance Assist (FCA) Warning (or OFF) Indicator |
| | Cruise Indicator | | Door Ajar Warning Light | | ECO / SPORT / CUSTOM / COMFORT / SMART Mode Indicator |
| | Lane Keeping Assist (LKA) Indicator | | Airbag Warning Light | | Master Warning Light |
| | Electronic Parking Brake (EPB) Warning Light | | Turn Signal Indicators | | Low Beam Assist-Dynamic (LBA-D) |
| | Immobilizer Indicator | | Anti-Lock Braking System (ABS) Warning Light | | High Beam Assist (HBA) Indicator |
| | High Beam Indicator | | Auto Hold Indicator | | Auto-Stop Indicator (ISG) |
| | LED Headlamp Warning Light | | Charging System Warning Light | | All Wheel Drive (AWD) Warning Light |
| | Electronic Stability Control (ESC) Warning Light | | Engine Oil Pressure Warning Light | | |
| | Electronic Stability Control (ESC) OFF Light | | Engine Coolant Temperature Warning Light | | |
| | Malfunction Indicator Light | | Low Fuel Level Warning Light | | |
| | Low Tire Pressure Indicator / Tire Pressure Monitoring System (TPMS) Malfunction Light | | Electronic Power Steering (EPS) Warning Indicator | | |
| | Seat Belt Warning Light | | Electronic Brake Force Distribution (EBD) System Warning Light – (Two separate indicators on Instrument Cluster lit at same time) | | |

 Your vehicle's instrument cluster & indicator light locations may differ from those in the images. Type A cluster not shown. Some warning messages not listed above appear on the LCD in the middle of the Instrument Cluster. See your Owner's Manual for more information.

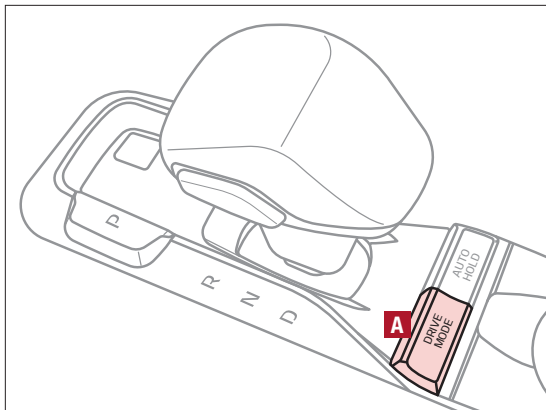

Drive Mode Integrated Control System

SMART, COMFORT, SPORT, CUSTOM and ECO drive modes may be changed according to the driver's preference or road conditions. To change the drive mode, press the DRIVE MODE button **A**.

COMFORT Mode – The system's default mode is COMFORT mode and is not displayed on the instrument cluster nor the audio system's screen.

ECO Mode – A green ECO indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.

CUSTOM Mode – A purple CUSTOM indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.

SPORT Mode – A red SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.

 
SMART Mode – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style. A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator will change depending on the current driving style. To deactivate, press the DRIVE MODE button **A** again to change the selection to another setting.

DRIVE MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

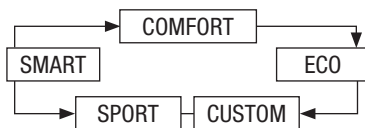

Quick Tip

When the Engine Start/Stop button is turned off, the system will default to COMFORT mode and each mode will need to be selected again when the vehicle restarts.

REMINDERS:

When ECO mode is selected, the following may occur to help improve fuel economy:

- Acceleration may be slightly reduced even when the accelerator is fully depressed
- Air conditioner performance may be limited
- Shift pattern of the automatic transmission may change
- Engine noise may increase
- System's power will be limited when driving uphill
- Steering effort may be slightly increased in Sport mode

When SPORT mode is selected, fuel economy may decrease.

Fuel Economy

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

FUEL ECONOMY VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

Driver Attention Warning (DAW)^{†7}

The DAW system is designed to detect certain inattentive driving practices and, in certain situations, can give a warning signal to the driver to take a break from driving.


The DAW System is set to ON by default. To turn the DAW System OFF, go to Vehicle Settings on the audio head unit. Select Vehicle > Driver Assistance > Driver Attention Warning. Set the DAW System to Normal, High Sensitivity or Off.

Driver Attention Warning (DAW) System modes:

Off: The Driver Attention Warning system is deactivated **A**.

Normal Sensitivity: The Driver Attention Warning system alerts the driver if it detects inattentive driving practices.

 
High Sensitivity: The Driver Attention Warning system alerts the driver if it detects inattentive driving practices faster than Normal mode.

If the DAW system is activated, the DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, "Consider taking a break," appears on the LCD display and a warning sounds to suggest that the driver take a break when the driver's attention level is below one bar **C**.


REMINDERS:

- The setup of the DAW system will be maintained, as selected, when the ignition is cycled
- When activated, the DAW system does not display the "Consider taking a break" message when the total trip driving time is less than 10 minutes
- The DAW System will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

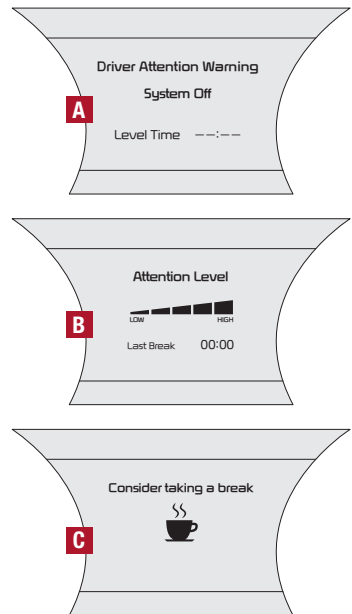



 Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

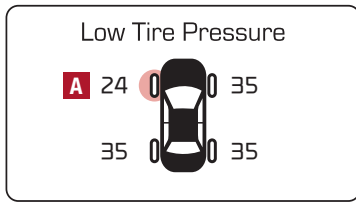For illustrative purposes only. Your actual display, buttons and/or features may vary.



Tire Pressure Monitoring System (TPMS)^{†26}

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, if a spare tire has been installed that does not have a TPMS device, or when the outside temperature drops considerably.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator  showing which tires are underinflated.

- Inflate tire(s) to specifications using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute and then illuminate. See dealer for service

TIRE PRESSURE MONITORING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
 
Quick Tips

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for approximately 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressure and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is open
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

For illustrative purposes only. Your actual display, buttons and/or features may vary.

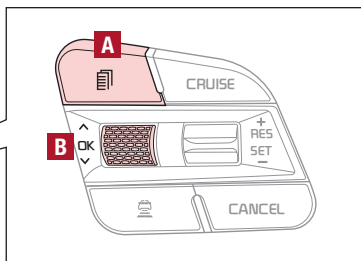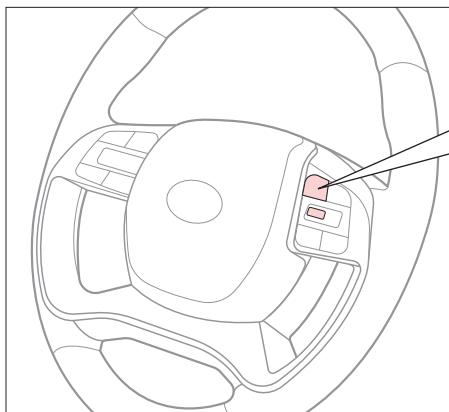

(Modes on Instrument Cluster LCD)

LCD Instrument Cluster Modes


The LCD Instrument Cluster modes can be changed by using the mode button **A** on the right side of the steering wheel.

Modes (Type B Instrument Cluster):

 **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.

 **Turn-by-Turn Mode:** Displays the state of the navigation

 **Smart Cruise Control (SCC) with Stop & Go / Lane Keeping Assist (LKA):** Displays the state of the SCC and LKA

 **Master Warning Mode:** Informs of warning messages related to washer fluid or malfunction of Blind-Spot Collision Warning (BCW), etc.


Your vehicle's steering wheel buttons and LCD modes may differ from those in the illustrations.

 
Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Trip Information / Trip Computer

The Trip Computer is a driver information system that displays information related to driving when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A** on the right side of the steering wheel.

When in the Trip Computer mode , press the Select/Reset (OK) button **B** to cycle through the screens. When displaying TRIP A or TRIP B screens, press and hold the **OK** button to reset the Tripmeter to zero.

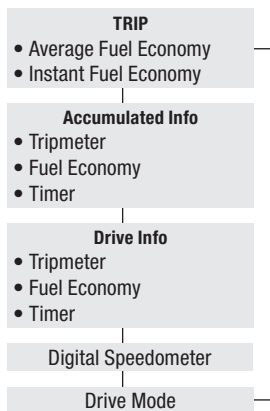


REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Service Interval Mode

 When the Service Interval Mode is activated, set and vehicle service is required, the following message will be displayed on the LCD, **Service Required**, and display the remaining days/miles until service is due.

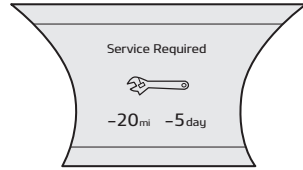

Service Interval Mode ON and Interval Setting

To activate the Service Interval Mode and set the interval, press the Settings icon on the audio control unit screen, and then select VEHICLE to enter the Vehicle Settings Mode. Scroll to the Service Interval Mode and select. Adjust the service interval.

Service Interval Mode Off

 
 
To turn Service Required OFF, go to Vehicle Settings again, scroll to Service Interval and press OFF.

Safe Exit Assist (SEA)

The Safe Exit Assist (SEA) system may display a warning message on the Instrument Cluster **A** and sound an audible warning for five seconds when a vehicle occupant opens a door while the vehicle is in motion and a vehicle is detected, approaching from behind.

The system operates for ten minutes after the ignition is turned off and will cancel when the doors are locked with the Smart Key.

For more information on Safe Exit Assist (SEA), refer to the Owner's Manual.

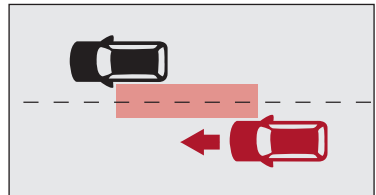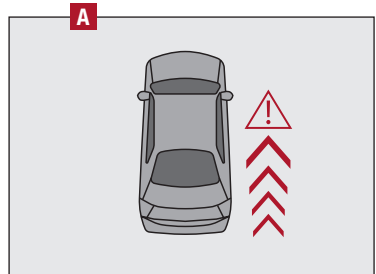

Forward Collision-Avoidance Assist (FCA)^{†6}

The FCA system is designed to detect slowing or stopped traffic ahead and, under certain conditions, can apply the brakes in order to help avoid or reduce the effects of a potential collision. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle, pedestrian or cyclist in front, emitting an audible warning and visual alert on the instrument cluster.

To activate the systems, go to Vehicle Settings in the audio head unit and select Vehicle > Driver Assistance > Forward Safety. Then select Active Assistance, Warning Only or Off.

 
 
The initial warning time can be selected when in Vehicle Settings. Select Vehicle > Driver Assistance > Warning Timing > Normal/Later.

If the system detects that the collision risk has increased, the FCA system automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision. FCA can be turned ON in the User Settings menu on the Instrument Cluster display.

The FCA / FCW will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON
- The system detects a vehicle, pedestrian or cyclist in front

LED Warning Messages:

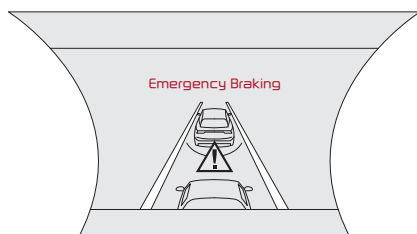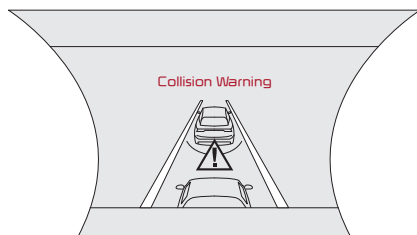


FORWARD COLLISION-AVOIDANCE ASSIST (FCA) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

REMINDERS:

- The FCA / FCW will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If the FCA / FCW are operating and the ESC (Electronic Stability Control) is turned off **A**, the FCA / FCW systems are automatically turned off.
- When FCA / FCW system is off, the FCA warning indicator is on in the Instrument Cluster .


The Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW) are not substitutes for safe and proper driving. Always drive safely and use Caution.

FCA and FCW may not always alert the driver when the vehicle is approaching another vehicle.

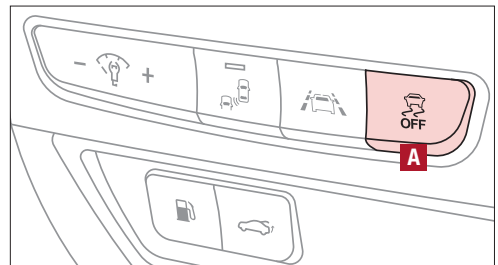

(Button is located in Driver's Panel)



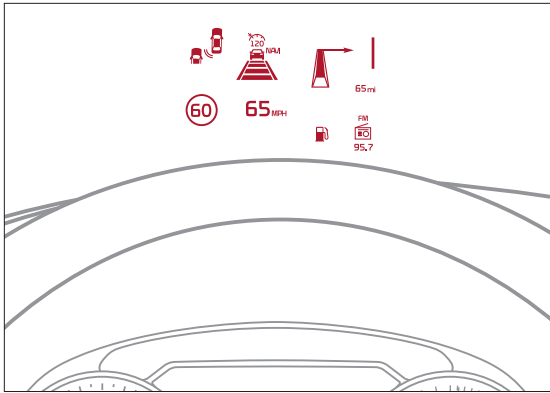 

For illustration purposes only.
Your actual display may vary.

Head-Up Display (HUD)^{† 12}

The Head-Up Display (HUD) is a semi-transparent display that projects a snippet of information from the instrument cluster and navigation system onto the windshield glass.

To turn HUD ON or OFF, go to User Settings in the LCD Modes.

The HUD displays:

- Turn By Turn (TBT) navigation information
- Road signs
- Speedometer
- Cruise setting speed
- AV mode information
- Smart Cruise Control (SCC) information
- Blind-Spot Collision Warning (BCW) system information
- Warning lights (low fuel)

Head-Up Display (HUD) User Settings

 
Drivers can adjust the HUD settings from the LCD Instrument Cluster modes in User Settings. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Select: Activate or deactivate HUD content (TBT, SCC, LKA, BSCW)
- Speedometer Size: Choose the size of the HUD speedometer (Small, Medium, Large)
- Speedometer Color: Choose the color of the HUD speedometer (White, Amber, Green)

REMINDERS:

- The HUD image on the windshield glass may not be visible when:
 - The driver has poor sitting posture
 - The driver is wearing polarized sunglasses
 - There is an object covering the HUD
 - Driving on a wet road
 - There is excessive lighting inside or outside the vehicle
- Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass.
- If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD.

The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.

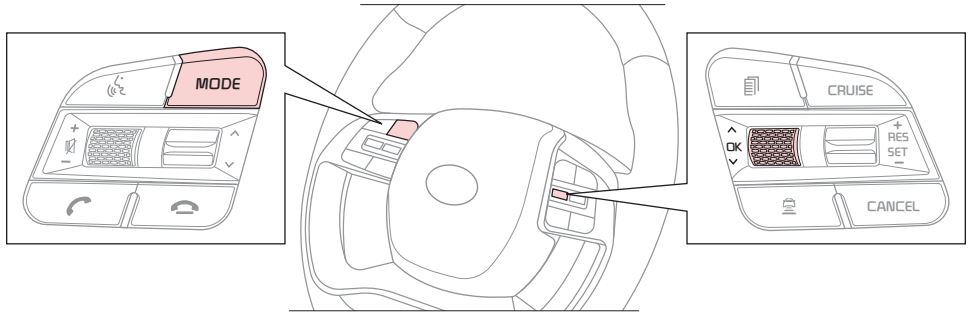

Highway Driving Assist (HDA)

The Highway Driving Assist (HDA) system is designed to adjust the vehicle distance and the speed of the vehicle when driving on federal highways. The system can adjust the vehicle's speed based on available highway speed information. When conditions are met, the system will enter the automatic speed setting mode, which is designed to set the speed automatically by adjusting to the changing speed limits of the highway section. An AUTO symbol will be displayed in green on the instrument cluster and a chime will sound.

To turn the HDA system on, go to Vehicle Settings in the audio head unit. Go to Vehicle > Drive Assistance > Driving Assist > Highway Driving Assist (HDA).

The HDA system will operate only when these conditions are met:

- The vehicle is traveling slower than 95 mph
- When driving on federal highways
- When the SCC system is on and operating

When the HDA system is activated and the conditions are met, the Instrument Cluster indicator light **A** will illuminate green. If the conditions are not met, the HDA system will be in standby mode and the indicator light **A** will illuminate white.

When in operation, and if both lanes are recognized, a display **B** will show the lanes illuminated white and the steering wheel indicator illuminated green, and steering control is initiated.

 
If the HDA system is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit), the HDA system will enter the automatic speed setting mode. The set speed and AUTO will be displayed **C** in green and an audible alert will sound.

REMINDERS:


- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode
- When the ignition is cycled, the system returns to its previous state, on or off

Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways.

Always drive safely and use caution. See the Owner's Manual for more detailed information, limitations and conditions.

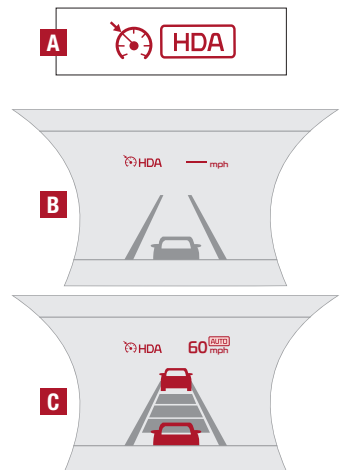

Images are for illustrative purposes only and may not reflect actual feature or operation.

 

Idle, Stop and Go (ISG) System

The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator (A) on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Sport Shift mode. When the engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG System, press the ISG OFF button (A). If you press it again, the system will be activated.

For more information on the Idle, Stop and Go System, refer to your Owner's Manual or contact your local dealership.

IDLE, STOP AND GO VIDEO

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
Quick Tips

- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

REMINDERS:

- ISG is active by default at vehicle startup. When the ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator (A) is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

See Owner's Manual for more detailed operating instructions and information.

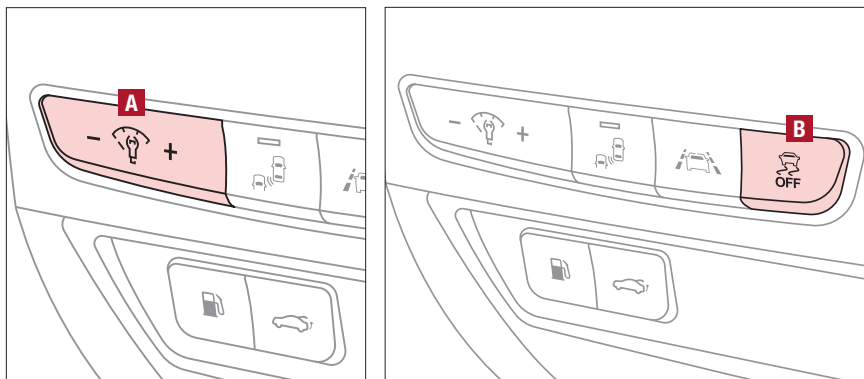

Instrument Cluster Control

With the parking lights/headlights ON, press **A** (+) or (-) to adjust the brightness of the Instrument panel illumination.

REMINDER: The Instrument Cluster Control (Instrument Panel Dimmer) does not adjust brightness on the audio system screen. Use the audio system setup to adjust brightness on the audio system.

Electronic Stability Control (ESC)^{†8} / Traction Control System (TCS)^{†8}

Electronic Stability Control (ESC) is designed to help stabilize the vehicle during certain cornering maneuvers. The Traction Control System (TCS) can help improve traction. It is a good idea to keep both ESC and TCS turned on for daily driving whenever possible.

Press the ESC button **B** to turn the Traction Control System OFF/ON.

To turn both the Electronic Stability Control and Traction Control System OFF, press and hold the ESC button for more than 3 seconds. Press again to turn ON.

REMINDEES:

- ESC is active by default at vehicle startup. When the ignition is cycled, ESC will turn ON again
- The ESC indicator light in the instrument cluster will be lit momentarily whenever ESC is active

For more information on Electronic Stability Control (ESC) and its specific features and operation, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)^{†8}

Hill-Start Assist Control (HAC) is designed to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

 
HAC automatically activates whether ESC is OFF or ON but does NOT activate when ESC has malfunctioned.

REMINDEES:

- HAC does not operate when the gear shift is in the P (Park) or N (Neutral) position
- HAC does not replace the need to apply brakes while stopped on an incline

Quick Tip

When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.

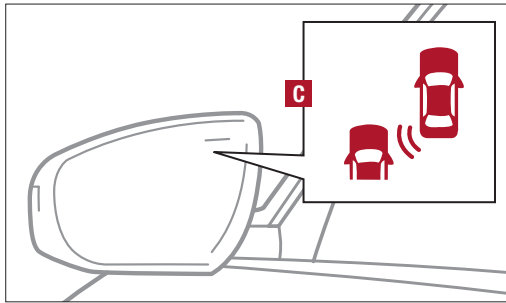

Blind-Spot Collision-Avoidance Assist (BCA)^{†6}

The BCA system uses radar sensors in the rear bumper to monitor and warn the driver if it detects an approaching vehicle in the driver's blind spot area.

To activate the BCA system, go to Vehicle Settings on the audio head unit. Select Vehicle > Driver Assistance > Blind Spot Safety. Select Active Assist, Warning Only or Off.

To set the initial warning activation time, when in Vehicle Settings, select Vehicle, then Driver Assistance and then Warning Time. Select the Normal or the Later option.

 
If BCA button **A** is pressed while the system is activated and Active Assist or Warning Only is selected the indicator on the button turns off and the system deactivates.

If you press BCA button **A** while the system is canceled the button indicator illuminates and the system activates. In this case, when the ignition is cycled, the system returns to its previous state. When the system is initially activated and the ignition is cycled, the warning light will illuminate for 3 seconds on the outside rearview mirror.


1st-stage alert: When another vehicle is detected within the BCA system warning boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors **C**.

2nd-stage alert: When 1st stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

The BCA may apply braking power when an approaching vehicle is detected within a certain distance next to and/or behind your vehicle.

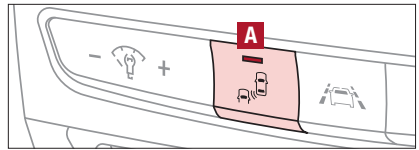

 (Button located on driver's panel, left of the steering wheel)

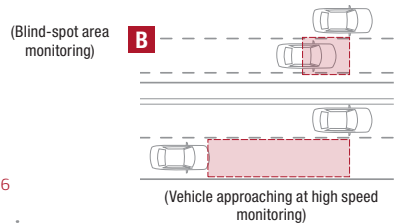

(Blind-spot area monitoring)

(Vehicle approaching at high speed monitoring)

BLIND-SPOT COLLISION AVOIDANCE ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Quick Tips

- The BCA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit
- The BCA system will activate when:
 - The system is turned on
 - Vehicle speed is above approximately 20 mph
 - Other vehicles are detected on the rear sides of the vehicle

REMINDERS:

- The BCA system (warning only) will activate when the vehicle is traveling faster than 20 mph
- The BCA system (active assist) will activate when the vehicle is traveling faster than 40 mph, detects both of the lane lines it is traveling in and an approaching vehicle is detected
- The BCA system will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When the BCA is ON and the ignition is cycled, the BCA system returns to its previous state
- The BCA systems is a supplemental system. Do not solely rely on these systems and always pay attention to the road and its condition

Rear Cross-Traffic Collision Avoidance Assist (RCCA)^{†6}

If the RCCA system sensors detect vehicles approaching from the rear left or rear right side **A**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen.

 
To activate the systems, go to Vehicle Settings in the audio head unit. Select Vehicle > Driving Assist > Parking Safety > Rear Cross-Traffic Safety. To select the initial warning activation time, when in Vehicle Settings, select Driver Assistance, then Warning Time. Select the Normal or the Later option.

The system will operate under the conditions:

- When the vehicle is in Reverse
- When the vehicle is moving slower than 6 mph

Quick Tip



- The RCCA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit

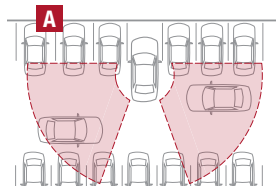

REMINDERS:

- The RCCA feature can be turned OFF/ON in User Settings, under Driver Assistance, Parking Safety
- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling between 5 and 22.5 mph, the RCCA system will show a warning
- The RCCA systems are supplemental systems. Do not solely rely on these systems and always pay attention to the road and its conditions

The above image is for illustration purposes only and may not reflect actual operation.

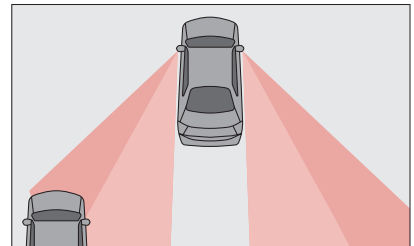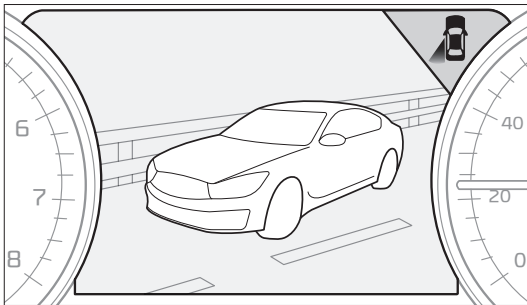  

(Type A cluster shown)

Blind Spot View Monitor System^{†6}

Blind-Spot View Monitor (BVM) system displays the rear and side view areas of the vehicle in the cluster when the system is activated.

 
To turn the BVM system on, go to the User Settings in the audio control unit. The BVM system is activated when the ignition switch is turned to ON and the turn signal is activated.

To deactivate the BVM system:



- The turn signal is deactivated
- The ignition switch is turned to the OFF position

For illustrative purposes only. Your actual display, buttons and/or features may vary.


Your vehicle's instrument cluster & indicator light locations may differ from those in the images. See your Owner's Manual for more information.

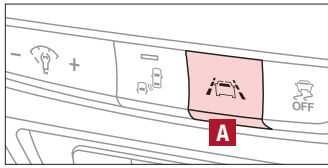

  
(Button is located on driver's panel, left of the steering wheel)

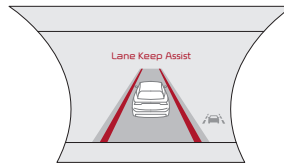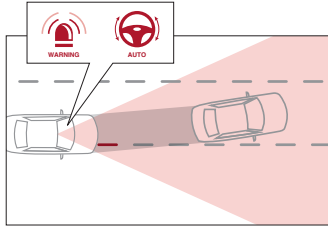

 
When the front camera detects the lane you are traveling in, both lanes are illuminated

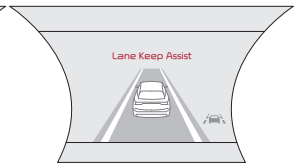

 
When the front camera does **not** detect the lane you are traveling in, the lanes are not illuminated

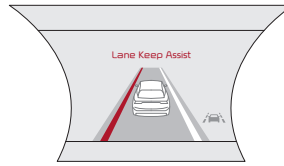

 When the front camera detects the vehicle moving outside of the lane you are traveling in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)

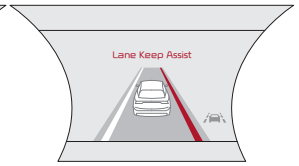

Lane Keeping Assist (LKA)^{†6}

With the Engine Start/Stop button in the ON position, press the LKA button **A** to turn system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph and the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display an LDW (Lane Departure Warning) alert on the instrument cluster. If the vehicle continues to move outside of the lane, LKA will apply a slight adjustment to the steering, trying to prevent the vehicle from moving outside of its lane.

LKA is the operating mode by default when the LKA button is depressed to ON. To switch between modes (Active LKA and Lane Departure), go to User Settings in the audio control unit.

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- The LKA system recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

LANE KEEPING ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Quick Tip

 
 
- The LKA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit

REMINDERS:

- LKA will not issue a warning if the turn signal or hazard signal is activated
- LKA will return to its previous state when the ignition is cycled
- LKA may not always alert the driver if the vehicle is about to be driven outside of its lane. Refer to the Owner's Manual for more information

Lane Keeping Assist (LKA) is not a substitute for safe and proper driving. Always drive safely and use caution. LKA may not always alert the driver if the vehicle is about to be driven outside of its lane.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

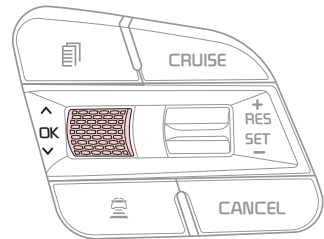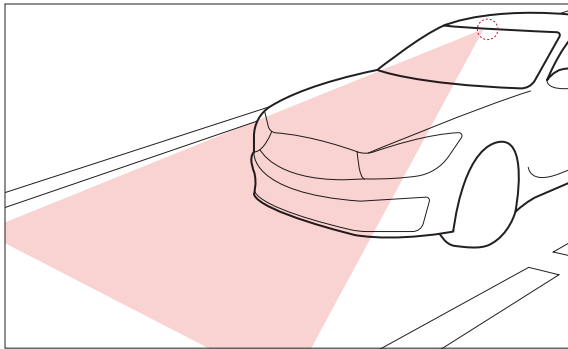

(Button on right of steering wheel)


Lane Follow Assist (LFA)

Lane Follow Assist (LFA) is designed to help ensure that the vehicle stays in its lane by monitoring the detected lane ahead and adjusting steering.

To activate or deactivate the LFA system, go to the Vehicle Settings on the audio head unit. Select Vehicle > Driver Assistance > Driving Assist > Lane Follow Assist.

 
The LFA system will operate only when these conditions are met:

- When the SCC system is on and operating
- When the system recognizes both lanes the vehicle is traveling in
- The vehicle is traveling slower than 95 mph

Once the system is activated and operating, the LFA system indicator light  will illuminate on the Instrument Cluster. When the indicator is green, the steering assist mode is activated. When it is white, it is deactivated.



REMINDERS:

- If the ignition is cycled, LFA returns to its previous state, on or off
- The LFA system is not a substitute for safe and proper driving. Always drive safely and use caution

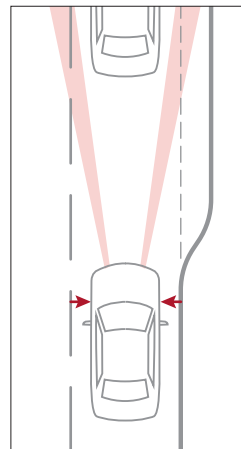

See the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

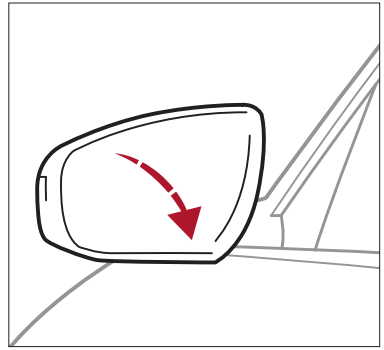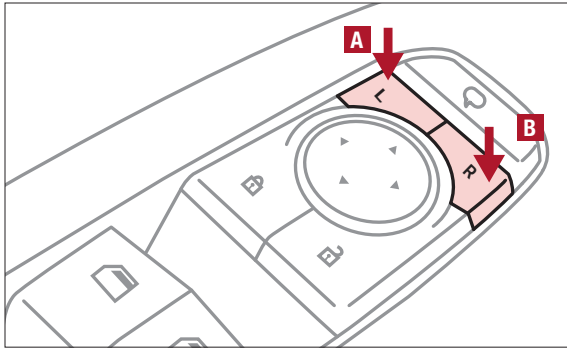  

(Mirror shown is for illustrative purposes only)

Reverse Parking Aid Function

When the gear shift lever is moved into R (Reverse) and the vehicle is moving backwards, the outside rearview mirrors will rotate downward to aid in reverse parking.

To turn the Reverse Parking Aid Function ON, press the L (Left) **A** or R (Right) **B** outside rearview mirror button (LED lit).

To turn OFF, press button(s) again.

 
The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved out of R (Reverse)
- The outside rearview mirror switches are OFF (LED not lit)


REMINDER: When the buttons are not pressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Fuel Door Release Button

Press the Fuel Door Release button **C** to open the fuel door.

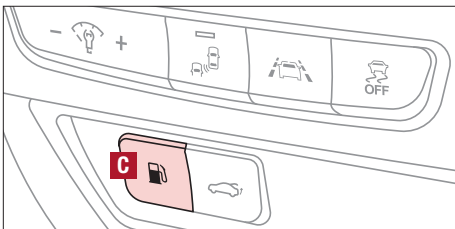

 (Button located on driver's panel, left of the steering wheel)

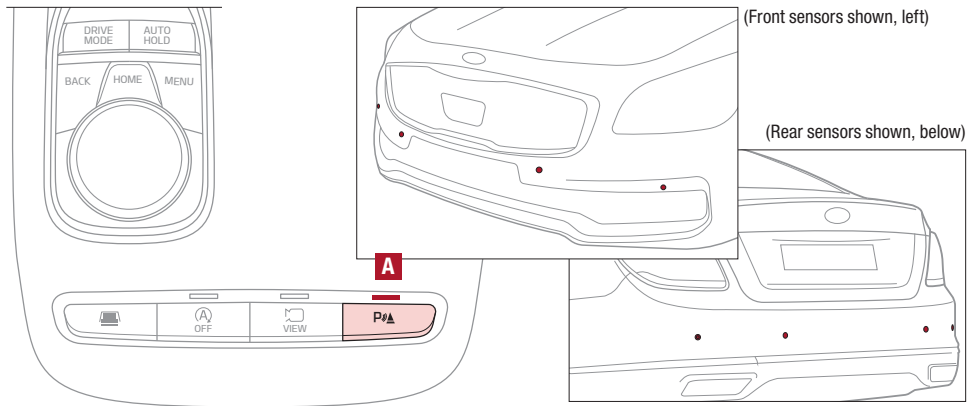

Parking Distance Warning-Reverse/Forward^{†6}

Parking Distance Warning-Reverse/Forward is a supplemental system that is designed to assist the driver by chiming if an object is detected within the sensing areas in the front or rear of the vehicle when parking or backing up.

When the Engine Start/Stop button is ON and the shift lever is in R (Reverse), the system is activated and the Parking Distance Warning-Reverse/Forward button **A** indicator is illuminated.

REMINDERS:

- If the vehicle is moving at speeds over 6 mph, the system may not activate
- When more than two objects are sensed at the same time, the closest one will be recognized first
- Parking Distance Warning-Reverse/Forward is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Assist System may not detect every object behind or in front of the vehicle

Rear View Monitor^{†6}

 
The Rear View Monitor system is a supplemental system that displays the view behind the vehicle through the audio head screen while the vehicle is in Reverse.

 
The Rear View Monitor activates when the:

- Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the R (Reverse) position

REMINDERS:

- The Rear View Monitor is not a substitute for proper and safe backing-up procedures
- The Rear View Monitor may not display every object behind the vehicle
- Always drive carefully and use caution when backing up

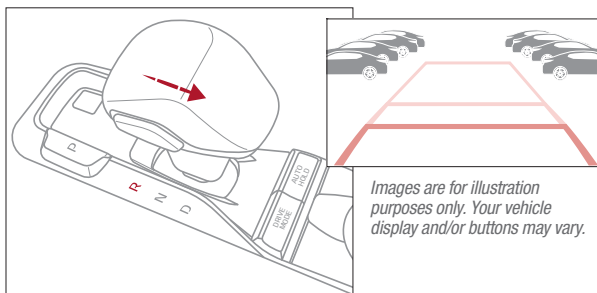

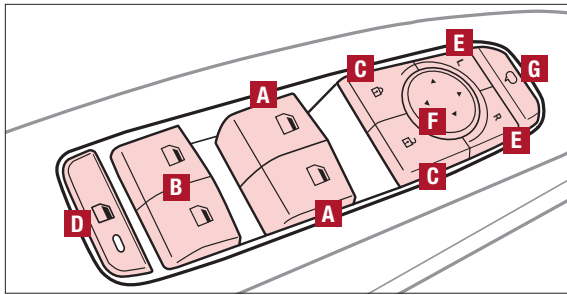

Button configuration may vary depending on vehicle model.

Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate driver and front passenger's window auto up/down
- B** Pull/Press to operate rear passenger's windows up/down
- C** Press to unlock/lock all doors
- D** Press to disable the rear passenger window controls

Quick Tips

- Press button **A** again to stop Auto Up/Down function
- Auto Door Lock/Unlock will engage when gear shift is moved into or out of the P (Park) position
- To turn Auto Door Lock/Unlock OFF, go to User Settings in the LCD Instrument Cluster Modes

REMINDER: When pressed **D**, the rear window controls for the Rear Passenger Windows are disabled

Power Folding Outside Mirrors

- E** Press the L or R buttons to select the mirror to adjust
- F** Press button arrows left/right or up/down to adjust mirror position
- G** Toggle button to unfold/fold the outside rearview mirrors
- G** When set in Vehicle Settings on the audio control unit, automatically fold/unfold mirrors when:
 - Smart Key lock/unlock buttons are pressed
 - Outside door handle button is pressed
 - Driver approaches the vehicle with the Smart Key (if activated in User Settings)

Quick Tip

The mirrors will automatically unfold when the Smart Key is within close proximity to the vehicle (if activated in User Settings).

REMINDEES:

 
- When the mirror toggle button is in the center, press the lock button twice on the Smart Key to automatically fold mirrors when exiting vehicle
- To lock the mirror position, toggle button to the neutral (center) position

Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button is located on the climate control system panel.

Auto Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

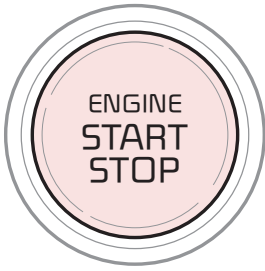

Engine Start/Stop Button^{†9}

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while the gear shift is in P (Park)

To turn the engine OFF, press the ENGINE START/STOP button while the gear shift is in P (Park).

To use the ENGINE START/STOP button, you must have the Smart Key on your person or inside the vehicle.

REMINDERS:

- If Smart Key fob battery is dead, you can still start the engine by pressing the ENGINE START/STOP button with the Lock-button end of the Smart Key. The Smart Key must contact the ENGINE START/STOP button directly, at a right angle
- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/ STOP button for more than 2 seconds or 3 times successively within 3 seconds

ENGINE START/STOP BUTTON AND SMART KEY VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Quick Tips

- To use electrical accessories:
 - ACC position
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once
 - ON position
 - When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice
- Keeping the vehicle in the ACC or ON position too long can discharge the vehicle's battery

 
Power Tilt/Telescoping Steering Wheel†25

To adjust the steering wheel distance, move the switch **A** forward or backward, **B**.


To adjust the steering wheel angle, move the switch **A** up or down, **C**.

Quick Tip

It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust to the desired distance.

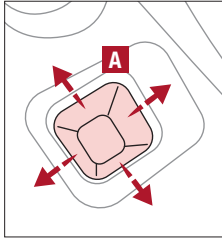

 (Control switch located on left side of steering column)

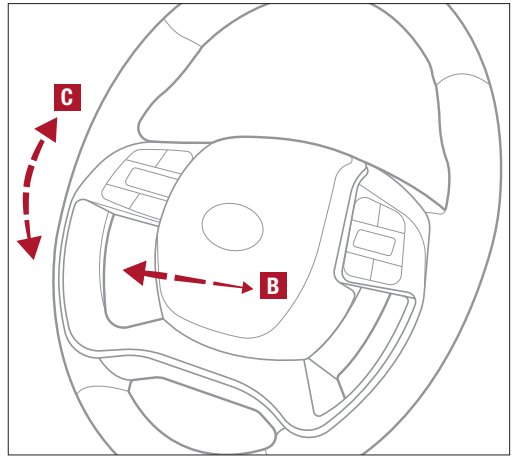




Heated Steering Wheel

While the Engine Start/Stop button is in the ON position, press to turn the steering wheel heater ON. The button indicator **D** will illuminate.

The steering wheel heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.

   REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

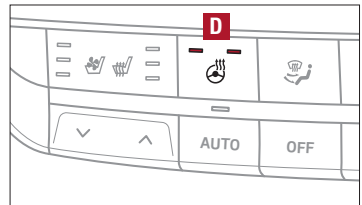

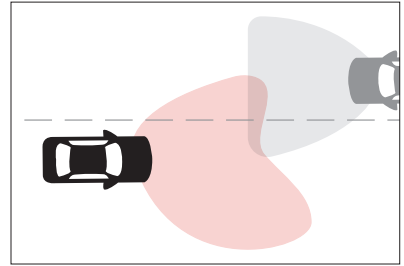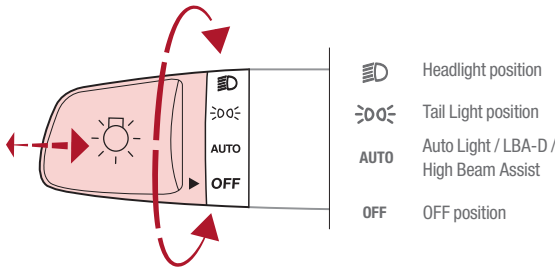

Headlights & High Beams

Headlight / High Beam Lever Operation

- Rotate the lever switch to change the headlight function:

	Headlight position
	Parking light position
AUTO	Auto Light / LBA-D / HBA position
OFF	OFF position

- Press the lever away from you to turn high beam headlights ON
- Pull the lever to flash headlights/high beams

AUTO Light – When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Low Beam Assist-Dynamic (LBA-D) – LBA-D can help improve visibility during nighttime driving by aiming the low-beam headlights toward the direction the vehicle is moving **A**. LBA-D controls the aiming direction based on steering angle and speed.

When the light switch is in the AUTO light position, LBA-D will activate.

REMINDER: When the LBA-D indicator illuminates on the instrument cluster, the LBA-D is not working properly. See authorized Kia dealer for service.

Daytime Running Lights (DRL) – DRL can make it easier for others to see the front of your vehicle during the day. The lights will be on automatically unless one of the following occurs:

 
- Headlights are on
- Parking brake is applied
- Engine is turned off

High Beam Assist (HBA) – High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

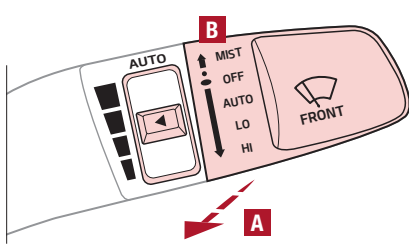

- MIST:** Single wipe
- OFF:** Wiper off
- AUTO:** Auto Rain Sensing/Intermittent wipe
- LO:** Slow wipe
- HI:** Fast wipe

For more information on the User Settings Mode, please refer to your Owner's Manual.

Turn Signals

To operate:

- Move lever up/down for right/left turn signal
- Slightly move lever up/down to activate one-touch lane change signal

REMINDERS:

- One-touch lane change signal is activated by briefly pressing the turn signal lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times
- To change how many times the lane change signal blinks (3/5/7), go to User Settings in the LCD instrument cluster modes

Windshield Wipers & Washers

To operate:

- Move lever up/down to change wiper modes
 - MIST:** Single wipe
 - LO:** Slow wipe
 - OFF:** Wiper off
 - HI:** Fast wipe
 - AUTO:** Auto Rain Sensing
- Pull to spray and wipe

WIPER SERVICE MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Auto Rain Sensing

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and control the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To turn ON the auto rain sensing wipers, move lever up/down to AUTO. To adjust the auto rain sensing wiper speed setting, move the speed control switch **A** up/down.

Quick Tips

 
- When the Engine Start/Stop button is in the ON position and the wiper switch is in AUTO mode, the wiper will automatically operate once to perform a self-check of the system
- Set the wiper to the OFF position when the wiper is not in use
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Smart Power Trunk lid control, turn off the auto rain sensing wipers and fold in the mirrors
- Moving lever to HI increases intermittent wipe frequency and wipe speed. Moving lever to LO decreases frequency of wipes
- Pressing button **A** up increases intermittent wipe frequency and wipe speed. Pressing button down decreases frequency of wipes

 
 
Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions to prevent damaging the hood, the blades need to be moved to the service position **C**.


With the ignition ON, then turning the ignition OFF, within 20 seconds move the wiper switch to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

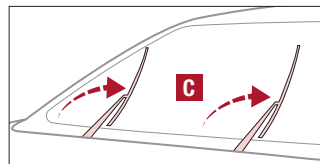

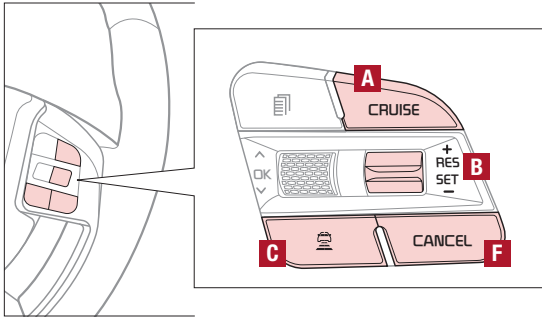

 (Distances are approximate and vary depending on vehicle speed)

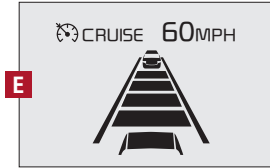

(Display on LCD screen)

Smart Cruise Control (SCC) with Stop & Go†6

The Smart Cruise Control (SCC) with Stop & Go system is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed.

To set/adjust the SCC speed:

- Press the CRUISE button **A** to turn the system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Press the SET - button **B** down to set the speed. Press the RES+/SET- button **B** up/down to increase/decrease the set speed

To set the vehicle-to-vehicle distance:

- Press the SCC button **C** on the steering wheel
- Each time you press **C** the vehicle-to-vehicle distance will change **D**, indicated by the number of bars that appear on the display **E**

To cancel SCC operation: Press the CANCEL button **F** or press the brake pedal. The LCD screen will display a message that the SCC operation is canceled.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

REMINDERS:

- CRUISE indicator must be ON in order to operate SCC
- The cruise control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starting
- For the SCC system to operate, you must be traveling at a minimum speed of 20 mph, when no vehicle is in front
- The SCC system remains ON when ignition is cycled. The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed. See the owner's manual for more information

SMART CRUISE CONTROL WITH STOP & GO VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Quick Tips

- The speed setting for SCC can be adjusted under the following conditions:
 - With no vehicle in front, you must be traveling at a minimum speed of 20 mph
 - When following a vehicle, there is no minimum speed requirement
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the RES+/SET- button up/down to start the vehicle.
- To change the cruise control mode from SCC to standard cruise control, press and hold button **C**. Repeat to switch back to SCC mode. (The SCC system must not be activated to change modes).

- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See owner's manual for other conditions
- If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

Smart Cruise Control (SCC) with Stop & Go^{†6} (Continued)

Cruise Control

 
- A Cruise Control ON/OFF button:** Press up to turn the cruise control ON/OFF
- B Resume Cruising Speed button:** Press up to resume or increase cruising speed
- B Set Cruising Speed button:** Press down to set or decrease cruising speed
- F Cruise Control Cancel button:** To cancel the cruise control setting, do one of the following:
 - Press the brake pedal
 - Press the CANCEL button

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Quick Tips

- The standard cruise control system is designed to function at above approximately 20 mph only
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

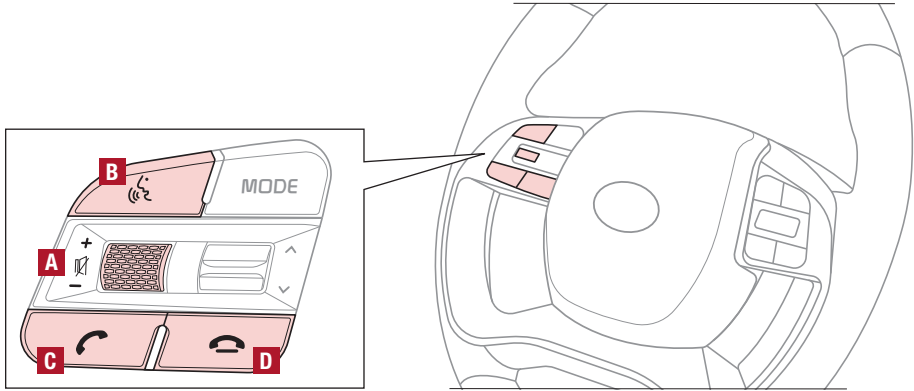

Bluetooth® Wireless Technology†5,23

- A Volume button:** Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call
- B Talk button:** Press to activate Voice Recognition. Press and hold to exit voice recognition
- C Receive/Place Call button:** Press to place/answer incoming call. If no phone is paired, press the button to pair a phone
- D End Call button:** Press down to end, reject an incoming call or cancel a function

Quick Tips

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® wireless technology chip programming, functionality may differ from one phone to another

Your vehicle's steering wheel buttons may differ from those in the image. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Multimedia System User's Manual or the Owner's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology (Continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

How to Place a Call

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** to place a call using the touchscreen
- Option 2: Press on the Talk button **B**. Then say the command "Call {name}" or "Dial {number}"

When using the voice command feature, wait for the system BEEP before speaking the command.

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

VOICE RECOGNITION TIPS VIDEO

 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Quick Tips

- During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C; open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

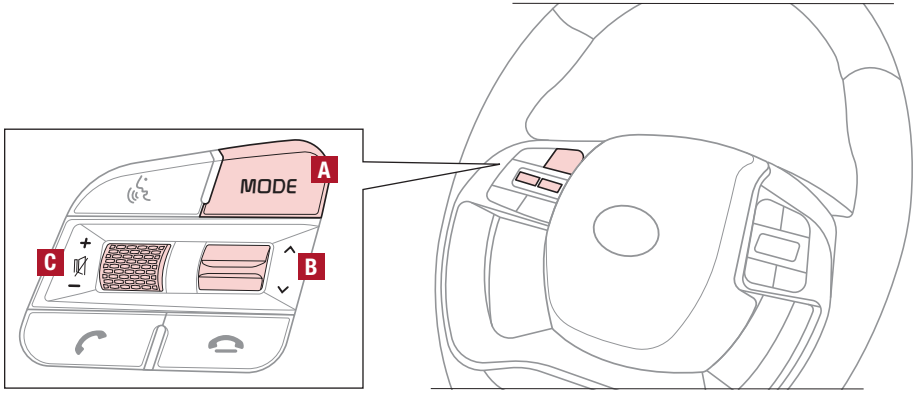

Audio Controls†23

A Audio System MODE button: Press to cycle through FM/SiriusXM®/USB Music/*Bluetooth*® Audio. Press to turn power on; Press and hold to turn power off

B Seek/Preset buttons:

- FM/AM/SiriusXM® Mode: Press to advance through preset stations. Press and hold to auto seek
- Media Modes: Press to move track up/down. Press and hold to fast forward/rewind (except for *Bluetooth*® Audio)

C Volume buttons: Press up/down arrows to raise/lower volume

Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)

Quick Tips

- Pressing the Audio System Mode button for more than one second will turn Audio Mode ON/OFF
- Surround Sound can be turned on or off

REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the images. See your Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving
- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park

UVO link Activation*†1

1. Follow these steps to activate UVO on your vehicle head unit:
 - a. Press the SETUP key
 - b. Press the UVO icon
 - c. Press UVO or SERVICE Activation
2. Review the Terms of Service and Privacy Policy, and agree by pressing SUBMIT
3. Enter Smartphone Number or Email address to receive a verification code, then press SUBMIT

For further UVO link operation, refer to the Car Multimedia System User's Manual.

4. Follow these steps if using your phone number to receive your verification code:

- a. Check your phone for an SMS (text message)
- b. Open the link in your SMS. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using your phone number as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN."

A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

4. Follow these steps if using your email to receive your verification code:

- a. Check your email. The email will be from reset@notifications.myuvo.com
- b. Open the link inside the email

A page will open requesting that you create your account.

Note: If you already have a Kia Owners Portal account using your email address as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN."

 
A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

UVO Assistance

Virtual Assistant ⓘ **A** - Press to connect to the UVO Center to hear information about the UVO features

UVO Voice Local Search UVO **B** - Press to connect to the search function to find points of interest or other locations, like "cafe"

Roadside Assist ⚠ **C** - Press to connect to the UVO Center where you can request vehicle towing services

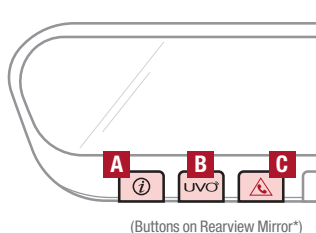


REMINDER: These buttons may be located in the rearview mirror or the overhead console.

 
Android Auto™+3 / Apple CarPlay®+4 Setup

Android Auto™* – Setting up Android Auto™:


1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store†11
2. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device

How to start Android Auto™:

1. Press the SETUP key on the audio control unit
2. Press the PHONE PROJECTION button , select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

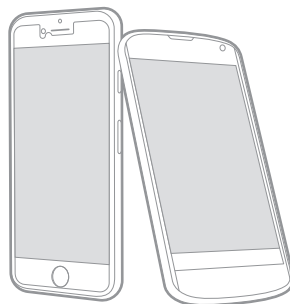

Apple CarPlay®* – Setting up and starting Apple CarPlay®:

 
1. On the head unit, press the SETUP key
2. Press the PHONE PROJECTION button , select Apple CarPlay® and then select ENABLE APPLE CARPLAY®. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay® compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone® 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further UVO link operation, refer to the Car Multimedia System User's Manual.

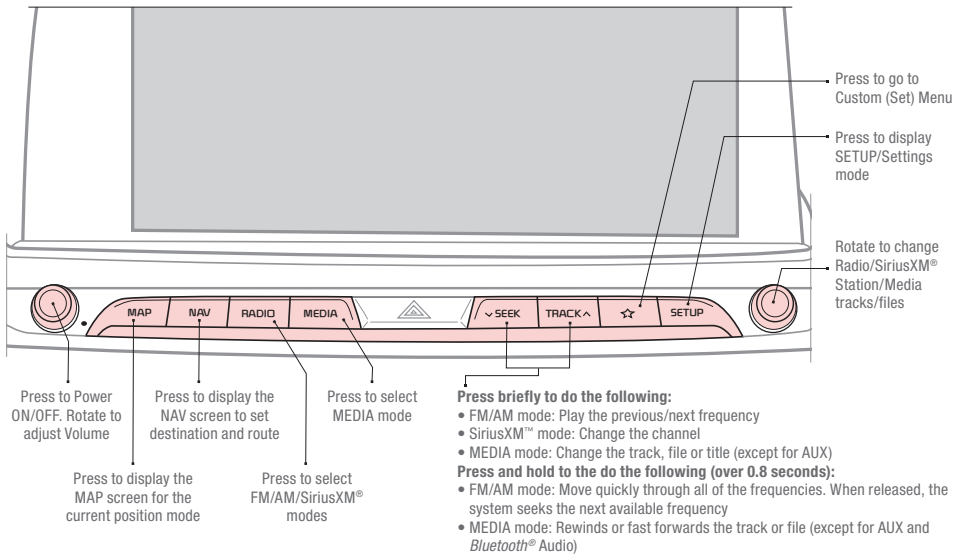

UVO link with Navigation^{† 1,15}

FM/AM/SiriusXM^{®†22}/Media (USB, Bluetooth[®] Audio, My Music)

Sound Settings – To adjust the sound settings:

1. Press the SETUP key on the audio control unit
2. Select the onscreen SOUND button
3. Select the menu item (Position, Equalizer, Priority, Volume (System), Volume (Phone Projection), Navigation Volume, Speed Dependent Volume, Quantum Logic Surround*, Clari-Fi, Reset)
4. Use the onscreen buttons to adjust settings

Radio Presets – You can listen to FM, AM and SiriusXM[®] radio and save frequently used stations.

How to Save a Preset – Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM[®] Smart Favorites – For the first ten favorite SiriusXM[®] channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose **SiriusXM[®]**, then select any of the first six favorites. During song or program play, tap the **Skip Backward** icon to start from the beginning of the song or program. Tap the **Play Live** icon to return to the live broadcast.

Custom Key ☆ is a programmable key to provide quick access to one of several available system features. To Program the Custom key:

1. Press and hold the ☆ Custom key
2. Select one of the available features you would like the Custom key to open

Quick Tips

- The volume level for each source (FM, AM, SiriusXM[®], USB, etc.) will revert to the previously set volume for that source
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated with the engine running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command
- Surround Sound can be turned on or off
- At any time, you can interrupt UVO link System Command Feedback by pressing the TALK button on the steering wheel

 
REMINDER: To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

 
Your vehicle's audio system may differ from that in the illustration. For further UVO link operation, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 30-32.

Driver Information System (DIS) Controls

Provides access to all navigation and audio system control unit features.

- A Controller** – In addition to the touchscreen, the controller serves as a means for navigating through the UVO link with Navigation system. The controller has multiple functions: A scroll knob – for scrolling the keyboard and menus and zooming in and out on the map screen; and a push button (up, down, left, right, in) – for selecting the highlighted feature
- B Home** – Displays the audio head unit's Home menu which provides access to the following options: Map, Navigation, Radio, Media, Data Services, Phone Projection, Phone, UVO, Climate, Voice Memo, Favorites and Setup
- C Menu** – Provides access to additional functions when available
- D Back** – Returns to the previous screen

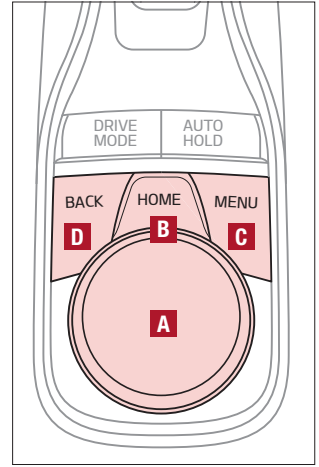

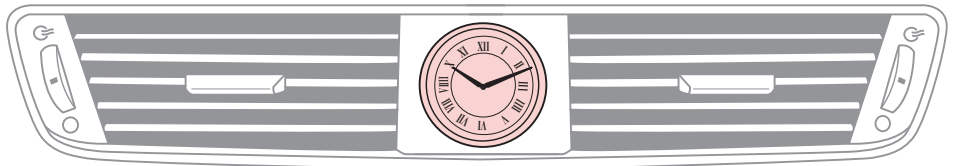

Clock

Center Panel Clock Setup:

Clock setup is completed through the UVO link with Navigation system screen. See below or refer to the Car Multimedia System User's Manual for more information.

UVO link with Navigation System Clock Setup:

Select SETUP on the audio head unit. Select Date/Time. Select TIME SETTINGS and set the time, then select OK.

REMINDERS:

- Daylight Savings must be enabled or disabled in the Clock Settings screen
- The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly

Refer to the Car Multimedia System User's Manual for more information.

Multimedia USB Port, Power Outlets & USB Charger Port

Power Outlets **A:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

Multimedia USB Port **B:** Use the USB port to connect USB audio devices and smartphones.

 
 
USB Charger Port **C:** Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger.

Quick Tip

The power outlets are inactive when ignition is in the OFF position.


REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Use manufacturer cables only that came with your device. Third party cables may cause damage to device. It is recommended to always update your phone to the latest operating system release
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer

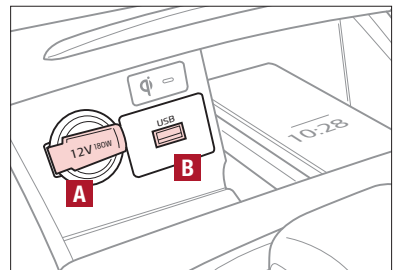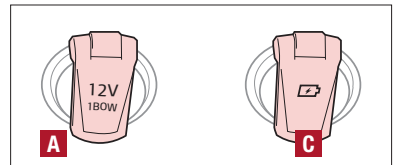


(Located in center console in front of gearshift)

 For more information on the Multimedia USB Port, Power Outlets and USB Charger Port, refer to the Owner's Manual.

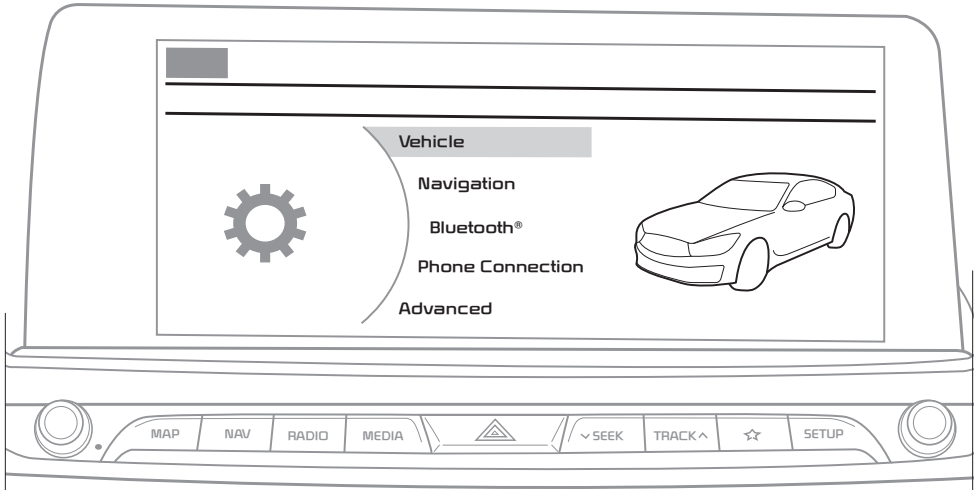

Vehicle Settings Mode (User Settings)

To access vehicle settings, go to Vehicle Settings Mode on the audio control unit by pressing the Settings menu  when the vehicle is at a standstill and with the Engine Start/Stop button in the ON position. Scroll through the selections by rotating the Center Panel DIS Control knob located below the gear shift or use the touch screen.

User Settings Modes:

Head-Up Display (HUD): Enable HUD, Display Height, Rotation, Brightness, Contents Selection, Speed Size, Speed Color

Driving Assist: Smart Cruise Control with Stop & Go Response, Driver Attention Warning, Lane Keeping Assist, Forward Collision-Avoidance Assist, Forward Collision Warning (FCW), Blind-Spot Collision Warning Rear Cross-Traffic Collision Warning, Blind-Spot Collision Warning Sound

Door/Trunk: Smart Trunk

Lights: One-Touch Turn Signal, Headlamp Delay, Ambient Light Brightness, Ambient Light Color

 
Convenience: Seat Easy Access, Steering Easy Access, Welcome Mirror/Light, Wiper/Light Display, Gear Position Pop-Up, Icy Road Warning

Service Interval: Service Interval On/Off, Adjust Service Interval, Reset

Cluster: Fuel Economy Auto Reset, Fuel Economy Unit, Temperature Unit, Tire Pressure Unit, Torque Unit

General: Choose the language

Reset: Reset User Settings to factory default

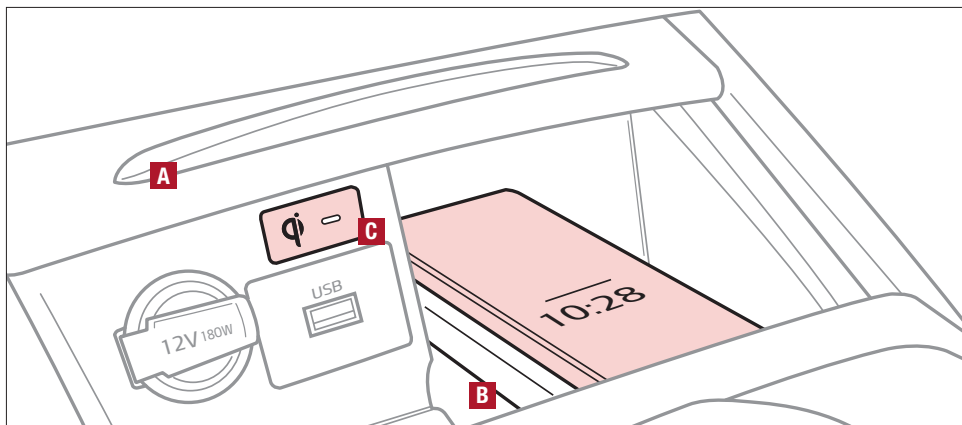

Wireless Smartphone Charging System

1. Slide open tray cover **A**
2. Place a compatible smartphone on the center of the charging pad **B**
3. Indicator light **C** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light **C** may change to green

REMINDERS:

 
- The smartphone must be a compatible phone with Qi function available
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See your owner's manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- Typically this feature will operate unless ignition is on or in the ACC position
- If driver door is opened, charging will be disabled

WIRELESS SMARTPHONE CHARGING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

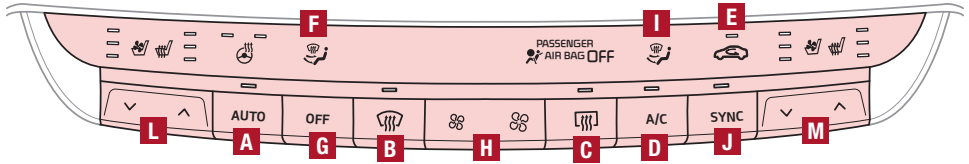

Automatic Climate Control System

Front Climate Control

- A** AUTO (Automatic) Climate Control button
- B** Front Windshield Defrost button
- C** Rear Window Defrost button
- D** Air Conditioning button
- E** Recirculated Air button
- F** Driver Mode Selection button
- G** System OFF button
- H** Fan Speed Control buttons
- I** Passenger Mode Select button
- J** SYNC (Synchronize All Zones) Temperature Control button

AUTO DEFOGGING SYSTEM VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Climate Control Auto Function

Press AUTO **A** to select full auto operation. In AUTO mode the driver and front passenger have full control of their own temperature zones. The mode, fan speed, air intake and air conditioning will activate and adjust accordingly to achieve the temperature settings for each zone.

To set temperatures:

- Press **L** to set the driver's zone temperature
- Press **M** to set the front passenger's zone temperature

Tri-Zone Climate Control


 
Pressing the SYNC button **J** synchronizes both climate control zones (driver and passenger) to the driver's temperature control.

REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Auto Defogging System

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for 3 seconds.

Air Flow Modes

To select air flow modes, press the Mode Select button **F**:

 
-  Face-Level
-  Floor-Level
-  Bi-Level
-  Floor/Defrost-Level

Defrost Outside Windshield

1. Set **temperature** to hot **L**
2. Press the **front defrost button B**

Defog Inside Windshield

1. Set desired **fan speed H**
2. Set desired **temperature L**
3. Press the **front defrost button B**

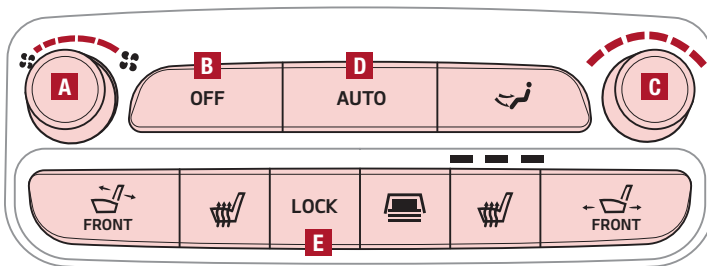

(Type A shown)

Automatic Climate Control System (Continued)

Rear Climate Control

- A** Fan Speed Control knob
- B** Rear Climate Control OFF button
- C** Rear Temperature Control knob
- D** AUTO (Automatic) Climate Control button
- E** Climate Control REAR LOCK button

Turn the rear temperature control knob **C** to set the rear passenger's zone temperature.

The rear seat, rear audio and rear climate controls can be activated or deactivated by using the LOCK button **E**.

REAR LOCK settings can also be changed in the audio control unit settings.

To set from the audio control unit:

- Press the CLIMATE button
- Deselect the Rear Climate option

 
 
LOCK settings return to the default setting when ignition is cycled.

REMINDER: If the rear climate controls have been deactivated through the audio control unit, they must be activated the same way.

Quick Tips

- Keep inside glass as clean as possible to help reduce window fogging
- Defrost Mode activates A/C and opens the fresh air vent to help dehumidify the air and improve defroster performance

REMINDER: Your automatic climate control system may differ from the image. See your Owner's Manual for more details.

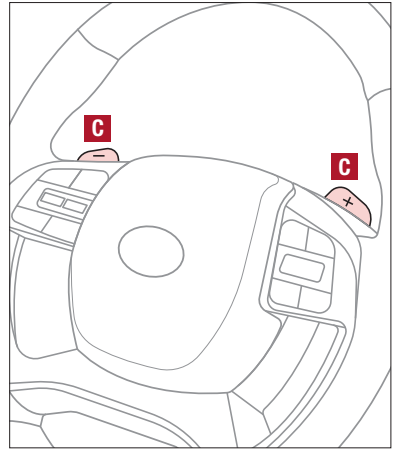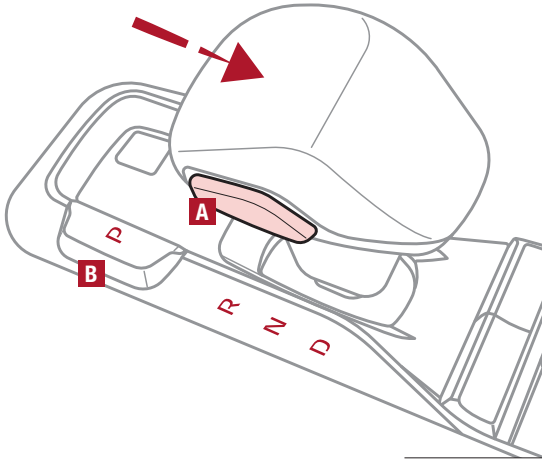

Automatic Transmission (Shift by Wire)

To shift into any gear from Park, depress the brake pedal, then press the Unlock button **A**, located on the side of the gear shift lever, and shift.

P: Park – To shift into Park from any gear, press the P button **B** on the gear shift while vehicle is stationary and the brake pedal is depressed (Shift by Wire only).

R: Reverse – To shift into Reverse, depress brake pedal, press the Unlock button **A**, and move the shift lever forward twice to skip over Neutral and into Reverse.

N: Neutral

D: Drive

Paddle Shifters (Manual Mode): Paddle Shifters are operable when the shift lever **C** is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDERS:

- Press and hold the [+] right paddle shifter to return to Automatic mode
- When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears

 
Quick Tips

- Press the Unlock button **A** when shifting from P (Park) to any gear
- The instrument cluster and the light on top of the shift lever identifies the gear the vehicle is currently in

REMINDERS:

- When in P (Park), if the Unlock button is not pressed while shifting, the transmission does not shift
- If the vehicle is turned off while in Neutral without shifting into Park, it will remain in Neutral until the driver's door is opened. At that point it will automatically shift into Park
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power Trunk lid control, turn off the auto rain sensing wipers and fold in the mirrors

For illustrative purposes only. Your actual display, buttons and/or features may vary.

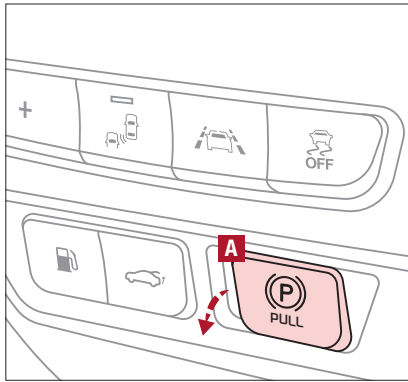


Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light  is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light  is OFF.

Quick Tips

- Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline.
- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

ELECTRIC PARKING BRAKE / AUTO HOLD VIDEO

 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily or remains continuously lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB. These conditions are normal and indicate that the EPB is functioning properly

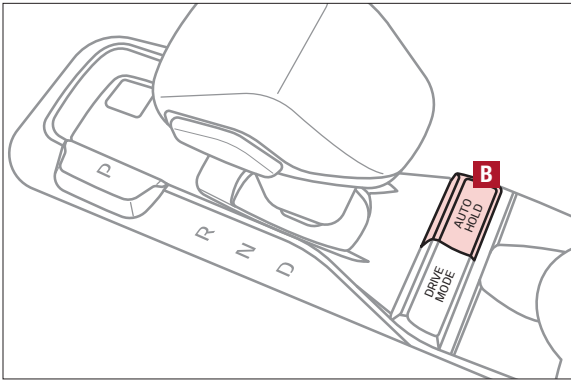

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and Trunk must be closed and the driver's seat belt must be fastened.

Depress the brake pedal, start the engine and then press the AUTO HOLD button **B**. The white Auto Hold indicator will come on indicating the system is in standby.

The Auto Hold indicator, which is in the instrument cluster, has four states:

White: Standby – When vehicle is in Park and at a standstill, and AUTO HOLD button **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged – When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

OFF (not illuminated) – The indicator will turn OFF when the AUTO HOLD button **B** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction – When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

 
ELECTRIC PARKING BRAKE / AUTO HOLD VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle

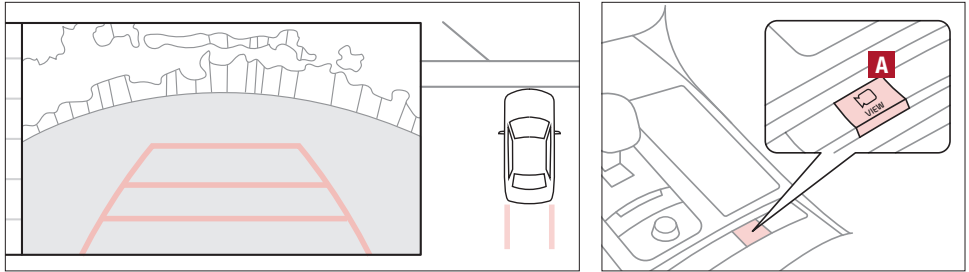

Surround View Monitor (SVM)

The Surround View Monitor (SVM) system is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the navigation screen.

Press **A** to turn the SVM system ON/OFF.

- When OFF: The camera view will automatically display on the navigation screen when the vehicle is shifted into Reverse. The camera view will turn off when the vehicle is shifted out of Reverse
- When ON: The camera view will display on the navigation screen in both Drive and Reverse. In Drive, the camera view will continue to display until the vehicle is traveling at speeds above approximately 13 mph. If you keep the SVM system on, the camera view will reappear on the navigation screen whenever the vehicle speed drops below approximately 13 mph

SURROUND VIEW MONITOR (SVM) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.







www.youtube.com/KiaFeatureVideos





REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. The Surround View Monitor system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

 
Camera View Modes – To change camera view modes, use the touch screen.

When in Drive & Neutral:

-  Displays the front side and SVM images simultaneously on the screen
-  Displays the front side image on the screen
-  Displays the front side and left side images simultaneously on the screen
-  Displays the front side and right side images simultaneously on the screen

When in Reverse:

-  Displays the rear view and SVM images simultaneously on the screen
-  Displays the rear side image on the screen
-  Displays the rear and left side images simultaneously on the screen
-  Displays the rear and right side images simultaneously on the screen

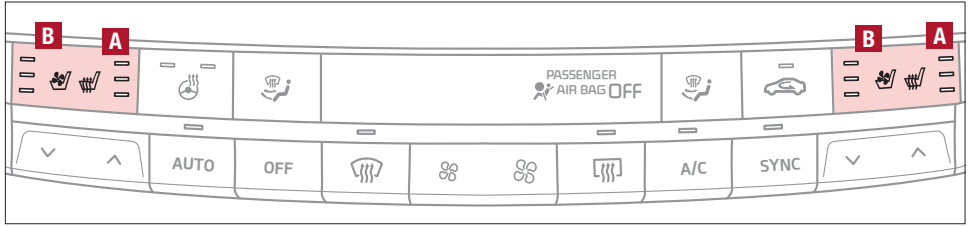

Seat Warmers^{†21} / Ventilated Seats

Front Seats

Seat Warmers:

- Press button **A** up once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

Ventilated Seats:

- Press button **B** down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

Quick Tip

With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature.

SEAT WARMERS AND VENTILATED SEATS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.



Power Rear Curtain

The rear and side window curtains offer passenger protection from direct sunlight.

While the ENGINE START/STOP button is in the ACC/ON position, press the power rear curtain button **C** to raise/lower curtain.

 
REMINDER: Raising or lowering the rear curtain by hand may cause motor failure.

Quick Tips

- The power rear curtain will lower automatically when the gear shift is moved into the R (Reverse) position and raise automatically when the gear shift is moved from R (Reverse) into P (Park)
- When the gear shift is moved into D (Drive) and the vehicle is traveling at speeds greater than 12 mph, the power rear curtain will unfold automatically

Power Adjustable Driver's Seat†¹⁹

Move/Press the controls to adjust Seat, Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward, Lumbar up/down/forward/backward or Headrest forward/backward/up/down.

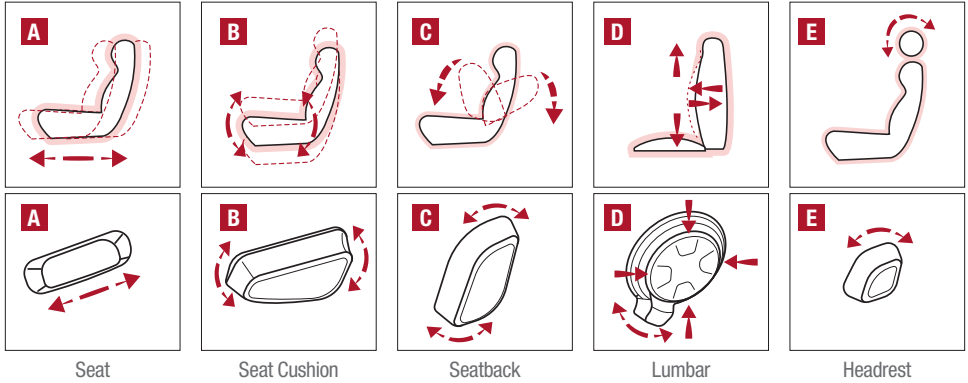


Seat

Seat Cushion

Seatback

Lumbar

 Headrest

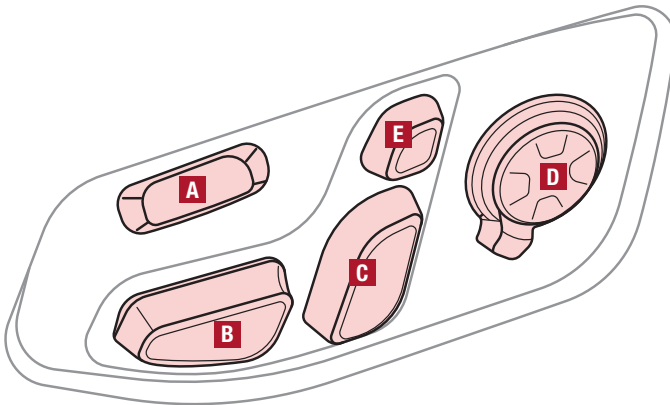


REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.


Power Front Seat Headrest Adjustment† 10

Use the switch **A** to adjust the Power Headrest forward/backward and up/down.

 REMINDER: Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

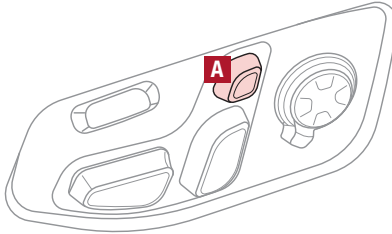



(Located on side of seat cushion)

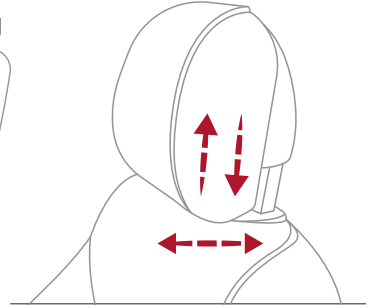 

Driver Position Memory System




The integrated system stores into memory the position of the driver's seat, outside rearview mirrors, and steering wheel positions. To store positions into memory, first place the gear shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

  1. Adjust the driver's seat, outside rearview mirrors, settings and steering wheel positions
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons 1, 2 or 3 **C** within 4 seconds. The system will beep twice when memory has been stored

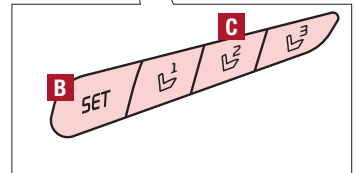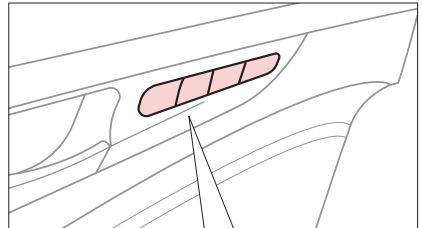

(Located on driver's door control panel)

   REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

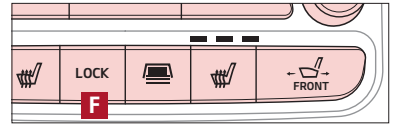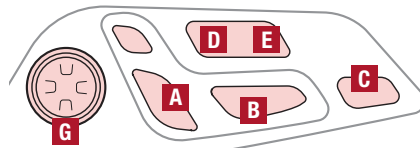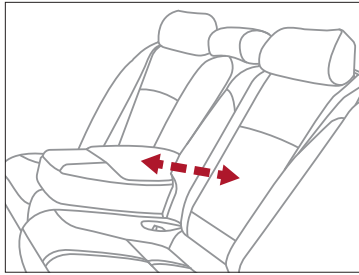

Power Reclining Rear Seats

The rear seats can be adjusted by using the control switches located on the door.

Seatback & Seat Slide Adjustment:

- Move the button **A** forward/backward to adjust the seatback position
- Move the button **B** forward/backward to adjust the seat position

Front Passenger Seat Adjustment – When opening the rear door, the front seats can be adjusted by pressing the FRONT button **C** then pressing the controls to adjust the Seatback **A** and Seat Cushion **B**.

Rear Seat Relaxation System – Press the Relax Mode Control button **D** to adjust seats to relaxation positions. Press the Relax Mode Return button **E** to return seat to normal.

Rear Seat Adjustment

To activate or deactivate the system, press the LOCK button **F** on the rear armrest console.

To control the rear seat lumbar support, press the Lumbar adjustment button **G**.

Front Passenger Seat Adjustment

To adjust the angle of the front passenger's seat use the rear seat control system buttons or the buttons on front seatback **H**. Press button to angle the front seatback forward/backward.

To adjust the position of front passenger's seat use the rear seat control system buttons or the buttons on the front seatback **I**. Press the button to move the seat forward/backward.

 
REMINDERS:

- Keep hands and other objects away from seat mechanisms while the seat is in motion
- Do not adjust the seat while wearing seat belts
- Do not operate the rear power seat while the child seat is installed
- Do not operate two or more power seat control switches at the same time. Doing so may result in power seat motor or electrical component malfunction


Quick Tip

Users can also activate/deactivate the rear passenger control system through the navigation system. Press the CLIMATE button on the center panel and deselect the Rear Climate option. If the rear climate controls have been deactivated through navigation system, they must be activated the same way.

REMINDER: The front passenger seat adjustments only operate when seat is not occupied.

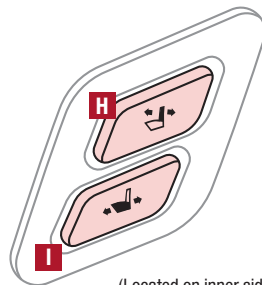

(Located on inner side of front seats)

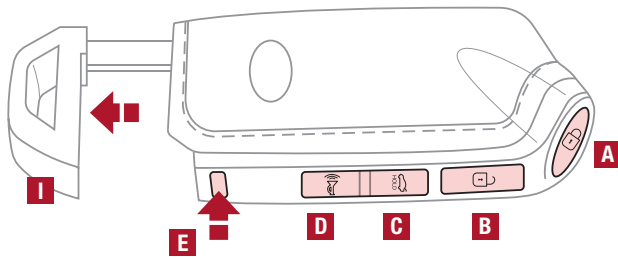 

Smart Key^{†9}

- A** Press to lock all doors
- B** Press to unlock driver's door. Press twice within 4 seconds to unlock all doors
- C** Press and hold for more than 1 second to unlock Trunk and open manually (or automatically if Smart Power Trunk)

REMINDERS:

- Trunk lid will partially open. To fully open, lift up manually
- The Trunk unlocks when the Smart Key is within close proximity of the vehicle

- D** Press and hold more than a half a second for panic alarm. To turn off alarm, press any button
- E** Press to release mechanical key **I**

Driver's Door Lock/Unlock Button **G**:

To unlock door(s):

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors

To lock all doors:

- Press again to lock all doors

Mechanical Key:

- Use to unlock/lock driver's door:
 1. Remove door handle keyhole cover with mechanical key by pressing up into slot as shown **H**
 2. Insert mechanical key **I** and turn right to unlock driver's door
 3. Insert mechanical key **I** and turn left to lock driver's door
 4. Return mechanical key to its original location
- Use to lock and unlock glove box

KIA KEY FOB VIDEO

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.



ENGINE STOP/START BUTTON & SMART KEY VIDEO

 



www.youtube.com/KiaFeatureVideos

Quick Tips




- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

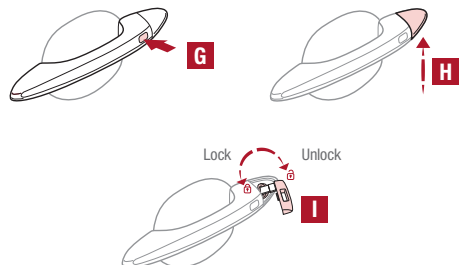 REMINDER: Remote button configuration may vary depending on vehicle options.

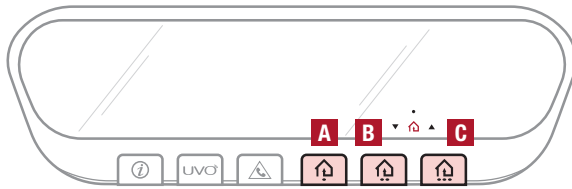



HomeLink® with Auto-Dimming Rearview Mirror† 13

- A** HomeLink® button 
- B** HomeLink® button 
- C** HomeLink® button 

Auto-Dimming Rearview Mirror



The Auto-Dimming Rearview Mirror is designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location.

REMINDER: Mirror indicator light will illuminate when automatic dimming is ON.

HomeLink® Setup – How to Sync Transmitter

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the **A** and **C** buttons simultaneously until the indicator light  begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B** or **C** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light  will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times
5. Press and release the Homelink button just programmed. The Homelink indicator on the mirror will illuminate
6. To program the remaining two Homelink buttons, follow steps 1-4 for other Rolling Code devices, or steps 2-5 to program standard devices

For some older garage doors, see Owner's Manual for information on how to do Two-Way Communication Programming.

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the **A** and **C** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

HOMELINK REARVIEW MIRROR SETUP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

Quick Tips

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

For illustration purposes only. Your system buttons may vary. See the Owner's Manual for more information.

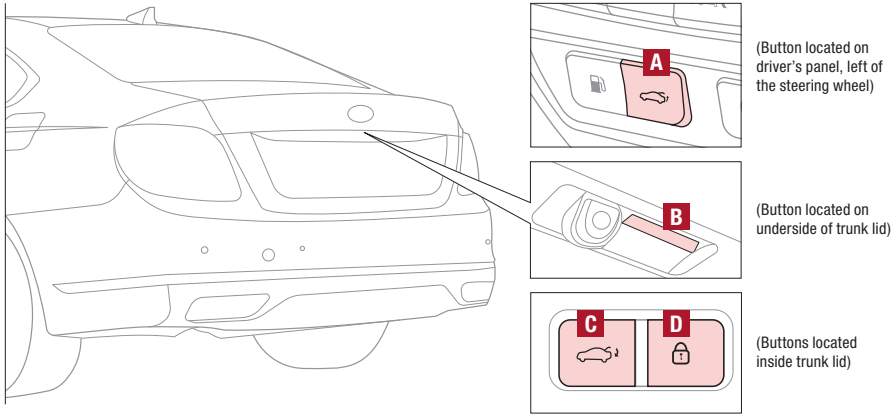

Smart Power Trunk†¹⁷

The Smart Power Trunk can be operated from several controls to either open, close or lock the Trunk. The Smart Power Trunk Lock button will close the Trunk, lock all doors and Trunk and then arm the vehicle.

To turn the Smart Power Trunk features ON, go to User Setting mode in the LCD Instrument Cluster Modes and set to ON.

Opening from Inside the Vehicle:

Press the Smart Power Trunk Open/Close button **A** to automatically open/close the Trunk.

Opening from Outside the Vehicle:

To open the Smart Power Trunk automatically, press the Trunk Release button **B** on the exterior of the Trunk.

Automatically close by pressing the Smart Power Trunk Close button **C**. Lock the trunk by pressing the lock button **D**.

Quick Tip

During the Smart Trunk alert, the Smart Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Trunk feature will not operate when the following occurs:
 - Doors are recently closed and locked
 - The Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Pulling the Trunk upward by the handle or pressing the button a second time will interrupt the automatic opening of the Smart Power Trunk
- Ensure obstacles and people are out of the way of the trunk

For more information on the Smart Power Trunk operation, please refer to the Owner's Manual.

Smart Power Trunk (Continued)

Opening with no-touch activation:

 
When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Trunk is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Trunk.

The Smart Power Trunk feature is OFF by default. To enable the Smart Power Trunk, go to Vehicle Settings in the audio head unit and select Door/Trunk.

Smart Key:

To open the Smart Power Trunk, press and hold the Smart Key Trunk button **D** until the Trunk begins opening. Press again and hold to close.

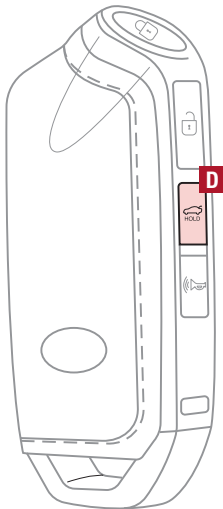

KIA KEY FOB VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

Quick Tips

- The Trunk must be unlocked before it can be opened by the Trunk Release button
- The Trunk unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle

REMINDERS:

- Smart Power Trunk may be damaged if attempting to open or close manually
- When not in use, keep the Trunk Lid Control button in the OFF position
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Smart Power Trunk lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the Trunk lid when operating the Smart Power Trunk

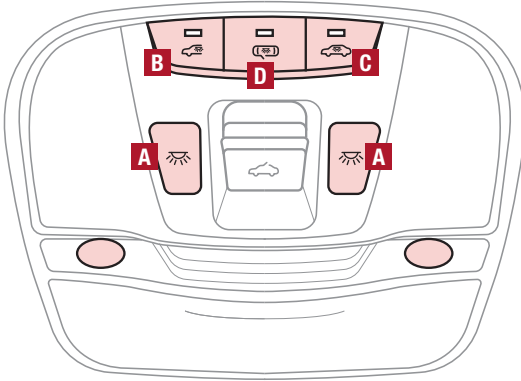

Map/Room Lamps

Automatic Turn Off Function

The interior lights automatically turn off approximately 20 seconds after the Engine Start/Stop button is turned OFF.

Map/Room Lamp Operation

Map Lamps – These lights produce spot beams for convenient use as map lamps or as personal lamps for the driver or the front passenger. Press the buttons **A** to turn the map lamps ON/OFF.

Front button – Press the button **B** to turn the front lamps ON/OFF.

Room button – Press the button **C** to turn the front and rear lamps ON/OFF.

Door button – When the Door button **D** is pressed the front and rear lamps will turn ON as follows:

 
- When a door is opened or doors are unlocked with the Smart Key, the lamps will turn ON for approximately 30 seconds
- If the Engine Start/Stop button is in the ACC/OFF position and a door is open, the lamps will stay ON for approximately 20 minutes
- If the Engine Start/Stop button is in the ACC/ON position and a door is open, the lamps will stay ON

The lamps will turn OFF immediately if the Engine Start/Stop button is turned ON or all doors are locked.

Quick Tips

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

REMINDER: When room lamp lens is pressed ON it will remain ON, even when the map lamp switch is in the OFF position.

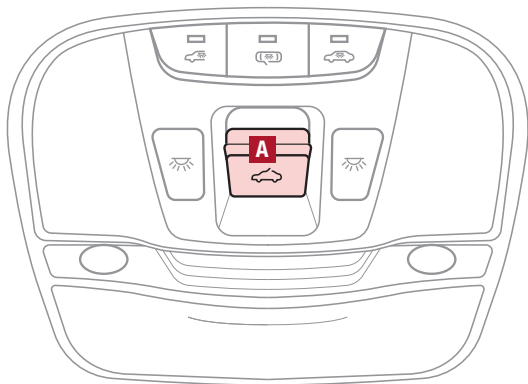

Sunroof Operation

The sunroof and sunshade operation is controlled by a multidirectional switch/lever **A**. The ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the sunshade and sunroof:

Auto Open – Slide lever backward to the farthest position and release.

Auto Close – Slide the lever forward to the farthest position and release. (Sunroof only. Sunshade can be closed manually).

Slide the sunshade:

Manually slide the sunshade open and closed.

Slide the sunroof (with sunshade open):

Auto Open – Slide the lever backward and release.

Auto Close – Slide the lever forward to the first detent position or pull the lever downward.

Tilt the sunroof:

Raise – Press lever upward.

Lower – Push lever forward.

SUNROOF OPERATION VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

Quick Tip

To stop the sunroof/sunshade at any position, press or pull the sunroof control lever in any direction.

REMINDERS:

- Sunshade must remain OPEN while sunroof is open and vehicle is moving
- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

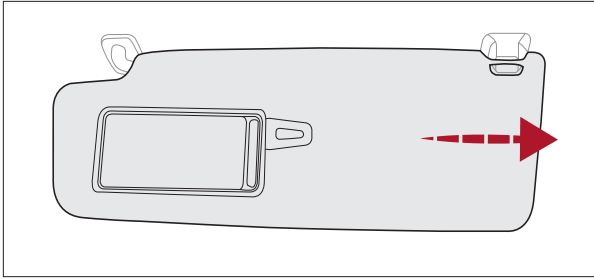


Sunvisor†24

Use the sunvisor to shield direct light through the front or side windows.



Slide the sunvisor out and adjust as needed.

REMINDERS:

 - Sunvisor may not shield all direct light
- Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows
- Do not operate the vehicle if the sunvisor is impairing your visibility

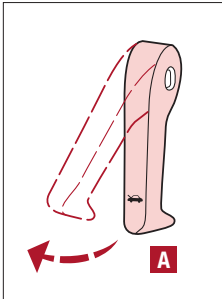

(Located on Driver side kick panel)

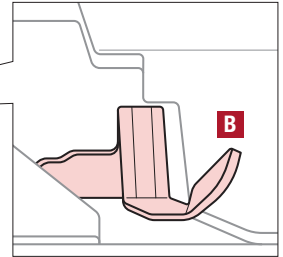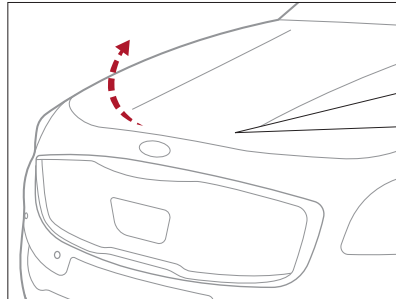  

(Located inside of Hood's center)

 
Hood Release Lever and Latch

Opening the Hood:


1. Pull the hood release lever **A** to unlatch the hood
2. In the front of the vehicle, lift the hood slightly, push the secondary latch **B** inside of the hood's center and lift the hood

Closing the Hood:

Lower the hood about halfway and then press down to securely lock in place.

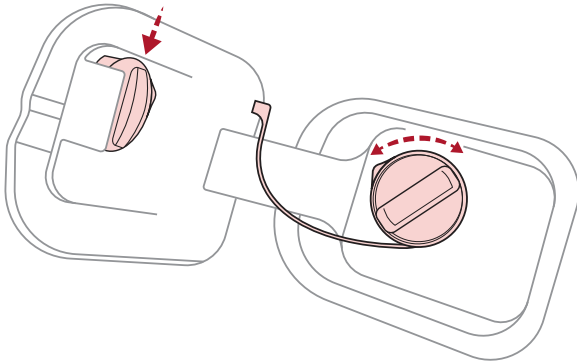

Fuel Cap/Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent malfunction indicator  from illuminating.

REMINDERS:

 
- The Fuel Filler Door Release button is located on the lower part of the driver's door sill
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back

ONE-CLICK FUEL CAP VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

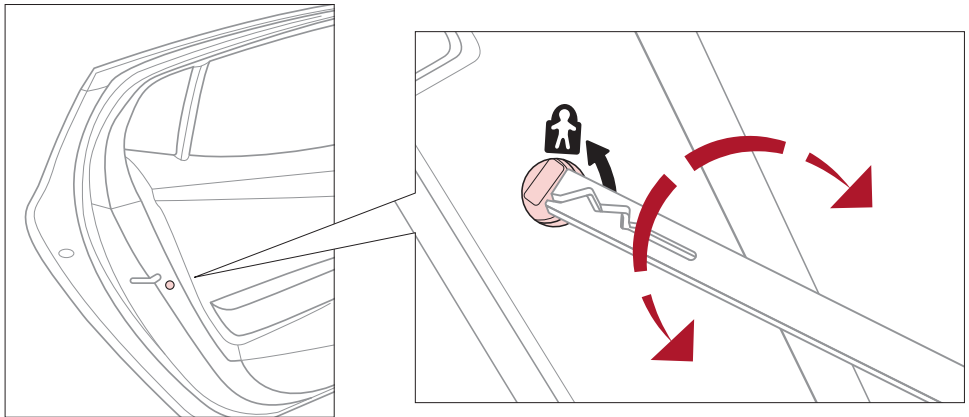

Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors, move the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

 REMINDER: Child-Protector Rear Door Lock is located on rear passenger door jamb.

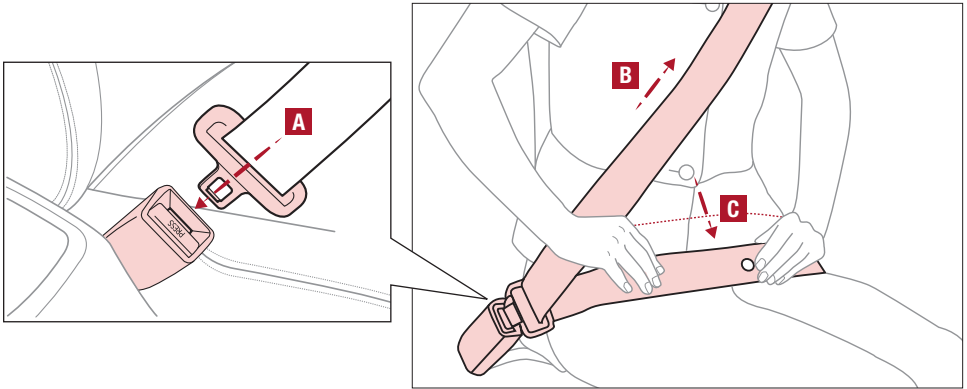

Seat Belts†2,20

To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **B**

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

 
During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

Quick Tip

The seat belt warning chime operates for the driver's seat and passenger's seat.

REMINDER: For maximum protection, always wear your seatbelt.

For more detailed information regarding your vehicle's safety belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

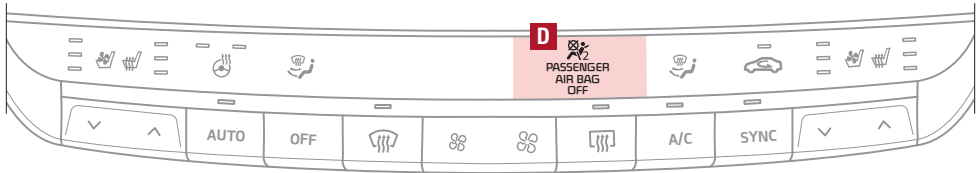

Occupant Detection System (ODS) / Passenger Airbag Off Indicator^{†2,16}

ODS is designed to detect the presence and position of the front passenger and is designed to adjust or turn off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIRBAG OFF” light will illuminate **D**.

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual.

K900 NORMAL MAINTENANCE SCHEDULE

(up to 60,000 miles)^A

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)			
	6,000	12,000	18,000	24,000
Add fuel additive ^C	P	P	P	P
Rotate tires	P	P	P	P
Engine oil and filter	R	R	R	R
Climate control air filter	R	R	R	R
Battery condition	I	I	I	I
Brake lines, hoses and connections	I	I	I	I
Disc brakes and pads	I	I	I	I
Vacuum hose	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I
Drive shafts and boots	I	I	I	I
Suspension mounting joints	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I
Propeller shaft	I	I	I	I
Exhaust pipe and muffler	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I
Air cleaner filter		I		R
Brake fluid		I		I
Fuel tank air filter ^{‡D}		I		I
Parking brake		I		I
Vapor hose, fuel filler cap and fuel tank		I		I
Cooling System				I
Fuel lines, fuel hoses and connections				I
Differential oil, rear (without LSD)				
Differential oil, rear (with LSD)				
Differential oil, front (AWD) ^E				
Spark Plugs				
Valve clearance ^F				
Drive belts (First 60,000 miles, then every 12,000 miles) ^G				

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule.

B. And, if necessary, adjust, correct, clean or replace

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Front/rear differential oil should be changed anytime they have been submerged in water.

F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

 
Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **UVO link:** Purchase/lease of certain 2019 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
-
2. **Airbags:** For maximum protection, always wear your seat belt.
 3. **Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
 4. **Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
 5. **Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
 6. **Driver Assist Features – Blind-Spot Collision-Avoidance Assist (BCA), Blind-Spot View Monitor System, Rear Cross-Traffic Collision Avoidance-Assist (RCCA), Lane Keeping Assist (LKA) / Lane Departure Warning (LDW), Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW), Rear View Monitor, Surround View Monitor (SVM) System, Parking Distance Warning-Reverse/Forward, Smart Cruise Control (SCC) with Stop & Go:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
 7. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
 8. **Electronic Stability Control (ESC) / Traction Control System (TCS)/Hill-Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
 9. **Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
 10. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
 11. **Google Play™ Store** is a trademark of Google, Inc. ©2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
 12. **Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
 13. **HomeLink®:** HomeLink® is a registered trademark of Gentex Corporation.
 14. **iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
 15. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
 16. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
 17. **Power Trunk / Smart Power Trunk:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle.
 18. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
 19. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
 20. **Seat belts:** For maximum protection, always wear your seatbelt.
 21. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
 22. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2019 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
 23. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
 24. **Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
 25. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
 26. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.




K900 CUSTOMER DELIVERY CHECKLIST

Key Feature Walkthrough

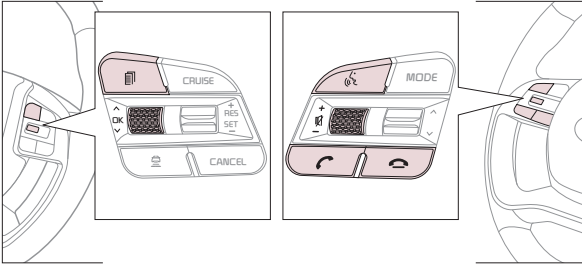

- Smart Cruise Control (SCC) with Stop & Go – page 26**
Demonstrate operation

 - Bluetooth® Wireless Technology – page 28**
Demonstrate operation

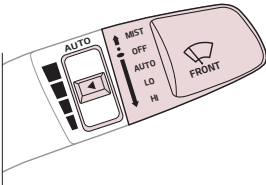

- Windshield Wipers & Washers – page 25**



- HomeLink® with Auto-Dimming Rearview Mirror – page 49**

- Multimedia USB Port, Power Outlets & USB Charger Ports – page 35
- Blind-Spot Collision-Avoidance Assist (BCA) – page 15
- Clock Setup – page 35
- Electric Parking Brake (EPB) / Auto Hold - pages 41-42
- Engine Start/Stop Button – page 22
- Head-Up Display (HUD) – page 11
- Sunroof Operation – page 53
- Parking Distance Warning - Reverse/Forward – page 20
- Passenger Air Bag Off Indicator – page 57
- Front Seat Headrest Adjustment – page 46
- Seat Warmers/Ventilated Seats – page 44
- Smart Key – page 48
- Sunvisor – page 54
- Tire Pressure Monitoring System (TPMS) – page 7

During Delivery

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____

Date: _____

Sales Manager: _____

Date: _____

Customer: _____

Date: _____



K900 CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____

 
Mileage: _____ Dealership Name: _____

Sales Consultant: _____ Date: _____


Before Delivery

- Confirm "Good Battery" with a Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Smart Key* lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio/video/navigation user's guides)


Key Feature Walkthrough

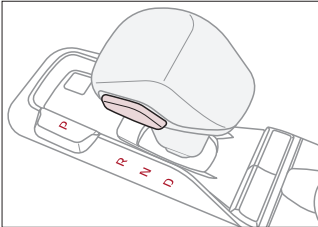

 
- Automatic Transmission / Manual Mode – page 40**

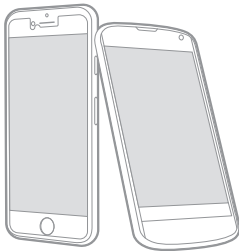

 - UVO link Activation – page 31**
- Android Auto™ / Apple CarPlay® Setup – page 32**



 - Automatic Climate Control – page 38**
Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed.

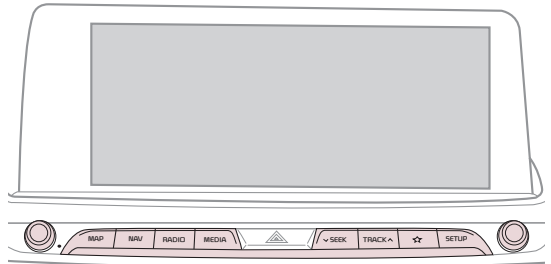

- UVO link with Navigation – page 33**
For further system operation, refer to the Car Multimedia System User's Manual.

