

# RIO

## Features & Functions Guide



**Delivery First**  
The priority that delivers more

# GETTING TO KNOW YOUR **RIO**

## **Welcome to the Kia Family!**

Your new Kia has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

## **Using This Guide**

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)

Consumer - Roadside Assistance<sup>†13</sup>  
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

*Always check the Owner's Manual for complete operating information and safety warnings.*

<sup>†</sup>LEGAL DISCLAIMERS ON BACK INSIDE COVER

## ESSENTIAL FEATURES

Air Conditioning / Climate Control	21
Android Auto™ / Apple CarPlay® Setup	17
Audio System – UVO eServices Activation*	17
Audio System – Standard Audio System*	18
Audio System – UVO eServices*	19
Aux/Multimedia USB Port & Power Outlets*	20
Bluetooth® Wireless Technology*	14
Cruise Control*	16
Digital Clock	20
Folding Rear Seatback	24
Passenger Airbag Off Indicator	29
Service Interval Mode	07
Tire Pressure Monitoring System (TPMS)	05
Windshield/Rear Wipers & Washers*	12

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*



VIDEOS & QR CODES	02
-------------------	----

### INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
Trip Modes / Trip Computer	06
LCD Instrument Cluster Modes	06
Instant Fuel Consumption Mode	06
User Settings*	07
Service Interval Mode*	07

### DRIVER'S PANEL

Instrument Cluster Control	08
Electronic Stability Control (ESC)	08
Hill-Start Assist Control (HAC)	08
Forward Collision-Avoidance Assist (FCA)*	09
Power Windows, Window Lock & Central Door Lock	10
Power/Heated Outside Mirrors	10

### STEERING WHEEL CONTROLS

Headlights & High Beams	11
Turn Signals	11
Windshield Wipers & Washers	12
Rear Wiper & Washer (5-Door Only)*	12
Tilt Steering Wheel	13
Bluetooth® Wireless Technology	14
Audio Controls	16
Cruise Control*	16

### AUDIO SYSTEMS

UVO eServices Activation*	17
Android Auto™ / Apple CarPlay® Setup	17
Standard Audio System*	18
UVO eServices*	19

### CENTER PANEL

Digital Clock	20
Aux/Multimedia USB Ports, Power Outlets & USB Charger Port*	20
Manual Climate Control	21
Automatic Gear Shift / Sportmatic® Shifting*	22

### SEATING

6-Way Adjustable Driver's Seat	23
Front Seat Headrest Adjustment	23
Folding Rear Seatback	24

### OTHER KEY FEATURES

Remote Keyless Entry (Folding Key)*	25
Door Locks / Double-Turn Unlock All	25
Fuel Cap / Malfunction Indicator	25
Hood Release Lever and Latch	26
Fuel Door Release Lever	26
Trunk Release Lever (4-Door)*	26
Sunvisor	26
Map/Room Lamps	27
Rear View Monitor (RVM)*	28
Child-Protector Rear Door Locks	28
Liftgate Release Button (5-Door)*	28

### SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	29
Seat Belts	29

### NORMAL MAINTENANCE SCHEDULE .. Back Cover

### LEGAL DISCLAIMERS .. Inside Back Cover

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: [www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos). Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

### What are QR Codes?

A QR Code is a square, two-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

### How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

### How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
  - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
  - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
  - For operation specifics, refer to the instructions that come with the QR Code Reader App

### QR CODE

#### One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

### QUICK TIPS

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code scanning
  - Try another QR Code Reader App; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

## Instrument Cluster Overview


- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Warning and Indicator Lights
- E** Gear Shift Position Indicator
- F** Odometer
- G** Trip Computer
- H** Fuel Gauge
- I** Engine Coolant Temperature Gauge

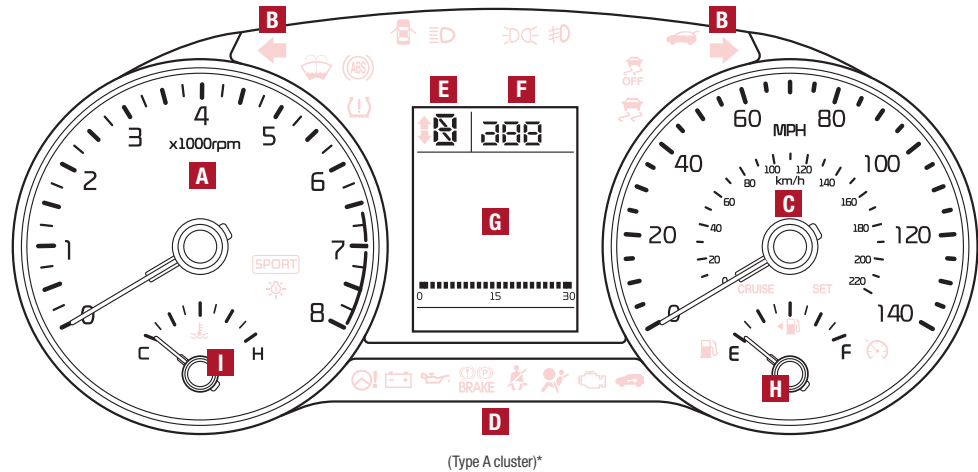

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD warning messages and the function of all indicator and warning lights, please refer to the Owner's Manual.





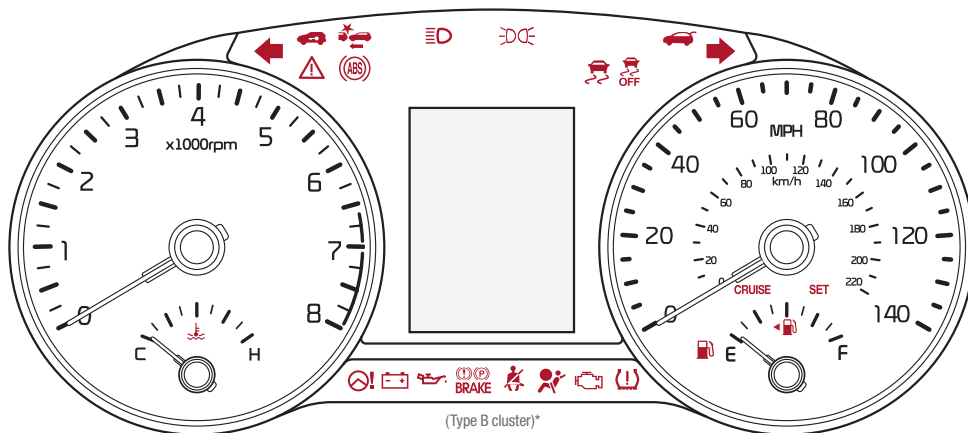




















This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

## Indicators & Warning Lights








Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD warning messages and the function of all indicator and warning lights, please refer to the Owner's Manual.


This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

- |   |   |   |   |   |   |
|---|---|---|---|---|---|
|  | Immobilizer Indicator*                                  |  | LED Headlamp Warning Light*                       |  | Parking Brake & Brake Fluid Warning Indicator   |
|  | Engine Oil Pressure Warning Indicator                   |  | CRUISE Cruise Control Indicator*                  |  | Door Ajar Warning Indicator   |
|  | Airbag Warning Indicator                                |  | SET Cruise SET Indicator*                         |  | Electronic Brake Force Distribution (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time) |
|  | Malfunction Indicator Lamp (MIL)                        |  | Electronic Stability Control (ESC) Indicator*     |  | Washer Fluid Warning Indicator*   |
|  | Seat Belt Warning Indicator                             |  | Electronic Stability Control (ESC) OFF Indicator* |  | Master Warning Indicator*   |
|  | Electric Power Steering (EPS) System Warning Indicator* |  | Low Fuel Level Warning Indicator                  |  | Icy Road Warning Indicator  |
|  | Charging System Warning Indicator                       |  | Low Tire Pressure Indicator                       |  | Trunk (liftgate) Open Warning Light*  |
|  | Light On Indicator                                      |  | Engine Coolant Temperature Warning Indicator      |   |   |
|  | High Beam Indicator Light                               |  | Anti-lock Braking System (ABS) Warning Indicator* |   |   |

## Tire Pressure Monitoring System (TPMS)<sup>†21</sup>


 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator. The indicator  will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn the Low Tire Pressure Light  off. See front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator\*  is displayed on the LCD screen in the instrument cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate – see dealer for service.

### REMINDERS:

- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

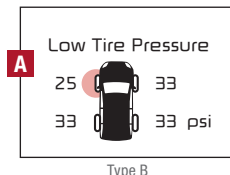

## Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

### QR CODE

To view the videos on your mobile device, snap these QR Code or visit the listed website.

Refer to page 2 for more information.

#### Tire Pressure Monitoring System Video



[www.youtube.com/KiaFeatureVideos](https://www.youtube.com/KiaFeatureVideos)

#### Fuel Economy Video




[www.youtube.com/KiaFeatureVideos](https://www.youtube.com/KiaFeatureVideos)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch is in the ON position.

To cycle through the different LCD Instrument Cluster modes, press the MODE button **A**.

When in Trip Computer mode , press the Move switch **B** up/down to cycle through the screens.




When displaying TRIP A or TRIP B screens, press and hold the OK button **C** to reset the Tripmeter to zero.

### REMINDERS:


- Appearance of Trip Computer / Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range / Distance to Empty) is reset if the battery is disconnected

## LCD Instrument Cluster Modes

Press the Mode button **A** to change the LCD Instrument Cluster modes:

-  Trip Computer
-  User Settings
-  Master Warning


*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

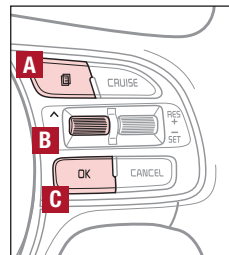

(Type B shown; located on the right side of the Steering Wheel)


*Your vehicle's steering wheel buttons may differ from those in the illustrations.*

## Instant Fuel Consumption Mode\*

Press the Mode button **A** to cycle to Trip Computer mode . Then scroll to TRIP mode, and scroll to Instant Fuel Economy. The screen displays the calculated fuel consumption during the past few seconds.

### REMINDERS:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (---)
- For more information, refer to the Owner's Manual

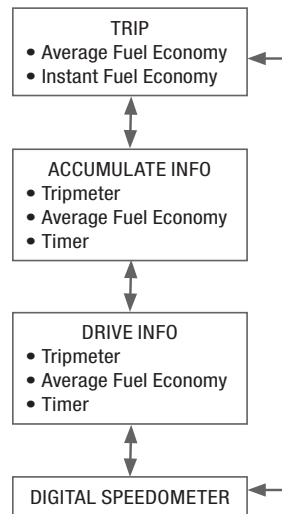


(Type B cluster)


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## User Settings\* (Type B cluster)

To enter the User Settings mode in the LCD Instrument Cluster modes, press the Mode button **A** when the vehicle is at a standstill, gear shift in Park, and with the ignition ON, select User Settings .

You can navigate the selections on the display by toggling the Move button **B**. Select the item by pressing the OK (Set/Reset) button **C**.

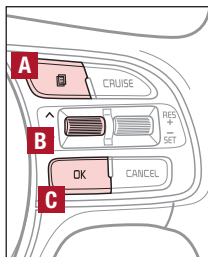

(Type B shown; located on the right side of the Steering Wheel)

### User Settings Menu

#### Driving Assist\*:

- Forward Collision-Avoidance Assist (FCA)\*
- Forward Collision Warning (FCW)\*

#### Door\*:

- Automatically Lock
- Automatically Unlock
- Two Press Unlock\*
- Horn Feed Back\*

#### Lights:

- One Touch Turn Signal
- Head Lamp Delay

#### Language:

- Choose the language

#### Convenience:

- Wiper/Light Display\*
- Auto rear wiper (reverse)\*
- Gear Position Pop-up\*
- Icy road warning\*

#### Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

#### Other Features:

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit\*



#### Reset:

- Reset menus in User Settings


## Service Interval Mode\* (Type A cluster)

When service is required, the following screens will be displayed:

- Rotate Tire
- Change Engine Oil

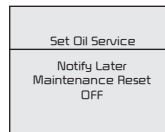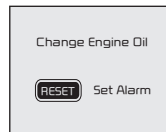


(Type B cluster)

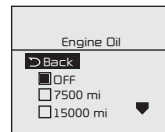

To enter Service Interval Mode, press the Mode button **A** and scroll to User Settings . Then scroll to Service Interval using the Move button **B**.

To reset or deactivate the Maintenance system reminder, press the Reset button **B** for more than one second. Then toggle to the preference and select by pressing the Reset button **B**.

### Service Interval Setting (Type B Steering Wheel)

When in User Settings  mode, press the Mode button **A** to scroll to Service Interval and select by pressing the OK button **C**.

When in the Service Interval mode, scroll to the menu item and press the OK button **C** to enter:

- Engine Oil
- Tire

Scroll to your selection and press the OK button **C** to set.

## QR CODES

To view the videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

### LCD Display Video



### LCD Display: Maintenance Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


For more information on the User Settings mode, please refer to your Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

## Instrument Cluster Control

Press switch **A** up or down to adjust display brightness of the instrument panel illumination.

**REMINDER:** The Instrument Cluster Control does not adjust brightness on the audio control unit screen. Use setup to adjust brightness on the audio control unit screen.

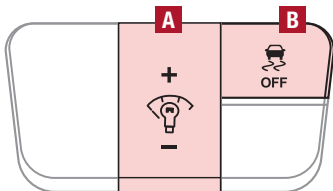

(Buttons located on left side of Driver's Panel)


## Electronic Stability Control (ESC)<sup>†7</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press the ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both the Traction Control and Stability Control off, press and hold the ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

### REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will be lit momentarily whenever the ESC is active

*For more information on Electronic Stability Control (ESC) and its specific features and operation, please refer to your Owner's Manual.*

## Hill-Start Assist Control (HAC)<sup>†7</sup>

HAC can help to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### REMINDERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an authorized Kia dealer for service

### QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backwards

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Forward Collision-Avoidance Assist (FCA)\*†6

The FCA system is designed to detect slowing or stopped traffic ahead and, under certain conditions, can apply the brakes in order to help avoid or reduce the effects of a potential collision. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle in front, emitting an audible warning and visual alert on the instrument cluster **A**.

Adjust the alert settings (Early, Normal, Late) in the User Settings. FCA is ON by default and can be turned OFF in the User Settings menu on the Instrument Cluster display.

If the system detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to avoid or reduce the effects of a possible collision.

The FCA/FCW systems will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

### REMINDERS:

- The FCA/FCW systems will be activated by default when the ignition is cycled ON, even when previous set to OFF
- If FCA/FCW is operating and the ESC (Electronic Stability Control) is turned off, the systems are automatically turned off
- When the FCA/FCW systems are off, the FCA/FCW systems warning indicator is on in the instrument cluster

*The Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW) systems are not substitutes for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



### QR CODE

#### Forward Collision-Avoidance Assist (FCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Power Windows, Window Lock & Central Door Lock

**A** Pull/Press to operate Driver's Window Auto Up/Down\*

### QUICK TIP

Press button again to stop Auto Up/Down function.

**B** Press to Unlock/Lock All Doors

**C** Press the Power Window Lock button\* to disable the Rear Passenger Window switches

### Automatic Door Lock/Unlock\*


Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

## Power/Heated Outside Mirrors

To adjust outside mirror positions, press the switch **D** left or right to select mirror, then press the arrows **E** to adjust.

Mirror heaters are activated when Rear Defroster is turned on.


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

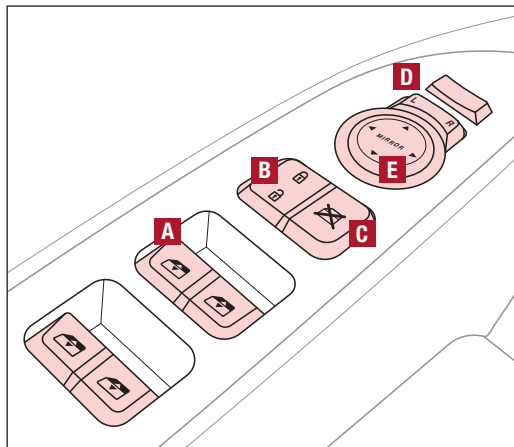

## Headlights & High Beams

### To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

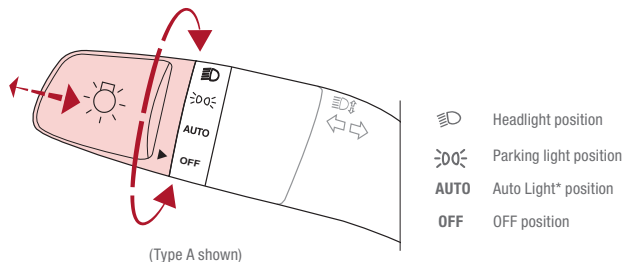


**AUTO Light\* Position** — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Turn Signals

### To operate:

- **Turn Signals** – Move lever Up/Down for Right/Left Turn Signal
- **One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever Up/Down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.
- To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster modes.

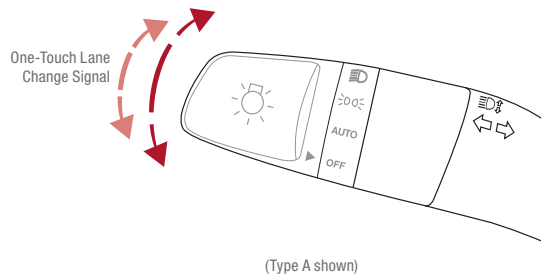


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

### Windshield Wipers & Washers

#### To operate:

- Move lever up/down to change Wiper modes
- Press switch **A** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

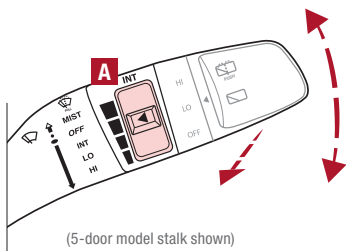

**MIST:** Single wipe  
**OFF:** Wiper off  
**INT:** Intermittent wipe  
**LO:** Low wiper speed  
**HI:** High wiper speed

#### QUICK TIPS


- Moving switch up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

### Rear Wiper & Washer (5-Door only)\*

#### To operate:

- Rotate Rear Wiper switch to change wiper modes
- Push lever to spray and wipe

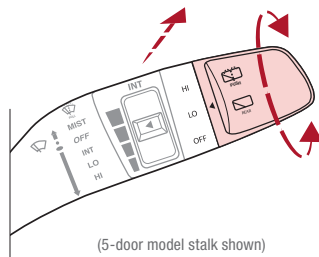

**HI:** High wiper speed  
**LO:** Low wiper speed  
**OFF:** Wiper off


#### QUICK TIP

LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*


### Tilt Steering Wheel†<sup>20</sup>

To adjust the Steering Wheel position, press the lock-release lever **A** down and adjust the desired angle **B**. When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

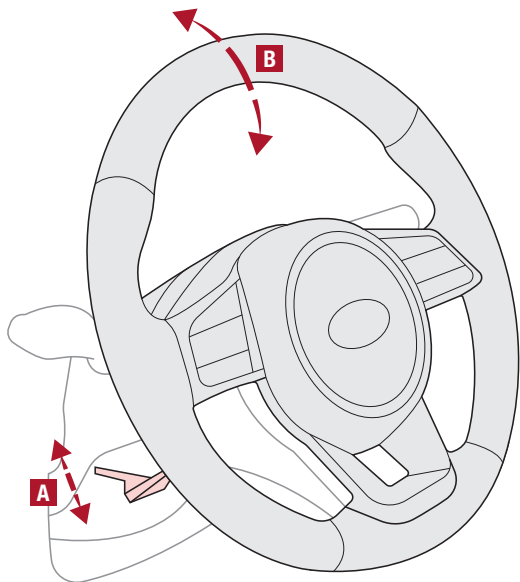

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Bluetooth® Wireless Technology†5,18

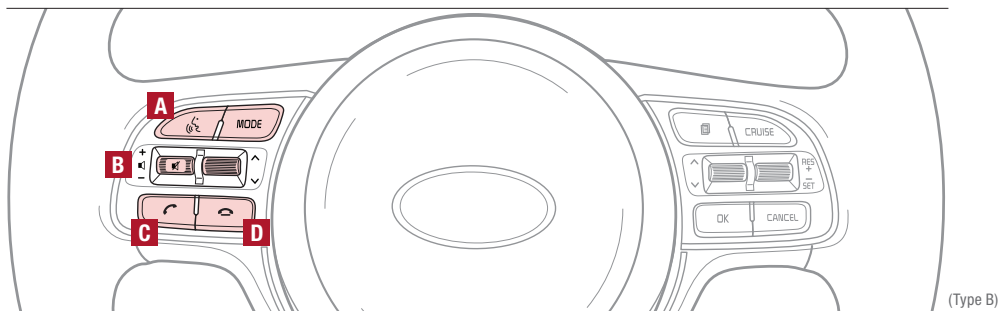

(Type B)

**A Talk button:** Press to activate voice recognition. Press and hold to exit voice recognition.

**B Volume button:** Press up/down to raise/lower speaker volume

**Mute button:** Press to mute the microphone during a call and to mute the audio system speakers

**C Receive/Place Call button:** Press to receive/place/transfer calls. In vehicles with navigation, if no phone is paired, press button to pair a phone

**D End Call button:** Press to end a call, reject an incoming call or cancel a function

## QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command.
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

**REMINDER:** Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For more information, refer to the Car Multimedia System User's Manual. For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.*



## Bluetooth® Wireless Technology<sup>†5,18</sup> (continued)

### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

#### QUICK TIPS

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

### How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or "Dial {number}"

### Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

#### QUICK TIPS

- Bluetooth® Music Streaming – If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and turn off A/C – Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

#### QR CODE

### Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Audio Controls<sup>†18</sup>

## Cruise Control<sup>\*†18</sup>

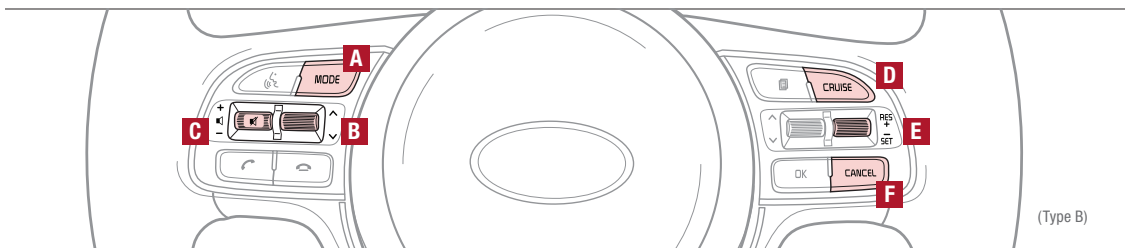

**A Audio MODE button:** Press to cycle through FM/AM/SiriusXM<sup>®</sup> <sup>\*†16/</sup> Media modes

**Audio System ON/OFF:** Press to turn power on; Press and hold to turn power off

**B Seek/Preset button**

*FM/AM/SiriusXM<sup>®</sup> <sup>†16</sup> Modes:* Press to advance through Preset Stations. Press and hold to Auto Seek

*Media Modes:* Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind (except for *Bluetooth<sup>®</sup>* Audio)

**C Volume button:** Press up/down to raise/lower volume

**Mute button:** Press to mute all audio

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.*

*For further audio system operation, refer to pages 17-19.*

**D CRUISE Control button:** Press to turn the Cruise Control ON/OFF

**E Resume (RES) Cruising Speed button:** Press up to resume or increase cruising speed

**SET Cruising Speed button:** Press down to set or decrease Cruising Speed

**F Cruise Control CANCEL button:** To cancel Cruise Control, do one of the following:


- Press the brake pedal
- Press the CANCEL button

### QUICK TIPS

- Cruise Control is designed to function above approximately 20 mph
- The cruise control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

## UVO eServices Activation\*†1

1. On your smartphone, go to an app store or marketplace to download the Kia UVO eServices app
2. Open the UVO eServices app and create an account by clicking on REGISTER. After entering your information and reviewing the terms and conditions, accept them to complete registration. (You can also register for an account on <https://owners.kia.com>)
3. Follow the app's IN-CAR SETUP instructions to connect your smartphone and complete UVO eServices activation

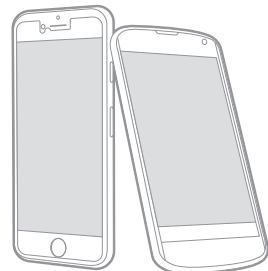


## Android Auto™†3 / Apple CarPlay®†4 Setup

### Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™†9 Store
2. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device

### How to start Android Auto™:

1. Press the SETUP key on the audio control unit
1. Press the Phone Projection button  or Device Connection, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
2. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
3. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

### Setting up and starting Apple CarPlay®:

1. On the audio control unit, press the SETUP key
2. Press the Phone Projection button  or Device Connection on the screen and select Apple CarPlay®
3. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
4. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
5. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

### REMINDERS:


- Android Auto™ compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s)
- Apple CarPlay® compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone® 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

*For further UVO eServices operation, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 16-19.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Standard Audio System\*

FM/AM/Media (USB, AUX, *Bluetooth*® Audio, My Music)\*

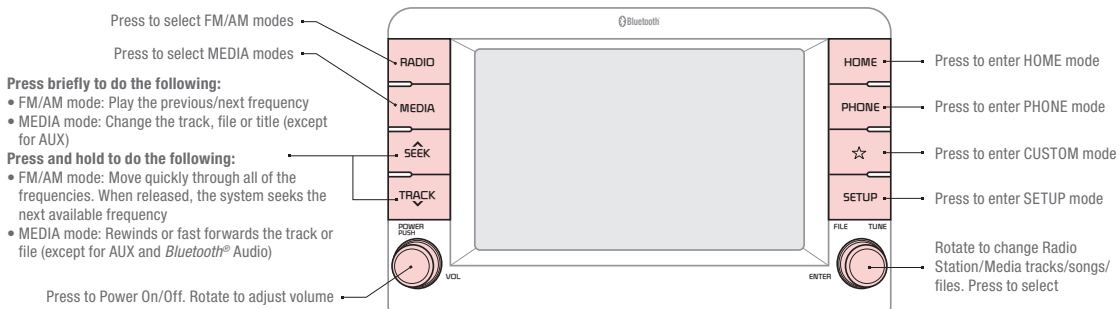

**Radio Presets** – You can listen to FM and AM radio and save frequently used stations.

**How to Save a Preset:** Press and hold the desired slot. This saves the current station in the selected slot.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

**Sound Settings** – To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio control unit or the onscreen MENU button when in MEDIA mode
2. Select the onscreen SOUND button
3. Select the menu item (Position, Volume, Priority, Advanced, Default)
4. Using the touchscreen, press arrows to adjust the settings

## QR CODE

### Standard Audio System Video

To view this video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](https://www.youtube.com/KiaFeatureVideos)

## QUICK TIPS


- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation<sup>††</sup> system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

*Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 16-19 or see your Owner's Manual.*

## UVO eServices\*†1

– FM/AM/SiriusXM®†17/Media (USB, My Music, AUX, *Bluetooth*® Audio)

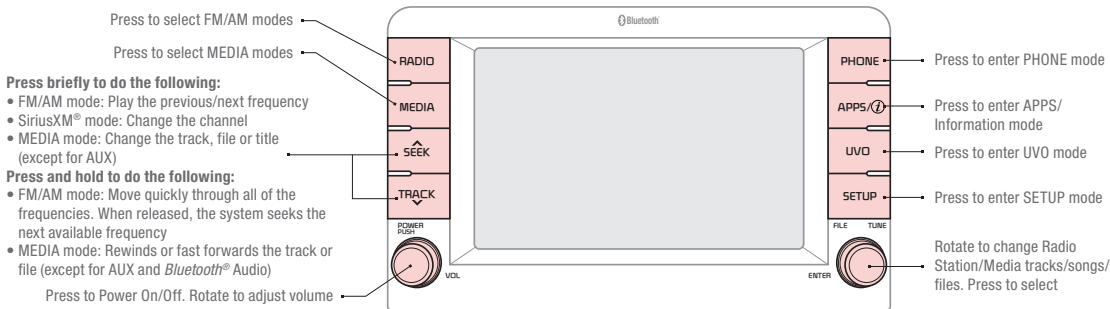

**Sound Settings:** To adjust the audio control unit's sound settings:

1. Press the SETUP key on the audio control unit or the onscreen MENU button when in MEDIA mode.
2. Select the onscreen SOUND button, or SOUND SETTINGS.
3. Select the menu item (Position, Tone, Priority, Advanced, Default).
4. Use the onscreen buttons to adjust settings. Press the return button to save settings.

**Radio Presets:** You can listen to FM, AM and SiriusXM® radio and save frequently used stations.

**How to Save a Preset:** Press and hold the desired slot. This saves the current station in the selected slot.

**SiriusXM® Smart Favorites:** For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment.

In **Radio** mode, choose SiriusXM®, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** A programmable button to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

## QR CODE

### UVO eServices Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## QUICK TIPS

- Using Android Auto™ or Apple CarPlay® and a supported smartphone, the phone's Navigation App may be displayed on the head unit
- A warning screen may appear periodically to remind users that the navigation†11 system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO eServices Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery


*Your vehicle's audio system may differ from that in the illustration. For more information, refer to the Car Multimedia System User's Manual. See your Owner's Manual for other details. For other audio system information, see pages 16-18.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.*

## Digital Clock

### Clock Setup:

Press the SETUP **A** button, then press the onscreen Clock icon to enter date/time settings.

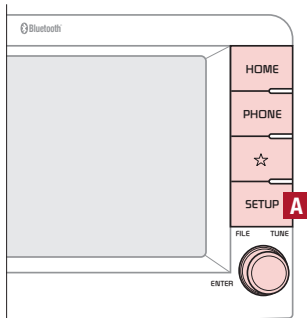


(UVO eServices audio head unit shown)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Aux/Multimedia USB Ports, Power Outlets & USB Charger Port\*

Use the Aux port **B** to connect audio devices and the Multimedia USB port **C** to connect USB audio devices and smartphones.

Use the power outlets **D** for mobile phones and other devices designed to operate on a 12V (180W max) power outlet .

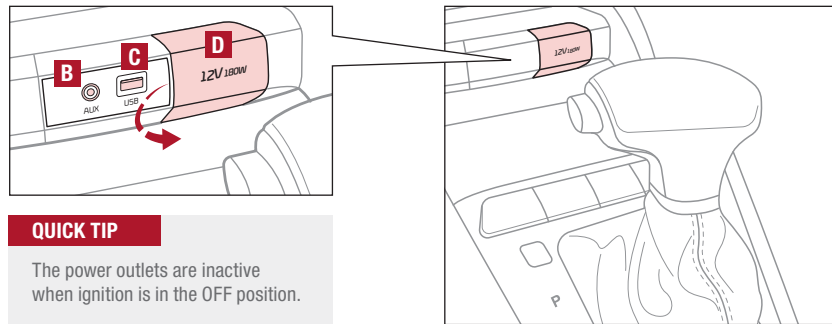

### QUICK TIP


The power outlets are inactive when ignition is in the OFF position.

### USB Charger Port\*:

The USB Charger Port is located at the rear of the Center Console.

#### REMINDERS:


- Using the power outlets and AUX/Multimedia USB ports for prolonged periods of time with the ignition ON (engine OFF) could cause the battery to discharge
- The ignition in ACC mode could cause the battery to discharge
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device

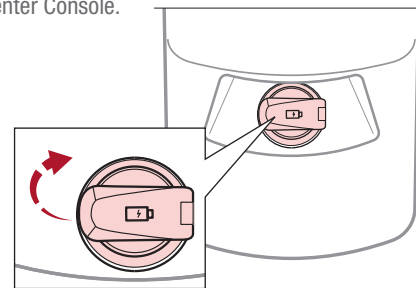

(Located at rear of Center Console)


*For more information on the Aux/Multimedia USB Ports, Power Outlets and the USB Charger Port, refer to the Owner's Manual.*

## Manual Climate Control

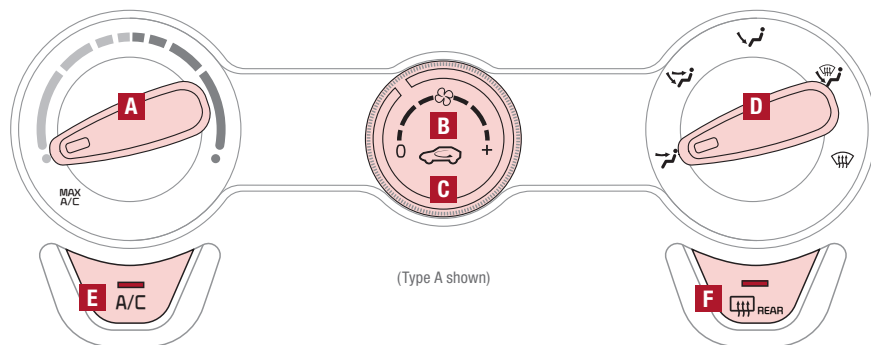

- A** Temperature control
- B** Fan speed control
- C** Recirculated/Fresh Air button
- D** Mode selection control
- E** Air conditioning ON/OFF button
- F** Rear windshield defroster button

### Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Select **Front Defrost** mode 

### Defog Inside Windshield:


1. Set **Fan Speed** to desired position
2. Set **Temperature** to desired position
3. Select **Front Defrost** mode 

### Air Flow Modes

To select Air Flow modes, rotate the mode selection knob **D**:



### QUICK TIPS

- To help achieve desired / maintain desired temperature, select Floor-Level for heating and Face-Level for cooling
- Defrost  Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

### REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit). Outside air temperature may not be warm depending on outside temperature

*Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.*

## Automatic Gear Shift with Sportmatic®†17 Shifting\*

**P:** Park

**R:** Reverse

**N:** Neutral

**D:** Drive



**[+]:** Manual Mode Upshift

**[-]:** Manual Mode Downshift

### Manual Mode:

To enter Manual mode, move shift lever from **D** to left gate **A**.

To shift while in **Manual mode**, move shift lever up **[+]** to upshift or down **[-]** to downshift.

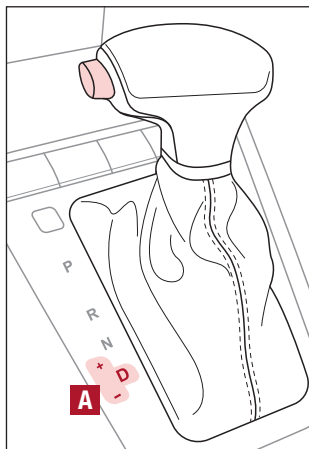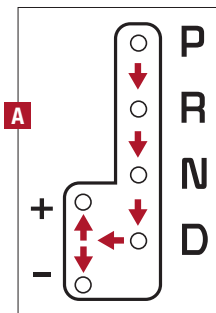

### QR CODES

#### Sportmatic® Shifting Video

To view this video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*





## 6-Way Adjustable Driver's Seat<sup>†14</sup>

Pull lever **A** to slide Seat forward/backward.

Pull/press lever **B** up/down one or more times to adjust Seat height.

Pull lever **C** to adjust Seatback Recline.

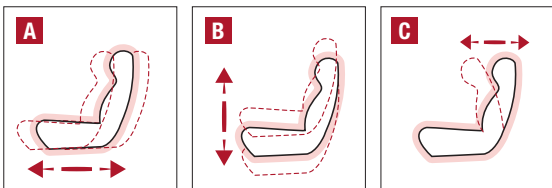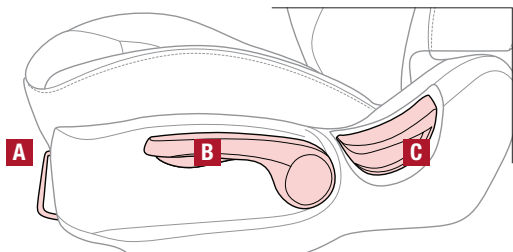

### QUICK TIP


When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

*Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.*

## Front Seat Headrest Adjustment<sup>†8</sup>

**To raise headrest:** Pull headrest up.

**To lower headrest:** Press lock **D**, then press the headrest down.

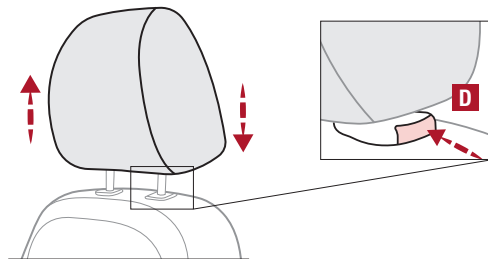

### QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

### REMINDERS:

- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Folding Rear Seatback<sup>†14</sup>

### To Fold:

1. Ensure the rear seat belt is out of way of the Seatback folding **A** (4-door model)  
Insert the metal seat belt tab into the holder **B** (5-door model)
2. Adjust the Front Seatback to the upright position and lower the rear headrest to the lowest position
3. Pull on the Rear Seatback lock release lever **C**, then fold the seat toward the front

### To Unfold:


1. Pull the lock release lever **C** and lift the Seatback backward until it clicks firmly in place
2. Return the rear seat belt to the proper position

### QUICK TIPS

- It may be necessary to adjust the front seatbacks to fully lower rear seats
- Ensure seat is locked by pressing down on Seatback and ensuring red line is NOT visible on bottom of Folder Lever

### REMINDERS:

- Before unfolding Seatback, ensure the metal seat belt tab is placed into the holder (5-door model)
- Always make sure the seatback is locked in place when unfolded

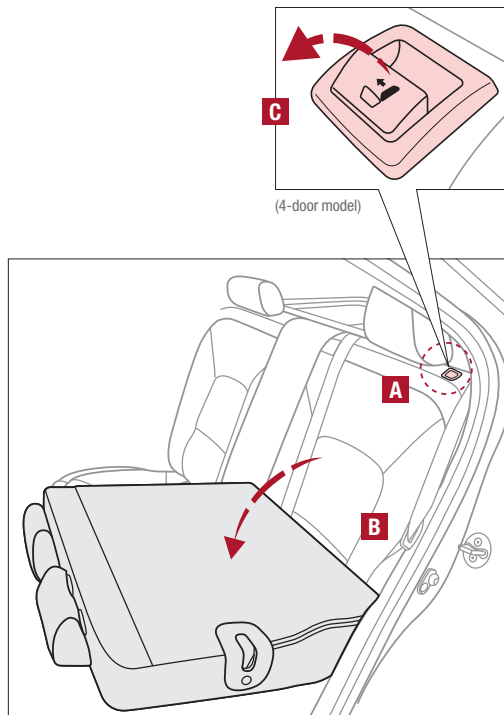


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Remote Keyless Entry (Folding Key)\*

- A** Press the release button to unfold the key
- B** Press to lock all Doors. If pressed again within 4 seconds the hazard lights will blink and the horn will sound.
- C** Press to unlock Driver's Door. Press twice in 4 seconds to unlock all Doors and Trunk/Liftgate\*
- D** Press for more than 1 second to automatically open Trunk/Liftgate\*
- E** Press and hold for approximately one second for Panic Alarm. To turn OFF Alarm, press any button


**REMINDER:** Remote button configuration may vary depending on vehicle options.

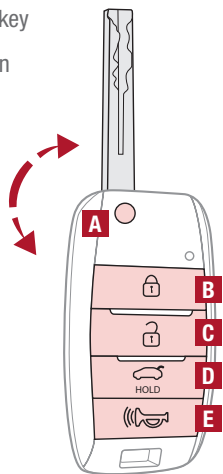

(Type A)

## Door Locks / Double-Turn Unlock All

- Turn counterclockwise once to unlock Driver's Door
- Turn counterclockwise again within 4 seconds to unlock all Doors
- Turn clockwise once to lock all Doors

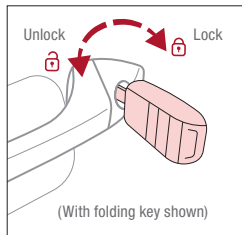


## Fuel Cap / Malfunction Indicator (Check Engine Light)

To install the fuel cap, turn the fuel cap clockwise for **ONE CLICK** to prevent Malfunction Indicator from illuminating. Close and lightly push the Fuel Filler Lid to ensure it's securely closed.

### REMINDEERS:

- The Fuel Filler Door Release lever is located on the lower part of the driver's door sill
- It is normal operation when tightening to hear one click and then, when Fuel Cap is released, it clicks

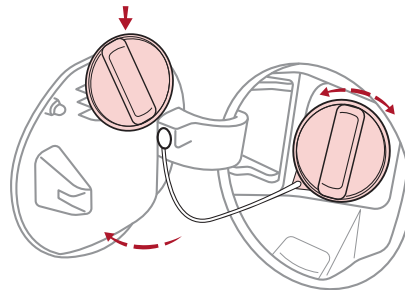

## QR CODE

### One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Hood Release Lever and Latch


### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the hood's center and lift the Hood
3. Pull out the support rod from the Hood and set into place to hold the Hood open

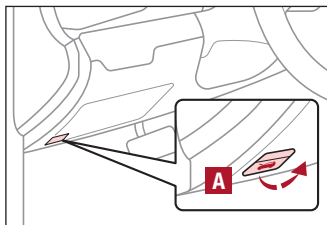

(Lever located under Driver's Panel buttons)

**REMINDER:** Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

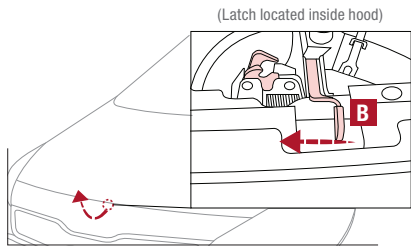

(Latch located inside hood)


### Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

**REMINDER:** While lowering and closing, keep hands away from under the Hood.

## Fuel Door Release Lever

Pull the lever **C** upwards to release the fuel door.

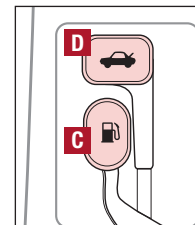

(Lever located on the driver's floor near door sill; image shown is 4-door model)


## Trunk\* Release Lever

(4-door model)

Pull the lever **D** upwards to open the trunk lid.

## Sunvisor†19

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

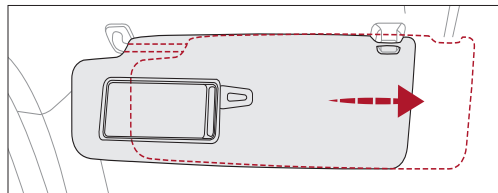

### REMINDEMS:

- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly. Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Map/Room Lamps

### Map Lamp\*

Press the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map or personal lamp for the driver or front passenger.

When the Door switch **B** is in the middle position, the lamp turns ON when any door is opened. When pressed on the left side, the light will turn on. When pressed on the right side, the light will be off, even when a door is opened.

### Room Lamp


- **C On:** In the ON position , the lamp stays on continuously
- **D Door:** In the DOOR position , the lamp turns ON when any door is opened
- **E Off:** In the OFF position , the lamp is OFF even if the door is opened

#### QUICK TIPS


- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 5 seconds after the doors are locked
- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds

**REMINDER:** Using interior lights for an extended period of time may cause battery discharge.

Map Lamp

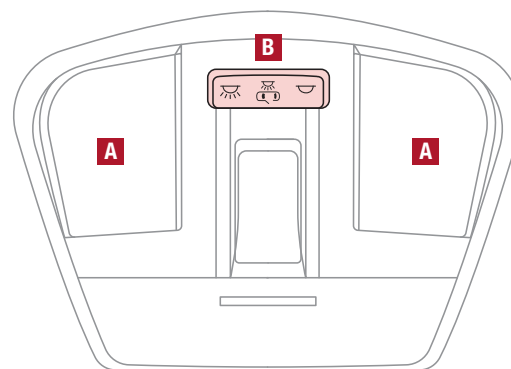

Room Lamp

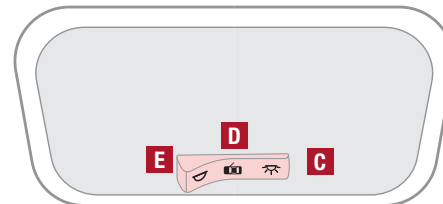

(Type A shown)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Rear View Monitor (RVM)\*


The Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio control unit screen while the vehicle is in Reverse.

**The Rear View Monitor System activates when the:**


1. Ignition is ON
2. Gear Shift Lever is in the R (Reverse) position

**REMINDER:** Always drive carefully and use caution when backing up.

*The Rear View Monitor System is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear View Monitor may not display every object behind the vehicle.*

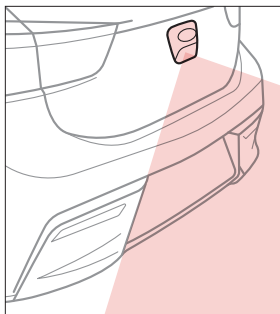

(5-door model shown; camera located on liftgate handle (5-door) or trunk (4-door); Liftgate Release button located underneath handle (5-door))

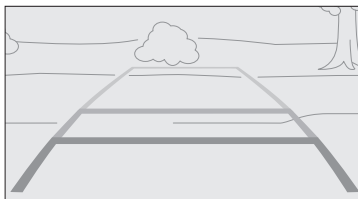


(Image displays on the audio control unit screens)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Child-Protector Rear Door Locks

Located just below the latch mechanism of the rear passenger doors, insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.

**REMINDER:** Child-protector rear door locks are located on rear passenger's door jamb.

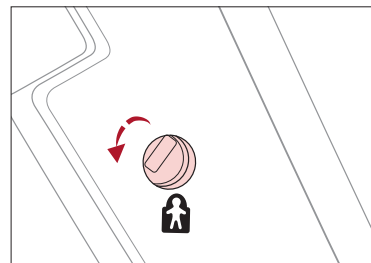


## Liftgate Release Button (5-Door)\*

Button is located underneath the liftgate handle. With doors unlocked, press the Liftgate Release button and pull the liftgate up by the handle to open.

### QUICK TIP

The liftgate must be unlocked before it can be opened by the Liftgate Release Button.

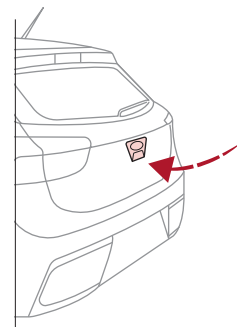

## Occupant Detection System (ODS)<sup>†12</sup> / Passenger Airbag<sup>†2</sup> Off Indicator

ODS is designed to detect the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:



- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

**REMINDER:** Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual.

## Seat Belts<sup>†16</sup>

To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**


### QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

### Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

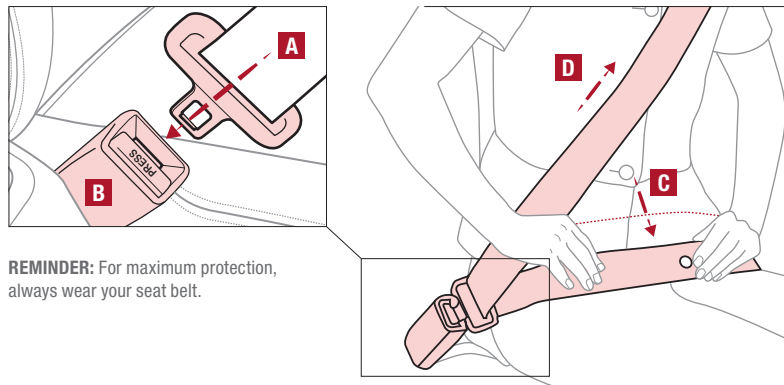

**REMINDER:** For maximum protection, always wear your seat belt.

For illustrative purposes only. Your actual display, buttons and/or features may vary.









# LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. UVO eServices:** Purchase of certain new Kia vehicles includes complimentary access to UVO eServices (length of access period varies by vehicle model, trim and model year) starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary term of UVO eServices expires, your access to UVO eServices may immediately terminate. Use of UVO eServices is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html.html>). UVO eServices transferrable to subsequent owner during the original UVO eServices service term. Only use UVO eServices when safe to do so. UVO eServices App is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO eServices at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO eServices features may vary by make, model year and trim level. Features and specifications are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply. Android Auto is a trademark of Google LLC.
- 4. Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW):** These features are not substitutes for safe driving, and may not detect all objects in front of the vehicle. Always drive safely and use caution.
- 7. Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 9. Google Play™ Store** is a trademark of Google, Inc. ©2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 10. iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 11. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 12. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 13. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 14. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 15. Seat belts:** For maximum protection, always wear your seatbelt.
- 16. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2019 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 17. Sportmatic®** is a registered trademark of Kia Motors America.
- 18. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 19. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 20. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 21. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer:

- Standard Audio System\* – page 18

For further operational information, refer to the Car Multimedia System User's Manual




- UVO eServices\* – page 19

For further operational information, refer to the Car Multimedia System User's Manual




- Android Auto™ / Apple CarPlay® Setup – page 17

UVO eServices Activation\* – page 17

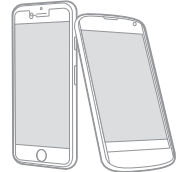


- Rear View Monitor Display – page 28

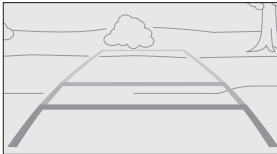


- Cruise Control\* – page 16

Demonstrate operation

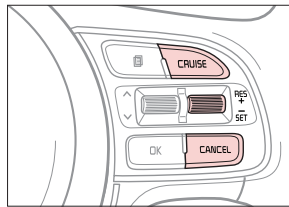

- Bluetooth® Wireless Technology\* – pages 14-15

Demonstrate operation

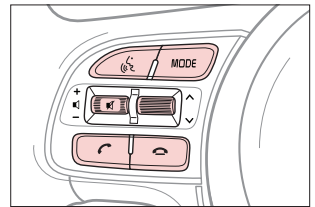

- Aux/Multimedia USB Ports – page 20
- Digital Clock – page 20
- Folding Rear Seatback – page 24
- Passenger Airbag Off Indicator – page 29

- Sunvisor – page 26
- Tire Pressure Monitoring System (TPMS) – page 5

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

\*if equipped

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_ Date: \_\_\_\_\_

Customer: \_\_\_\_\_ Date: \_\_\_\_\_



# RIO CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_ Mileage: \_\_\_\_\_


Dealership Name: \_\_\_\_\_ Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

## BEFORE DELIVERY

- Confirm vehicle is in customer mode (transportation mode disabled)
- Test and confirm "Good Battery" using a Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Remote Keyless Entry lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio user's guides)

## KEY FEATURE WALKTHROUGH


- Manual Climate Control - page 21 – Demonstrate Air Flow Modes, Defogging and Defrosting Windshield

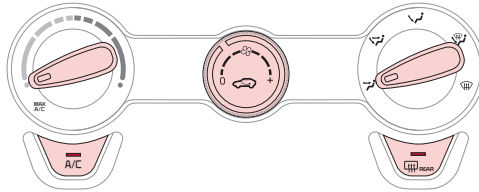

- Windshield/Rear (5-door model) Wipers & Washers\* – page 12

To operate:

- Move lever Up/Down to change Wiper modes
- Rotate lever ring to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

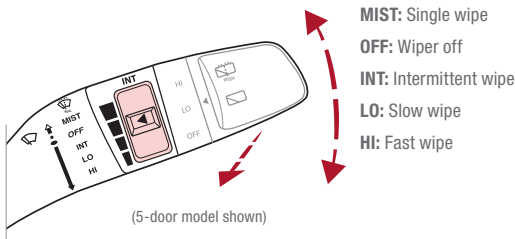

# KIA RIO NORMAL MAINTENANCE SCHEDULE

P=Perform • R=Replace • I=Inspect<sup>B</sup>

(up to 60,000 miles)<sup>A</sup>

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)								
	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000	
Add fuel additive <sup>C</sup>	P	P	P	P	P	P	P	P	
Rotate tires	P	P	P	P	P	P	P	P	
Engine oil and filter	R	R	R	R	R	R	R	R	
Climate control air filter (for evaporator and blower unit)	R	R	R	R	R	R	R	R	
Battery condition	I	I	I	I	I	I	I	I	
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	
Brake discs and pads	I	I	I	I	I	I	I	I	
Vacuum hose	I	I	I	I	I	I	I	I	
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I	
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	
Exhaust system	I	I	I	I	I	I	I	I	
Air cleaner filter	I	I	I	R	I	I	I	R	
Brake fluid		I		I		I		I	
Fuel tank air filter <sup>1D</sup>		I		I		I		I	
Parking brake		I		I		I		I	
Vapor hose and fuel filler cap		I		I		I		I	
Driveshaft and boots		I		I		I		I	
Cooling System				I		I		I	
Manual transmission fluid <sup>1E</sup>				I				I	
Fuel lines, fuel hoses and connections				I				I	
Drive belts (First 60,000 miles, then every 15,000 miles) <sup>1F</sup>								I	
Valve Clearance <sup>1G</sup>								I	

## QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO eServices App or your account on <https://owners.kia.com> (Vehicles equipped with UVO eServices only – See page 17 for setup information)

‡ If equipped.

- A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction,

power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Manual transmission fluid should be changed anytime it has been submerged in water

F. The drive belt should be replaced when cracks occur or tension is reduced excessively.

G. Inspect for excessive valve noise and/or engine vibration and adjust if necessary. Have an authorized Kia dealer perform the operation.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2019 Kia Motors America, Inc. All rights reserved.  
Consumer - Roadside Assistance<sup>113</sup>: 1-800-333-4KIA (4542)

Part Number: UR200-PS-004 R1

LEGAL DISCLAIMERS ON BACK INSIDE COVER