

SORENTO

Features & Functions Guide



Delivery First
The priority that delivers more

GETTING TO KNOW YOUR **SORENTO**

Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance¹⁷
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

ESSENTIAL FEATURES

Air Conditioning / Automatic Climate Control*	28
Android Auto™ / Apple CarPlay® Setup	22
Audio System – Standard Audio System*	23
Audio System – UVO link Activation*	24
Audio System – UVO link with Navigation*	25
Aux/Multimedia USB Port, Power Outlets, USB Charger Ports	31
Bluetooth® Wireless Technology	18
Cruise Control	20
Digital Clock	31
Passenger Airbag Off Indicator	48
Service Interval Mode	7
Smart Cruise Control (SCC) with Stop & Go*	21
Smart Key*	40
Tire Pressure Monitoring System (TPMS)	5
Trip Modes / Trip Computer	6
User Settings	7
Windshield/Rear Wipers & Washers	17

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



LEGAL DISCLAIMERS	See Back Inside Cover Page
------------------------------------	----------------------------

VIDEOS & QR CODES	2
--	---

INSTRUMENT CLUSTER

Instrument Cluster Overview	3
Indicators & Warning Lights	4
Tire Pressure Monitoring System (TPMS)	5
Fuel Economy	5
LCD Instrument Cluster Modes	6
Trip Modes / Trip Computer	6
User Settings	7
Service Interval Mode	7
Drive Mode Integrated Control System	8
ECO Mode (Active ECO)*	8

DRIVER'S PANEL

Electronic Stability Control (ESC)	9
Hill-Start Assist Control (HAC)	9
Instrument Cluster Control	9
Blind-Spot Collision-Avoidance Assist (BCA)*	10
Rear Cross Traffic Collision Avoidance Assist (RCCA)*	11
Lane Keeping Assist (LKA)*	11
Forward Collision-Avoidance Assist (FCA)*	12
Power Windows, Window Lock & Central Door Lock	13
Power Folding Outside Mirrors*	13
Power/Heated Outside Mirrors*	13
Automatic Door Lock / Unlock	13
Fuel Filler Lid Release Button	13
Reverse Parking Aid Function*	14
Engine Start/Stop Button*	14

STEERING WHEEL CONTROLS

Headlights & High Beams	15
Tilt / Telescoping Steering Wheel	16
Turn Signals & Fog Lights*	15
Windshield / Rear Wipers & Washers	17
Bluetooth® Wireless Technology	18
Audio Controls	20
Cruise Control	20
Smart Cruise Control (SCC) with Stop and Go*	21

AUDIO SYSTEMS

Android Auto™ / Apple CarPlay® Setup	22
Standard Audio System*	23
UVO link Activation*	24
UVO Assistance*	24
UVO link with Navigation*	25

CENTER PANEL

Surround View Monitor (SVM)*	26
Automatic Gear Shift with Sportmatic® Shifting	27
AWD (All-Wheel Drive) Lock*	27
Automatic Climate Control*	28
Manual Climate Control*	30
Digital Clock	31
Aux/Multimedia USB Ports, Power Outlets, USB Charger Ports	31
Wireless Smartphone Charging System*	32
Electronic Parking Brake (EPB)*	33
Auto Hold*	33
Heated Steering Wheel*	34
Seat Warmers / Ventilated Seats*	34

SEATING

Front Seat Headrest Adjustment	35
Driver Position Memory System*	35
Power Adjustable Driver's Seat* / Power Lumbar*	36
Manual Adjustable Driver's Seat*	36
2nd-Row Folding Seat	37
2nd-Row Auto-Folding Seat*	37
3rd-Row Folding Seat*	38
One-Touch Walk-In Seat Access	38

OTHER KEY FEATURES

Sunvisor	39
Sunglasses Holder	39
Remote Keyless Entry (Folding Key)*	39
Double-Turn Lock/Unlock All	39
Smart Key*	40
Power Liftgate*	41
Smart Power Liftgate*	42
Driver Attention Warning (DAW)*	43
HomeLink® with Auto-Dimming Rearview Mirror*	44
Map/Room Lamps	45
Panoramic Sunroof with Power Sunshade*	45
Parking Distance Warning-Forward* and Reverse	46
Rear View Monitor	46
Hood Release Lever and Latch	47
Fuel Cap / Malfunction Indicator (Check Engine Light)	47
Child-Protector Rear Door Locks	47

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	48
Seat Belts	48

NORMAL MAINTENANCE SCHEDULE	Back Page
--	-----------

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, two-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer/Trip Computer/Tripmeter
- H** Fuel Gauge

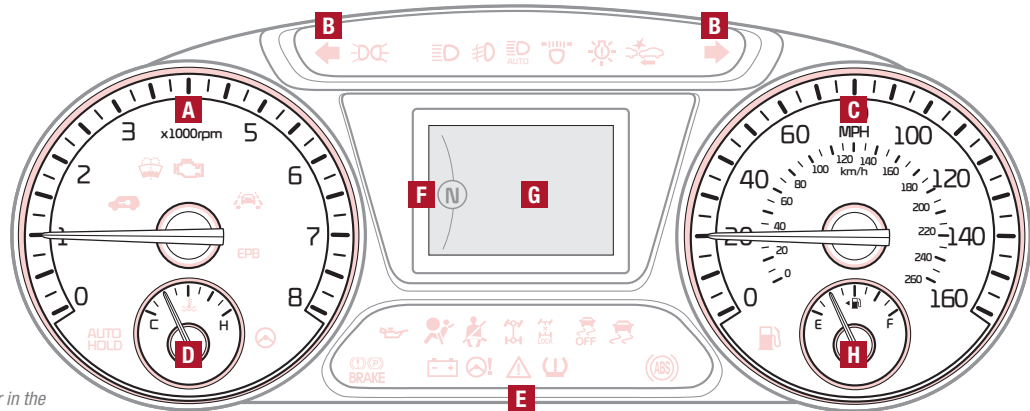


(Type A Cluster)

 This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.



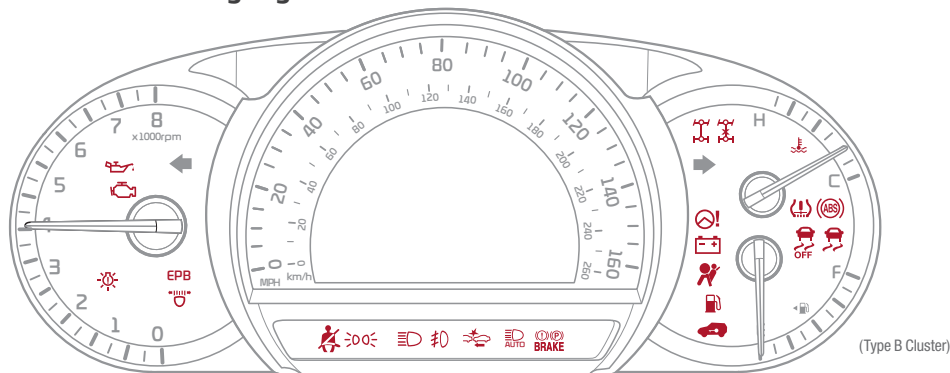

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual.

Indicators & Warning Lights




This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.


Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual.


- | | | |
|--|--|---|
|  Engine Oil Pressure Warning Light |  All-Wheel Drive (AWD) Warning Light* |  Electronic Stability Control (ESC) Warning Indicator Light |
|  Malfunction Indicator Light |  All-Wheel Drive (AWD) Lock Indicator Light* |  AUTO HOLD AUTO HOLD Indicator* |
|  EPB Electric Parking Brake (EPB) Warning Light* |   Electronic Power Steering (EPS) Warning Light |  SET Cruise Control SET Indicator* |
|  Seat Belt Warning Light |   Charging System Warning Light |  CRUISE Cruise Control ON Indicator* |
|   Light ON Indicator Light |   Airbag Warning Light |   Washer Fluid Warning Light* |
|   High Beam Indicator Light |   Low Fuel Level Warning Light |   Master Warning Light |
|   Low Beam Indicator Light* |   Immobilizer Indicator Light* |   Electronic Brake Force Distribution (EBD) System Warning Light (two separate indicators on Instrument Cluster lit at same time) |
|   Low Beam Assist-Dynamic (LBA-D) Warning Light* |   Engine Coolant Temperature Warning Light |   Lane Keeping Assist (LKA)* ON/OFF Indicator Light |
|   Front Fog Light Indicator Light |   Icy Road Warning Indicator Light* |   LED Headlamp Warning Indicator* |
|   High Beam Assist Indicator Light* |   Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator Light | |
|   Parking Brake & Brake Fluid Warning Light |   Anti-Lock Braking System (ABS) Warning Light | |
|   Forward Collision-Avoidance Assist - Pedestrian (FCA-Ped) Warning Light* |   Electronic Stability Control (ESC) OFF Indicator Light | |


Tire Pressure Monitoring System (TPMS)^{†26}




The TPMS indicator  functions as both the Low Tire Pressure Light and the TPMS Malfunction Indicator.

 The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

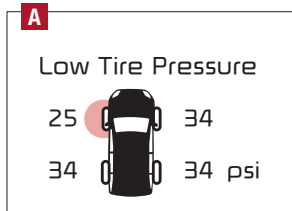

The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate the tire(s) to specifications using an accurate tire pressure gauge to turn off the Low Tire Pressure Indicator . See the front driver's door jamb for PSI specifications.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See the dealer for service.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Fuel Economy

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for approximately 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain the recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is opened.
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s).
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

QR CODES

To view these videos on your mobile device, snap these QR codes or visit the listed website.

Refer to page 2 for more information.

Tire Pressure Monitoring System Video



www.youtube.com/KiaFeatureVideos

Fuel Economy Video



www.youtube.com/KiaFeatureVideos

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

LCD Instrument Cluster Modes

Press the Mode button **A** to cycle through the different LCD Instrument Cluster Modes:



Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.



Turn-by-Turn Mode*: Displays the state of the navigation



Assist Mode*: Displays the state of the Smart Cruise Control with Stop & Go*, Lane Keeping Assist, TPMS* and Driver Attention Warning*. In AWD AUTO MODE, the cluster displays the traction force distribution status of the front and rear wheels. In AWD LOCK MODE, the cluster doesn't display the status



 
User Settings Mode: Change settings of the doors, lamps and other features



Master Warning Mode: Informs on low tire pressure warnings, Blind-Spot Collision Warning (BCW)* system malfunction and other systems

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.


Trip Modes / Trip Computer

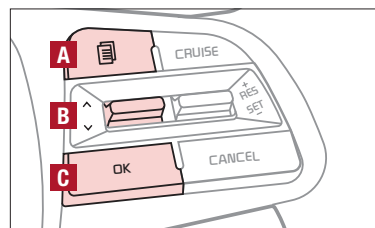

(Type A: Controls located on Steering Wheel)

The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

 
To cycle through the LCD Instrument Cluster modes, press the Mode button **A**.

To select and enter the Trip Computer mode , press the Move button **B** up/down and then press Set/Reset (OK) **C** to enter. To cycle through and select the different screens (Fuel Economy, Trip A, Trip B), press the Move button **B** up/down again and then press the OK button **C**. When displaying the TRIP A or TRIP B screens, press and hold the OK button **C** to reset the Tripmeter to zero.

Press the OK button **C** to go back to the previous mode/item.

REMINDERS:


- Appearance of the Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

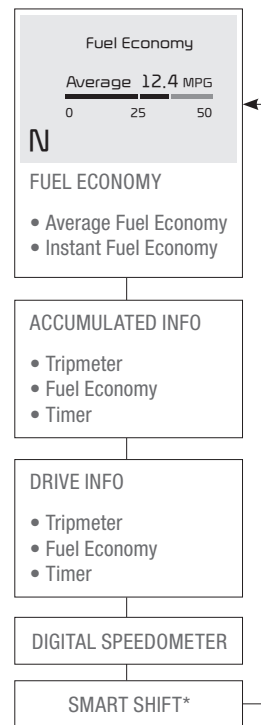

(Type B Cluster)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

User Settings

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill, shift lever in Park, and with the Engine/Start Stop button in the ON position, select User Settings  by pressing the Move button **B** up/down.

You can navigate the selections on the display by pressing the Move button **B**, and then selecting the item by pressing the OK button **C**.

Press the OK button **C** to go back to the previous mode/item.

User Settings mode:

Driver Assistance

- Lane Safety*
- Driver Attention Warning (DAW)*
- Smart Cruise Control Reaction*
- Forward Collision-Avoidance Assist (FCA)*
- Forward Collision Warning (FCW)*
- Blind-Spot Collision Warning Timing*
- Blind-Spot Collision Warning Sound*
- Rear Cross Traffic Collision Warning*

Door/Liftgate

- Automatically Lock
- Automatically Unlock
- Two Press Unlock*
- Horn Feedback*
- Power Liftgate*
- Power Liftgate Speed*
- Smart Liftgate*

Lights

- One-Touch Turn Signal
- Ambient Lighting*
- Headlamp Delay*

Sound

- Parking Distance Warning Volume*
- Welcome Sound*

Convenience

- Seat-Easy Access*
- Rear Occupant Alert*
- Welcome Mirror/Light*
- Wireless Charging System*
- Wiper/Lights Display*
- Gear Position Pop-up*

Service Interval

- Enable Service Interval
- Adjust Interval
- Reset

Other Features

- Fuel Economy Auto Reset
- Speedometer Subscale*
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit


Language

- Choose the language

Reset

- Reset the User Settings menus (except language and service interval)

 
 
Service Interval Mode

To enter Service Interval Mode, press the Mode button **A**, scroll to User Settings  and enter by pressing the OK button **C**.

Scroll to Service Interval by pressing the OK button **B**, then press the OK button **C** to enter. System will display the number of miles remaining until the next service is due, as well as the type of service due.

When service is required, the following will be displayed:

Service Required **D**



(Images are for illustration purposes only and may vary)

To reset the Service Interval Mode system, press and hold the OK button **C** for more than 1 second.

Press the OK button **C** to go back to the previous mode/item.

To turn **Service In OFF** **E**, go to User Settings.

Service Interval Setting **F**

To set the service interval in User Settings mode:

- Press the Mode button **A** to cycle to User Settings and press the OK button **C** to enter
- If Service Interval is OFF, press the OK button **C** to turn ON
- Press the Move button **B** to select/change the interval setting
- Press the OK button **C** to select the interval

QR CODES

To view a video on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System*

 
SMART, COMFORT, SPORT and ECO drive modes **A** may be changed according to the driver's preference or road conditions. To cycle through drive modes, press the DRIVE MODE button **B**.

COMFORT Mode – The system's default mode is COMFORT mode and is not displayed on the instrument cluster nor the audio system's screen.


ECO Mode – A green ECO indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

SPORT Mode – A yellow SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

SMART Mode – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, aggressive). A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (green, white, red) depends on the current driving style. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

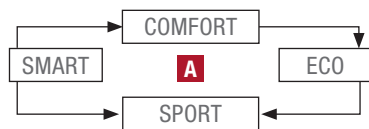

(Appears on LCD in Instrument Cluster)

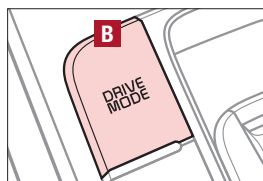 

(Located on Center Panel below Gear Shift)*

REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- The system is turned ON and in COMFORT mode when ignition is in the ON position
- Steering effort may be slightly increased in SPORT mode

ECO Mode (Active ECO)*

The Active ECO system is designed to help improve fuel economy by controlling several vehicle components. When activated, it can help optimize drivetrain operations such as engine power and the transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B** and scroll through options until in the ECO mode. The ECO mode indicator in the instrument cluster will illuminate, indicating that the vehicle is in ECO mode and Active ECO is operating. The Active ECO system will remain on even when the ignition is cycled.

To turn the Active ECO system OFF, press the DRIVE MODE button **B** again and change to another mode.

QUICK TIPS

- When the Engine Start/Stop button is turned off, the system will default to COMFORT mode and each mode will need to be selected again when the vehicle restarts
- To help improve your fuel economy:
 - Drive at a moderate speed, accelerating smoothly and at a moderate rate
 - Keep tires inflated to the recommended pressure
 - Be sure the wheels are properly aligned

For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.

QR CODE

Drive Mode Integrated Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos


Electronic Stability Control (ESC)^{†8}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press the ESC OFF button **A** to turn Traction Control OFF/ON.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press it again to turn ON.

REMINDERS:

- ESC is active by default at vehicle startup. When the ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

For more information on Electronic Stability Control (ESC) and its specific features and operation, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)^{†8}

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

 
QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal HAC operation.
- HAC provides a two-second delay before the vehicle may start rolling backwards

REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Instrument Cluster Control

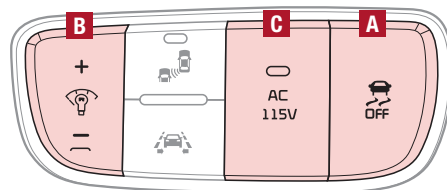

(Button panel located left of Steering Wheel)

With the parking lights/headlights ON, press the button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINER: The Instrument Cluster Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Blind-Spot Collision-Avoidance Assist (BCA)^{†6}

The BCA system uses radar sensors in the rear bumper to help alert the driver, in certain situations, if it detects an approaching vehicle in the driver's blind spot area.

To activate the BCA system, go to User Settings by pressing the Mode button on the Steering Wheel. Select Driver Assistance > Blind Spot Safety and then press the OK button on the Steering Wheel. Select Active Assist, Warning Only or Off.

To set the initial warning activation time, go to User Settings > Driver Assistance > Warning Time and press the OK button. Select the Normal or the Later option.

With the Engine Start/Stop button in the ON position, press the BCA button **A** to turn the system ON. The button light will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

1st-stage alert: When another vehicle is detected within the BCA system warning boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors **C**.

2nd-stage alert: When 1st stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

 
QUICK TIP

The BCA system will activate when:



- The system is turned on
- Other vehicles are detected on the rear sides of the vehicle

REMINDERS:

- The BCA system will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When the BCA is OFF or ON and the ignition is cycled, the BCA-R system returns to its previous state
- The BCA system is a supplemental system. Do not solely rely on these systems, always pay attention to the road and its conditions

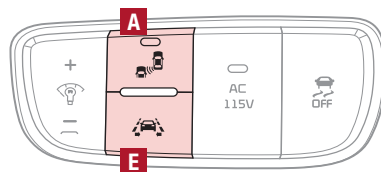

  (Button panel located left of Steering Wheel)

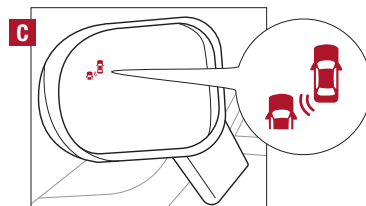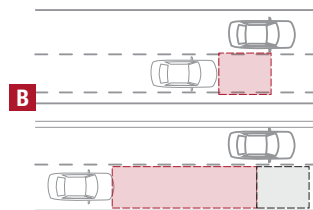

QR CODE

Blind-Spot Collision-Avoidance Assist (BCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

The BCA system is not a substitute for safe and proper driving. Always drive safely and use caution.


See the Owner's Manual for more detailed information, limitations and conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Rear Cross-Traffic Collision Avoidance Assist (RCCA)*†6

If the RCCA system sensors detect approaching vehicles from the rear left or rear right side of the vehicle **F**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster screen **G**. RCCA is designed to operate under the following conditions:

 
- When the gear shift is in Reverse
- When the vehicle is moving slower than 7 mph

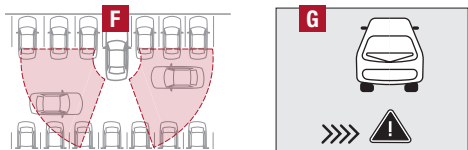

REMINDERS:

- The RCCA feature can be turned OFF/ON in User Settings, under Driver Assistance, Parking Safety
- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling between 2.5 and 22 mph, the RCCA system will show a warning
- The RCCA systems is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions

Lane Keeping Assist (LKA)*†6

With the Engine Start/Stop button in the ON position, press the LKA button **E** to turn the system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph and the system does not detect the lane markers. When the LKA system detects lane markers and can assist steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, the vehicle crossing lane indicator will blink and the system issues an audible warning and displays an Lane Departure Alert (LDW) alert on the instrument cluster. If the vehicle continues to move outside of the lane, LKA will apply a slight adjustment to the steering, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the LKA button is depressed to ON. To switch between modes (LKA, Active LKA and Lane Departure), go to User Settings in the Instrument Cluster.

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- The LKA/LDW system recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

REMINDERS:

- LKA/LDW will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA/LDW will return to the previously set state



When the LKA sensor does not detect the lane the vehicle is traveling in the lane is not illuminated.



When the LKA sensor detects the lane the vehicle is traveling in, the lane is illuminated.



When the LKA sensor detects the vehicle veering outside of the lane it is traveling in, the lane the vehicle's crossing will blink (shown in both images above).

QR CODE

Lane Keeping Assist (LKA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Lane Keeping Assist and Lane Departure Warning are not substitutes for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Forward Collision-Avoidance Assist (FCA)^{†6}

The FCA system is designed to detect slowing or stopped traffic ahead and, under certain conditions, can apply the brakes in order to help avoid or reduce the effects of a potential collision. Initially, FCA provides Forward Collision Warning (FCW) when it detects a pedestrian or a potential collision with a vehicle in front, emitting an audible warning and visual alert on the instrument cluster **A**.

Adjust the alert settings (Early, Normal, Late) in the User Settings. FCA is ON by default and can be turned OFF in the User Settings menu on the Instrument Cluster display.

If the system detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to avoid or reduce the effects of a possible collision. FCA can be turned ON in the User Settings menu on the Instrument Cluster display.

FCA / FCW will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

REMINDERS:

- The FCA / FCW systems will be activated by default when the ignition is cycled ON, even when the previous setting is OFF
- If the FCA / FCW systems are operating and ESC (Electronic Stability Control) is turned off, the systems are automatically turned off
- When the FCA / FCW systems are off, the FCA-Ped / FCW systems warning indicator is on in the Instrument Cluster

Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW) are not substitutes for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.



QR CODE

Forward Collision-Avoidance Assist (FCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Front Windows Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows

REMINDER: When pressed **C** window controls for the Rear Passenger Windows are disabled.

Power Folding Outside Mirrors*

D Press the L or R buttons to select the mirror to adjust

E Press button arrows left/right or up/down to adjust mirror position

F Toggle button left/right to unfold/fold the outside rearview mirrors

F Toggle button to center to automatically fold/unfold mirrors when:

 
- The Smart Key* Lock/Unlock buttons are pressed
- The door outside handle button* is pressed

QUICK TIP

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMINDERS:

- When the mirror button **F** is in the center, press the Lock button on the Smart Key to automatically fold the mirrors
- To lock the position of mirrors, toggle switch to the neutral (center) position

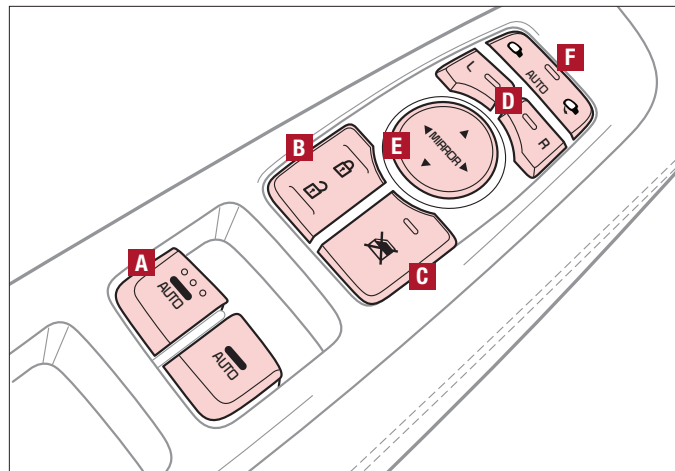

(Button/switch panel located on Driver's Door)

Power/Heated Outside Mirrors*

 
Mirror heaters are activated when the Rear Defroster is turned on.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Fuel Filler Lid Release Button

Press the Fuel Filler Lid Release button **G** to release the fuel door.



(Buttons located on the Driver's Panel to the left of the Steering Wheel)

Reverse Parking Aid Function*

 
 
When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backward, the outside rearview mirrors **A** will rotate downward to aid in reverse parking.

When the left or right mirror buttons **B** are depressed, the Reverse Parking Aid Function will operate (LED lit).

To turn OFF the function, press the buttons again.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror buttons are not depressed

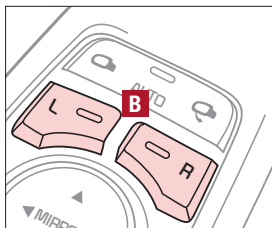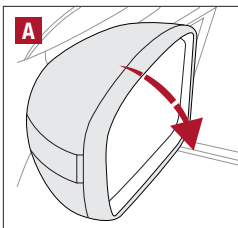


(Button/switch panel located on Driver's Door)

REMINDER: When one of the outside rearview mirror switches are not depressed (LED lit), the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Engine Start/Stop Button*⁺⁹

To start the engine:

 1. Depress the brake pedal
2. Press the Engine Start/Stop button while gear shift is in P (Park) or N (Neutral)

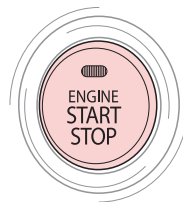

To turn the engine OFF: Press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob inside the vehicle.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once (amber light)

ON position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the Engine Start/Stop button (red light)
- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice (red light)

Keeping the vehicle in the ACC or ON position for extended periods of time without turning the engine on may discharge the vehicle's battery.

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Tilt/Telescoping Steering Wheel^{†25}

 
To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and distance **C**.

When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.

QUICK TIP

To adjust the steering wheel angle, it may be helpful to first adjust the steering wheel's distance from the driver.

For illustrative purposes only. Your steering wheel may vary.

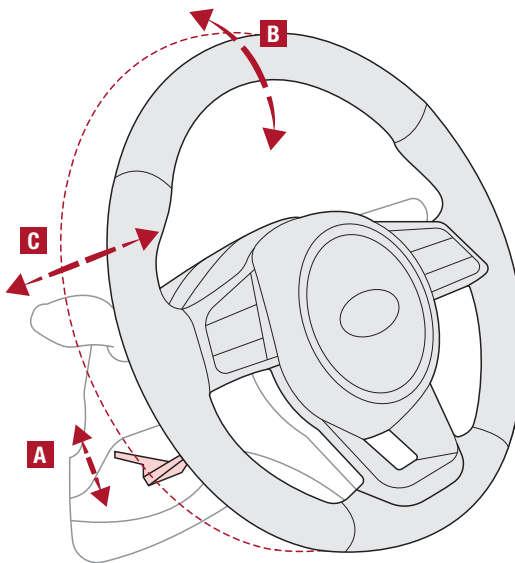


Headlights & High Beams

To operate:

- Rotate the switch to change the Headlight function
- Push the lever to turn the High Beams ON
- Pull the lever to flash the Headlights/High Beams

 AUTO Light position* — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

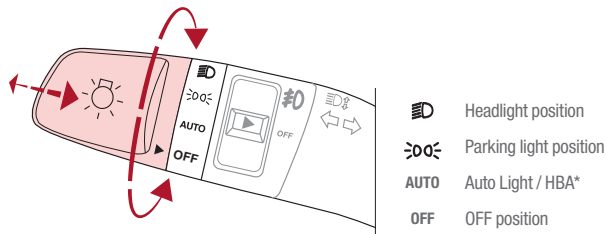

Turn Signals & Fog Lights*

To operate:

 
- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Press toggle switch **A** to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To turn the One-Touch Lane Change Signal off/on, go to User Settings Mode in the LCD Instrument Cluster modes.


For more information on the User Settings Mode, please refer to your Owner's Manual.

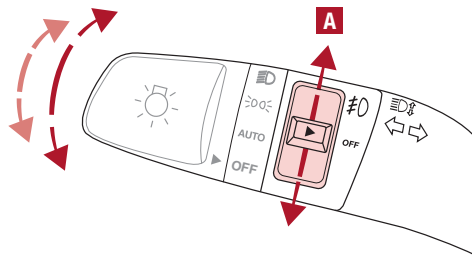

Windshield Wipers & Washers

To operate:

 - Move lever Up/Down to change Wiper modes
- Push switch **B** to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

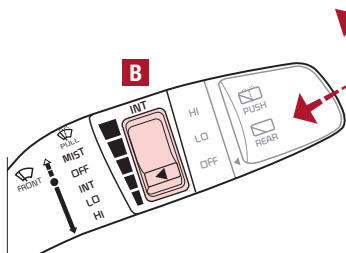

- MIST:** Single wipe
- OFF:** Wiper off
- INT/AUTO*:** Intermittent Wipe/
Rain Sensing*
- LO:** Slow wipe
- HI:** Fast wipe

 
QUICK TIPS

- Moving switch **B** up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Rear Wiper & Washer*

To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

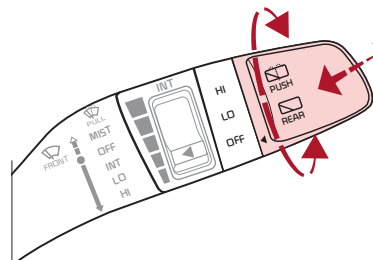


- HI:** Fast wipe
- LO:** Slow wipe
- OFF:** Wiper off

QUICK TIP

On Rear Wipers, the intermittent wipe function is not adjustable. LO and HI sets wiper speed.

 Bluetooth® Wireless Technology†5,23

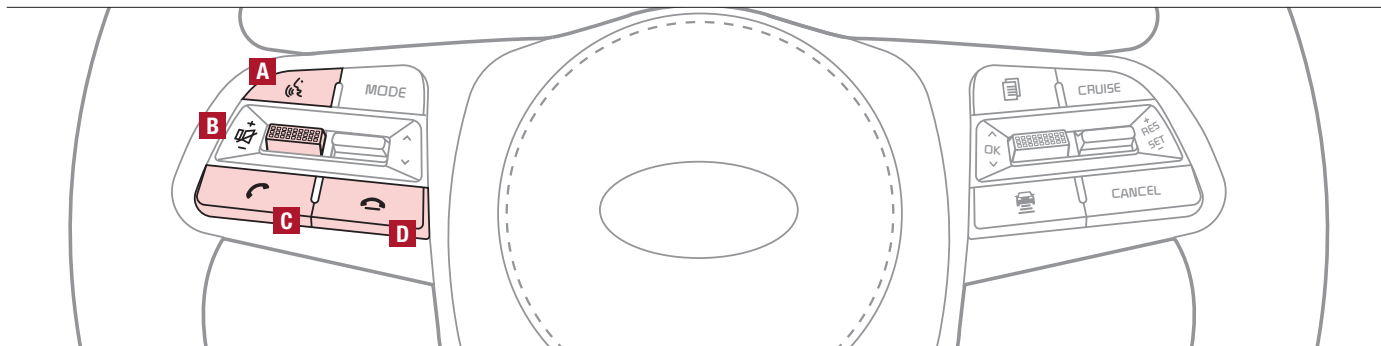

(Type B Steering Wheel shown)

- A Talk button:** Press to activate voice recognition. Press and hold to exit voice recognition
- B Volume button:** Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call
- C Receive/Place Call button:** Press to place/answer calls. If no phone is paired, press the button to pair a phone
- D End Call button:** Press to end a call, reject an incoming call or cancel a function

For more information, refer to the Car Multimedia System User's Manual or the Owner's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple Bluetooth® devices. See the Car Multimedia System User's Manual for more information on setup and limitations.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Bluetooth® Wireless Technology^{+5,23} (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Multimedia System User's Manual or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future **Bluetooth®** connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with call history)
- Option 2: Press the Talk button* **A**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

Voice Recognition* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the **Bluetooth®** Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- **Bluetooth®** Music Streaming – If the **Bluetooth®** music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C – Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands
- The system may register or pair multiple **Bluetooth®** devices. See the Car Multimedia System User's Manual for more information on setup and limitations.

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Audio Controls†23

Cruise Control†23

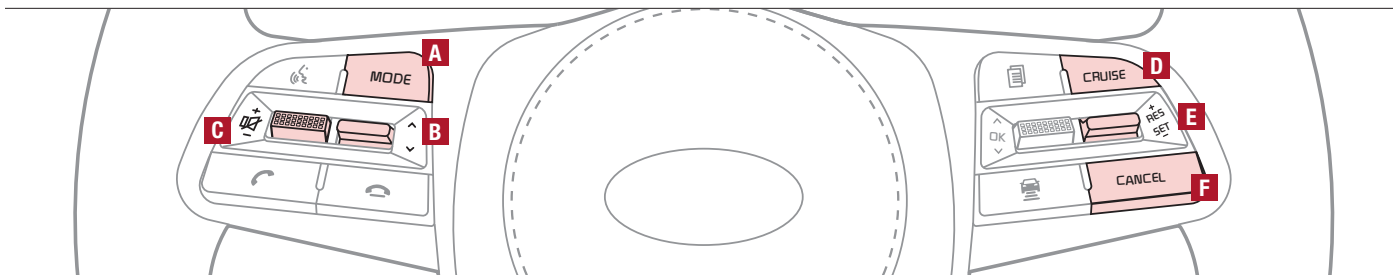

(Type B Steering Wheel shown)

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®* / Media modes

Audio System ON/OFF: Press to turn power on; Press and hold to turn power off

B Seek/Presets buttons:

FM/AM/SiriusXM® Modes: Press to advance through Preset Stations. Press and hold to auto seek

Media Modes: Press up/down to move track up/down. Press and hold to fast forward/rewind (except for *Bluetooth®* Audio)

C Volume button: Press up/down to raise/lower volume

Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

D CRUISE Control ON/OFF button: Press to turn the Cruise Control ON/OFF

E Resume Cruising Speed button: Press up to resume or increase cruising speed

Set Cruising Speed button: Press down to set or decrease Cruising Speed

F Cruise Control CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function at above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Cruise Control is a part of Smart Cruise Control with Stop & Go* system and can be set as the operating mode. To switch from SCC to Cruise Control, press and hold the CRUISE button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Smart Cruise Control (SCC) with Stop & Go*†6

The Smart Cruise Control with Stop & Go* system is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will automatically slow to maintain a set distance between traffic without depressing the accelerator or brake pedal.

With the SCC on and activated, the vehicle-to-vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

 
To set/adjust the SCC speed:

- Push the CRUISE button **A** to turn the system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed and press lever **B** down to set the speed
- Press button **B** down to set the speed. Press the RES+/SET- button **B** up/down to increase/decrease the set speed
- The SET indicator light, set speed and vehicle-to-vehicle distance will illuminate on the instrument cluster's LCD screen

To set the vehicle-to-vehicle distance: Press the SCC button **C** on the steering wheel. The image on the LCD screen **D** will change when scrolling through the settings. Each time the button is pressed, the vehicle-to-vehicle distance changes.


To cancel SCC operation: Press the CANCEL button **E**. The CRUISE indicator on the instrument cluster will turn OFF.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

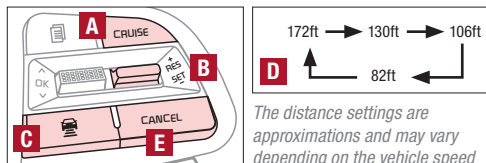

The distance settings are approximations and may vary depending on the vehicle speed at the time. See owner's manual for more information.

 (Type B Steering Wheel shown; buttons located on right side of Steering Wheel)

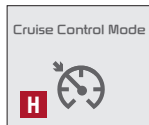

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

QUICK TIPS

To change the Cruise Control mode from SCC **G** to standard Cruise Control **H**, press and hold the CRUISE button **A**. Repeat to switch modes again (The SCC system must not be activated to change modes).

For the SCC System to operate:

- When no vehicle is in front, you must be traveling at a minimum speed of 20 mph
- When following a vehicle, there is no minimum speed requirement

REMINDERS:

- The Cruise Control button must be ON in order to turn SCC ON/OFF
- SCC is activated when the ignition is turned on. Speed will need to be reset when the ignition is cycled
- The cruise control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starting
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See owner's manual for other conditions
- Keep the system off when not in use to avoid setting a speed which the driver is not aware of. If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of

QR CODE

Smart Cruise Control with Stop & Go Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

Android Auto™+3 / Apple CarPlay®+4 Setup


Android Auto™* – Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store†11
2. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device

 
How to start Android Auto™:

1. Press the SETUP key on the audio head unit
2. Press the PHONE PROJECTION button  or DEVICE CONNECTION, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

Apple CarPlay®* – Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key
2. Press the PHONE PROJECTION button  or DEVICE CONNECTION, select Apple CarPlay® then select ENABLE APPLE CARPLAY®. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

For other audio system information, refer to pages 23-25.

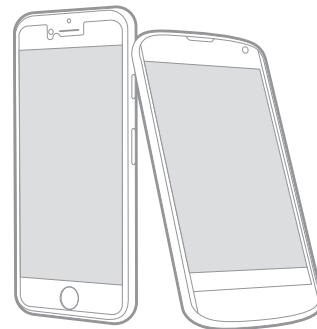


REMINDERS:

- Android Auto™ compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay® compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone® 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Standard Audio System*

 FM/AM/Media (USB, Aux, *Bluetooth*® Audio)*

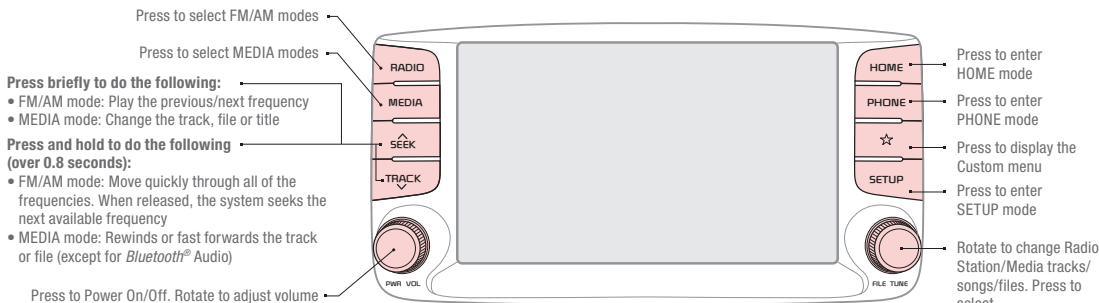

Audio System Setup Options – Press the SETUP key, then using the touchscreen, press the menu item to enter (Display, Sound, Clock/Calendar, Phone, System). Adjust the available settings for each equipped audio system setup option by pressing the onscreen buttons/arrows. Audio system setup options may include the following:

- **Display settings** – Adjusting the Brightness, Mode Popup, MP3 Information Display
- **Sound settings** – Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume, Touchscreen Beep
- **Clock/Calendar settings** – Clock Settings, Time Format, Calendar Settings, Clock Display
- **System settings** – Memory Information, Prompt Feedback, Language

Custom Key ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Key: Press the SETUP key, then press the Custom button. Select one of the available features you would like the Custom button to open.

Sound Settings – To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio head unit or the onscreen MENU button, when in MEDIA mode
2. Select the onscreen SOUND button
3. Select the menu item (Position, Tone, Speed Dependent Volume, Beep)
4. Using the touchscreen, press arrows to adjust the settings

QUICK TIPS

- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 22-25 or see your Owner's Manual.

QR CODE

Standard Audio System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

UVO link Activation*†1 (Systems equipped with UVO link only)

1. Follow these steps to activate UVO on your vehicle head unit:
 - a. Press the SETUP key
 - b. Press the UVO icon
 - c. Press UVO or SERVICE Activation
2. Read and agree to the Terms of Service and Privacy Policy, and agree by pressing SUBMIT
3. Enter Smartphone Number or Email address to receive a verification code, then press SUBMIT

4a. Follow these steps if using your phone number to receive your verification code:

- a. Check your phone for an SMS (text message)
- b. Open the link in your SMS. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using your phone number as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press “I have entered my PIN.”

A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

4b. Follow these steps if using your email to receive your verification code.

- a. Check your email. The email will be from reset@notifications.myuvo.com
- b. Open the link inside the email

A page will open requesting that you create your account.

Note: If you already have a Kia Owners Portal account using your email address as your login ID, you will need to provide your password prior to receiving the verification code.

- c. Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press “I have entered my PIN.”

A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

UVO Assistance

 
Virtual Assistant ⓘ **A** – Press to connect to the UVO Center to hear information about the UVO features

UVO Voice Local Search UVO

B – Press to connect to the search function to find points of interest or other locations, like “cafe”

Roadside Assist ⚠️ **C** – Press to connect to the UVO Center where you can request vehicle towing services


REMINDER: These buttons may be located in the rearview mirror or the overhead console.

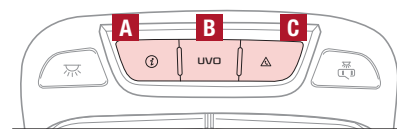

(Buttons on overhead console*)

For further UVO link operations, refer to the Car Multimedia System User's Manual.
For other audio system information, refer to pages 22-25.

 UVO link^{†1} with Navigation^{*†14} FM/AM/SiriusXM[®] ^{†21}/Media (USB, Aux, *Bluetooth*[®] Audio)

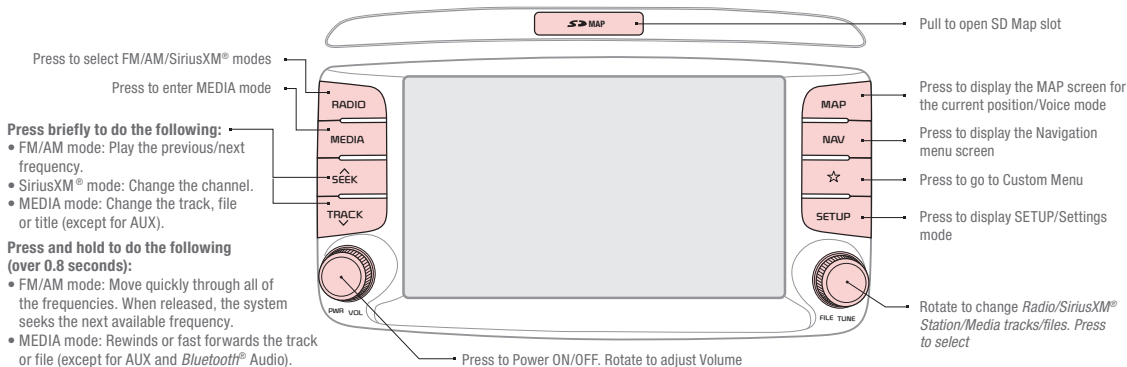

Sound Settings: To adjust the sound settings (Fader/Balance, Tone, Touch-Screen Beep ON/OFF and Speed-Dependent Volume Control ON/OFF) from any audio mode:

1. Press the SETUP button on the Audio Head Unit
2. Select the onscreen SOUND button
3. Select the menu item to change settings
4. Use the onscreen buttons to adjust settings

Radio Presets: You can listen to FM, AM and SiriusXM[®] radio and save frequently used stations

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM[®] Smart Favorites: For the first ten favorite SiriusXM[®] channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM[®], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast

Custom Key ☆: A programmable button to provide quick access to one of several available system features

To Program the Custom Key: Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open

QR CODE

UVO link with Navigation Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's audio system may differ from that in the illustration. For further UVO link with Navigation operations, refer to the Car Multimedia System User's Manual. For other audio system information, see page 22-25.

QUICK TIPS

- The volume level for each source (FM, AM, SiriusXM[®], USB, etc.) will revert to the previously set volume for that source
- When connected to Android Auto[™] or Apple CarPlay[®] on your smartphone, the smartphone's navigation system may also be available
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO link Command Feedback by pressing the TALK button on the steering wheel

Surround View Monitoring (SVM) System*

The Surround View Monitoring (SVM) System is a parking support system that shows the areas around the front, rear, left, and right sides of the vehicle via four cameras displayed in the navigation* screen.

Front SVM operation:

 
- The camera view will display on the navigation screen in both Drive and Neutral
- In Drive, the camera view will continue to display until the vehicle speed is above approximately 9 mph
- The camera view will reappear on the navigation screen whenever the vehicle drops below approximately 9 mph

The Front SVM camera is ON when:


1. The Engine Start/Stop button is On
2. The gear shift is in Drive or Neutral
3. The SVM button **A** is pressed ON (LED illuminated)

Rear SVM operation:

- The camera view will automatically display on the navigation screen when the vehicle is shifted into Reverse
- The camera view will turn off when the vehicle is shifted out of Reverse

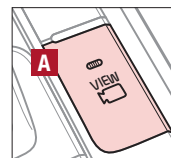

(Located next to gear shift)

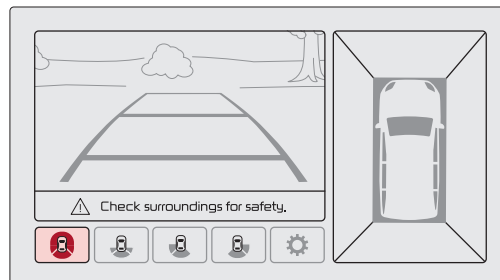 

QUICK TIP

The Front SVM camera will turn off when the gear shift is moved into Park or Reverse or the SVM button is pressed.

QR CODE

Surround View Monitoring (SVM) System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Camera View Modes – To change camera view modes, press the icons shown below on the navigation screen to select the mode.

Front SVM - when in Drive & Neutral:

- Displays the front side and SVM images simultaneously on the screen
- Displays the front side image on the screen
- Displays the front side and left side images simultaneously on the screen
- Displays the front side and right side images simultaneously on the screen

Rear SVM - when in Reverse:

- Displays the rear view and SVM images simultaneously on the screen
- Displays the rear side image on the screen
- Displays the rear and left side images simultaneously on the screen
- Displays the rear and right side images simultaneously on the screen

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.

The Surround View Monitoring (SVM) is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

Automatic Gear Shift with Sportmatic®+22 Shifting

P: Park

D: Drive

R: Reverse

[+]: Manual Mode Upshift

N: Neutral

 
 
[-]: Manual Mode Downshift

Manual Mode: To enter the Manual mode, move shift lever from D to left gate **A**.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift **A**.

QUICK TIPS

- Press the brake pedal and depress release button to move the gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

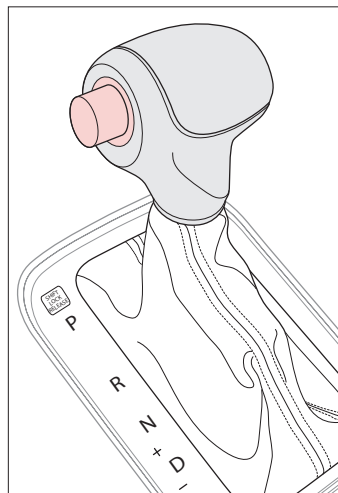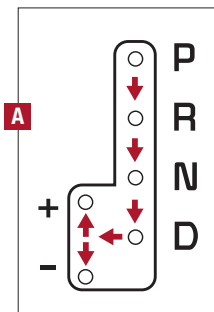

QR CODE

Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.youtube.com/KiaFeatureVideos

AWD (All-Wheel Drive) Lock*

When you select AWD Lock mode by pressing the AWD LOCK button **A**, the AWD LOCK mode increases the drive power when driving on wet pavement, snow covered roads and/or off-road.


- This mode is used for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to improve traction
- This mode automatically shifts back to AWD AUTO mode at speed above 19 mph. If the vehicle decelerates to speeds below approximate 25 mph, however, the transfer mode is shifted into AWD LOCK mode again

When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure

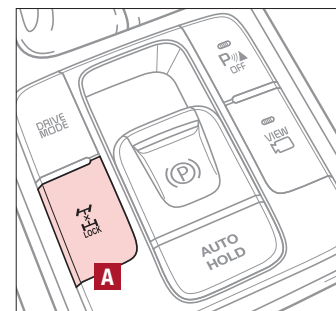


(Located below gear shift)

 Automatic Climate Control*

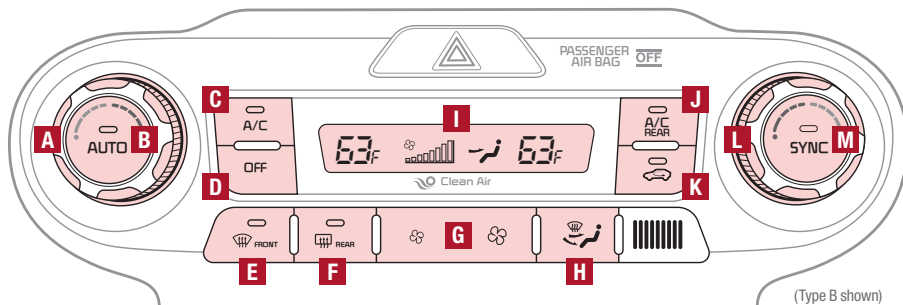

3rd Row Climate Control*

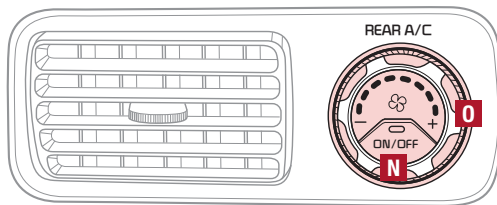 

- A** Driver's temperature control knob
- B** AUTO (automatic control) button
- C** Air Conditioning ON button
- D** Air Conditioning OFF button
- E** FRONT windshield defroster button
- F** REAR window defroster button
- G** Fan speed control button
- H** MODE Selection button
- I** CLIMATE information screen
- J** A/C Rear Control ON/OFF button
- K** Air intake control button
- L** Passenger's temperature control knob
- M** SYNC temperature control selection button*
- N** 3rd Row air conditioning ON/OFF button
- O** 3rd Row fan speed control knob


Climate Control Auto Function

1. Press AUTO **B** to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature **A**
3. Press SYNC* **M** to select Sync Temperature Control Operation*, which synchronizes the passenger's temperature to the driver's setting

Defrost Outside Windshield:

1. Set Front Fan Speed **G** to the highest position
2. Set Temperature **A** to Hot
3. Press the Front Defrost button  **E**

Defog Inside Windshield:

1. Set Fan Speed to highest position **G**
2. Set Temperature to highest position **A**
3. Press the Front Defrost button  **E**


Automatic Climate Control* (continued)

Air Flow Modes

To select Air Flow Modes, press the mode button **H** to cycle through to the desired mode:



QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:



- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through the vents if the Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Auto Defogging System (ADS)

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

QR CODE

Auto Defogging System (ADS) Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

Manual Climate Control*

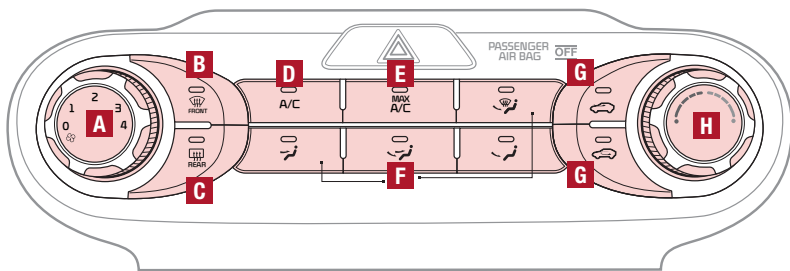

- A** Front fan speed control knob
- B** FRONT window defroster button
- C** REAR window defroster button
- D** Air conditioning button
- E** MAX A/C button
- F** Mode selection buttons
- G** Air intake control button
- H** Temperature control knob

Defrost Outside Windshield:

1. Set Front Fan Speed **A** to the highest position
2. Set Temperature **H** to Hot
3. Press the Front Defrost button  **B**

Defog Inside Windshield:

 
1. Set Front Fan Speed **A** to the desired position
2. Set desired Temperature **H**
3. Press the Front Defrost button  **B**

QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.


Rear Climate Control*

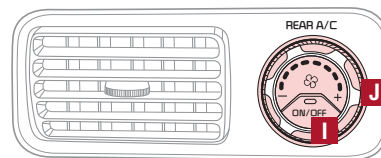

- I** 3rd Row air conditioning ON/OFF button
- J** 3rd Row fan speed control knob

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

 
Digital Clock

Press the SETUP key, then the Date/Time button to display the Clock setting screen. Then use the onscreen buttons to adjust time.

QUICK TIPS

- Press the Return button on the audio head unit to ensure changes are saved
- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (UVO link with Navigation*)

Aux/Multimedia USB Ports, Power Outlets, & USB Charger Ports*

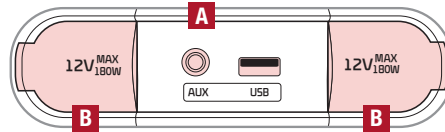

(Located on Center Console)

 
Aux/Multimedia USB Port*

- A** Use the Aux port to connect audio devices and the Multimedia USB port to connect USB audio devices and smartphones

Power Outlets

- B** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

USB Charger Ports*



(Located on Back of Center Console)

- C** USB charger ports* and power ports are located in the Center Panel, inside and on the back of the Center Console

QUICK TIP

The power outlets are inactive when the Engine Start/Stop button is OFF.

REMINDERS:

- Using the Power Outlet (accessory plug) and USB charger for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) for prolonged period time could cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to device
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer

For more information on the Aux/Multimedia USB Ports and Power Outlets, refer to the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
Wireless Smartphone Charging System*

Charge a compatible smartphone wirelessly by placing it on the tray **B** at the front of the console, near the Multimedia USB/Aux ports and the charging indicator, while the ignition is on.

1. Enable Wireless Charging in the User Settings
2. Slide open cover **A**. Place the smartphone on the center of the charging pad **B**
3. Indicator light **C** may change to amber once wireless charging begins
4. Once charging is complete, the amber light may change to green

QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- Wireless charging must be enabled in user settings
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area
- For wireless charging to occur, all doors (excluding the rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle

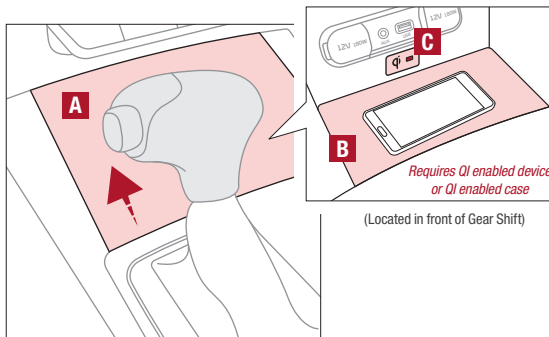

REMINDERS:

- If the driver door is opened, charging will be disabled
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through a cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Device position on the wireless charging system can affect charging performance. Other factor that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness

QR CODE

Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




www.youtube.com/KaFeatureVideos

Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated  on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed, and the driver's seat belt must be fastened.

The AUTO HOLD indicator on the Instrument Cluster has four states:

White: Standby - When vehicle is in Park and at a standstill, and AUTO HOLD button **B** is pressed ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn Off when the AUTO HOLD button **B** is manually pressed Off or when the EPB is manually turned On.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

 
QR CODE

Electric Parking Brake Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

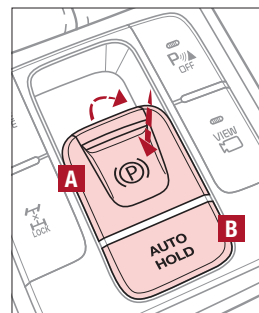

Refer to page 4 for location of Instrument Cluster indicators.

Heated Steering Wheel*

 Seat Warmers^{†20} / Ventilated Seats*

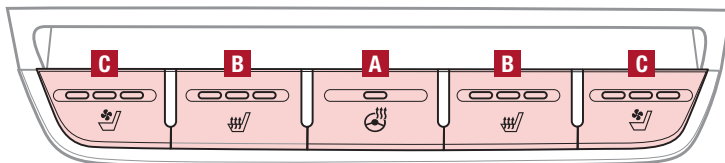

(Buttons located below Gear Shift)

Press Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off while the Engine Start/Stop button is in the ON position. The Steering Wheel Heater will turn off automatically in 30 minutes, or when button **A** is pressed again to deactivate.

QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will return to its previous state
- The system returns to on when ignition is cycled. To turn off system, press the Heated Steering Wheel button **A**

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

B Seat Warmers

- Press the button once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

C Ventilated Seats

- Press the button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

QR CODE

Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
Front Seat Headrest Adjustment†¹⁰

Type A*

- To raise the headrest, pull headrest up to the desired position
- To lower the headrest, press the button, then press the headrest down

Type B/C*

- To raise the headrest, pull the headrest up to the desired position
- To lower the headrest, press and hold the release button **A** and lower the headrest to the desired position

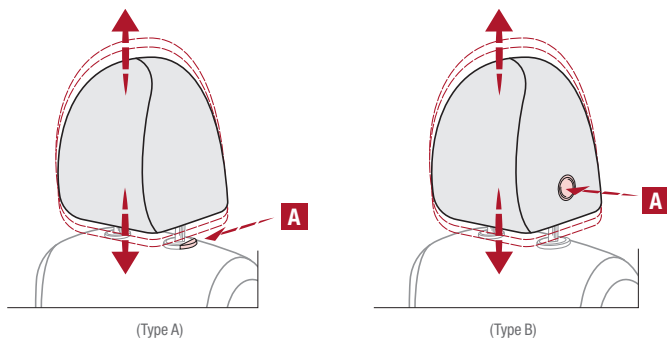

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDERS:

 
- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Driver Position Memory System*†¹⁸

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

1. Adjust the Driver's Seat and the Outside Mirrors
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons **C** within 5 seconds. The system will beep twice when memory has been stored


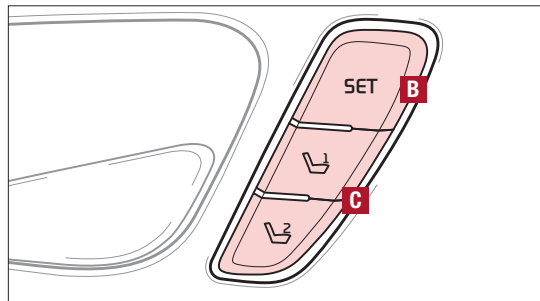


(Buttons located on Driver's Door Panel)

REMINER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Power Adjustable Driver's Seat*+18 / Power Lumbar*+18

  Move/Press the controls to adjust the Seat forward/backward, the Seat Cushion height, the Seatback recline or the Lumbar forward/backward.

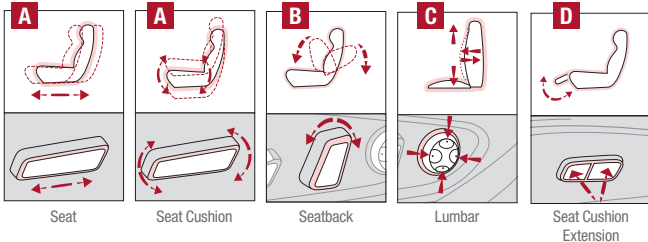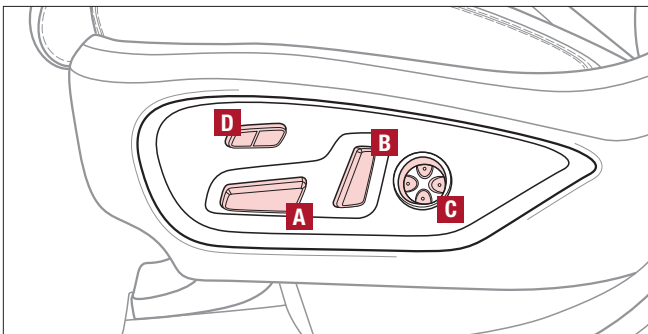

REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For more information on Power Adjustable Driver's Seat operation, refer to the Owner's Manual.

Manual Adjustable Driver's Seat*+18

 
Pull lever **E** to slide the Seat forward/backward.

Pull lever **F** up several times to raise the Seat Height

Push lever **F** down several times to lower the Seat Height

Pull lever **G** to adjust the Seatback recline.

Press **H** to adjust the Lumbar support.

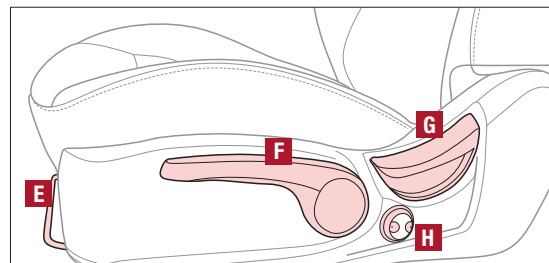

QUICK TIP

When adjusting the seat forward or backwards, ensure the seat clicks or locks into place before driving the vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For more information on Manual Adjustable Driver's Seat operation, refer to the Owner's Manual.

 
2nd-Row Folding Seat⁺¹⁸

Folding 2nd-Row Seat

1. Lower the 2nd-Row Seat Headrest to the lowest position
2. Pull up on the Seatback folding lever **A** or strap* and fold the Seatback down

Unfolding 2nd-Row Seat

1. Lift the folding Seatback lever **A** and move the Seatback backward **B**
2. Then lift the lever again **A** or return Seatback to an upright usable position **B**

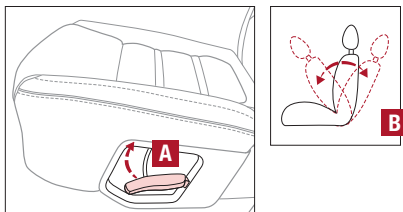

QUICK TIPS

 
- When you return the Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- Lower Rear Headrests to the lowest position

REMINDER: The lever must return to its original position for the Seatback to lock.

2nd-Row Auto-Folding Seat^{*+18}

Pull lever **D** to release and automatically fold 2nd-Row Seatback down.

For more information on 2nd-Row Auto Folding Seat operation, refer to the Owner's Manual.

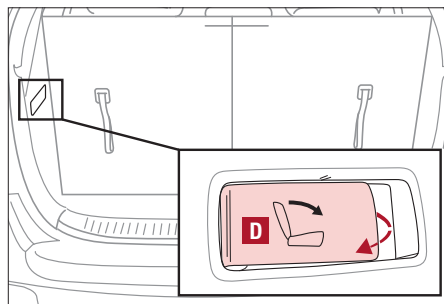

(Located on rear quarter-trim panels)

QR CODE

2nd & 3rd Row Folding Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

3rd-Row Folding Seat*†18

 
Folding 3rd-Row Seat

1. Fully lower the headrest **A**
2. Pull the Seat folding strap **B** located on the Seatback
3. Fold the Seat down


Walk-In Seat Lever*

To enter the 3rd-Row Seat* area, do the following steps:

1. Place the Seatbelt into the guide clip and tighten the Seatbelt by pulling up
2. Pull lever **C** located on the 2nd-Row Seatback
3. Fold the Seatback forward and slide to the farthest forward position
4. Return Seatback to its original position and ensure it locks (clicks) into place

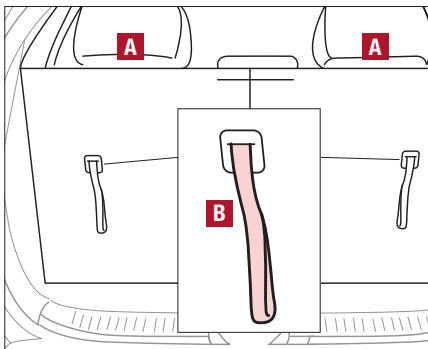

 For more information on 3rd-Row Seat operation, refer to the Owner's Manual.

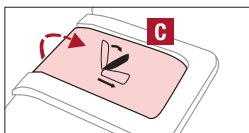


(Lever located on 2nd-Row Seatback)

For more information on 2nd-Row Walk-In Seat operation, refer to the Owner's Manual.

One-Touch Walk-In Seat Access

To get in and out of the 3rd Row Seat, adjust the 2nd Row Seat by pressing the top or bottom One-Touch Walk-In Seat Access buttons **D** (located on left side of the front passenger's seatback):

 1. Set the front seatback to the most upright position, and slide the seat forward, if needed
2. Lower the 2nd Row Seat Headrest to the lowest position
3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
4. Press the One-Touch Walk-In Seat Access buttons to slide the Seat forward

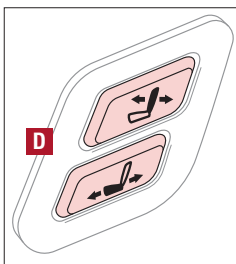

QUICK TIP

The strap can be used in the back of the 2nd Row Seat to slide and fold the 2nd Row Seats.

REMINER: Do not use the One-Touch Walk-In Seat Access buttons while the front passenger seat is occupied.

QR CODE

2nd & 3rd Row Folding Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

 
Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Sunvisor^{t24}

Use the Sunvisor to shield from direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

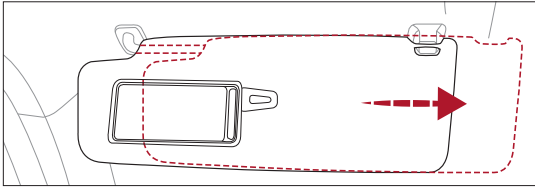

REMINDERS:

 
- Sunvisor may not shield from all direct light
- The Sunvisor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sunvisor is impairing your visibility
- Be aware of the seating position when adjusting or swinging Sunvisor around to and from the front or side windows

Sunglasses Holder

To open the sunglasses holder **F**, lightly press the cover and the holder will slowly open **G**.


Place your sunglasses with the lenses facing out.

To close the sunglasses holder, push it up.

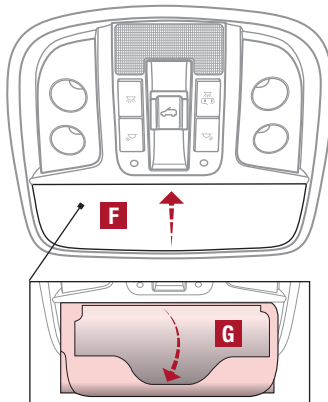

Remote Keyless Entry (Folding Key)*

 - A** Press the release button to unfold the key
- B** Press to lock All Doors
- C** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch
- D Manual Liftgate*:** Press and hold for more than 1 second to unlock the Liftgate. Then lift by the handle to manually open the Liftgate
- Power Liftgate*:** Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close.
- E** Press and hold for more than a half second for the Panic Alarm. To turn OFF the Alarm, press any button

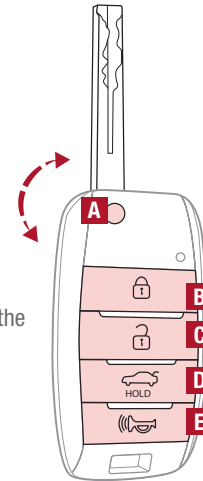


QR CODE

Kia Key Fob Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Remote button configuration may vary depending on vehicle options.

Double-Turn Lock/Unlock All

- Turn clockwise once to unlock the Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

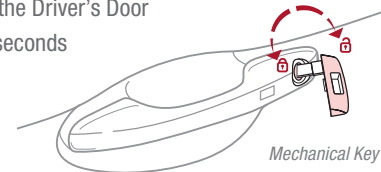

Mechanical Key shown.

Smart Key*†9

- A** Press to lock All Doors
- B** Press to unlock the Driver's Door. Press twice within 4 seconds to unlock All Doors and the Liftgate
- C Manual Liftgate***: Press and hold for more than 1 second to unlock the Liftgate. Then lift by the handle to manually open the Liftgate

REMINDERS:

- The Liftgate does not automatically open when the **C** button is pressed
- The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle

Power Liftgate*: Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close

- D** Press and hold for more than a half second for the Panic Alarm. To turn OFF the Alarm, press any button
- E** Press to release Mechanical Key
- F** Mechanical Key

 
Driver's Door Lock/Unlock button **G**:

- Press button once to unlock the Driver's Door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

Mechanical Key **H**:

- Press the button on the back of the key fob to release the Mechanical Key
- Use to lock/unlock the Driver's Door
- Use to lock the glove box
- Use to turn the Child-Protector Rear Door Lock

REMINDER: When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound.

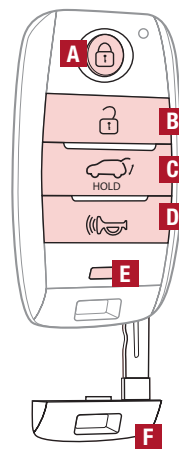

Remote button configuration may vary depending on vehicle options.



QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.

Engine Start/Stop Button & Smart Key Video



Kia Key Fob Video



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start the engine

Power Liftgate*†16

Opening from Inside the Vehicle:

Press and hold the Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

REMINDER: Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Opening from Outside the Vehicle:

To open the Power Liftgate automatically, press the Rear Hatch Release button **C** on the exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **D**.

 
Power Liftgate Opening Height Adjustment

The height setting of a fully opened liftgate (tailgate) can be adjusted by the following steps:


1. Position the liftgate manually to the preferred height
2. Press the Power Liftgate Close button **D** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.


For more information on the Power Liftgate operation, please refer to the Owner's Manual.

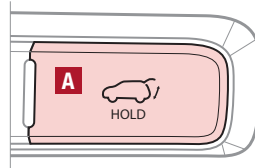


(Button located on Driver's Panel)

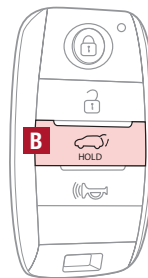 

 Remote button configuration may vary depending on vehicle options.

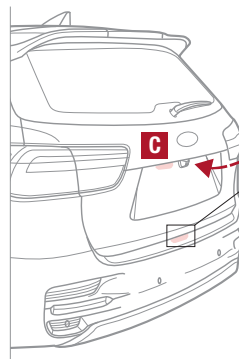

 (Located on Liftgate inside lip near latch)

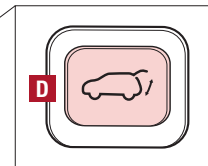

QR CODE

Power Liftgate Opening Height Adjustment Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Smart Power Liftgate*†16

The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate. The Smart Power Liftgate will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to User Settings in the LCD Instrument Cluster modes.

 
QUICK TIPS

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob
- The open height can be adjusted. For information on how to set the open height, see your owner's manual

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function
- When the ignition is on, the Smart Power Liftgate will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Power Liftgate to operate
- Ensure obstacles and people are out of the way of the Liftgate

For more information on the Smart Power Liftgate operation, please refer to the Owner's Manual.

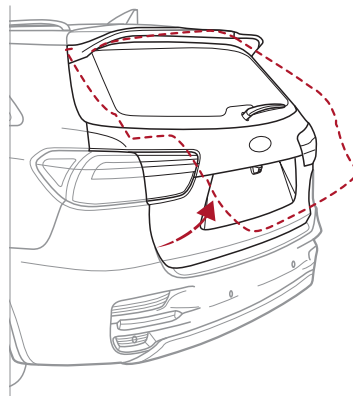

QR CODE

Smart Power Liftgate Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Driver Attention Warning (DAW)*†7

The DAW system monitors the driving style of the driver and in certain situations, can give a warning signal for the driver to take a break from driving.


The DAW System is set to ON by default. To turn the DAW System OFF, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driving Assist and select Driver Attention Warning. Set the DAW System to Normal or Early.

Driver Attention Warning (DAW) System modes:

 
 
OFF: The Driver Attention Warning system is deactivated **A**

Normal: The Driver Attention Warning system alerts the driver of inattentive driving practices

Early: The Driver Attention Warning system alerts the driver of inattentive driving practices faster than Normal mode

If the DAW system is activated, the DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver take a break when the driver’s attention level is below 1 **C**.

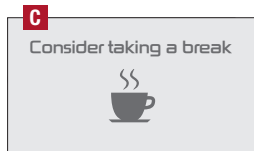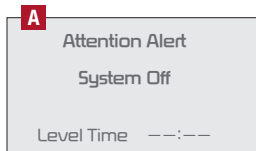


Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

REMINDERS:

- The setup of the DAW system will be maintained, as selected, when the ignition is cycled
- When activated, the DAW system does not display the “Consider taking a break” message when the total trip driving time is less than 10 minutes
- The DAW system will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 37 mph

HomeLink®⁺¹² with Auto-Dimming Rearview Mirror*

 - A** HomeLink® button
- B** HomeLink® button
- C** Indicator light
- D** HomeLink® button
- E** Glare detection sensor
- F** Automatic dimming ON
- G** Automatic dimming OFF

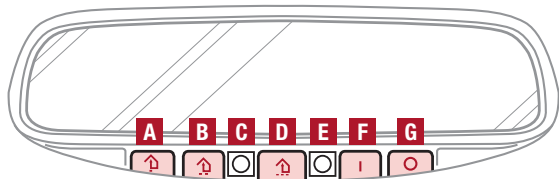

The HomeLink® / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press **I** – button **F**
- To turn automatic dimming OFF, press **⊖** – button **G**

REMINDER: The mirror indicator light **C** will illuminate when automatic dimming is ON.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A B D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

QR CODE

Homelink® Setup Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

Press the button **A** to turn the Map Lamp ON/OFF. Press button **B** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

The Map Lamp turns ON when any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately.

Map/Room Lamp button **C** – When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.

Room Lamp – Press the lens **D** to turn the Room Lamp ON/OFF.

 
QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 5 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

Panoramic Sunroof with Power Sunshade*

The Sunroof and Sunshade operation is controlled through multidirectional lever **E**. The ignition needs to be ON to operate the sunroof/sunshade.

REMINDER: The sunroof can be operated for approximately 30 seconds after the ignition is turned off. If the front doors are opened, the sunroof cannot be operated even within the 30-second period.

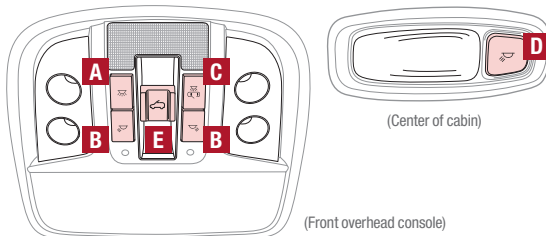

To slide the Sunshade and Sunroof:

- Auto Open: Slide the lever **E** backward to the farthest position and release
- Auto Close (Sunroof only): Slide the lever **E** forward to the farthest position (second detent) and release

Tilting the Sunroof open/closed:

- Open/Raise: Push lever **E** upward
- Close/Lower: Push lever **E** forward
- Auto Close Sunroof and Sunshade: Slide the Sunroof lever **E** forward to the farthest position

QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.

REMINDEERS:

- The Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving
- Always drive carefully and use caution when backing up
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

QR CODE

Sunroof Operation Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Parking Distance Warning-Forward* and Reverse*†6

Parking Distance Warning-Forward* and Reverse is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the front, rear and side of the vehicle when backing up.

 
The Parking Distance Warning-Forward* and Reverse is activated when the the ignition is on and the button **A** is not depressed (LED not lit).

To deactivate Parking Distance Warning-Forward* and Reverse, press the button **A** (LED lit).

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

Parking Distance Warning-Forward and Reverse is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Parking Distance Warning-Forward* and Reverse may not detect every object around the vehicle.*

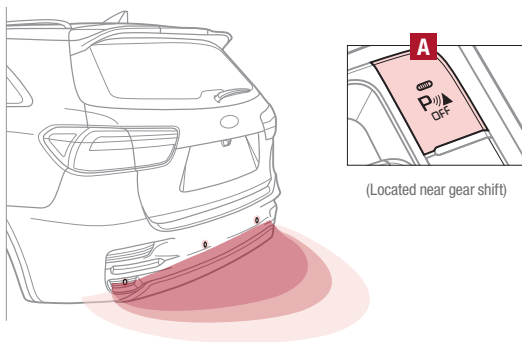


(Located near gear shift)

Rear View Monitor†6

The Rear View Monitor system is a supplemental system that displays the view behind the vehicle through the audio head unit screen.

The Rear View Monitor activates when the:

 - Ignition or the Engine Start/Stop button* (Green Light) is in the ON position
- Gear Shift Lever is in the R (Reverse) position

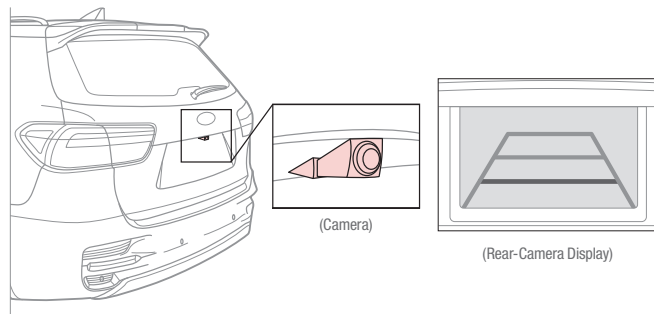

(Camera)

(Rear-Camera Display)

REMINDERS:

- The Rear View Monitor is ON by default when the ignition is cycled
- The screen image above is for illustration purposes only. The actual image or graphics may differ in your vehicle

 
The Rear View Monitor is not a substitute for proper and safe backing-up procedures. The Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Hood Release Lever and Latch


Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
3. It will open by itself after it has been raised about half way

REMINDER: Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

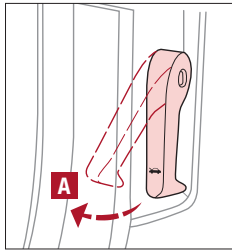

 (Lever located near floor below Driver's Panel)

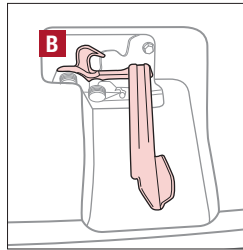


(Latch located inside hood)

Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for ONE CLICK to prevent the Malfunction Indicator  from illuminating.

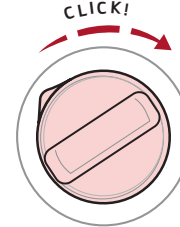

REMINERS:

- The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel
- It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back

QR CODE

One-Click Fuel Cap Video


To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

Child-Protector Rear Door Locks

Located on the rear edge of the rear passenger doors, turn the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Locks are located on the rear passenger's door jamb.

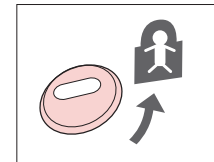

(Lock located on rear passenger inside door jamb)

Occupant Detection System (ODS)⁺¹⁵ / Passenger Airbag⁺² Off Indicator



ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

 
REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information about the seat belts, airbags and the Occupant Detection System / Passenger Airbag Off Indicator in the vehicle, please refer to the Owner's Manual.

Seat Belts⁺¹⁹

To properly fasten your seat belts:


1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

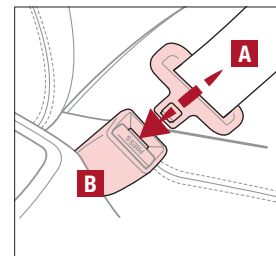

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

 During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seatbelt retractors will automatically lock the belts to reduce the risk of injury.

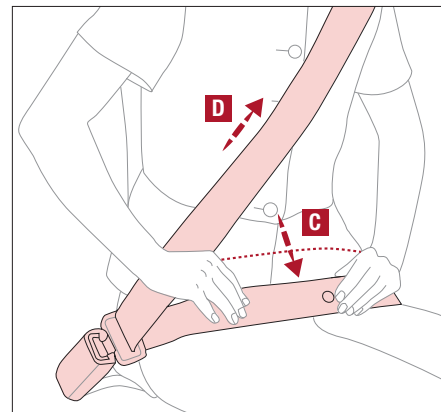

QUICK TIP

The seat belt warning chime operates for the driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. UVO link:** Purchase/lease of certain 2019 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 4. Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Blind-Spot Collision Avoidance-Rear (BCA-R) / Blind-Spot Collision Warning, Rear Cross-Traffic Collision Warning (RCCW), Lane Keeping Assist (LKA)/Lane Departure Warning (LDW), Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped) / Forward Collision Warning (FCW), Rear View Monitor, Parking Distance Warning-Reverse/Forward, Smart Cruise Control (SCC) with Stop & Go:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play™ Store** is a trademark of Google, Inc. ©2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. HomeLink®:** Homelink® is a registered trademark of Gentex Corporation.
- 13. iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 14. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 15. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 16. Power Liftgate / Smart Power Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 17. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 18. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 19. Seat belts:** For maximum protection, always wear your seatbelt.
- 20. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 21. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2019 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 22. Sportmatic®** is a registered trademark of Kia Motors America.
- 23. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 24. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 25. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 26. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



KEY FEATURE WALKTHROUGH

Android Auto™ / Apple CarPlay® Setup* – page 22

UVO link Activation/UVO Assistance* – page 24

 
For further UVO operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 22-25

Standard Audio System* – page 23
For further operational information, refer to the Car Multimedia System User's Manual.




UVO link with Navigation* – page 25


For further operational information, refer to the Car Multimedia System User's Manual.

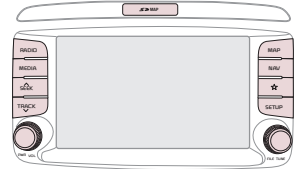

 Smart Cruise Control with Stop & Go* – page 21
Demonstrate operation

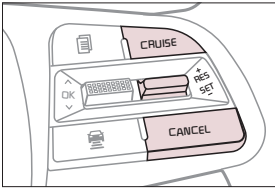

 Bluetooth® Wireless Technology – pages 18-19
Demonstrate operation

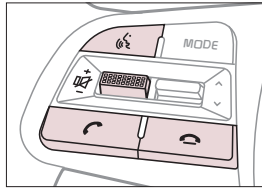

Aux/Multimedia USB Ports, Power Outlets* – page 31

Blind-Spot Collision Avoidance-Rear (BCA-R) / Blind-Spot Collision Warning* – page 10

Clock Setup – page 31

Engine Start/Stop Button – page 14

HomeLink® with Auto-Dimming Rearview Mirror – page 44

Lane Keeping Assist (LKA)* – page 11

Passenger Airbag Off Indicator – page 48

Panoramic Sunroof Operation* – page 45

Rear View Monitor* – page 46

Seat Warmers / Ventilated Seats* – page 34

Smart Key – page 40

Sunvisor – page 39

Tire Pressure Monitoring System (TPMS) – page 5

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

*if equipped

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



SORENTO CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any audio system user's manual.)

KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control - pages 28-30
Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

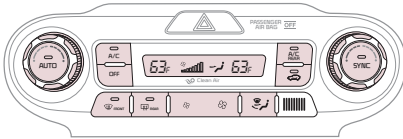


Automatic*

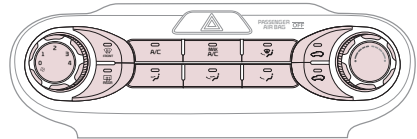 

Manual*

 - Front Seat Headrest Adjustment – page 35

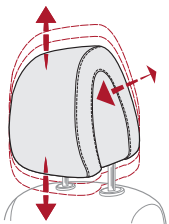


(Type A)

- Windshield/Rear Wipers & Washers – page 17


- Move lever Up/Down to change Wiper modes
- Push switch to adjust Intermittent Wipe
- Pull lever to spray and wipe

 - Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

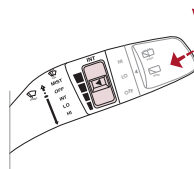

(front operation)

 - MIST: Single wipe
- OFF: Wiper off
- INT/AUTO: Intermittent wipe/
Rain Sensing*
- LO: Slow wipe
- HI: Fast wipe

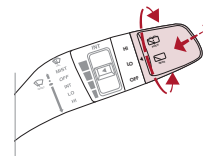

(rear operation)

- HI: Fast wipe
- LO: Slow wipe
- OFF: Wiper off

(up to 60,000 miles)*

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)							
	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Rotate tires	P	P	P	P	P	P	P	P
Add fuel additive ¹	P	P	P	P	P	P	P	P
Engine Oil & Filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Air cleaner filter	I	I	I	R	I	I	I	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Drive shafts and boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Propeller shaft (AWD)	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Brake fluid	I	I	I	I	I	I	I	I
Fuel tank air filter ^{†2}		I		I		I		I
Parking brake (foot type)		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Cooling System				I		I		I
Fuel lines, fuel hoses and connections				I				I
Rear axle oil (AWD)				I				I
Transfer case oil (AWD) ³				I				I
Valve clearance ⁴								I
Drive belts (First 60,000 miles, then every 15,000 miles) ⁵								I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into your Kia Access with UVO App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO only – See page 24 for setup information)

* See the Owner's Manual for complete maintenance schedule

† And, if necessary, adjust, correct, clean or replace

‡ If equipped

1. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

2. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality

being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

3. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water

4. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary

5. The drive belt should be replaced when cracks occur or tension is reduced excessively

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.