



soul

Features & Functions Guide



GETTING TO KNOW YOUR **SOUL**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule^{†15}

Always check the Owner's Manual for complete operating information and safety warnings.

ESSENTIAL FEATURES

Air Conditioning / Climate Control*	29
Audio Systems – UVO link Activation*	22
Android Auto™ / Apple CarPlay® Setup	23
Audio Systems – Standard Audio System*	24
Audio Systems – UVO link with Navigation*	25
USB Port & Power Outlets	26
Bluetooth® Wireless Technology	20
Cruise Control*	18
Digital Clock	26
ECO Mode (Active ECO)*	09
Folding Rear Seatback	35
Manual Gear Shift*	32
Passenger Airbag Off Indicator	43
Smart Cruise Control (SCC)*	19
Tire Pressure Monitoring System (TPMS)	05
Windshield/Rear Wipers & Washers	17

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



VIDEOS & QR CODES	02
--	----

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
LCD Instrument Cluster Modes	06
Trip Modes / Trip Computer	06
User Settings Mode	07
Service Interval Mode*	08
Drive Mode Integrated Control System*	09
ECO Mode (Active ECO)*	09

DRIVER'S PANEL

Head-Up Display (HUD)*	10
Lane Keeping Assist (LKA) / Lane Departure Warning (LDW)*	11
Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped)* / Forward Collision Warning (FCW)*	12
Blind-Spot Collision Warning (BCW)*	13
Rear Cross-Traffic Collision Warning (RCCW) / Rear Cross-Traffic Collision Avoidance Assist (RCCA)*	13
Electronic Stability Control (ESC)	14
Hill-Start Assist Control (HAC)*	14
Instrument Panel Dimmer	14
Power Windows, Window Lock & Central Door Lock	15
Idle, Stop & Go (ISG) System*	15
Automatic Door Lock/Unlock	15
Heated Outside Mirrors*	15
Power Outside Mirrors*	15

STEERING WHEEL CONTROLS

Headlights & High Beams	16
Turn Signals & Fog Lights*	16
Windshield Wipers & Washers	17
Rear Wiper & Washer*	17
Audio Controls	18
Cruise Control*	18
Smart Cruise Control (SCC)*	19
Bluetooth® Wireless Technology	20
Tilt/Telescoping Steering Wheel	21
Heated Steering Wheel*	22

AUDIO SYSTEMS

UVO link Activation*	22
Android Auto™ / Apple CarPlay® Setup	23
Standard Audio System*	24
UVO link with Navigation*	25

CENTER PANEL

Multimedia USB Port, Power Outlets & USB Charger Ports	26
Digital Clock	26
Wireless Smartphone Charging System*	27
Engine Start/Stop Button*	28
Automatic Climate Control*	29
Manual Climate Control*	30
Automatic Gear Shift with Sportmatic® Shifting*	31
Dual Clutch Transmission (DCT)*	31
Manual Gear Shift*	32

SEATING

Power Adjustable Driver's Seat*	33
Seat Warmers*	33
6-Way Manual Adjustable Driver's Seat*	34
Front Seat Headrest Adjustment	34
Folding Rear Seatback	35

OTHER KEY FEATURES

Smart Key*	36
Remote Keyless Entry* (Folding Key)	37
Double-Turn Lock/Unlock All	37
Fuel Cap Open Warning Indicator*	37
Fuel Door Release Lever	37
Map/Room Lamps	38
Sunvisor	38
Sunroof Operation with Power Sunshade*	39
Rear View Monitor*	40
Driver Attention Warning (DAW)*	41
Hood Release Lever and Latch	42
Liftgate Release Button	42
Child-Protector Rear Door Locks	43

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	43
Seat Belts	43
Seat Belt Retractor Locks	43

MAINTENANCE SCHEDULES

Turbo*	44
Non-Turbo*	Back Cover

LEGAL DISCLAIMERS Inside Back Cover

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.youtube.com/KiaFeatureVideos. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, two-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.youtube.com/KiaFeatureVideos

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

 
QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well-lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet

Instrument Cluster Overview

(Type A)

- A** Tachometer
- B** Speedometer
- C** Turn Signal Indicators
- D** Gear Shift Position
- E** Odometer
- F** Trip Modes / Trip Computer*
- G** Engine Temperature
- H** Fuel Gauge
- I** Exterior Temperature

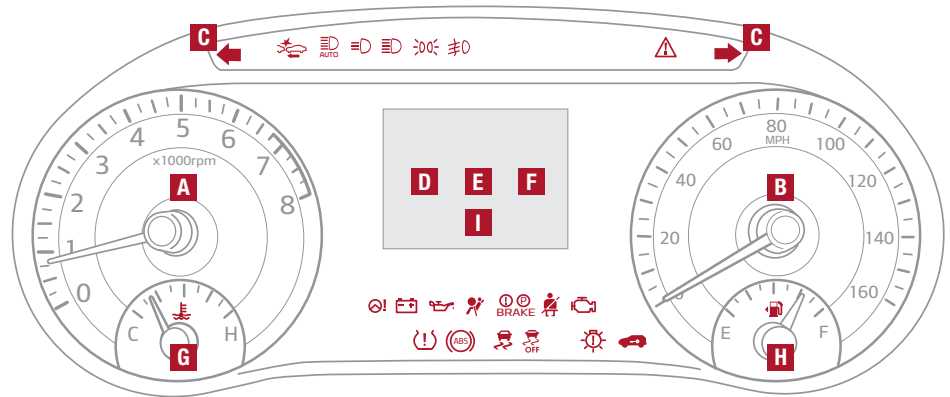


(Type A cluster)

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

 Indicators & Warning Lights

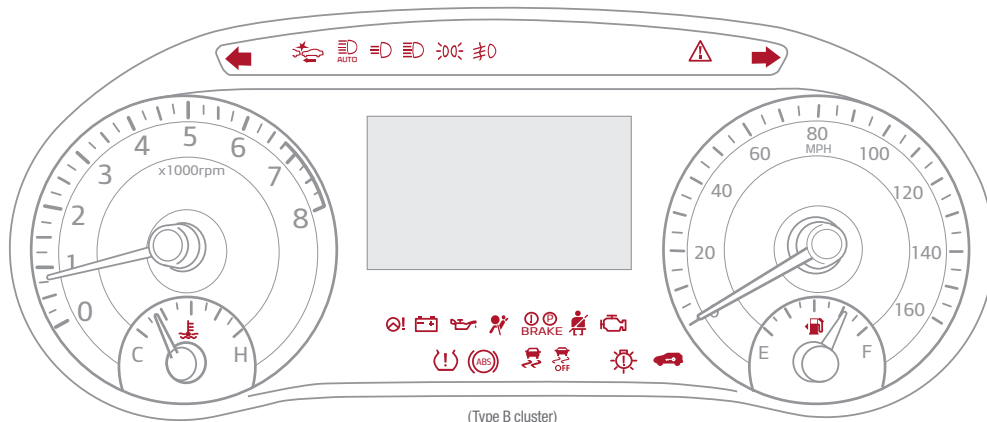






This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.


Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

- | | | | | | |
|--|--|--|--|--|--|
| | Forward Collision-Avoidance Assist (FCA)* / Warning Indicator* | | Door Ajar Warning Light | | CRUISE Cruise Indicator Light |
| | Seat Belt Warning Light | | Immobilizer Indicator Light* | | Light ON Indicator Light |
| | Parking Brake & Brake Fluid Warning Light | | Fuel Cap / Malfunction Indicator (Check Engine Light) | | Front Fog Light Indicator* |
| | Anti-lock Braking System (ABS) Warning Light | | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator | | CRUISE Cruise Indicator Light* |
| | Drive Mode Indicators* | | Electronic Stability Control (ESC) Indicator | | Low Fuel Level Warning Light |
| | ECO Mode / Drive Mode Indicator | | Electronic Stability Control (ESC) OFF Indicator | | Airbag Warning Light |
| | Engine Oil Pressure Warning Light | | Master Warning Light | | Electronic Brakeforce Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time) |
| | Electronic Power Steering (EPS) Warning Light* | | High Beam Indicator | | Lane Keeping Assistant (LKA) Indicator Light* |
| | Liftgate Open Warning Light | | LED Headlamp Warning Light* | | Low Windshield Washer Fluid |
| | Charging System Warning Light | | High Beam Assist Indicator* | | Idle, Stop & Go (ISG) Indicator* |

Tire Pressure Monitoring System (TPMS)^{†25}

 The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator. The TPMS indicator illuminates if it detects one or more tires is significantly under inflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

 - The LCD screen in the instrument cluster will display the Low Tire Pressure indicator  showing which tire(s) is underinflated
- Inflate tire(s) to specifications using an accurate tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate – See dealer for service

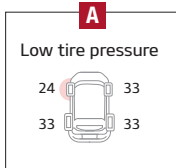

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting for at least 20 minutes tires and are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can snap the QR Code to view a video or refer to the Owner's Manual.

Images are for illustrative purposes only. Actual image or feature may vary.

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

Tire Pressure Monitoring System



www.youtube.com/KiaFeatureVideos

Fuel Economy Video



www.youtube.com/KiaFeatureVideos

LCD Instrument Cluster Modes*

Press the Mode/Select button **A** to cycle through different LCD Instrument Cluster Modes:



Trip Computer Mode: Displays driving information for fuel economy, accumulated info, etc.



Turn-by-Turn Mode*: Displays the route guidance and destination info



Assist: Displays the Lane Safety*, Driver Attention Warning*, Smart Cruise Control* and TPMS info



User Settings Mode: Change settings of the Head-Up Display*, doors, lights, sound, driving assist*, convenience, service and other features




Master Warning Mode: Informs of warning messages related to the vehicle, TPMS, Blind-Spot Collision Warning (BCW), when one or more systems is not operating normally

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Trip Modes / Trip Computer

 
The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch is ON.

To cycle through the LCD Display modes, press the Mode/Select button **A**.


When in the Trip Computer mode , press the Move/Reset button **B** to cycle through the screens. When displaying the Tripmeter, press and hold the Move/Reset button **B** to reset the Tripmeter to zero.

REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

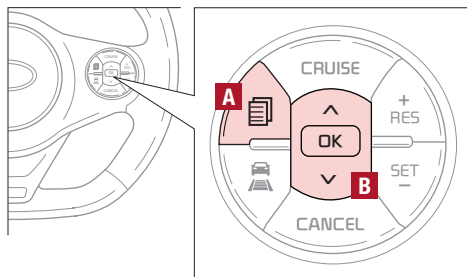

 
(For Type B cluster; Buttons located on steering wheel)

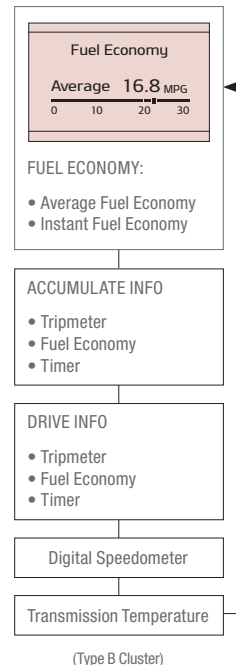

Your vehicle's steering wheel buttons may differ from those in the illustrations.

User Settings Mode

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode/Select button **A** when the vehicle is at a standstill and with the Engine Start/Stop* button in the ON position and select User Settings .

You can navigate the selections on the display by pressing the Move/Reset button **B**, and then selecting the item by pressing the Mode/Select button **A**.

Head-Up Display*:

- Display Height
- Rotation
- Brightness
- Contents Selection
- Speedometer Size
- Speedometer Color

Driver Assistance*:

- Smart Cruise Control Response
- Driver Attention Warning
- Warning Timing
- Warning Volume
- Forward Safety
- Lane Safety
- Blind-Spot Safety

Door/Liftgate:

- Automatically Lock
- Automatically Unlock

Lights:

- One-Touch Turn Signal
- Headlamp Delay

Sound:

- Welcome Sound

Convenience:

- Welcome Mirror
- Wipers/Lights Display
- Auto Rear Wiper
- Gear Position Pop-Up
- Icy-Road Warning

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Other Features*:

 
- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit
- Torque Unit
- Turbo Boost Pressure Unit

Language:

- Choose Language


Reset:

- Reset menus to factory settings (except language & service interval)

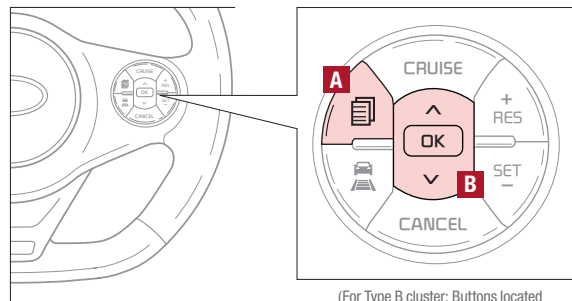

(For Type B cluster; Buttons located on steering wheel)

Service Interval Mode*

To enter Service Interval Mode, press the Mode/Select button **A** and select User Settings , then scroll to Service Interval by pressing Move/Reset button **B**. Press the Mode/Select button **A** to enter. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following will be displayed: **Service Required**.

 
 
 
To reset the Service Interval Mode system, press and hold the Move/Reset button **B** for more than 1 second.

To turn **Service In** OFF, go to User Settings.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the Move/Reset button **B** and scroll to Service Interval. Press the Mode/Select button **A** to enter
- Press the Move/Reset button **B** and toggle to ON, then press the Move/Select button **A**. Then press the Move/Reset button **B** to scroll and select the desired miles or months for your next service
- Press the Mode/Select button **A** to enter



(Instrument cluster LCD screen shown)

QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

LCD Display Video



LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

 
 
Drive Mode Integrated Control System*

The Drive Mode may be selected based on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The instrument cluster will display SPORT or ECO when selected. When in NORMAL mode, it will not display in the instrument cluster.

REMINDERS:

- The system is turned ON and in NORMAL mode when ignition is in the ON position
- When ECO mode is selected, the indicator will display and system remains on, even when ignition is cycled. Otherwise the system will default to NORMAL
- Steering effort may be slightly increased in Sport mode

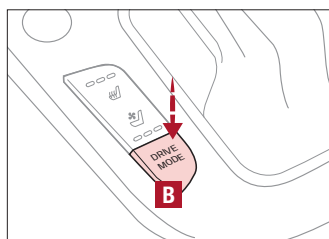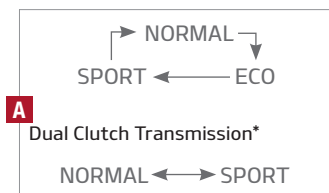

(Button located in center console below gear shift)

ECO Mode (Active ECO)*

Active ECO is designed to help improve fuel economy by controlling several vehicle components. When activated, it can help optimize drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B**. The green ECO indicator light **C** in the instrument cluster will illuminate, indicating that Active ECO is operating.

The Active ECO System will remain on even when the ignition is cycled.

To turn Active ECO OFF, press the button **B** again.

QUICK TIPS

To help improve your fuel efficiency:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned



(Type B cluster)

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

QR CODE

Drive Mode Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Head-Up Display (HUD)*+11

The Head-Up Display (HUD) is a transparent display that projects a snippet of information from the instrument cluster and navigation system* onto the windshield glass. To turn HUD ON or OFF, and press the HUD button **A**.

The HUD displays:

- Turn By Turn (TBT) navigation information
- Road signs
- Speedometer
- Cruise setting speed
- Smart Cruise Control (SCC) information*
- Lane Keeping Assist information
- Blind-Spot Collision Warning (BCW) information*
- Warning lights (low fuel)
- AV mode information

 
Head-Up Display (HUD) User Settings

Drivers can adjust the HUD settings from the LCD Instrument Cluster modes in User Settings. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Selection: Activate or deactivate HUD content (Audio/video, Driving Assist, Lane Safety and Blind-Spot Safety info)
- Speedometer Size: Choose the size of the HUD speedometer (Small, Medium, Large)
- Speedometer Color: Choose the color of the HUD speedometer (White, Orange, Green)


REMINDERS:

- The HUD image on the windshield glass may not be visible when:
 - The driver has poor sitting posture
 - The driver is wearing polarized sunglasses
 - There is an object covering the HUD
 - Driving on a wet road
 - Excessive lighting inside or outside the vehicle
 - Modifications to the windshield, such as tinting or other aftermarket treatments, that have been made, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
- If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD

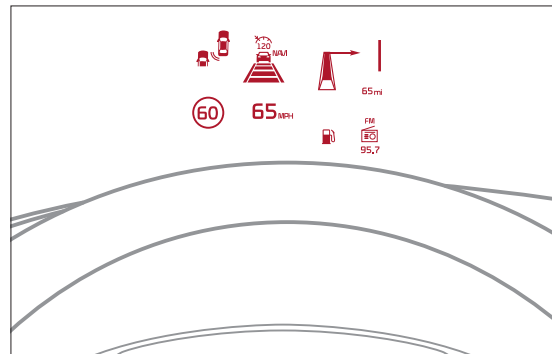


For illustrative purposes only. Your actual display may vary.

 The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.

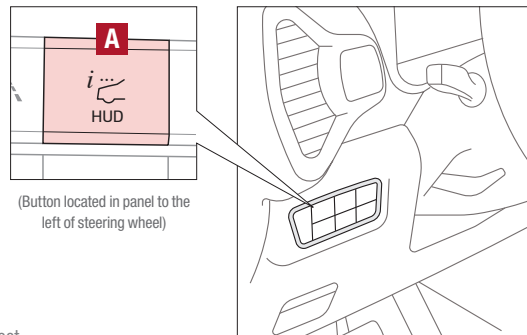

(Button located in panel to the left of steering wheel)

Lane Keeping Assist (LKA)^{†6} / Lane Departure Warning (LDW)^{*†6}

 
With the Engine Start/Stop button in the ON position, press the LKA button **A** to turn the system ON. The instrument cluster indicator  will illuminate white. It will remain white when vehicle is traveling less than 40 mph and the system does not detect the lane markers. When the LKA system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display an LDW (Lane Departure Warning) alert on the instrument cluster. If the vehicle continues to move outside of the lane, the LKA will apply a slight adjustment to the steering, trying to prevent the vehicle from moving outside its lane.

Standard LKA is the operating mode by default when the LKA button is depressed to ON. To switch between modes (Standard LKA, Active LKA and Lane Departure), go to User Settings in the Instrument Cluster.

All systems will operate under the following conditions:

- The vehicle exceeds approximately 40 mph
- The vehicle is between the lane markers
- The LKA system recognizes the lane the vehicle is traveling in
- LKA/LDW will return to its previous state when the ignition is cycled

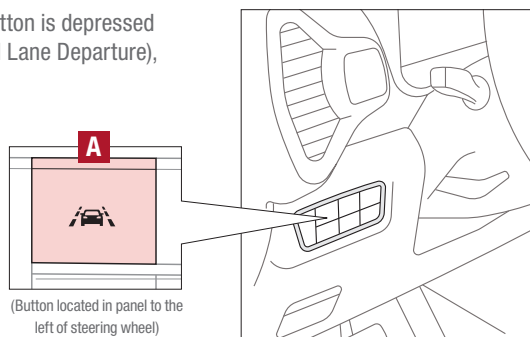

REMINDERS:

- The LKA/LDW will not issue a warning if the turn signal or hazard signal is activated
- LKA/LDW will return to its previous state when the ignition is cycled



When the LKA sensor detects the lanes traveling in, the indicators are illuminated



When the LKA sensor does not detect the lanes traveling in, the indicator will not illuminate




When the LKA sensor detects the vehicle moving outside of the lane the vehicle's traveling in, a yellow indicator will illuminate, either on the left or right lane

QR CODE

Lane Keeping Assist Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

The Lane Keeping Assist (LKA) is not a substitute for safe and proper driving. Always drive safely and use caution. LKA may not always alert the driver if the vehicle is driven outside of its lane. Refer to the Owner's Manual for more information.*

Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped)^{†6} / Forward Collision Warning (FCW)^{*†6}

The FCA-Ped is designed to help alert the driver and, under certain conditions, apply emergency braking, when rapidly approaching a vehicle that is slowing down, braking or stopped. Initially, the FCA-Ped provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle in front, emitting an audible warning and visual alert on the instrument cluster **A**. Adjust the alert settings (Early, Normal, Late) in the User Settings. To turn the FCA-Ped/FCW off, go to User Settings again and turn off.

If the system detects that the collision risk has increased, the Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped) automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision. FCA-Ped can be turned ON in the User Settings menu on the Instrument Cluster display.

The FCA-Ped/FCW will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling more than 5 mph
- Electronic Stability Control (ESC) is ON

REMINDERS:

- FCA-Ped/FCW will be activated by default when vehicle power is cycled on, even when previous setting is off
- FCA-Ped/FCW will not operate when the vehicle is traveling more than approximately 50 mph
- If FCA-Ped is operating and the ESC (Electronic Stability Control) is turned off, FCA-Ped system is automatically turned off
- When FCA-Ped system is off, FCA-Ped warning indicator is on in the instrument cluster



Forward Collision-Avoidance Assist-Pedestrian (FCA-Ped) / Forward Collision Warning (FCW) are not substitutes for safe and proper driving. Always drive safely and use caution. FCA-Ped and FCW may not always alert the driver when the vehicle is approaching another vehicle.*

QR CODE

Forward Collision-Avoidance Assist Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
Blind-Spot Collision Warning (BCW)*†6

The BCW System uses radar sensors to help alert the driver if it detects an approaching vehicle in the driver's blind spot area before changing lanes in certain situations. The BCW System is ON when the button **A** is pressed – the button light will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than 20 mph and will alert the driver if another vehicle is detected by the radar sensor.

1st-stage alert: When another vehicle is detected within the BCW System boundary **B**, or when a vehicle is detected within the LCA boundary, a yellow indicator will illuminate on the outside rearview mirrors

2nd-stage alert: When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert

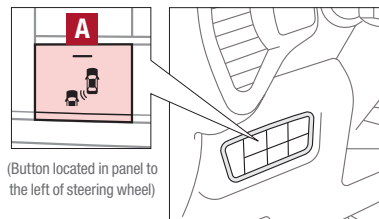

(Button located in panel to the left of steering wheel)

REMINDERS:

- When BCW is ON and the vehicle power is cycled to OFF then ON again, BCW system returns to ON
- The BCW system is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions

 
Rear Cross-Traffic Collision Warning (RCCW) / Rear Cross-Traffic Collision Avoidance Assist (RCCA)*

If the RCCW system sensors detect approaching vehicles from the rear left or rear right side of the vehicle **C**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the audio control unit screen. The RCCA system may activate the Electronic Stability Control (ESC) to help avoid an imminent collision. RCCW/RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

REMINDERS:

- The RCCW/RCCA feature can be turned OFF/ON in User Settings
- The RCCW/RCCA system will show a warning if the approaching vehicle speed is between 2.5-22 mph within sensing range. See owner's manual for other conditions
- The RCCW/RCCA systems are supplemental systems. Do not solely rely on these systems and always pay attention to the road and its conditions

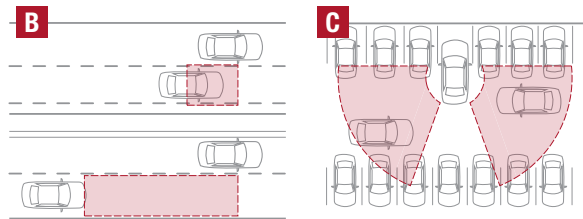

Images are for illustrative purposes only and may not reflect actual operation.

QR CODE

Blind-Spot Collision Warning w/ LCA Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

For more information on the BCW System, refer to your Owner's Manual.

 
Electronic Stability Control (ESC)^{†7}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC button **A** to turn ESC OFF/ON.

REMEMINDERS:

- ESC is turned ON by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active

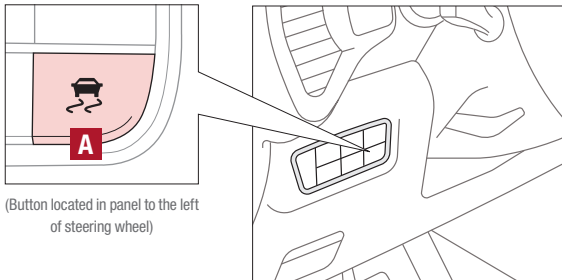

(Button located in panel to the left of steering wheel)

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)^{*†7}

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON, but does NOT activate when the ESC has malfunctioned.

REMEMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

QUICK TIPS

 
- HAC provides a two-second delay before the vehicle may start rolling backwards
- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator

HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.

Instrument Panel Dimmer


With parking lights / headlights ON, press switch **B** + or – to adjust display brightness of the instrument panel illumination.

REMEMINDER: Door Mood Lamp is a fixed brightness and cannot be adjusted (not to be confused with Advanced Mood Lighting Speaker).

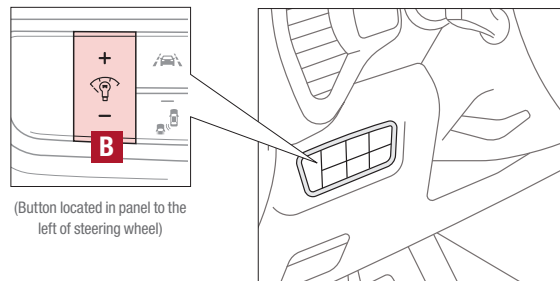

(Button located in panel to the left of steering wheel)

 Power Windows, Window Lock & Central Door Lock

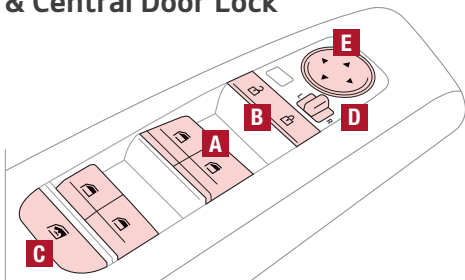

A Pull/Press to operate Driver's and Front Passenger's window Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows

REMINDER: When button **C** is pressed, window controls for the Rear Passenger Windows are disabled.

Button configuration may vary depending on vehicle model.

Heated Outside Mirrors*

Use mirrors heaters to defrost/defog mirrors. Mirror heaters are controlled with the Rear Defroster.

Power Outside Mirrors*

Toggle switch **D** left or right to select mirror. Then press arrows **E** to adjust mirror position.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

 
Idle, Stop & Go (ISG) System*

The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill the engine will stop, and the green AUTO STOP indicator **(A)** on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Sport Shift mode*. When engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG System, press the ISG OFF button **F**. If you press again, the system will be activated.

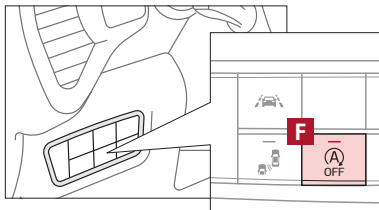

(Button located in panel to the left of steering wheel)

REMINDEERS:

- ISG is active by default at vehicle start-up. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically
- If the AUTO STOP indicator **(A)** is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

QR CODE

Idle, Stop & Go Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

For more information on Idle, Stop and Go System, refer to your Owner's Manual or contact your local dealership.

QUICK TIPS

 
- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

Headlights & High Beams

To operate:

- Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

AUTO Light* position – When the light switch is in the AUTO light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

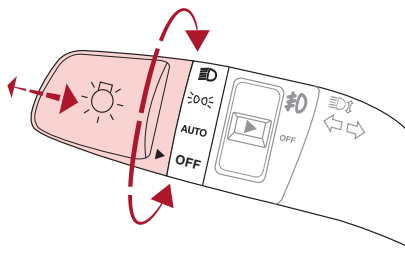

- AUTO* Automatic Headlights position
- ☰☽ Headlight position
- ☽☽☽ Parking Light position
- OFF OFF position

Turn Signals & Fog Lights*

 
To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate lever ring to turn Fog Lights ON/OFF

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode* in the LCD Instrument Cluster modes (Type B cluster).

REMINDER: Headlights must be ON for Fog Light operation.

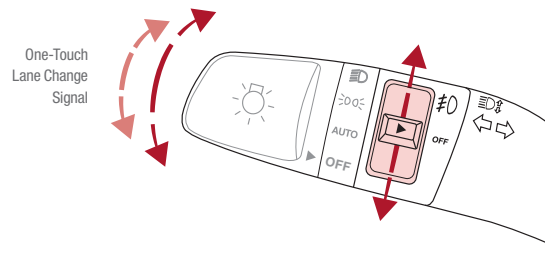

For more information on the User Settings Mode, please refer to your Owner's Manual.

Windshield Wipers & Washers

 
To operate:

- Move lever Up/Down to change Wiper modes
- Press button **A** to adjust intermittent wipe
- Pull lever to spray and wipe

Auto Control (Rain Sensing)*

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To adjust the Auto Rain Sensing speed setting, move the speed control switch **A** up/down.

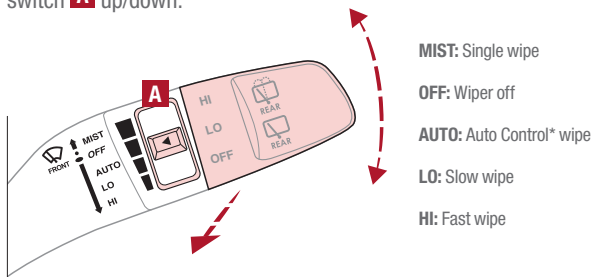


QUICK TIPS

- With the ENGINE START/STOP button in the ON position and the wiper switch in AUTO mode, the wiper will operate once to perform a self-check of the system
- Moving lever to HI increases intermittent wipe frequency and wipe speed
- Moving lever to LO decreases frequency of wipes
- When in AUTO mode, pressing button **A** up increases intermittent wipe frequency and wipe speed. Pressing button down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

Rear Wiper & Washer*

To operate:

 - Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

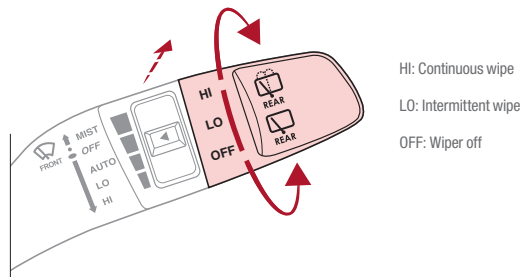


QUICK TIP

On Rear Wipers, intermittent wipe function is not adjustable.

Audio Controls†22

 Cruise Control*†22

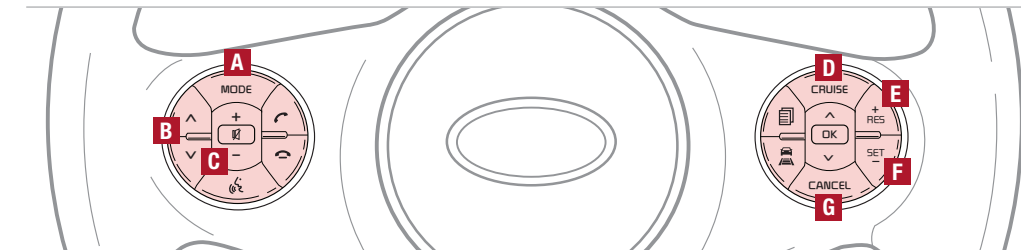

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®*/Media modes
Audio System ON/OFF: Press to turn power on; Press and hold to turn power off; Press and hold to go to Advanced Setting / Steering Wheel mode (UVO link with Navigation)

B Seek/Presets buttons
FM/AM/SiriusXM® Modes: Press \wedge \vee to advance through Preset Stations. Press and hold to Auto Seek
Media Mode: Press to move track up/down. Press & hold to fast forward/rewind (except for *Bluetooth®* Audio)

C Volume buttons: Press $\text{VOL} \uparrow$ / $\text{VOL} \downarrow$ to raise/lower volume
Mute audio: To mute the audio system, hold the MUTE button **C**

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

D CRUISE Control On/Off button: Press to turn the Cruise Control on/off
E Resume Cruising Speed button: Press to resume preset speed or increase Cruising Speed
F SET Cruising Speed button: Press to set or decrease Cruising Speed
G Cruise Control CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

QUICK TIPS

- Cruise Control is designed to function above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

REMINDER: Standard Cruise Control is a part of Smart Cruise Control (SCC)* and can be set as the operating mode. To switch from SCC to Standard Cruise Control, press and hold the CRUISE button (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details. For other audio system operations, refer to pages 22-25.

Smart Cruise Control (SCC)*^{+6,22}

The Smart Cruise Control (SCC)* system is designed to maintain a predetermined distance from vehicles it detects in front, and then adjusts the driving speed as needed.

 
To set/adjust the SCC speed:

- Push the CRUISE button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Press button **B** down to set the speed. Press the RES+/SET- button **B** up/down to increase/decrease the set speed

To set the vehicle-to-vehicle distance: Press the SCC button **C** on the steering wheel. The images on the LCD screen **D** in the Instrument Cluster will change when scrolling through the settings. Each time the button is pressed, the vehicle-to-vehicle distance changes **E**.

To cancel SCC operation: Press the CANCEL button **F** or press the brake pedal.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

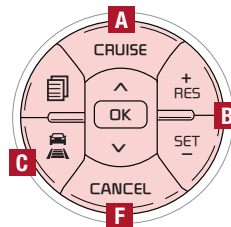

(Buttons located on right side on Steering Wheel)



The distance settings are approximations and may vary depending vehicle speed at the time. See owner's manual for more information

QR CODE

Smart Cruise Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
QUICK TIPS

To change the Cruise Control mode from SCC to standard Cruise Control, press and hold button **A**. Repeat to switch modes again (The SCC system must not be activated to change modes).

For the SCC System to operate:

- When no vehicle is in front, you must be traveling at a minimum speed of 19 mph
- When following a vehicle, there is no minimum speed requirement

When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected in front.

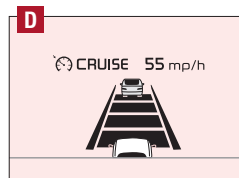


REMINDERS:

- Cruise Control button must be ON in order to turn SCC ON/OFF
- The SCC system is activated when ignition is turned on. Speed will need to be reset when ignition is cycled ON
- In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not apply brakes to slow down automatically in order to turn SCC ON/OFF
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive) and various other conditions. See Owner's Manual for other conditions
- If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

 Bluetooth® Wireless Technology†5,22

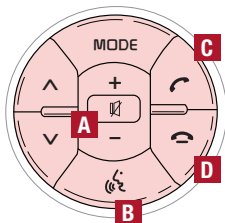

(Buttons located on left side on Steering Wheel)

- A Volume buttons:** Press \uparrow VOL / VOL \downarrow to raise/lower speaker volume
- Mute audio:** To mute the audio system, hold the button
- B Voice/Talk* button:** Press to activate voice recognition
- C Receive/Place Call*:** Press to receive/place calls. If no phone is paired, press button to pair a phone
- D End Call button:** Press to end a call, reject an incoming call or cancel a function

Your vehicle's steering wheel buttons may differ from those in the illustration.

For more information, refer to the Car Multimedia System User's Manual.

For Bluetooth® Wireless Technology FAQs, go to kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

REMINDER: Microphone is located in the overhead console

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide, your vehicle's Quick Start Guide or the Car Multimedia System User's Manual.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** (displays the call history screen)
- Option 2*: Press the Talk button **B**. Then say the command "Call {name}" or Dial {number} followed by contact name or number

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Bluetooth® Wireless Technology (continued)

Voice Recognition* and Phone Contact Tips

To help optimize the Bluetooth® Wireless Technology Voice Recognition system, below are some tips and reminders. Improve the performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)

The system may have difficulty understanding some accents or uncommon names. To help optimize when using the voice recognition, below are tips:

 
QUICK TIPS

- *Bluetooth®* Music Streaming: If the *Bluetooth®* music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C to reduce interference with the Voice Recognition
- Press the talk button and say “Help” to get a list of available commands

Tilt/Telescoping Steering Wheel†24

To adjust the Steering Wheel, push down the lock-release lever **A** and adjust to the desired angle **B** and distance **C**.

When finished, pull up the lock-release lever **A** to lock Steering Wheel in place.

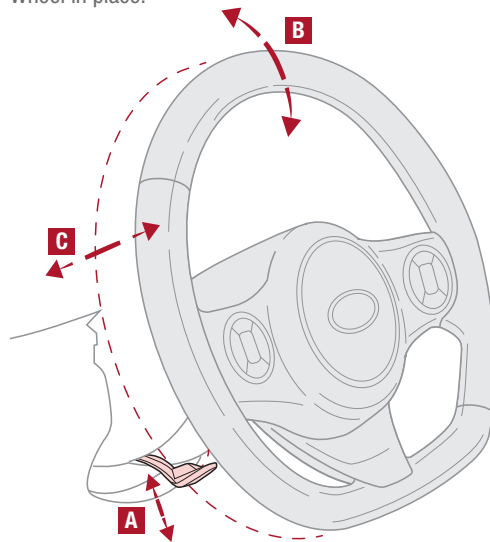

QUICK TIPS

 
It may be helpful to pull/push bottom of the steering wheel towards/away from you to adjust desired distance prior to adjusting the angle.

REMINDER: Do not adjust the steering wheel while driving. This may cause you to lose control of the vehicle

For illustrative purposes only; your steering wheel may differ.

Heated Steering Wheel*

Press button **D** to turn ON/OFF steering wheel heater while the Engine Start/Stop Button is in the ON position. The steering wheel heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

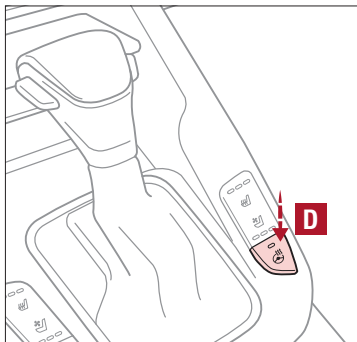

(Button located to the right of gearshift)

QUICK TIP

If ignition is turned OFF, then ON again, within 30 minutes of the steering wheel heater being turned on, the system will automatically be set ON again.

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

UVO link Activation*†1

 
- Follow these steps to activate UVO on your vehicle's head unit:
 - Press SETUP key
 - Press UVO icon
 - Press UVO or Service Activation
- Agree to Terms of Service and Privacy Policy and press SUBMIT
- Enter smartphone number or email address to receive a verification code, then press SUBMIT

4a. Follow these steps if using your phone number to receive your verification code:

- Check your phone for a SMS (text message)
- Open the link in your SMS. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the phone number as your login ID, you will need to provide your password prior to receiving the verification code

- Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- Enter the code in the head unit and press ACTIVATE
- Go back to the page with your verification code and press "I have entered my PIN." A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

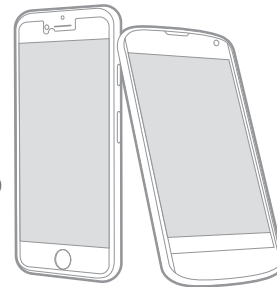

Continued on next page

For further UVO link operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 23-25.

UVO link Activation^{*+1} (continued)

4b. Follow these steps if using your email to receive your verification code:

- Check your email. The email will be from reset@notifications.myuvo.com
- Open link inside email. A page will open requesting that you create your account.

Note: If you already have a Kia Owners Portal account using the email as your login ID, you will need to provide your password prior to receiving the verification code.

- Enter your first name, last name, email, phone number, and account password, and click CREATE ACCOUNT. A page will open displaying your verification code.
- Enter the code in the head unit and press ACTIVATE.
- Go back to the page with your verification code and press “I have entered my PIN.” A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.


Android Auto^{TM+3} / Apple CarPlay[®] Setup⁺⁴

Android Auto^{TM*}

Setting up Android AutoTM:


- From an Android AutoTM compatible device, download the Android AutoTM app from the Google PlayTM Store⁺¹⁰
- Open the Android AutoTM app and proceed with the onscreen instructions to complete setup on the mobile device

How to start Android AutoTM:

- Press the SETUP key on your audio system's control panel
- Press the Phone Projection  or Device Connection button, select Android AutoTM, then select ENABLE ANDROID AUTO. Accept all terms, conditions and requests on the head unit and phone in order to use Android AutoTM
- Connect the AndroidTM device with the vehicle's USB port using the manufacturer's cable provided with your phone
- From the vehicle's Kia home screen, select the Android AutoTM button, where you'll see all the Android AutoTM supported apps

Apple CarPlay^{®*}

Setting up and starting Apple CarPlay[®]:

- On the head unit, press the SETUP key.
- Press the Phone Projection  or Device Connection button, select Apple CarPlay[®] then select ENABLE APPLE CARPLAY. (Accept all terms, conditions and requests on the head unit and phone in order to use Apple CarPlay[®])
- Connect the Apple CarPlay[®] compatible iPhone[®] with the vehicle's USB port using the manufacturer's cable provided with your iPhone[®]
- From the vehicle's home screen, select the Apple CarPlay[®] button, where you'll see all the Apple CarPlay[®] supported apps

 
REMINDERS:

- Android AutoTM compatibility requirements: Micro-USB cable that came with your phone, OS AndroidTM 5.0 or higher, compatible AndroidTM smartphone and data and wireless plan for applicable feature(s)
- Apple CarPlay[®] compatibility requirements: Apple Lightning cable, latest iOS software, iPhone[®] 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

For other audio system information, refer to pages 22-25.

Standard Audio System*

– FM/AM/Media (USB, iPod®+13, Bluetooth®+5 Audio, My Music)

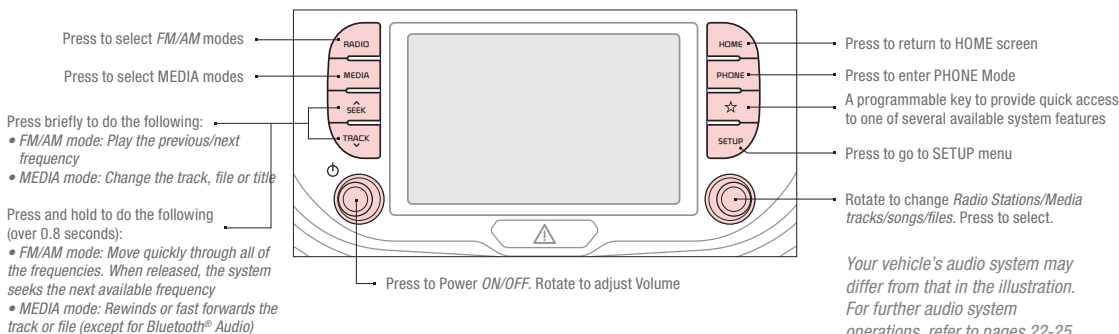

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 22-25 or see your Owner's Manual.

QR CODE

Standard Audio System Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Audio System Setup Options – Press the SETUP key, then using the touchscreen, press the menu item to enter (Display, Sound, Clock/Calendar, Phone, System Info). Adjust the available settings for each equipped audio system setup option by pressing the onscreen buttons/arrows. Audio system setup options may include the following:

- **Display settings** – Adjusting the Brightness, Mode Popup, MP3 Information Display
- **Sound settings** – Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume, Touchscreen Beep
- **Clock/Calendar settings** – Clock Settings, Time Format, Calendar Settings, Clock Display
- **System settings** – Memory Information, Prompt Feedback, Language

Custom Key ☆: A programmable key to provide quick access to one of several available system features

To Program the Custom Key: Press and hold the Custom button. Select one of the available features you would like the Custom button to open

Sound Settings – To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio control unit or the onscreen MENU button, when in MEDIA mode
2. Select the onscreen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Advanced)
4. Using the touchscreen, press arrows to adjust the settings

QUICK TIPS

- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

UVO link^{*†1,26} with Navigation^{*†14} – FM/AM/SiriusXM^{®†20}/Media (USB, Bluetooth^{®†5} Audio)

 
Press briefly to do the following:

- **FM/AM mode:** Play the previous/next frequency
- **SiriusXM[®] mode:** Change the channel
- **MEDIA mode:** Change the track, file or title

Press and hold to do the following (over 0.8 seconds):

- **FM/AM mode:** Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- **MEDIA mode:** Rewinds or fast forwards the track or file (except for Bluetooth[®] Audio)

Press knob to turn POWER ON/OFF.
 Rotate knob to adjust Volume Up/Down

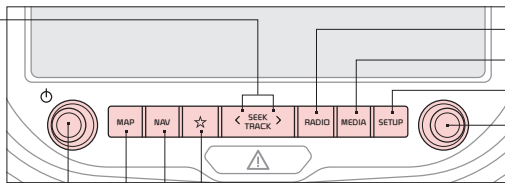

Press to select FM/AM/SiriusXM[®] modes

Press to select MEDIA mode

Press to display the SETUP mode

Rotate to change Radio/SiriusXM[®] Stations/Media tracks/files

A programmable key to provide quick access to one of several available system features

Press to display the Navigation menu screen

Press to display the Map screen for the current position/VOICE mode

Sound Settings: To adjust the audio control unit's sound settings:

1. Press the SETUP key on the audio control unit or the onscreen SETUP button in ALL MENU
2. Select the onscreen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Navigation Volume, Advanced, Reset)

4. Use the onscreen buttons to adjust settings; press the return button \Rightarrow to save settings

Radio Presets: You can listen to FM, AM and SiriusXM[®] radio and save frequently used stations

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM[®] Smart Favorites: For the first ten favorite SiriusXM[®] channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM[®], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast

Custom button ☆: A programmable key to provide quick access to one of several available system features

To Program the Custom button: Press and hold the Custom button ☆. Select one of the available features you would like the Custom button to open

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

QR CODE

UVO link with Navigation Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- At any time, you can interrupt the Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the audio system in ACC mode may drain the vehicle's battery.
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's audio system may differ from that in the illustration. For more information, refer to the Car Multimedia System User's Manual. For other audio system operations, refer to pages 22-24.

Multimedia USB Port, Power Outlets & USB Charger Ports

Use the Multimedia USB port to connect USB audio and smartphone devices. Use the USB Charger port on the right to charge devices. Two USB charger ports* are located in the center console.

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

QUICK TIPS

- The USB charger port is located inside the Center Console and on rear of the Center Console
- The USB data port (Multimedia USB port) is located next to the Power Outlets
A USB Charger ports do not support data transfer

REMINDERS:

 
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device
- Using the Power Outlet (accessory plug) for prolonged period time with the Engine Start/Stop button in the ACC position (Engine OFF) could cause the battery to discharge.

Digital Clock

Press the SETUP key, then the DATE/TIME button to display the Clock Settings screen. Then use the onscreen buttons to navigate through setup and return \Rightarrow to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen (UVO link with Navigation*)
- The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly (UVO link with Navigation*)
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO link with Navigation*)

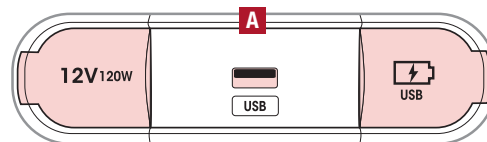


(Ports and power outlets located on lower part of Center Panel; If equipped, an additional Power Outlet is located in the rear cargo area of the vehicle)

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

Wireless Smartphone Charging System*

 1. Place a compatible smartphone on the center of the charging pad.
2. Indicator light **D** may change to amber once wireless charging begins.
3. Once charging is complete, the amber light may change to green.

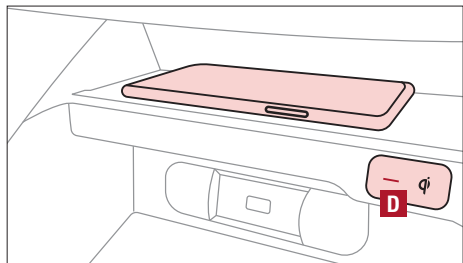

(Located in front of Gear Shift)

REMINDERS:

- The smartphone must be a compatible phone with Qi function available
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Your device's position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled

QUICK TIPS

- Wireless charging must be enabled in user settings
- For wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area

QR CODE

Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Engine Start/Stop Button*†8

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park) (light **A** will not illuminate when starting)

To turn the engine OFF – Press the ENGINE START/STOP button again.

To use the ENGINE START/STOP button, the Smart Key fob must be in the vehicle.

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light **A**)

 
On position

- When already in the ACC position (amber light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (reddish-orange light **A**)
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (reddish-orange light **A**)

Keeping the vehicle in ACC or the ON position without engine running may discharge the vehicle's battery.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press

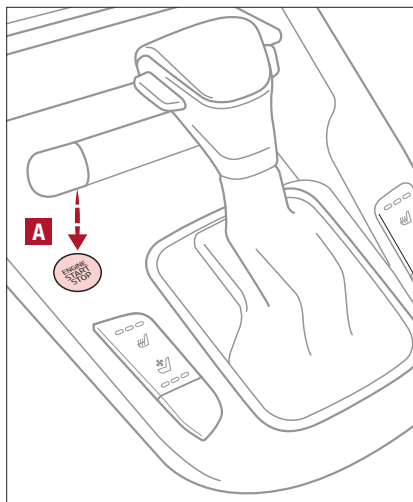

(Button located above Gear Shift)

QR CODE

Engine Stop/Start Button & Smart Key Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Automatic Climate Control* (Type B)

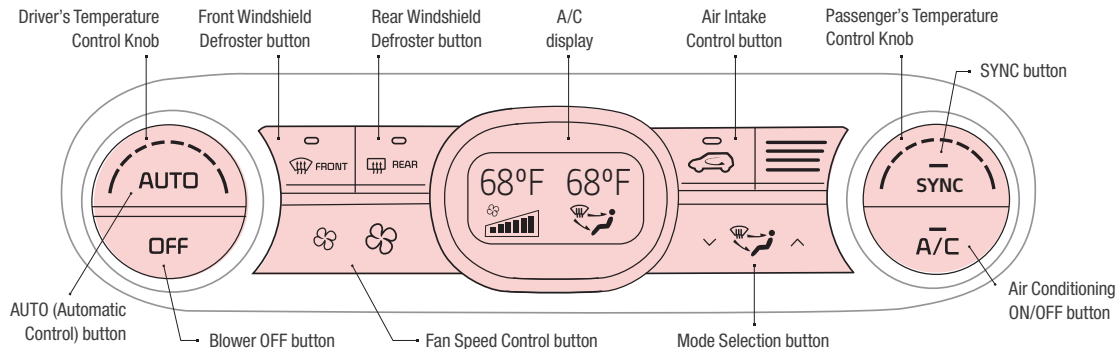

Air Flow Modes

To select Air Flow Modes, press the mode selection buttons:

- Face-Level
- Face/Floor-Level
- Floor-Level
- Floor/Defrost-Level

Auto Defogging System:

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature**
3. Press **SYNC** to sync the left and right temperature control

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature to Hot**
3. Press the **Defrost button**

Defog Inside Windshield:

1. Set desired **Fan Speed**
2. Set desired **Temperature**
3. Press the **Defrost button**

REMINDERS:

- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display

Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

QR CODE

Auto Defogging System Video

To view video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

QUICK TIPS

- Keep inside glass as clean as possible to reduce window fogging
- Defrost mode activates A/C and opens Fresh Air Vent
- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically engage at any time to reach desired temperature and reduce humidity

Manual Climate Control*

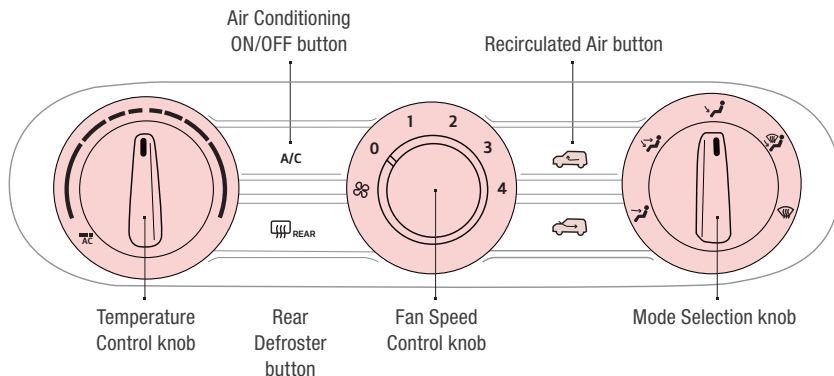

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

-  Face-Level
-  Face/Floor-Level
-  Floor-Level
-  Floor/Defrost-Level
-  Defrost-Level


Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Rotate knob to the **Front Defroster** mode 

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Rotate knob to the **Front Defroster** mode 

QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Automatic Gear Shift with Sportmatic® Shifting*†21

P: Park

R: Reverse

N: Neutral

D: Drive

 
 
[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode:

To enter Manual mode, move shift lever from D to left gate **A**

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

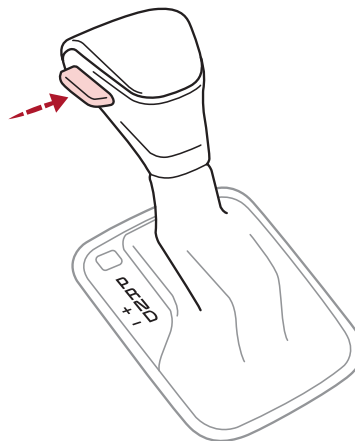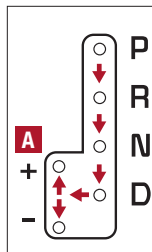

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Manual Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Dual Clutch Transmission (DCT)*

Some Kia vehicles are equipped with Dual Clutch Transmission (DCT) for both automatic and manual transmissions.

The following are unique driving tips of the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

If the clutch is overheating an amber-colored warning light  will be displayed on the instrument cluster.

Should this condition occur, pull over and place the vehicle in Park and idle the engine.

Refer to the Owner's Manual for additional information on DCT operation or call Kia Consumer Affairs for additional information.

QR CODE

Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 
 


www.youtube.com/KiaFeatureVideos

Manual Gear Shift*




Starting the Engine

1. Pull up to apply Parking Brake **A**
2. Fully depress Clutch and Brake Pedals to floor **B**
3. Shift into Neutral **C**
4. Turn Ignition to START

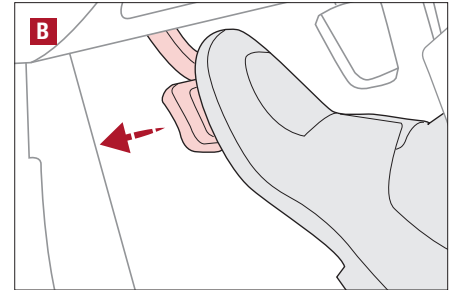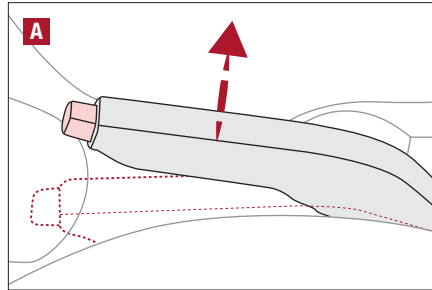

Shifting into Reverse

   1. Fully depress Clutch and Brake Pedals to floor **B**
2. Shift into Neutral **C**
3. Press Gearshift Button **D**
4. Shift into Reverse **E**

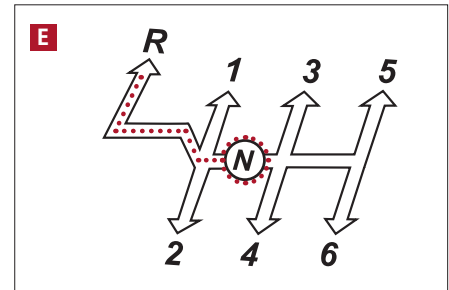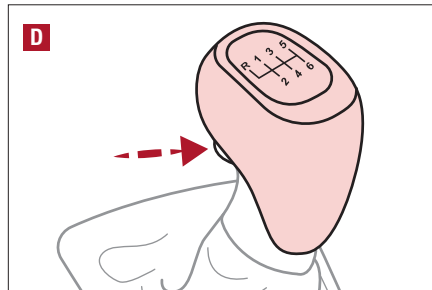
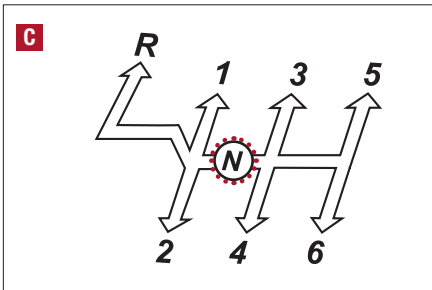


QUICK TIP

When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever Ring.


Power Adjustable Driver's Seat*⁺¹⁷

  Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar forward/backward.

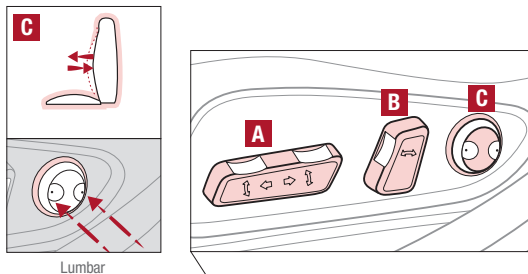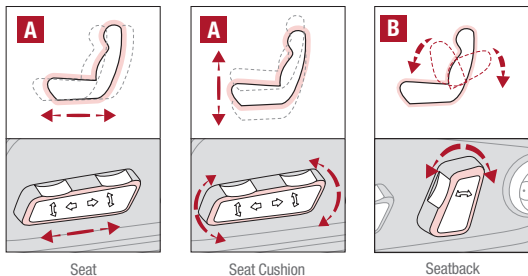


REMINDER:

 Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

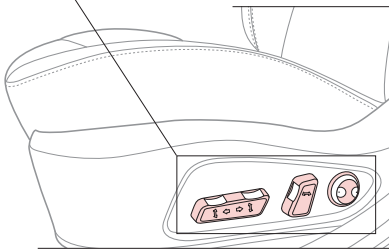

Seat Warmers*⁺¹⁹

 Press top of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

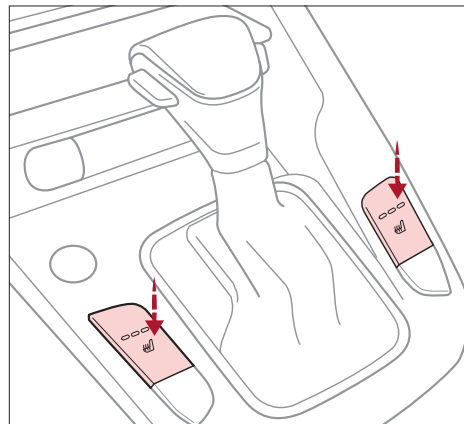

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature

Images are for illustrative purposes only. Actual feature may vary.

 
6-Way Manual Adjustable Driver's Seat^{*†17}

Pull lever **A** to slide Seat forward/backward.

Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback Recline.

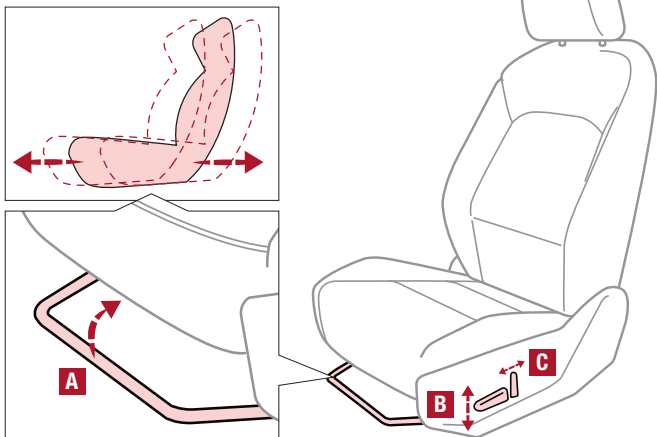

QUICK TIPS

 
- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle
- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath

REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Front Seat Headrest Adjustment^{†9}

To raise headrest: Pull headrest up.

To lower headrest: Press lock release, then press the headrest down.

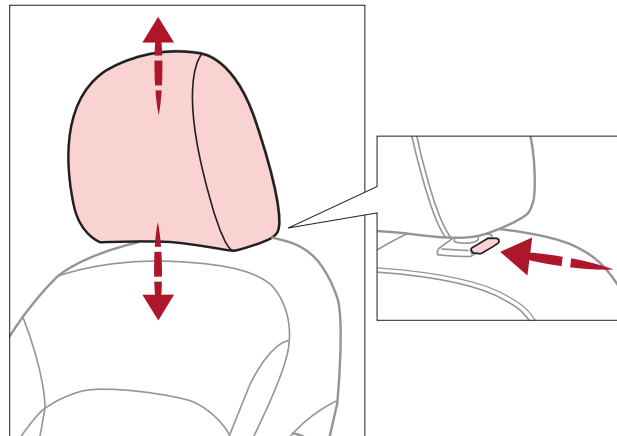

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath

REMINERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Folding Rear Seatback

To Fold:

1. Adjust the Front Seatback to the upright position and/or slide the Front Seat forward
2. Insert the rear seat belt buckle into the pocket* between the Rear Seatback and Seat Cushion **A**. Insert the rear seat belt strap into the guide on the side panel next to the Seatback
3. Lower the Rear Headrests to the lowest position
4. Pull on the Rear Seatback folding lever **B**, then fold the seat towards the front

 
 
REMINDER: Always make sure the Seatback is locked in place when unfolded.

To Unfold:

1. Lift and pull the Seatback backward by pulling on the folding lever **B**. Pull the Seatback firmly until it clicks and is locked into place
2. Return the rear seat belt to the proper position

QUICK TIP

It may be necessary to remove the headrests and/or adjust the front seatbacks to fully lower rear seats.

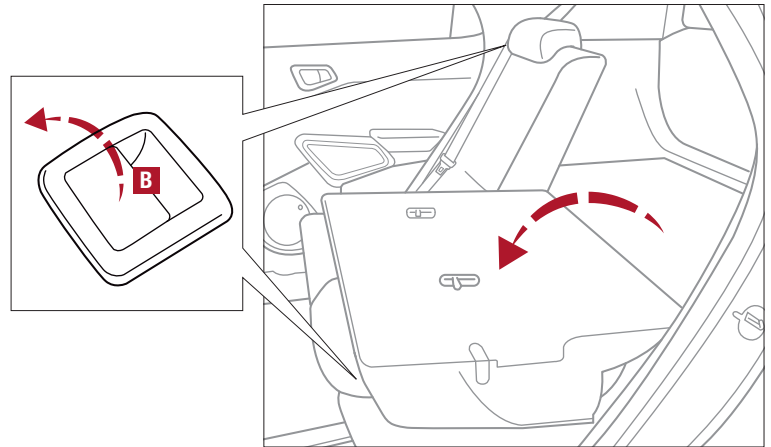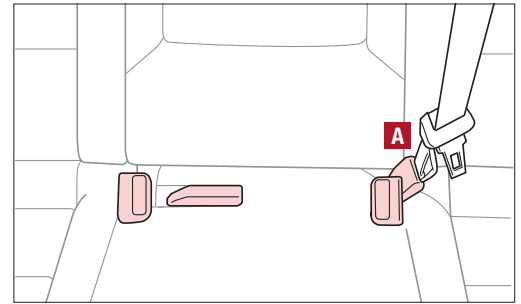

Smart Key*

Smart Key Fob:

- A** Press to lock All Doors; Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to **manually** open Liftgate

REMINDER: The Liftgate unlocks when the Smart Key fob is within close proximity of the rear liftgate.

- D** Press and hold more than 1 second for Panic Alarm.
To turn off Alarm, press any button
- E** Press to release Mechanical Key (button located on back of Smart Key)

REMINDER: If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

Driver's Door Lock/Unlock button **F**:

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

 


Mechanical Key **G**:

- Use to lock/unlock driver's door (only)
- Use to turn Child-Protector Rear Door Lock

REMINDER: Remote button configuration may vary depending on vehicle options.

For more information on the Mechanical Key, please refer to your Owner's Manual.

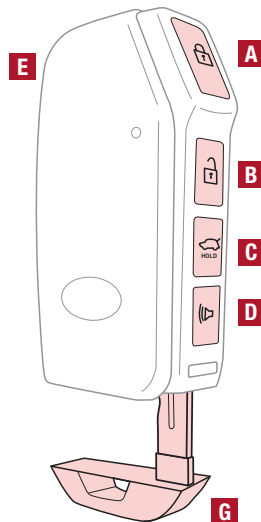

QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.

Engine Start/Stop Button & Smart Key Video



Kia Key Fob Video



 
www.youtube.com/KiaFeatureVideos

QUICK TIPS

- The Smart Key's signal can be blocked by the normal operation of a cellphone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

Remote Keyless Entry (Folding Key)*

- A** Press the release button to release the key
- B** Press to Lock All Doors
- C** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Liftgate
- D** Press and hold for more than 1 second to unlock Liftgate and manually open
- E** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button


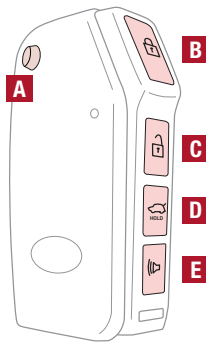


REMINDEES:

- The Liftgate does not automatically open when the button **D** is pressed
- The Liftgate unlocks when the Smart Key fob is within close proximity of the rear liftgate
- Remote button configuration may vary depending on vehicle options

Double-Turn Lock / Unlock All

  - Turn counterclockwise once to unlock Driver's Door
- Turn counterclockwise again within 4 seconds to unlock All Doors
- Turn clockwise once to Lock All Doors

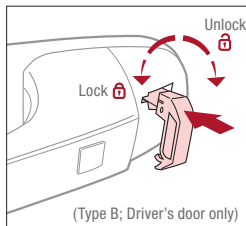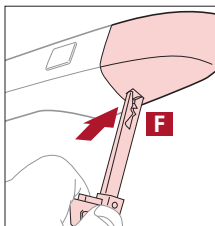

Mechanical Key **G**:

 
Use to unlock/lock Driver's Door

1. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **F**
2. Insert Mechanical Key **G** and turn right to Unlock Driver's Door. Turn twice within 4 seconds to Unlock all doors
3. Insert Mechanical Key and turn left to Lock Driver's Door
4. Return keyhole cover to its original position

Use to lock and unlock the glove box

Fuel Cap Open Warning Indicator*

Tighten for ONE CLICK to prevent Fuel Cap Open Warning Indicator or from illuminating.

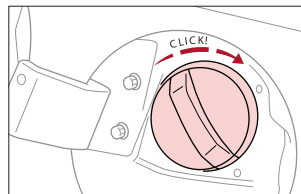


REMINDEES:

- The Fuel Door Release Lever is located on the lower part of the driver's door sill
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back

Fuel Door Release Lever

Lift the **H** lever upwards to release the fuel door.

 (Lever located on the driver's floor near door sill)

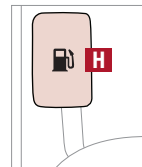

QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.

One-Click Fuel Cap Video



Kia Key Fob Video



www.youtube.com/KiaFeatureVideos

Map/Room Lamps

 
Push the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or personal lamp for the driver or front passenger.

When the door button **B** is pressed, the Map Lamp turns ON when any door is opened.

When the room button **C** is pressed, the Map and Room Lamps turn ON.

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine System Start/Stop button* is OFF.

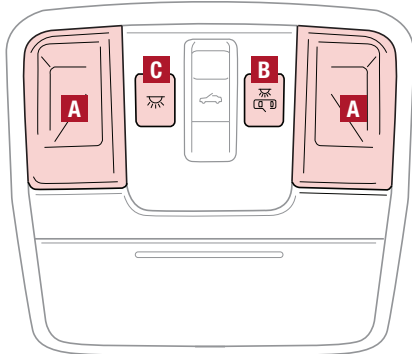


(Type A)

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunvisor†23

 Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

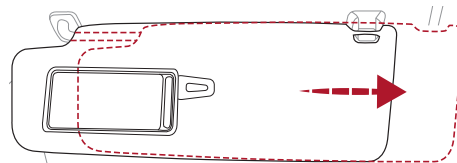

REMINDERS:

- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly. Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows
- Do not operate the vehicle if Sunvisor is impairing your visibility

Sunroof Operation with Power Sunshade*

The sunroof and sunshade operation is controlled through a multidirectional button/lever **A**. The ignition needs to be in the ON position to operate the Sunroof and Sunshade.

To slide the Sunshade and Sunroof:

- Open automatically: Slide the lever **A** backward to the farthest position (second detent)
- Close automatically: Slide the lever **A** forward to the farthest position (second detent)

Tilt the Sunroof:

- Raise: Push lever **A** upward
- Lower: Push lever **A** forward
- Auto Close: Slide the lever **A** forward

QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the sunroof control lever in any direction (one detent).

REMINDERS:

 
- If open, the Sunroof will also close when the toggle button is pressed
- Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving

Sunroof Open Warning*

If the Sunroof is not fully closed, the warning will chime and display on the LCD screen* **B** when:

- The ignition is turned off (Smart Key*)
- The ignition key is removed
- The driver's door is opened

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle.

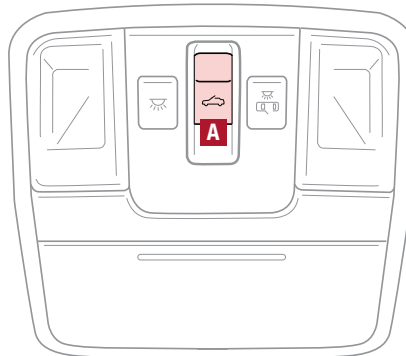

(Type A)

QR CODE

 
Sunroof Operation Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

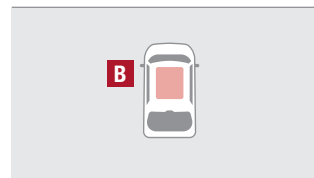


For illustrative purposes only. Display may vary

Rear View Monitor*†6


The Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio system screens while the vehicle is in Reverse.

The Rear View Monitor activates when the:

 1. Engine Start/Stop button* is in the ON position (green light)
2. Gear Shift Lever is in the R (Reverse) position

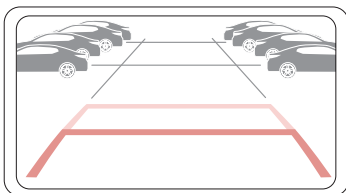

(Rear-Camera Display)

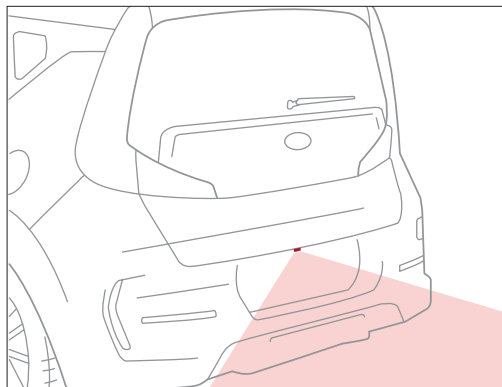 

(Rear Camera)

REMINDER: Always drive carefully and use caution when backing up.

The Rear View Monitor is not a substitute for proper and safe backing-up procedures. The Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

For illustrative purposes only. Display may vary.

Driver Attention Warning (DAW)*†6

The DAW system is designed to alert the driver if it detects a drowsy or fatigued driver and, in certain situations, can give a warning signal to take a break.


The DAW System is set to OFF by default. To turn the DAW System ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driving Assist and select Driver Attention Warning. Set the DAW System to Normal or High Sensitivity.

Driver Attention Warning (DAW) System modes:

 
OFF: The Driver Attention Warning system is deactivated **A**

Normal Sensitivity: The Driver Attention Warning system alerts the driver of his/her inattentive driving practices

High Sensitivity: The Driver Attention Warning system alerts the driver of his/her inattentive driving practices faster than Normal mode

If the DAW System is activated, DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, "Consider taking a break," appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver's attention level is below one bar **C**.

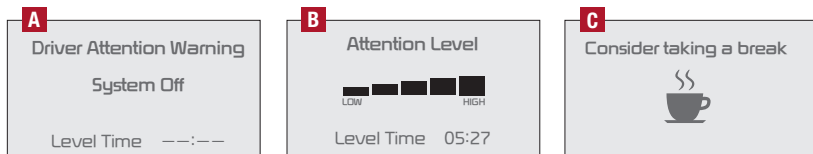

REMINDERS:

 
- The setup of the DAW System will be maintained, as selected, when the ignition is cycled
- When activated, the DAW System does not display "Consider taking a break" message when the total trip driving time is less than 10 minutes
- The DAW System will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Hood Release Lever and Latch

Opening the Hood:

1. Located on the bottom left of the driver's panel, pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** up inside of the Hood's center and lift the Hood

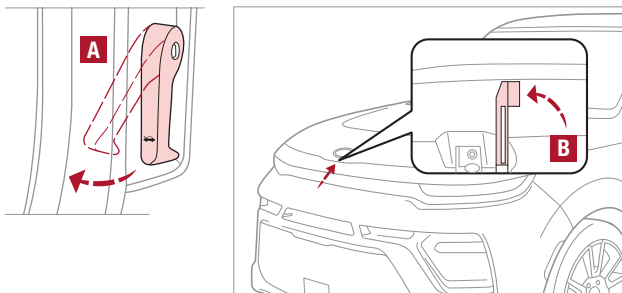

Closing the Hood:

 
Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake

Liftgate Release Button

With Liftgate unlocked, press the Liftgate Release button **A** and pull the Liftgate lid up by the handle to open.

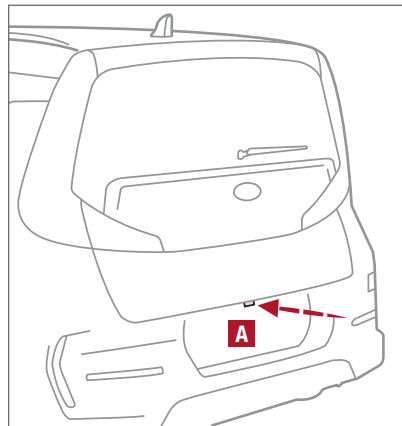


(Button is located underneath the Liftgate lid)

QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The Liftgate unlocks automatically and then can be opened **manually** when the Smart Key* is within close proximity to the vehicle

Child-Protector Rear Door Locks

 Located on the rear edge of the rear passenger doors, adjust switch **A** to the LOCK position to disable the inner door handles from opening the rear doors.

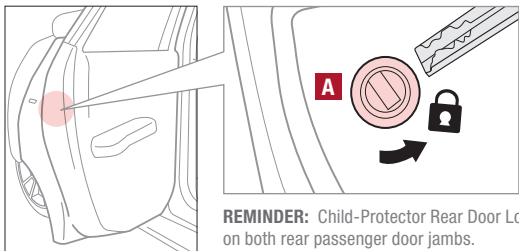

REMINDER: Child-Protector Rear Door Lock is located on both rear passenger door jambs.

 
Occupant Detection System (ODS)^{†15} / PASSENGER AIRBAG OFF Indicator^{†2}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIRBAG OFF” light will illuminate.

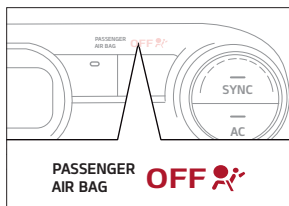

REMINERS:

- For more information about the seat belts and airbags in the vehicle or the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual
- Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat

Seat Belts^{*†2,18}

 
To properly fasten your seat belts:

1. Insert the belt tongue plate **B** into the buckle **C** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **D**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **E**

QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

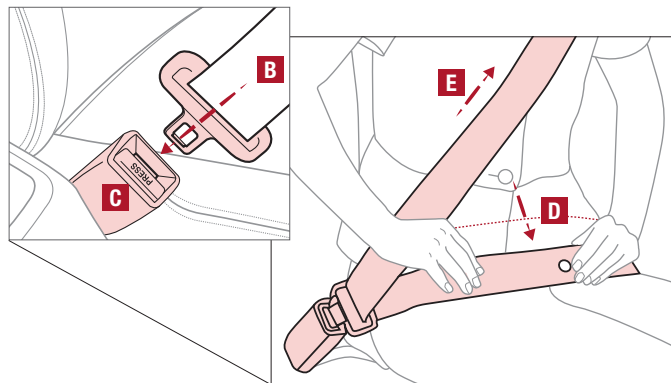

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort. During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

KIA SOUL NORMAL MAINTENANCE SCHEDULE TURBO

P=Perform • R=Replace • I=Inspect⁸

(up to 60,000 miles)^A

For Non-Turbo maintenance, see back cover

MAINTENANCE ITEMS - TURBO	MAINTENANCE INTERVALS (MILES)									
	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000
Add fuel additive ^C	P	P	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P	P	P
Engine Oil & Filter	R	R	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Disc brakes and pads	I	I	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I
Drive shafts and boots	I	I	I	I	I	I	I	I	I	I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I
Propeller shaft	I	I	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R	I	I
Cooling System	I	I	I	I	I	I	I	I	I	I
Fuel lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Brake fluid		I	I	I	I	I	I	I	I	I
Fuel tank air filter ^{1D}		I	I	I	I	I	I	I	I	I
Parking brake		I	I	I	I	I	I	I	I	I
Vapor hose, fuel filler cap and fuel tank		I	I	I	I	I	I	I	I	I
Manual/DCT Transmission Fluid (every 37,500 miles)						I				
Spark Plugs							R			
Valve clearance ^E										I
Drive belts (First 60,000 miles, then every 15,000 miles) ^F										I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Access with UVO link app (Vehicles equipped with UVO link only – See page 22 for setup information)

‡ If equipped.

- A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended.

If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

- E. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
- F. The drive belt should be replaced when cracks occur or tension is reduced excessively. See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **UVO link:** Purchase/lease of a new 2020 Kia Soul vehicle with UVO link with Navigation includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link with Navigation subscription expires, continued access to UVO link with Navigation will require a paid subscription at the then current subscription rate or your use of UVO link with Navigation will immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at <https://www.myuvo.com/legal/privacy-policy.shtml>) and Terms of Service (available at <https://www.myuvo.com/legal/terms-of-service.shtml>). UVO link with Navigation transferable to subsequent owner during the original UVO link with Navigation service term. Only use UVO link with Navigation when safe to do so. The Kia Access with UVO link App is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO link with Navigation at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link with Navigation features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit myuvo.com or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
-
2. **Airbags:** For maximum protection, always wear your seat belt.
3. **Android Auto™:** Android Auto is a trademark of Google LLC. Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply.
4. **Apple CarPlay®:** Apple CarPlay® a registered trademark of Apple Inc.
5. **Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6a. **Driver Assist Features – Blind-Spot Collision Warning with Lane Change Assist, Rear Cross-Traffic Collision Warning, Lane Departure Warning, Rear Camera Display, Forward Collision-Avoidance Assist-Pedestrian / Forward Collision Warning, Smart Cruise Control:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 6b. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
7. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
8. **Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
9. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
10. **Google Play™ Store** is a trademark of Google, Inc. © 2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
11. **Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
12. **iPhone®** is a registered trademark of Apple Inc. The iPhone® mobile digital device is sold separately.
13. **iPod®** is a registered trademark of Apple Inc. iPod® mobile digital device sold separately, and connectivity requires the Kia accessory cable.
14. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
15. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats.
16. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
17. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
18. **Seat belts:** For maximum protection, always wear your seatbelt.
19. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
20. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and numbers are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2019 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
21. **Sportmatic®** is a registered trademark of Kia Motors America.
22. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
23. **Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
24. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
25. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
26. **Vehicle Diagnostics:** Vehicle Diagnostics checks powertrain, chassis and air bag systems, and is not a substitute for maintenance. See UVO link Maintenance Feature or Owner's Manual for maintenance schedule.



SOUL CUSTOMER DELIVERY CHECKLIST

KEY FEATURE WALKTHROUGH

Demonstrate UVO link features and functions with the customer. Discuss UVO eServices setup.

- UVO link Activation / Android Auto™ / Apple CarPlay® Setup* – page 22-23

 
For further UVO link operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 24-25




- Standard Audio System* – page 24
- For more information, refer to the Car Multimedia System User's Manual.





- UVO link with Navigation* – page 25
- For further system operation, refer to the Car Multimedia System User's Manual.

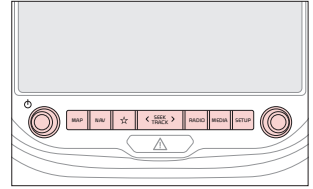

 - Bluetooth® Wireless Technology – page 20
- Demonstrate operation

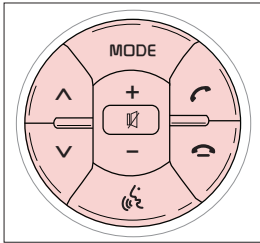

  - Cruise Control* – page 18
- Demonstrate operation

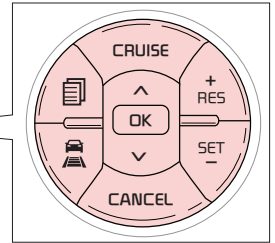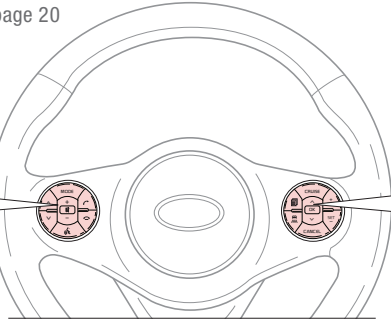

- ECO Mode (Active ECO)* – page 9
- USB Port, Power Outlets & USB Charger – page 26
- Digital Clock – page 26
- Engine Start/Stop Button* – page 28
- Folding Rear Seatback – page 35
- Sunroof Operation* – page 39
- Passenger Airbag Off Indicator – page 43

- Rear View Monitor* – page 40
- Seat Warmers* – page 33
- Smart Key* – page 36
- Tire Pressure Monitoring System (TPMS) – page 5

*IF EQUIPPED

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours & Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



SOUL CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____

 
BEFORE DELIVERY

- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)


KEY FEATURE WALK-THROUGH

- Air Conditioning / Climate Control – pages 29-30
Demonstrate Air Flow Modes, Defog and Defrosting Windshield.



Automatic*



Manual*

 

  
- Manual Gear Shift* – page 32
Demonstrate lifting ring for reverse gear

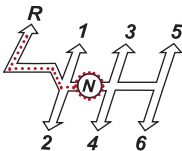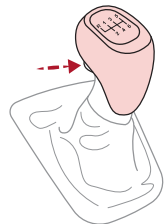

- Windshield/Rear Wipers & Washers – page 17

To operate:

 
- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull to spray and wipe

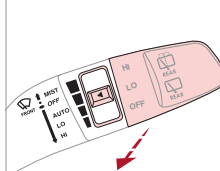

- MIST: Single wipe
- OFF: Wiper off
- INT: Intermittent wipe
- L: Slow wipe
- HI: Fast wipe

To operate:

 - Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

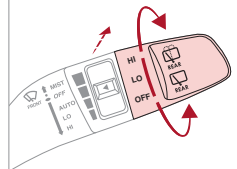

- ON: Normal wipe
- INT: Intermittent wipe
- OFF: Wiper Off



SOUL NORMAL MAINTENANCE SCHEDULE NON-TURBO

P=Perform • R=Replace • I=Inspect^B

(up to 60,000 miles)^A

For Turbo maintenance, see page 44

MAINTENANCE INTERVALS (MILES)

MAINTENANCE ITEMS	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Rotate tires, check tire pressure and tread wear (Every 6,500 miles)	P	P	P	P	P	P	P	P
Add fuel additive ^C	P	P	P	P	P	P	P	P
Engine Oil & Filter	R	R	I	R	I	R	I	R
Climate control air filter [†]	R	R	R	R	R	R	R	R
Air cleaner filter	I	I	I	R	I	I	I	R
Brake fluid / Clutch fluid [‡]	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Disc brake discs and pads	I	I	I	I	I	I	I	I
Front suspension ball joints	I	I	I	I	I	I	I	I
Steering gear rack, linkage and boots	I	I	I	I	I	I	I	I
Drive shafts and boots	I	I	I	I	I	I	I	I
Suspension mounting bolts	I	I	I	I	I	I	I	I
Air conditioning compressor / refrigerant and performance [‡]	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Parking brakes	I	I	I	I	I	I	I	I
Cooling system [‡]	I	I	I	I	I	I	I	I
Fuel lines, fuel hoses and connections	I	I	I	I	I	I	I	I
Vapor hose and fuel filler cap		I		I		I		I
Fuel tank air filter ^F		I		I		I		I
Manual transmission fluid [†]				I		I		I
Drive belts (First 60,000 miles, then every 15,000 miles) ^G								I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into your UVO link App or your account on MyUVO.com (Vehicles equipped with UVO link only – See page 22 for setup information)

† If equipped.

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals.

Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Inspect water pump when replacing the drive belt.

E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2019 Kia Motors America, Inc. All rights reserved.
Consumer - Roadside Assistance¹¹⁵: 1-800-333-4KIA (4542)

Part Number: UG200-PS-004-R1

†LEGAL DISCLAIMERS ON BACK INSIDE COVER