

*stinger*

FEATURES & FUNCTIONS GUIDE



## Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

## Using this Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

## Videos and QR Codes

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area. With some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app.

You can also view the videos by visiting the following website:

**[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)**.

### QR CODE

#### ONE-CLICK FUEL CAP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to this page for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code scanning
  - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

## Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key	45
2	Fuel Filler Lid Release	51
3	Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	43-44
4	Seat Warmers / Ventilated Seats*	42
5	Wiper Service Mode	22
6	Windshield Wipers & Washers	22
7	Idle, Stop & Go (ISG) System	34
8	Smart Cruise Control (SCC)	24
9	Smart Power Liftgate*	46
10	Normal Maintenance Schedule	54
11	User Settings – Instrument Cluster	11
12	Bluetooth® Wireless Technology	26-27
13	UVO eServices*	30
14	UVO eServices with Premium Navigation*	31
15	Android Auto™ / Apple CarPlay® Setup	29

 
---

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

<b>Instrument Cluster</b>	<b>04-09</b>
Instrument Cluster Overview	04
Indicators & Warning Lights	05
Drive Mode Integrated Control System	06
Fuel Economy	07
Tire Pressure Monitoring System (TPMS)	08
Head-Up Display (HUD)*	09
<b>Vehicle Settings</b>	<b>10-11</b>
LCD Instrument Cluster Modes*	10
Trip Information / Trip Computer	10
User Settings	11
Service Interval Mode	11
<b>Advanced Driver Assistance Systems (ADAS)</b>	<b>12-15</b>
Blind-Spot Collision Warning (BCW)	12
Rear Cross-Traffic Collision Warning (RCCW)	12
Forward Collision-Avoidance Assist (FCA)*	13
Lane Keeping Assist (LKA)*	14
Driver Attention Warning (DAW)	15
<b>Driver's Panel</b>	<b>16-19</b>
Electronic Stability Control (ESC) / Traction Control System (TCS)	16
Instrument Cluster Control (Instrument Panel Dimmer)	16
Hill-Start Assist Control (HAC)	16
Power Windows, Window Lock & Central Door Lock	17
Power Folding Outside Mirrors	17
Reverse Parking Aid Function	18
Heated Outside Mirrors	18
Auto Door Lock/Unlock	18
Engine Start/Stop Button	19
<b>Steering Wheel Controls</b>	<b>20-25</b>
Headlights & High Beams	20
Turn Signals	21
Windshield Wipers & Washers	22
Lifting Wipers/Wiper Service Mode	22
Power Tilt / Telescoping Steering Wheel*	23
Manual Tilt / Telescoping Steering Wheel*	23
Heated Steering Wheel*	23
Smart Cruise Control (SCC)*	24
Standard Cruise Control	25

<b>Audio Systems</b>	<b>26-31</b>
Bluetooth® Wireless Technology	26
Audio Controls	28
UVO eServices Activation	28
Android Auto™ / Apple CarPlay® Setup	29
UVO eServices*	30
UVO eServices with Navigation*	31
<b>Center Panel</b>	<b>32-41</b>
Multimedia USB Ports, Power Outlets & USB Charger Ports	32
Digital Clock	32
Wireless Smartphone Charging System	33
Idle, Stop and Go (ISG) System	34
Launch Control*	34
Automatic Climate Control System	35
Automatic Transmission (Shift by Cable* / Shift by Wire*) & Manual Shift Mode (Shift by Cable only)	36
Forward*/Reverse Parking Distance Warning (PDW)	37
Rear View Monitor (RVM) *	38
Surround View Monitor (SVM)*	39
Auto Hold	40
Electric Parking Brake (EPB)*	41
<b>Seating</b>	<b>42-44</b>
Seat Warmers / Ventilated Seats*	42
Power Adjustable Driver's Seat*	43
Front Seat Headrest Adjustment	44
Driver Position Memory System*	44
<b>Other Key Features</b>	<b>45-52</b>
Smart Key	45
Smart Power Liftgate*	46
Map/Room Lamps	48
Sunroof Operation*	49
HomeLink® with Auto-Dimming Rearview Mirror*	50
Sunvisor	51
Hood Release Lever and Latch	51
Fuel Door Release Button	51
Fuel Cap/Malfunction Indicator (Check Engine Light)	52
<b>Safety Features</b>	<b>52-53</b>
Child-Protector Rear Door Lock	52
Seat Belts	53
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	53
<b>Normal Maintenance Schedule - Turbo</b>	<b>54</b>
<b>Legal Disclaimers</b>	Inside Back Cover

## Instrument Cluster Overview

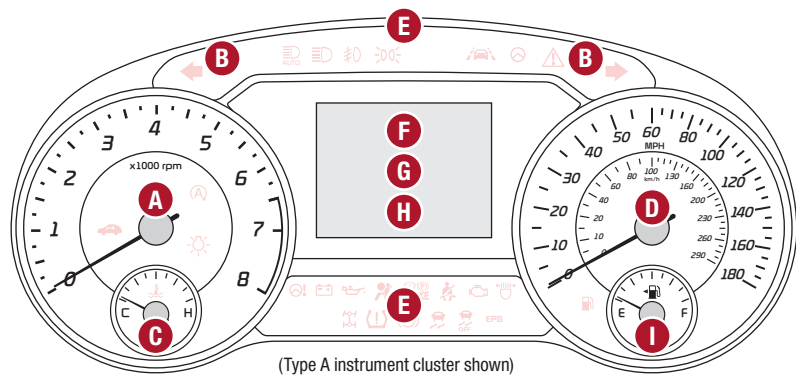

- A** Tachometer

**B** Turn Signal Indicators

**C** Temperature Gauge

**D** Speedometer

**E** Indicator & Warning Lights
- F** Gear Shift Position Indicator

**G** Odometer

**H** Trip Computer



































**I** Fuel Gauge

Arrow direction indicates the side of the vehicle the fuel door is located

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual. This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the images. Type B cluster not shown. See your Owner's Manual for more information.

## Indicators & Warning Lights

 Light ON Indicator	 Parking Brake & Brake Fluid Warning Light	 Electronic Brake Force Distribution (EBD) System Warning Light – (Two separate indicators on Instrument Cluster lit at same time)
 CRUISE Cruise Indicator	 Door Ajar Warning Light	
 Lane Keeping Assist (LKA) Indicator*	 Airbag Warning Light	
 EPB Electric Parking Brake	 Low Windshield Washer Fluid	 Forward Collision-Avoidance Assist Warning Indicator
 Immobilizer Indicator	 Turn Signal Indicators	 ECO / SPORT / SMART Mode Indicator
 High Beam Indicator	 Anti-Lock Braking System (ABS) Warning Light	 Master Warning Light
 LED Headlamp Warning Light*	 Auto Hold Indicator	 Low Beam Assist (LBA) / Dynamic Bending Light (DBL)*
 Electronic Stability Control (ESC) Warning Light	 Charging System Warning Light	 High Beam Assist (HBA) Indicator*
 Electronic Stability Control (ESC) OFF Light	 SET Cruise Set Indicator	 Auto-Stop Indicator (ISG)
 Malfunction Indicator Light	 Engine Oil Pressure Warning Light	 AWD System Warning Light*
 Low Tire Pressure Indicator / Tire Pressure Monitoring System (TPMS) Malfunction Light	 Engine Coolant Temperature Warning Light	
 Liftgate Open Warning Light	 Low Fuel Level Warning Light	
 Seat Belt Warning Light	 Electric Power Steering (EPS) Warning Indicator	

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual. This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the images. Type B cluster not shown. See your Owner's Manual for more information.

## Drive Mode Integrated Control System

SMART, COMFORT, SPORT, CUSTOM\* and ECO drive modes may be changed according to the driver's preference or road conditions. To change the drive mode, rotate the DRIVE MODE knob **A**.

 
 
**SMART Mode** – When SMART mode is selected, the system automatically selects the drive mode best suited to the current driving style. A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (green, white, red) depends on the current driving style. To deactivate, rotate the DRIVE MODE knob **A** again to change the selection to another setting.

**COMFORT Mode** – The system's default mode is COMFORT mode (unless ECO Mode is selected) and is not displayed on the instrument cluster nor the audio system's screen.

**SPORT Mode** – An orange SPORT indicator will illuminate on the instrument cluster when selected. To deactivate, rotate the DRIVE MODE knob **A** again to change the selection to another setting.

**CUSTOM Mode** – When CUSTOM mode is selected, a graphic of the Stinger will display. The CUSTOM Mode allows the driver to mix aspects of other driving modes to make a customized mode.

**ECO Mode** – A green ECO indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **A** again to change the selection to another setting.

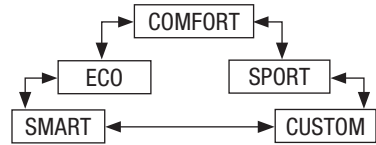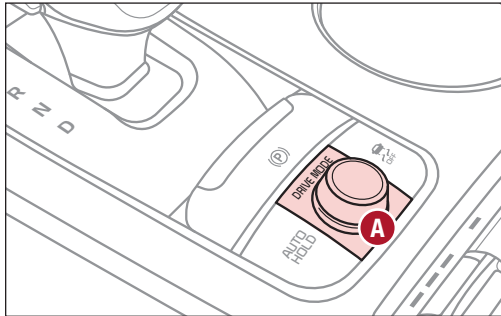

### QUICK TIP

- When the Engine Start/Stop button is turned off, the system will default to COMFORT mode and each mode will need to be selected again when the vehicle restarts (except for ECO mode, which remains in ECO mode)

### REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
  - Acceleration may be slightly reduced even when the accelerator is fully depressed
  - Air conditioner performance may be limited
  - Shift pattern of the automatic transmission may change
  - Engine noise may increase
  - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- Steering effort may be slightly increased in Sport mode
- When the vehicle is placed in ECO mode, it will remain in ECO mode even when the ignition is cycled. SPORT mode will default to NORMAL mode after the ignition is cycled

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.

### QR CODE

#### DRIVE MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)



## Fuel Economy

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

*For more information on Fuel Economy, snap the QR Code above to view a video or refer to section 4 in the Owner's Manual.*

### QR CODE


#### FUEL ECONOMY VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

 
## Tire Pressure Monitoring System (TPMS)<sup>†27</sup>

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, if a spare tire has been installed that does not have a TPMS device, or when the outside temperature drops considerably.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator  showing which tire(s) are underinflated.

- Inflate tire(s) to specifications using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute then illuminate. See dealer for service.

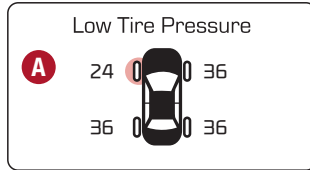

### QR CODE

#### TIRE PRESSURE MONITORING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressure and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.*

 
## Head-Up Display (HUD)\*† 13

The Head-Up Display (HUD) is a semi-transparent display that projects a snippet of information from the instrument cluster and navigation system\* onto the windshield glass.

To turn HUD ON or OFF, go to User Settings in the LCD Modes.

The HUD displays:

- Turn By Turn (TBT) navigation information\*
- Road signs
- Speedometer
- SCC set speed information
- AV mode information
- Smart Cruise Control (SCC) information\*
- Blind-Spot Safety
- Warning lights (low fuel)

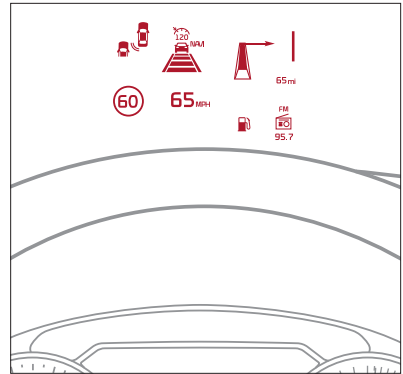

## Head-Up Display (HUD) User Settings

Drivers can adjust the HUD settings from the LCD Instrument Cluster modes in User Settings. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Select: Activate or deactivate HUD content (TBT\*, SCC, LKA, BCW)
- Speedometer Size: Choose the size of the HUD speedometer (Small, Medium, Large)
- Speedometer Color: Choose the color of the HUD speedometer (White, Amber, Green)

### REMINDERS:

- The HUD image on the windshield glass may not be visible when:
  - The driver has poor sitting posture
  - The driver is wearing polarized sunglasses
  - There is an object covering the HUD
  - Driving on a wet road
  - Excessive lighting inside or outside the vehicle
- Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
- If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD







*Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.*


*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 4 in the Owner's Manual for more information.*

## LCD Instrument Cluster Modes\*

The LCD Instrument Cluster modes can be changed by using the mode button **A** on the right side of the steering wheel.

### Modes (Type B Instrument Cluster):

 -  **Sport Mode\***: This mode displays Gauge, Lap Timer, G-Force
-  **Trip Computer Mode**: Displays driving information for fuel economy, accumulated info, etc.
-  **Turn-by-Turn Mode\***: Displays the route guidance and destination info
-  **Driving Assist Mode**: Displays the Lane Safety\*, Driver Attention Warning\*, Smart Cruise Control\* and TPMS info
-  **User Settings Mode**: Change settings of the doors, lamps convenience, service interval and other features
-  **Master Warning Mode**: Displays warning messages related to the vehicle when one or more systems is not operating normally

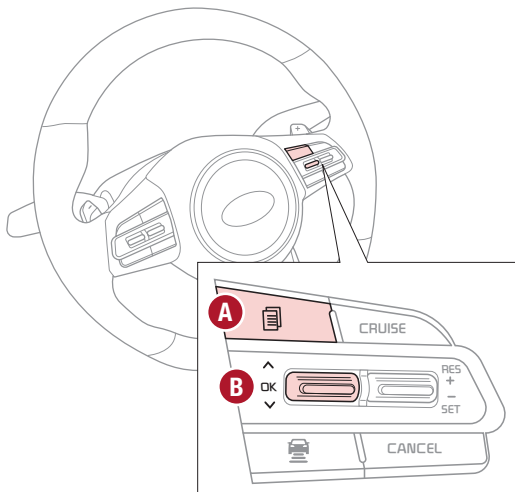

(Modes on Instrument Cluster LCD)

Your vehicle's steering wheel buttons and LCD modes may differ from those in the illustrations.


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

See section 4 in the Owner's Manual for more information.

## Trip Information / Trip Computer

The Trip Computer is a driver information system that displays information related to driving when the Engine Start/Stop button is in the ON position.

 
To cycle through the LCD Instrument Cluster modes, press the Mode button **A** on the right side of the steering wheel.

When in the Trip Computer mode , press the Select/Reset (OK) button **B** to cycle through the screens. When displaying the TRIP screens, press and hold the **OK** button to reset the TRIP to zero.


### REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected


See section 4 in the Owner's Manual for more information.

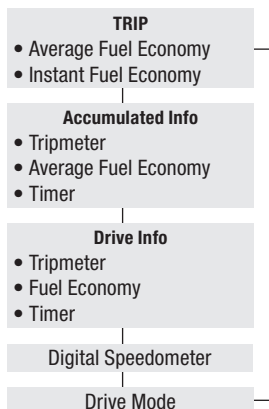

## User Settings

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill and with the Engine Start/Stop button in the ON position and select User Settings .

 You can navigate the selections on the display by pressing the Select/Reset (OK) button **B** up or down, and then pressing again to enter.

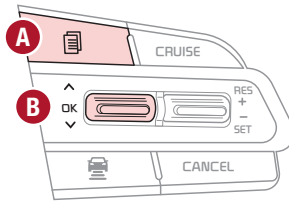

(Button layout on right of steering wheel)

### User Settings Modes:

**Head-Up Display (HUD)\*:** Enable HUD, Display Height, Rotation, Brightness, Content Selection, Speed Size, Speed Color

**Driving Assist:** Smart Cruise Control (SCC) Reaction\*, Driver Attention Warning\*, Lane Safety\*, Forward Collision-Avoidance Assist (FCA)\*, Forward Collision Warning (FCW)\*, Blind-Spot Collision Warning, Blind-Spot Collision Warning\* Sound

**Door/Liftgate:** Automatically Lock, Automatically Unlock, Two-pressure Unlock\*, Power Liftgate\*, Smart Liftgate\*

**Lights:** One-Touch Turn Signal, Ambient Light Brightness\*, Ambient Light Color\*, Headlamp Delay

**Sound:** Parking Distance Warning Volume\*, Welcome Sound\*

**Convenience:** Seat Easy Access\*, Steering Easy Access\*, Welcome Mirror/Light\*, Wiper/Light Display\*, Gear Position Pop-Up\*, Icy Road Warning\*, Lateral Seat Support Enhancement\*

**Service Interval:** Service Interval On/Off, Adjust Service Interval, Reset

**Other Features:** Fuel Economy Auto Reset, Fuel Economy Unit, Temperature Unit, Tire Pressure Unit, Torque Unit\*

**Language:** Choose the language

**Reset:** Reset User Settings to factory default

### QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to inside cover for more information.

#### LCD DISPLAY VIDEO



#### LCD DISPLAY: MAINTENANCE VIDEO




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

See section 4 in the Owner's Manual for more information.

## Service Interval Mode

When Service Interval Mode is activated, set and vehicle service is required, the following message will be displayed on the LCD: **Service Required**, along with the remaining days/miles till service is due.

### Service Interval Mode ON and Interval Setting

To activate Service Interval Mode and set the interval, press the Mode button **A**, scroll to User Settings  and press Select/Reset (OK) button **B** to enter.

Then press the OK button **B** up/down to scroll to Service Interval Mode and again to enter. Press the OK button **B** up/down to select the option to set the interval. Adjust interval and press the OK button **B** to save. To reset the Service Interval Mode system, press and hold the OK button **B** for more than 1 second.

### Service Interval Mode Off

To turn Service Required OFF, go to User Settings and scroll to Service Interval Mode, press the OK button **B** to enter. Select option to deactivate and press the OK button **B** to save.

See section 4 in the Owner's Manual for more information.



## Blind-Spot Collision Warning (BCW)<sup>+6</sup>

 
Blind-Spot Collision Warning uses rear corner radar sensors in the rear bumper to monitor and warn the driver if it detects an approaching vehicle in the driver's blind spot area and before changing lanes.

The system will activate when the vehicle is traveling more than 20 mph and will alert the driver if another vehicle is detected by the radar sensor.


With the Engine Start/Stop button in the ON position, press the BCW button **A** to turn the system ON. The button light will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

**1st-stage warning:** When another vehicle is detected within the BCW warning boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors **C**.

**2nd-stage warning:** When 1st stage warning is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

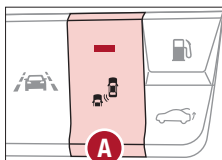


 (Button located on driver's panel, left of the steering wheel)

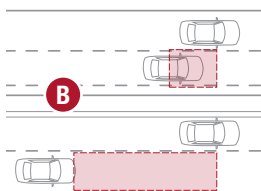

(Blind-spot area monitoring)

 (Vehicle approaching at high speed monitoring)

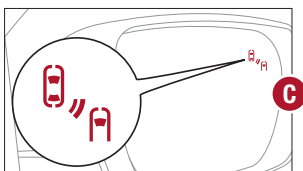

### QUICK TIP

- BCW will activate when:
  - The system is turned on
  - Vehicle speed is above approximately 20 mph
  - Other vehicles are detected on the rear sides of the vehicle

### REMINDERS:

 
- BCW will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCW is ON and the ignition is cycled, BCW returns to its previous state
- BCW and RCCW are supplemental systems. Do not solely rely on these systems and always pay attention the road and its conditions and drive safely.

## Rear Cross-Traffic Collision Warning (RCCW)<sup>+6</sup>

If Rear Cross-Traffic Collision Warning (RCCW) sensors detect vehicles approaching from the rear left or rear right side **D**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen. RCCA may activate the Electronic Stability Control (ESC) to help avoid an imminent collision. RCCA may temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle.

RCCW is designed to operate under these conditions:

- When the vehicle is in Reverse
- When the vehicle is moving less than 6 mph

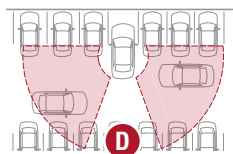

See section 5 in the Owner's Manual for more information.

### REMINDERS:

- The RCCA Warning sound can be adjusted in the User Settings\* or the Vehicle Settings\* on the audio head unit
- When vehicle power is cycled, RCCA will remain in the previous state RCCA can be turned OFF/ON in User Settings
- RCCA will show a warning if the approaching vehicle speed is between 2.5-22 mph within sensing range. See owner's manual for other conditions
- RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions

### QR CODE

#### BLIND-SPOT COLLISION WARNING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

See section 5 in the Owner's Manual for more information.

## Forward Collision-Avoidance Assist (FCA)\*†10

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, apply emergency braking. Initially, FCA provides a Forward Collision Warning when it detects a potential collision with a vehicle or a pedestrian in front, emitting an audible warning and visual alert on the instrument cluster **A**.

Adjust the Warning Time (Early, Normal, Late) in the User Settings. FCA is ON by default and can be turned OFF in the User Settings, selecting Driving Assist, then Forward Collision-Avoidance Assist.


If the system detects that the collision risk has increased, Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling more than 5 mph
- Electronic Stability Control (ESC) is ON



### REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- FCA will not operate when the vehicle is traveling more than approximately 45/50 mph, respectively
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is turned off, the FCA warning indicator illuminates on the Instrument Cluster 

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe and proper driving. Always drive safely and use caution.

FCA may not always alert the driver when the vehicle is approaching another vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 5 in the Owner's Manual for more information.

### QR CODE


#### FORWARD COLLISION-AVOIDANCE ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Lane Keeping Assist (LKA)\*†6

With the Engine Start/Stop button in the ON position, press the Lane Safety button **A** to turn system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling less than 40 mph and the system does not detect lane markers. When LKA detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA will provide steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the Lane Safety button is depressed to ON. To switch between modes (Active LKA, LKA and Lane Departure Warning), go to User Settings in the Instrument Cluster.

The three available modes are:

**Active LKA** - Provides more frequent steering inputs than standard LKA

**Lane Keeping Assist** - Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane

**Lane Departure Warning** - Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs

All systems will activate under the following conditions:

- The vehicle exceeds approximately 40 mph
- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

 
### QR CODE

#### LANE KEEPING ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

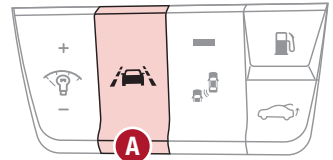


(Button located on driver's panel, left of the steering wheel)



 When the front view camera detects the lane the vehicle's traveling in, both lanes are illuminated

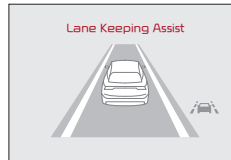

 When the front view camera does not detect the lane the vehicle's traveling in the lanes are not illuminated

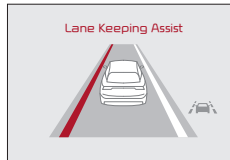

When the front camera detects the vehicle moving outside of the lane the vehicle's traveling in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)



### REMINDERS:

- LKA will not issue a warning if the turn signal or hazard signal is activated
- LKA will return to its previous state when the ignition is cycled
- LKA is not a substitute for safe and proper driving. Always drive safely and use caution
- LKA may not always alert the driver if the vehicle is about to be driven outside of its lane

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.



## Driver Attention Warning (DAW)<sup>†7</sup>

DAW is designed to alert the driver if it detects certain inattentive driving and, in certain situations, can give a warning signal to take a break from driving.


DAW is set to OFF by default. To turn DAW ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driving Assist and select Driver Attention Warning. Set the DAW System to Normal or High Sensitivity.

### Driver Attention Warning modes:

**Off:** Driver Attention Warning is deactivated **A**.

**Normal Sensitivity:** Driver Attention Warning warns the driver if it detects driver of his/her inattentive driving practices.

**High Sensitivity:** Driver Attention Warning warns the driver if it detects driver of his/her inattentive driving practices faster than Normal mode.

If DAW is activated, the DAW information will appear on the LCD Display **B** when you select the Driving Assist mode .

 
A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver take a break when the driver’s attention level is below one bar **C**.

### REMINDERS:

- The set-up of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display the “Consider taking a break” message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

*Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*

*Refer to section 5 in the Owner’s Manual for more information.*

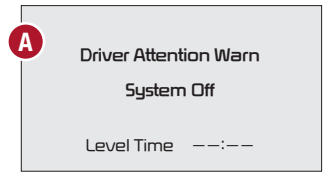


ADAS

## Electronic Stability Control (ESC)<sup>†8</sup> / Traction Control System (TCS)<sup>†8</sup>

 Electronic Stability Control (ESC) is designed to help stabilize the vehicle during certain cornering maneuvers. Traction Control System (TCS) can help improve traction. It is a good idea to keep both ESC and TCS turned on for daily driving whenever possible.

Press the ESC button **A** to turn Traction Control System OFF/ON.

To turn both Electronic Stability Control and Traction Control System OFF, press and hold the ESC button for more than 3 seconds. Press again to turn ON.

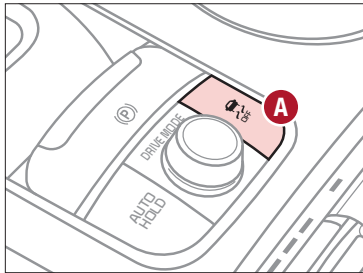

### REMINDERS:

- ESC is active by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC indicator light in the instrument cluster will be lit momentarily whenever ESC is active

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to section 5 in the Owner's Manual.

### QR CODE

#### ELECTRONIC STABILITY CONTROL VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.

 


[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Instrument Cluster Control (Instrument Panel Dimmer)

With parking lights/headlights ON, press **B** (+) or (-) to adjust the brightness of the Instrument panel illumination.

Refer to section 4 in the Owner's Manual for more information.

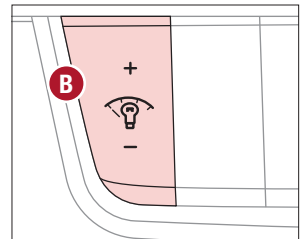

## Hill-start Assist Control (HAC)<sup>†8</sup>

Hill-start Assist Control (HAC) is designed to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

HAC automatically activates whether ESC is OFF or ON but does NOT activate when ESC has malfunctioned.

### QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. HAC does not replace the need to apply brakes while stopped on an incline
- HAC provides a two-second delay before the vehicle may start rolling backwards

 
### REMINDERS:

- HAC does not operate when the gear shift is in P (Park) or N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service

Refer to section 5 in the Owner's Manual for more information.

## Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate driver and front passenger's window auto up/down
- B** Press to unlock/lock all doors
- C** Press to disable the rear passenger window controls

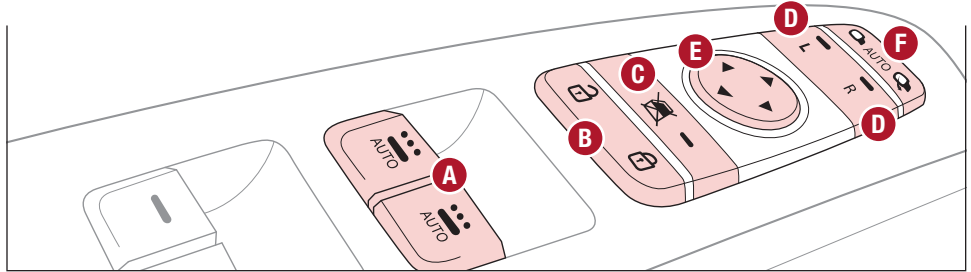

### QUICK TIPS

- Press button **A** again to stop Auto Up/Down function
- Auto Door Lock/Unlock\* will engage when gear shift is moved in to or out of the P (Park) position
- To turn Auto Door Lock/Unlock\* OFF, go to User Settings\* in the LCD Instrument Cluster Modes
- While driving with the rear windows down or with the sunroof\* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
  - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
  - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

**REMINDER:** When pressed **C**, the rear window controls for the Rear Passenger Windows are disabled

*Button configuration may vary depending on vehicle model.*

*See section 4 in the Owner's Manual for more information.*

## Power Folding Outside Mirrors

- D** Press the L or R buttons to select the mirror to adjust
- E** Press button arrows left/right or up/down to adjust mirror position
- F** Toggle button left/right to unfold/fold the outside rearview mirrors
- F** Toggle button to center to automatically fold/unfold mirrors when:
  - Smart Key lock/unlock buttons are pressed
  - Outside door handle button is pressed
  - Driver approaches the vehicle with the Smart Key (if activated in User Settings)

*See section 4 in the Owner's Manual for more information.*

### QUICK TIP

- The mirrors will automatically unfold when the Smart Key is within close proximity to the vehicle (if activated in User Settings)

### REMINDEES:

- When the mirror toggle button is in the center, press the lock button twice on the Smart Key to automatically fold mirrors when exiting vehicle
- To lock the mirror position, toggle button to the neutral (center) position

## Reverse Parking Aid Function

 
 
When the gear shift lever is moved into R (Reverse) and the vehicle is moving backwards, the outside rearview mirrors will rotate downward to aid in reverse parking.

To turn Reverse Parking Aid Function ON, press the L (Left) **A** or R (Right) **B** outside rearview mirror button (LED lit).

To turn OFF, press button(s) again.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved out of R (Reverse)
- The outside rearview mirror switches are OFF (LED not lit)

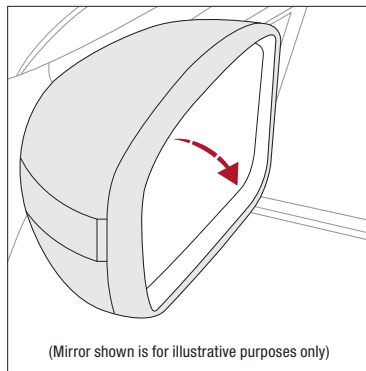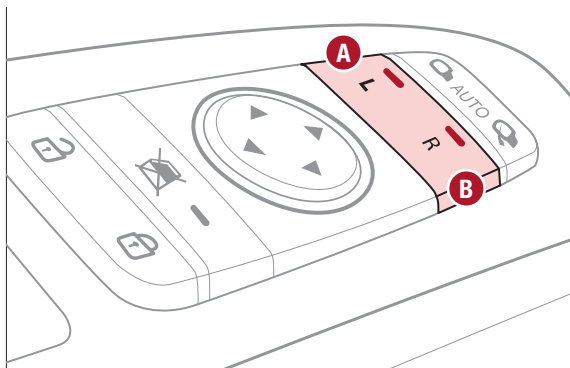

**REMINDER:** When the buttons are not pressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

See section 4 in the Owner's Manual for more information.

## Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button\* is located on climate control system panel.

See section 4 in the Owner's Manual for more information.

## Auto Door Lock/Unlock

Auto Door Lock/Unlock will engage when gear shift is moved into or out of the P (Park) position. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

See section 4 in the Owner's Manual for more information.

 
## Engine Start/Stop Button<sup>†9</sup>

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park) or N (Neutral)

To turn the engine OFF, press the ENGINE START/STOP button while the gear shift is in P (Park).

To use the ENGINE START/STOP button, you must have the Smart Key on your person or inside the vehicle.

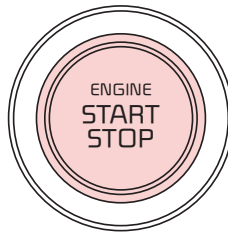

### QUICK TIPS

- To use electrical accessories:
  - ACC position
    - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once.
  - ON position
    - When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again.
    - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice.
- Keeping the vehicle in ACC or ON position too long can discharge the vehicle's battery.

### REMINDERS:

- If Smart Key fob battery is dead, you can still start the engine by pressing the ENGINE START/STOP button with the Lock-button end of the Smart Key. The Smart Key must contact the ENGINE START/STOP button directly, at a right angle
- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/ STOP button for more than 2 seconds or 3 times successively within 3 seconds

See section 5 in the Owner's Manual for more information.

### QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to inside cover for more information.

#### ENGINE START/STOP BUTTON AND SMART KEY VIDEO



#### KIA KEY FOB VIDEO



 
[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Headlights & High Beams

**AUTO Light** – When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**Low Beam Assist-Dynamic (LBA-D) / Dynamic Bending Light (DBL)\*** – LBA can help improve visibility during nighttime driving by aiming the low-beam headlights toward the direction the vehicle is moving. LBA controls the aiming direction based on steering angle and speed.

When the light switch is in the AUTO light position, LBA will activate.

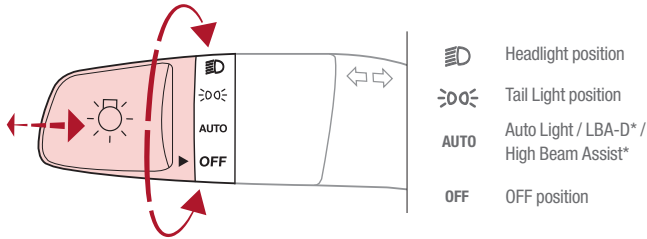

**REMINDER:** When the LBA indicator illuminates on the instrument cluster, the LBA is not working properly. See authorized Kia dealer for service.

**Daytime Running Lights (DRL)** – DRL can make it easier for others to see the front of your vehicle during the day. The lights will be on automatically unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Switch is in the DRL OFF position
- Engine is turned off

### Headlight / High Beam Lever Operation

- Rotate lever switch to change the headlight function:

- ☰ Headlight position
- ☰ Parking light position
- AUTO\* Auto Light\* / LBA position
- DRL/OFF OFF or DRL OFF position

- Press lever away from you to turn high beam headlights ON
- Pull lever to flash headlights/high beams

**High Beam Assist (HBA)\*** – High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

#### REMINDEERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams.
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- DRL only operates during the daytime

See section 4 in the Owner's Manual for more information.

## Turn Signals (refer to image on page 30)

 
To operate:

- Move lever up/down for right/left turn signal
- Slightly move lever up/down to activate one-touch lane change signal

*For more information on the User Settings Mode, please refer to your Owner's Manual.*

### REMINDERS:

- One-touch lane change signal is activated by briefly pressing the turn signal lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times
- To change how many times the lane change signal blinks (3/5/7), go to User Settings in the LCD instrument cluster modes

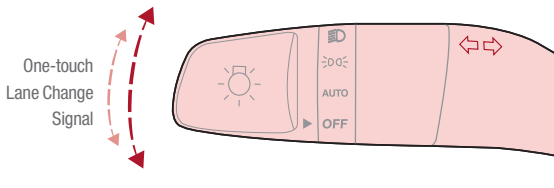

## Windshield Wipers & Washers

To operate:

- Move lever up/down to change wiper modes

**MIST:** Single wipe

 
**OFF:** Wiper off

**AUTO:** Auto Rain Sensing

**LO:** Slow wipe

**HI:** Fast wipe

- Pull to spray and wipe

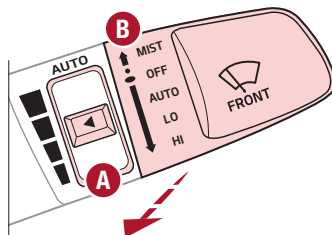

### QR CODE

#### WIPER SERVICE MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### Auto Rain Sensing\*

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and control the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To turn ON the auto rain sensing wipers, move lever up/down to AUTO.

To adjust the auto rain sensing wiper speed setting, move the speed control switch **A** up/down.

### QUICK TIPS

 
- When the Engine Start/Stop button is in the ON position and the wiper switch is in AUTO mode, the wiper will automatically operate once to perform a self-check of the system
- Set the wiper to the OFF position when the wiper is not in use
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Smart Power Liftgate\* lid control, turn off the auto rain sensing wipers and fold in the mirrors
- Moving lever to HI increases Intermittent wipe frequency and wipe speed. Moving lever to LO decreases frequency of wipes.
- Pressing button **A** up increases Intermittent wipe frequency and wipe speed. Pressing button down decreases frequency of wipes.

### Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **C**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

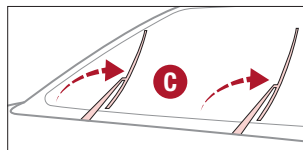

See section 4 in the Owner's Manual for more information.




## Power Tilt/Telescoping Steering Wheel\*†26

 Adjust the steering wheel angle **B** and position **C** with the switch **A** on the steering column. Move the steering wheel so it points towards your chest, not toward your face. Make sure you can see the instrument panel warning lights and gauges.

After adjusting, push the steering wheel both up and down to be certain it is locked in position. Always adjust the position of the steering wheel before driving.

**REMINDER:** To prevent discharge from the battery, do not adjust when the engine is OFF.

*Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle. See section 4 in the Owner's Manual for more information.*

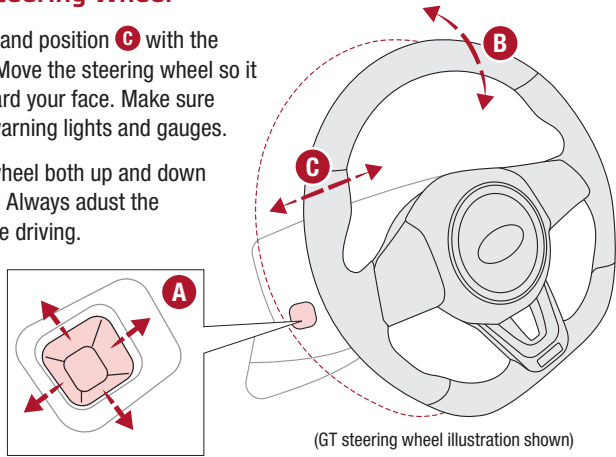

## Manual Tilt/Telescoping Steering Wheel\*†26

 
To adjust the Steering Wheel manually, push the lock-release lever **D** down and adjust to the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **D** up to lock Steering Wheel in place.

### QUICK TIP

- It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle

*Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle. See section 4 in the Owner's Manual for more information.*

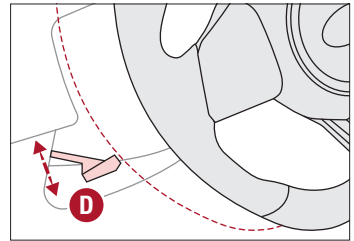


## Heated Steering Wheel\*

While the Engine Start/Stop button is in the ON position, press **E** to turn the steering wheel heater ON. The button indicator will illuminate.

The steering wheel heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.

**REMINDER:** If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

 *See section 4 in the Owner's Manual for more information.*

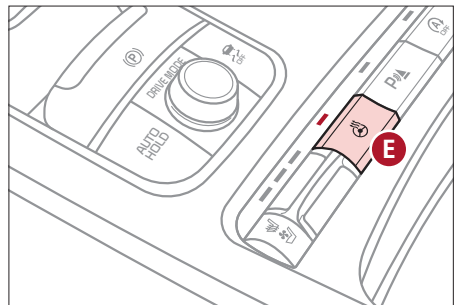

## Smart Cruise Control (SCC)<sup>†6</sup>

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With SCC on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

### To set/adjust the SCC speed:

- Press the Driving Assist **CRUISE** button **A** to turn the system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Press the **SET-** button **B** to set the speed. Press the **RES+/SET-** button **B** up/down to increase/decrease the set speed

### To set the vehicle distance:

- Press the Vehicle Distance button **C** on the steering wheel.
- Each time you press **C** the vehicle distance will change **D**, indicated by the number of bars that appear on the display **E**

**To cancel SCC operation:** Press the CANCEL button **F** or press the brake pedal.

**To turn SCC OFF:** Press the Driving Assist **CRUISE** button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

To adjust the sensitivity of SCC: Press the mode button **G** on the Steering Wheel. With the OK button **H**, select Drive Assistance, then SCC Response. Then select Fast, Normal or Slow.

 
### QR CODE

#### SMART CRUISE CONTROL WITH STOP & GO VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

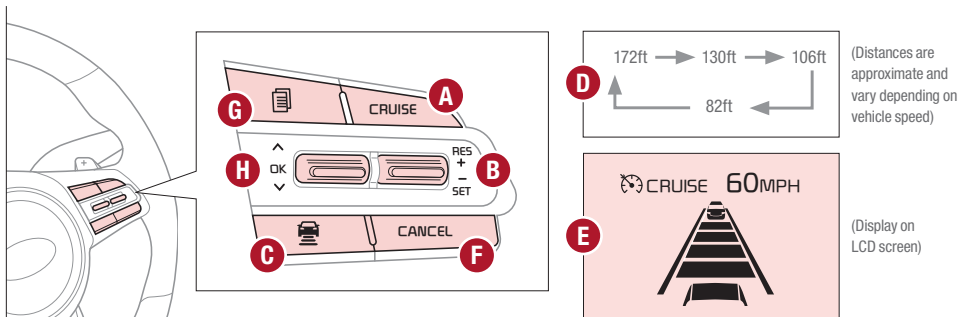

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

## Smart Cruise Control (SCC)<sup>†6</sup> (Continued)

### QUICK TIPS

 
- The speed setting for SCC can be adjusted under the following conditions:
  - With no vehicle in front, you must be travelling at a minimum speed of 20 mph
  - When following a vehicle, there is no minimum speed requirement
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the RES+/SET- button up/down to start the vehicle
- To change the cruise control mode from SCC to standard cruise control, press and hold button **I**. Repeat to switch back to SCC mode. (SCC must not be activated to change modes)

### REMINDERS:

- CRUISE indicator must be ON in order to operate SCC
- SCC remains ON when ignition is cycled. The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed. See the owner's manual for more information
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), Electronic Parking Brake (EPB) is activated and various other conditions. See owner's manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

## Cruise Control (CC)

- I Driving Assist button:** Press the **CRUISE** button up to turn the cruise control ON/OFF
- J RES+ button:** Press up to resume or increase cruising speed
- J SET- button:** Press down to set or decrease cruising speed
- K CANCEL button:** To cancel cruise control setting, do one of the following:
  - Press the brake pedal
  - Press the CANCEL button

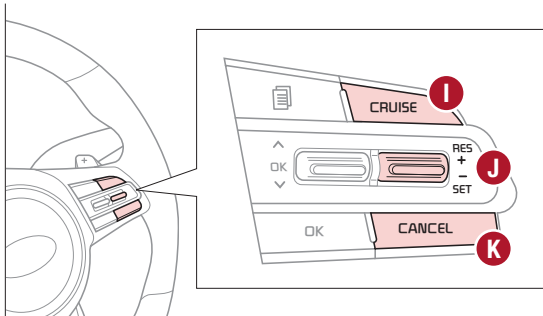


### QUICK TIPS

- Cruise Control is designed to function above approximately 20 mph only
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

**REMINDER:** Cruise Control will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starting

## Bluetooth® Wireless Technology<sup>†5</sup>

 - A Volume button:** Press up/down to raise/lower speaker volume
- Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- B Talk button:** Press to activate voice recognition / bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition
- C Receive/Place Call button:** Press to place/receive/answer incoming calls. Press to pair a phone if not phone is paired
- D End Call button:** Press to end a call or cancel a function

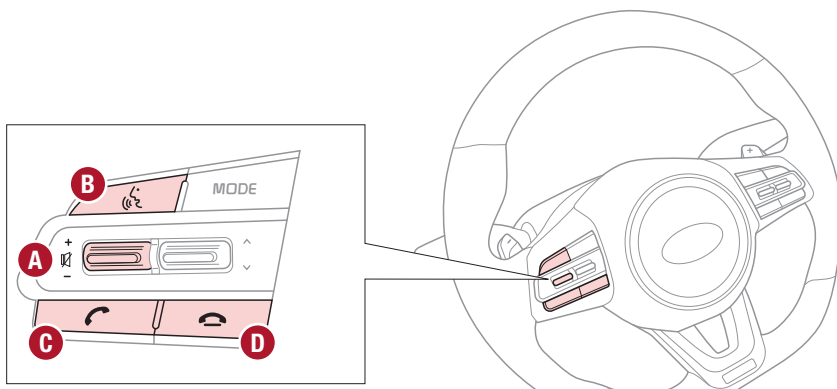

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and Bluetooth® wireless technology chip programming, functionality may differ from one phone to another
- Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device

Your vehicle's steering wheel buttons may differ from those in the image. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

For more information, refer to the Car Multimedia System User's Manual. For Bluetooth® wireless technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section.

## Bluetooth® Wireless Technology<sup>†5</sup> (Continued)

### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

### How to Place a Call

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** to place a call using the touchscreen
- Option 2: Press on the Talk button **B**. Then say the command "Call {name}" or "Dial {number}"

When using the voice command feature, wait for the system BEEP before speaking the command.

### Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

### QUICK TIPS

- The system can register or pair multiple Bluetooth® devices. See the Car Multimedia System User's Manual for more information on setup and limitations
- During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future Bluetooth® connection requests
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the BEEP before speaking any commands
- Close windows and sunroof and turn off A/C; open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

### QR CODE

#### VOICE RECOGNITION TIPS VIDEO

 
 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Audio Controls<sup>†24</sup>

- A Audio System MODE button:** Press to cycle through FM/AM/SiriusXM<sup>®†23</sup>/Media/*Bluetooth*<sup>®†15</sup> Audio
- Audio System ON/OFF:** Press to turn power on; Press and hold to turn power off. Press and hold to go to Advanced Setting / Steering Wheel mode (UVO link with Navigation)
- B Seek/Preset buttons:**
  - FM/AM/SiriusXM<sup>®</sup> Mode: Press to advance through preset stations. Press and hold to auto seek
  - Media Modes: Press to move track up/down. Press and hold to fast forward/rewind (except for *Bluetooth*<sup>®</sup> Audio)
- C Volume buttons:** Press up/down arrows to raise/lower volume
- Mute button:** Press to mute all audio (Media pauses in some Media modes when pressed)

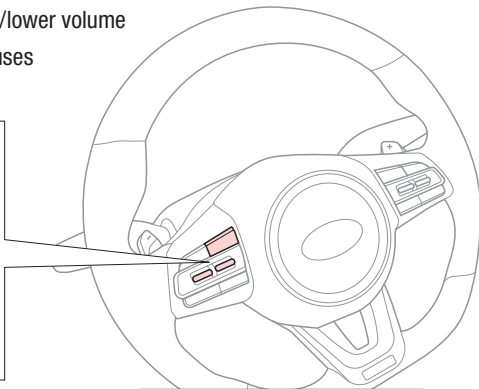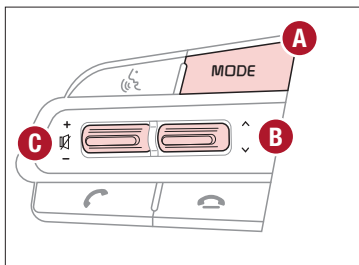

### QUICK TIP

- Pressing the Audio System Mode button for more than 1 second will turn Audio Mode ON/OFF

### REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the images. See your Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving
- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.*

*For more information, refer to the Car Infotainment System User's Manual. For other audio system information, refer to pages 26-31.*

## UVO eServices Activation<sup>†1</sup>

Using a compatible smartphone to access your app store or marketplace, download the UVO eServices app.

 
1. In your smartphone's settings, ensure that location services are enabled.
2. Using the UVO eServices app, register for a new <https://owners.Kia.com> account.
3. Follow the In Car Setup Instructions on the UVO eServices app to complete the UVO eServices Activation.

## Android Auto™<sup>†3</sup> / Apple CarPlay® Setup<sup>†4</sup>


### Android Auto™

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store<sup>†12</sup>
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device

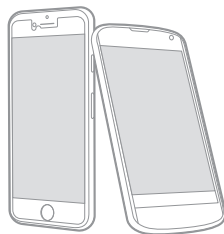


### How to start Android Auto™:

1. Press the SETUP key on your audio head unit's control panel
2. Press the Phone Projection button  or Device Connection, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

### Apple CarPlay®

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key
2. Press the Phone Projection button  or Device Connection, select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone<sup>†15</sup> with the vehicle's Multimedia USB port using the manufacturer's cable provided with your iPhone
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

#### QUICK TIPS

##### If Android Auto™ / Apple CarPlay® Randomly Disconnects:

- Ensure the USB cable is certified by the phone manufacturer for both power and data
- Clean the phone's port, which the USB cable connects to, with disposable compressed air
- The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
- Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

 
For further UVO eServices operation, refer to the Car Multimedia System User's Manual.

For other audio system information, refer to pages 26-31.

#### REMINDERS:

- Android Auto compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Using an approved USB cable provided by your smartphone manufacture is recommended
- Using unapproved USB cables may cause a phone projection error or a system malfunction, black screen, no sound, disconnection, etc.
- Phone projection may not work due to a defect in the phone
- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle

## UVO eServices\*†1 – FM/AM/SiriusXM®†23 /Media (Multimedia USB, Bluetooth® Audio, My Music)

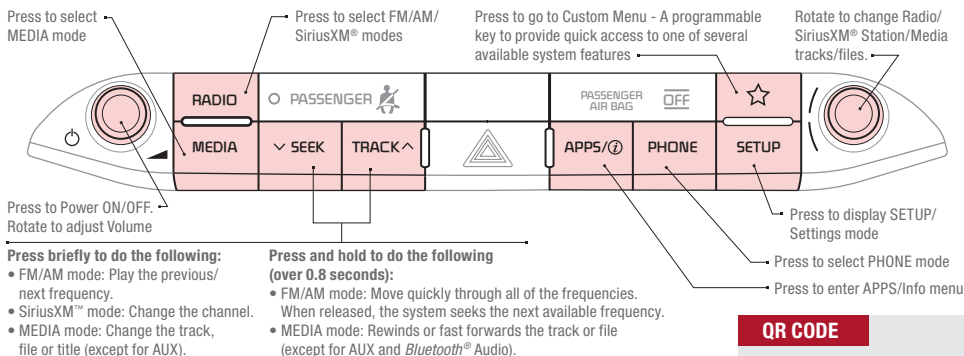

### Sound Settings – To adjust the sound settings:

1. Press the SETUP key on the audio head unit or the onscreen MENU button, when in MEDIA mode.
2. Select the onscreen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button  $\Rightarrow$  to save settings

**Radio Presets** – You can listen to FM, AM and SiriusXM radio and save frequently used stations.

**How to Save a Preset** - Press and hold the desired slot. This saves the current station in the selected slot

**SiriusXM Smart Favorites** - For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose **SiriusXM**, then select any of the first ten favorites. During song or program play, tap the **Skip Backward** icon to start from the beginning of the song or program. Tap the **Play Live** icon to return to the live broadcast.

**Custom Key** ☆: A programmable key to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

### QUICK TIPS

- Volume level between different audio modes:
  - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
  - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones
- When using the voice command feature, wait for the system to BEEP before speaking the command
- A warning screen may appear periodically to remind users that the UVO eServices should be operated when the engine is running to prevent battery discharge

### QR CODE

#### UVO ESERVICES VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

 
*Your vehicle's audio system may differ from that in the illustration. For further UVO eServices operation, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 26-31.*

\*IF EQUIPPED  
†LEGAL DISCLAIMERS ON BACK INSIDE COVER



## UVO eServices with Premium Navigation<sup>†1,15</sup>

### FM/AM/SiriusXM<sup>®†23</sup>/Media (Multimedia USB, Bluetooth<sup>®</sup> Audio)

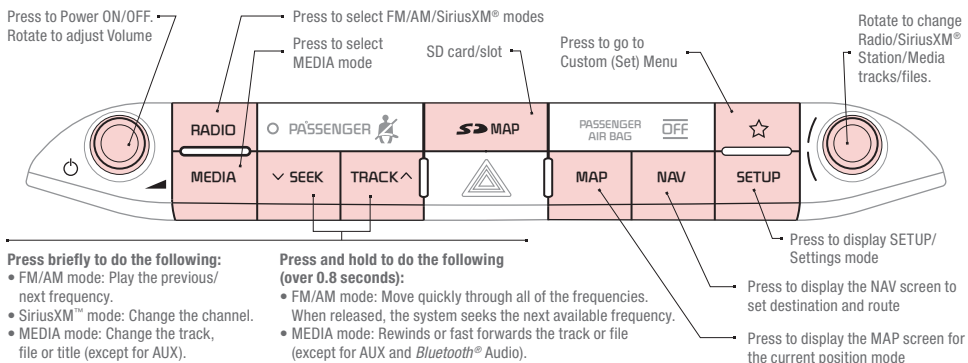

### Sound Settings – To adjust the sound settings:

1. Press the SETUP key on the audio head unit
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume Levels, Tone, Priority, Navigation, Advanced, Default)
4. Use the onscreen buttons to adjust settings

**Radio Presets** – You can listen to FM, AM and SiriusXM radio and save frequently used stations.

**How to Save a Preset** - Press and hold the desired slot. This saves the current station in the selected slot

**SiriusXM Smart Favorites** - For the first ten favorite SiriusXM channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose **SiriusXM**, then select any of the first ten favorites. During song or program play, tap the **Skip Backward** icon to start from the beginning of the song or program. Tap the **Play Live** icon to return to the live broadcast.

**Custom Key** ☆ is a programmable key to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

#### QUICK TIPS

- The volume level for each source (FM, AM, SiriusXM, USB, etc.) will revert to the previously set volume for that source
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated with the engine running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the steering wheel

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

*Your vehicle's audio system may differ from that in the illustration. For further UVO eServices operation, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 26-30.*

#### QR CODE

#### UVO ESERVICES WITH PREMIUM NAVIGATION SYSTEM VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



 
[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Multimedia Ports, Power Outlets & USB Charger Ports

**Power Outlets **A****: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

**Multimedia Ports **B****: Use the Aux port to connect audio devices and the USB port to connect USB audio devices and smartphones.

**USB Charger Ports **C****: Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger.

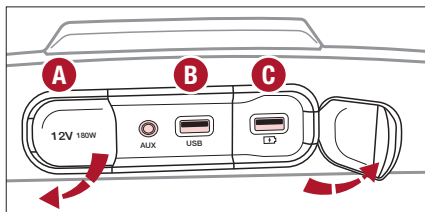

(Located in center console in front of gearshift)

### QUICK TIPS

- The power outlets are inactive when ignition is in the OFF position
- USB data port is located next to the Power Outlets **B**. USB Charger does not support data transfer

### REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Only use manufacturer cables that came with your device as third party cables may cause damage to the device. It is recommended to always update your phone to the latest operating system release

See section 4 in the Owner's Manual for more information.

## Digital Clock

Select SETUP key on audio head unit. Then scroll to and select DATE/TIME, and adjust.

 
Refer to the Car Multimedia System User's Manual for more information.

### REMINDERS:

- Daylight Saving must be enabled or disabled in the Clock Settings screen.
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO eServices with Premium Navigation\*)

## Wireless Smartphone Charging System

1. Enable Wireless Charging in the User Settings, Convenience menu
2. Slide open tray cover **A**. Place compatible smartphone on the center of the charging pad **B**
3. Indicator light **C** may change to amber once the wireless charging begins
4. Once charging is complete, the orange light **C** may change to green

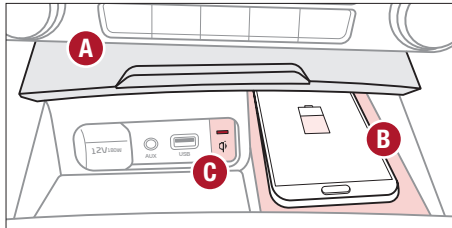

(Located in center console in front of gearshift)

### QUICK TIPS

- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place smart-phone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber.
- Avoid placing other metal items in the bin while charging as to not impede the charging area

### REMINDERS:

- If driver door is opened, charging will be disabled. All doors must be closed
- The smartphone must be a compatible phone with Qi function available
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness

See section 4 in the Owner's Manual for more information.

### QR CODE

#### WIRELESS CHARGING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Idle, Stop and Go (ISG) System

 
The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill the engine will stop, and the green AUTO STOP indicator (A) on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode\*. When the engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG System, press the ISG OFF button (B). If you press again, the system will be activated.

For more information on Idle, Stop and Go System, refer to section 5 in the Owner's Manual or contact your local dealership.

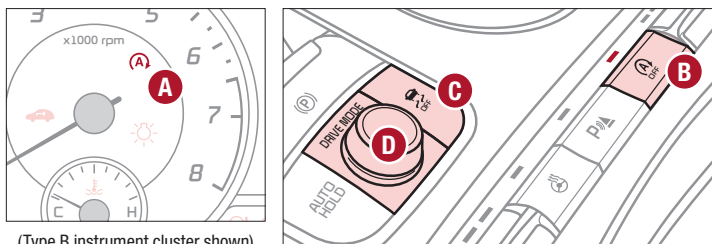

(Type B instrument cluster shown)

### QUICK TIPS

- The ISG system is disabled when:
  - A seat belt is unfastened
  - The hood or a door is opened
  - Battery condition is poor
  - The front or rear defroster is turned on
  - Engine coolant temperature is low
  - The outside ambient temperature is too low/high
  - Emission control devices activate
  - The vehicle is on a steep slope

### REMINDERS:

- ISG is active by default at vehicle start-up. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator (A) is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

*Images are for illustrative purposes only and may not reflect actual feature or operation*

### QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to inside cover for more information.

### ISG, STOP AND GO VIDEO



### LAUNCH CONTROL VIDEO



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Launch Control\*

Launch control aids in controlling acceleration to help the vehicle accelerate smoothly and quickly, while avoiding slipping of the drive wheels and other engine, clutch and gearbox issues.

To turn on, press and hold the ESC OFF button (C) for more than three seconds while DRIVE MODE (D) is in SPORT Mode.

To activate, with the left foot press brake firmly while gear shift is in D (Drive) and then press the accelerator pedal fully to the floor. The LCD will display a ready status.

### REMINDERS:

 
- When launching, stop vehicle and keep steering wheel straight
- Brake pedal, EPB and Auto Hold must be released for smooth launching
- Always drive safely and use caution

*Refer to section 5 in the Owner's Manual for more information.*

## Automatic Climate Control System

### Front Climate Control

- A** AUTO (Automatic) Climate Control button
- B** Front Windshield Defrost button
- C** Rear Window Defrost button
- D** Air Conditioning button
- E** Recirculated Air button
- F** Fresh Air button
- G** System OFF button
- H** Fan Speed Control buttons
- I** Mode Select button
- J** Climate Control System button
- K** SYNC (Synchronize All Zones) Temperature Control button

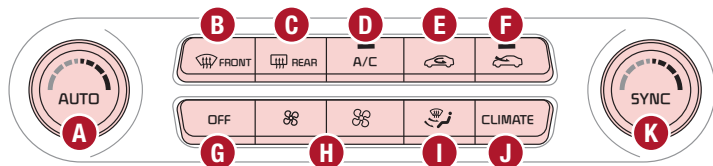

### QR CODE

#### AUTO DEFOGGING SYSTEM (ADS) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### Climate Control Auto Function

Press AUTO **A** to select full auto operation. In AUTO mode the driver and front passenger have full control of their own temperature zones. The mode, fan speed, air intake and air conditioning will activate and adjust accordingly to achieve the temperature settings for each zone.

To set temperatures:

- Turn **A** to set the driver's zone temperature
- Turn **K** to set the front passenger's zone temperature

### Dual-Zone Climate Control

Pressing the SYNC button **K** synchronizes both climate control zones (driver and passenger) to the driver's temperature control.

### Air Flow Modes

To select air flow modes, press the Mode Select button **I**:

-  Face-Level
-  Floor-Level
-  Bi-Level
-  Floor/Defrost-Level



### REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm or cold outside air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

See section 4 in the Owner's Manual for more information.

### Auto Defogging System

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

### Defrost Outside Windshield

1. Set **fan speed** to the highest position **H**
2. Set **temperature** to hot **A**
3. Press the **front defrost button** **B**

### Defog Inside Windshield

1. Set **Fan Speed** to highest position
2. Set **Temperature** to highest position
3. Press the **front defrost button** **B**

## Automatic Transmission (Shift by Cable\* / Shift by Wire\*) and Manual Shift Mode (Shift by Cable only)

To shift into any gear from Park, depress the brake pedal, then press the Unlock button **A**, located on the side of the gear shift lever, and shift.

**P:** Park – To shift into Park from any gear, press the P button **B** on the gear shift while vehicle is stationary and the brake pedal is depressed (Shift by Wire only).

**R:** Reverse – To shift into Reverse from Drive, depress the brake pedal, press the Unlock button **A**, and move the shift lever forward twice to skip over Neutral and into Reverse.

**N:** Neutral

**D:** Drive

**Paddle Shifters:** With the gear shift in Drive, pull the paddle shifter to manually change gears.

[+]: Manual Mode Upshift\*

[-]: Manual Mode Downshift\*

 
### QR CODE

#### AUTOMATIC TRANSMISSION CONTROL (SHIFT BY WIRE) VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

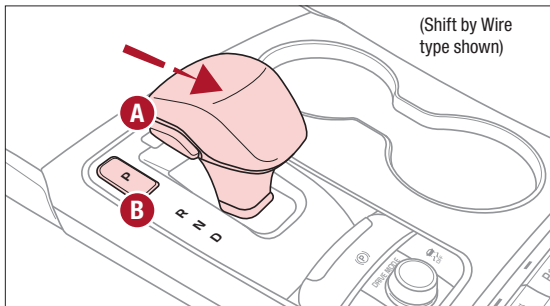


(Shift by Wire type shown)

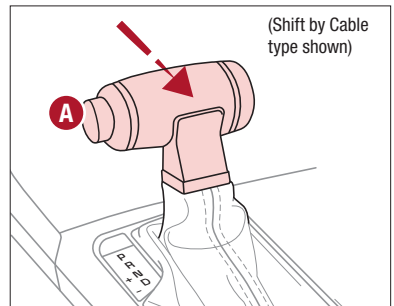 

(Shift by Cable type shown)

### QUICK TIPS

 - Press the Unlock button **A** when shifting from P (Park) to any gear
- The instrument cluster and the light on top of the shift lever identifies the gear the vehicle is currently in

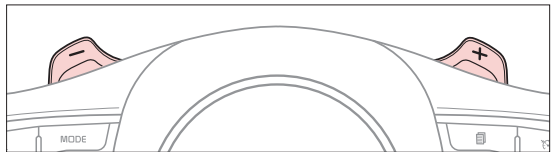

(Paddles on rear side of steering wheel)

### REMINDERS:

 
 
- Press and hold the [+] right paddle shifter to return to Automatic mode (Shift by Wire\* only)
- When in Manual Shift mode, pulling the left and right paddle shifters at the same time will NOT shift gears
- When in P (Park), if the Unlock button is not pressed while shifting, the transmission does not shift
- If the vehicle is turned off while in Neutral without shifting into Park, it will remain in Neutral until the driver's door is opened. At that point it will automatically shift into Park
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

See section 5 in the Owner's Manual for more information.

## Forward\*/Reverse Parking Distance Warning (PDW)<sup>†6</sup>

Forward/Reverse Parking Distance Warning (PDW)\* **A** is a supplemental system that is designed to assist the driver by chiming if an object is detected within the sensing areas in the front or rear of the vehicle when moving forward or backing up.

When the Engine Start/Stop button is ON and the shift lever is in R (Reverse), the system is activated and the Forward/Reverse Parking Distance Warning (PDW)\* button indicator is illuminated.

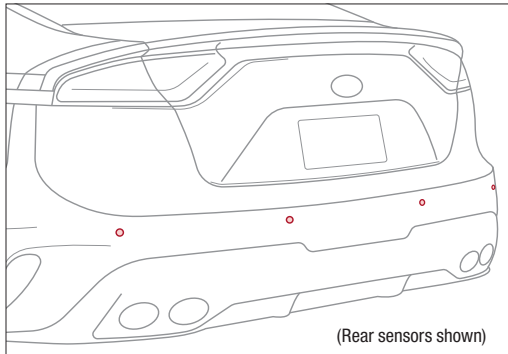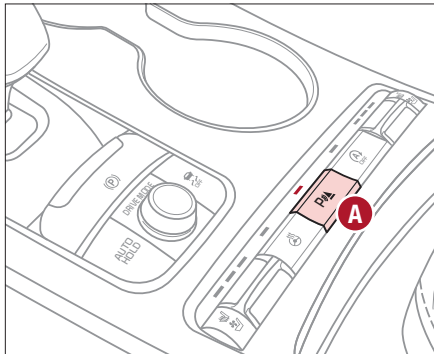

### REMINDERS:

- If the vehicle is moving at speeds over 6 mph, the system may not activate
- When more than two objects are sensed at the same time, the closest one will be recognized first
- Forward/Reverse Parking Distance Warning (PDW)\* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward/Reverse Parking Distance Warning (PDW)\* may not detect every object behind or in front of the vehicle

 
See section 4 in the Owner's Manual for more information.

## Rear View Monitor (RVM)<sup>†6</sup>

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio head unit screen while the vehicle is in Reverse.

Rear View Monitor activates when the:

- Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the R (Reverse) position

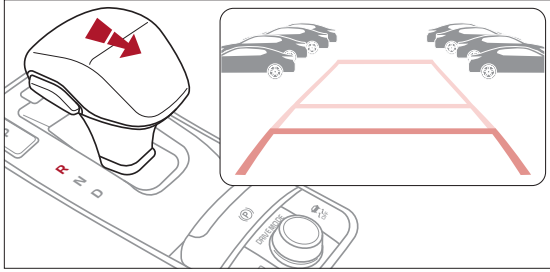

### REMINDERS:

- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- RVM is not a substitute for proper and safe backing-up procedures
- RVM may not display every object behind the vehicle
- Always drive carefully and use caution when backing up

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 4 in the Owner's Manual for more information.*

 


## Surround View Monitor (SVM)\*

Surround View Monitor (SVM) is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the audio head unit screen.

Press **A** to turn SVM ON/OFF.

- When OFF: The camera view will automatically display on the audio head unit screen when the vehicle is shifted into Reverse. The camera view will turn off when the vehicle is shifted out of Reverse
- When ON: The camera view will display on the audio head unit screen in both Drive and Reverse. In Drive, the camera view will continue to display until the vehicle is traveling at speeds above approximately 10 mph

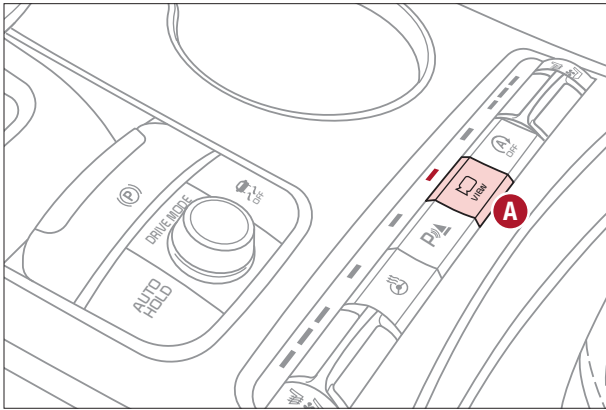

### QR CODE

#### SURROUND VIEW MONITOR (SVM) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.







[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

#### REMINDER:





- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. Surround View Monitor is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

**Camera View Modes** – To change camera view modes, use the touch screen and select the mode.

#### When in Drive & Neutral:

-  Displays the front side and SVM images simultaneously on the screen
-  Displays the front side image on the screen
-  Displays the front side and left side images simultaneously on the screen
-  Displays the front side and right side images simultaneously on the screen

#### When in Reverse:

-  Displays the rear view and SVM images simultaneously on the screen
-  Displays the rear side image on the screen
-  Displays the rear and left side images simultaneously on the screen
-  Displays the rear and right side images simultaneously on the screen

See section 4 in the Owner's Manual for more information.

## Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD switch **A** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed and the driver's seat belt must be fastened.

Depress the brake pedal, start the engine and then press the AUTO HOLD switch **A**. The white Auto Hold indicator will come on indicating the system is in standby.

The Auto Hold indicator, which is in the instrument cluster, has four states:

**White:** Standby – When vehicle is in Park and at a standstill, and AUTO HOLD switch **A** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

**Green:** Engaged – When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

**OFF** (not illuminated) – The indicator will turn OFF when the AUTO HOLD switch **A** is manually turned OFF or when the EPB is manually turned ON.

**Yellow:** Malfunction – When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

 
### QR CODE

#### ELECTRIC PARKING BRAKE / AUTO HOLD VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

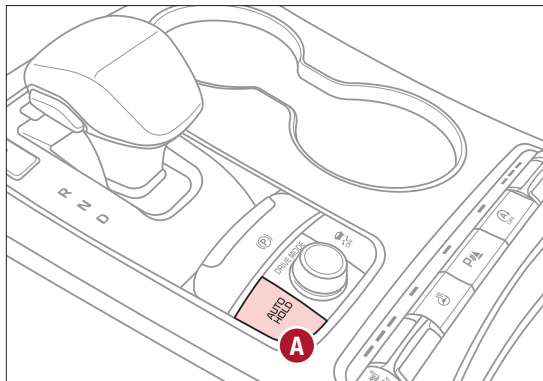

#### REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes.

See section 5 in the Owner's Manual for more information.

## Electric Parking Brake (EPB)\*

 
The Electric Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

### Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **(P) BRAKE** is illuminated on the instrument cluster.

### Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light **(P) BRAKE** is OFF.

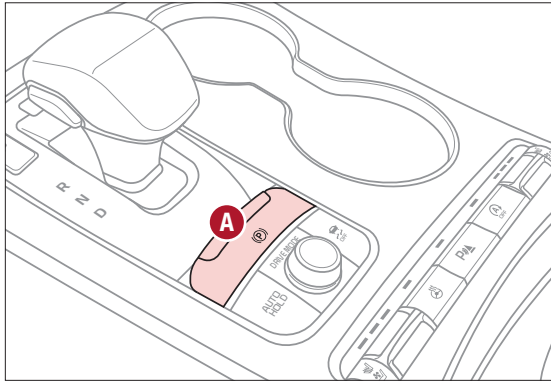

### QR CODE

#### ELECTRIC PARKING BRAKE / AUTO HOLD VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS

- Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline
- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

See section 5 in the Owner's Manual for more information.

### REMINDERS:

- The EPB malfunction indicator will illuminate for approximately 3 seconds as a bulb check when the ignition switch is turned ON
- If the warning light does not illuminate temporarily or remains continuously lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB. These conditions are normal and indicate that the EPB is functioning properly
- EPB will not release unless the hood, liftgate and all doors are closed and seat belts are fastened

## Seat Warmers<sup>†22</sup> / Ventilated Seats\*

 
 
### Front Seats

#### Seat Warmers:

- Press button **A** up once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

#### Ventilated Seats:

- Press button **B** down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

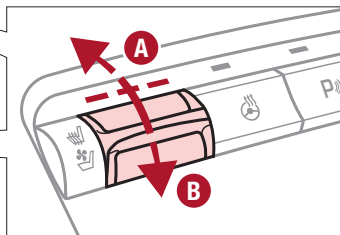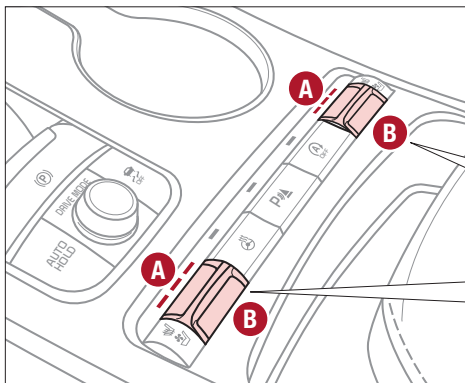

#### QUICK TIP

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

**REMINDER:** Use extreme caution when using the seat warmers to avoid burns. See section 4 in the Owner's Manual for more information.

See section 4 in the Owner's Manual for more information.

#### QR CODE

#### SEAT WARMERS AND VENTILATED SEATS VIDEO

 
 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Power Adjustable Driver's Seat<sup>†20</sup>

Move/Press controls to adjust Seat, Seat Cushion tilt up/down, Seatback forward/backward, Lumbar up/down/forward/backward or Seat Cushion Extension forward/backward.

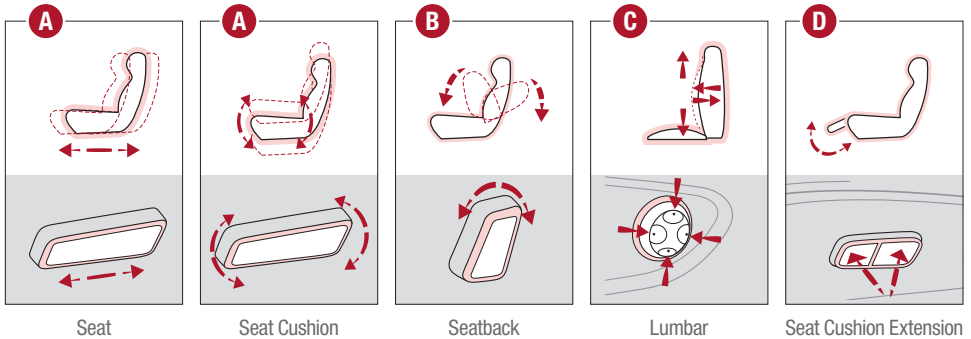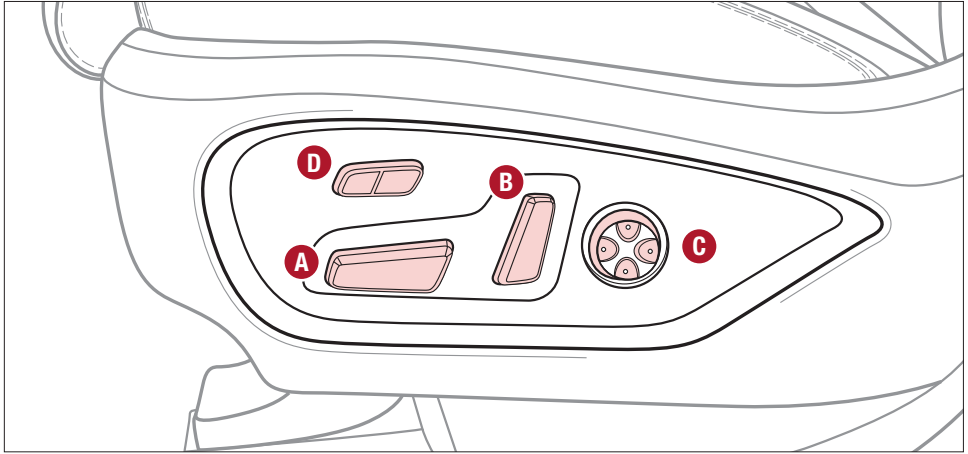

**REMINDER:** Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

See section 3 in the Owner's Manual for more information.

## Front Seat Headrest Adjustment<sup>† 11</sup>

To raise headrest: Pull headrest up.

To lower headrest: Press the lock button **A**, then press the headrest down.

 
### QUICK TIP

- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath

### REMINDEES:

- Button may be hard to see if headrest is in its lowest position.
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.


Refer to section 3 in the Owner's Manual for more information.

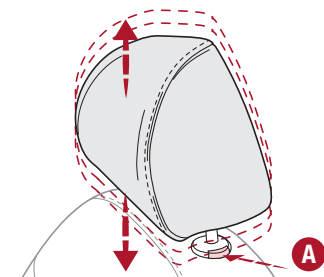

## Driver Position Memory System\*

The integrated system stores into memory the position of the driver's seat, outside rearview mirrors, steering wheel positions and seat cushion extension\*. To store positions into memory, first place the gear shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

 1. Adjust the driver's seat, outside rearview mirrors, settings and steering wheel positions
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons 1 or 2 **C** within 4 seconds. The system will beep twice when memory has been stored

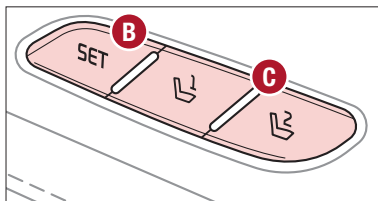

(Located on driver's door control panel)

**REMINDEER:** Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.


See section 3 in the Owner's Manual for more information.

## Smart Key<sup>†9</sup>

 - A** Press to lock all doors
- B** Press to unlock driver's door. Press twice within 4 seconds to unlock all doors
- C** Press and hold for more than 1 second to unlock the Liftgate and open manually (The Smart Power Liftgate\* will unlock and automatically open)

### REMINDERS:

- Manual-Liftgate lid will partially open. To fully open, lift up manually
- The Liftgate unlocks when the Smart Key is within close proximity of the vehicle
- D** Press and hold more than a half a second for panic alarm. To turn off alarm, press any button
- E** Press to release mechanical key **I**

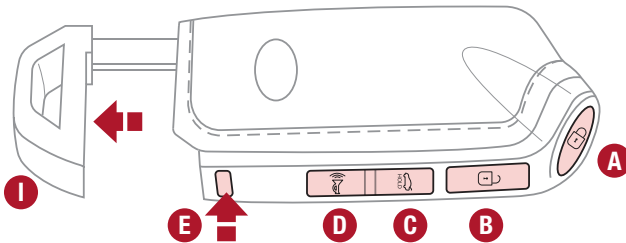

### Driver's Door Lock/Unlock Button **G**:

To unlock door(s):

 
- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors

To lock all doors:

- Press again to lock all doors

### Mechanical Key:

- Use to unlock/lock driver's door:
  1. Remove door handle keyhole cover with mechanical key by pressing up into slot on bottom of cover as shown **H**
  2. Insert mechanical key **I** and turn left to unlock driver's door
  3. Insert mechanical key **I** and turn right to lock driver's door
  4. Reinsert the Mechanical Key inside the Smart Key fob
- Use to lock and unlock glove box

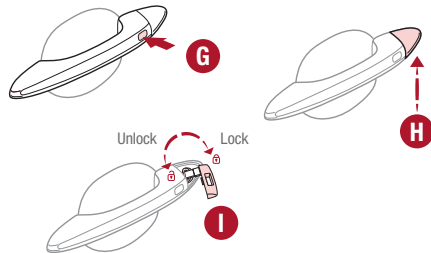

### QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

**REMINDER:** Remote button configuration may vary depending on vehicle options.

### QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to inside cover for more information.

### KIA KEY FOB VIDEO



### ENGINE START/STOP BUTTON & SMART KEY VIDEO



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

See section 4 in the Owner's Manual for more information.

## Smart Power Liftgate\*†18

The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate.

To turn the Smart Power Liftgate features ON, go to User Setting mode in the LCD Instrument Cluster Modes and set to ON.

The Smart Power Liftgate will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

 
### Opening from Inside the Vehicle:

Press the Smart Power Liftgate Open/Close button\* **A** to automatically open/close the Liftgate.


### Opening from Outside the Vehicle:

To open the Smart Power Liftgate automatically, press the Liftgate Release handle switch **B** on exterior of the Liftgate.


Automatically close by pressing Smart Power Liftgate Close button\* **C** located inside the Liftgate lid.

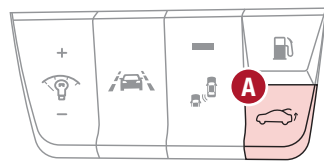

 (Button located on driver's panel, left of the steering wheel)

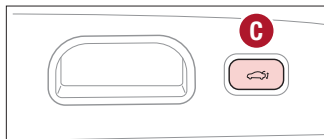

(Located inside Liftgate lid)

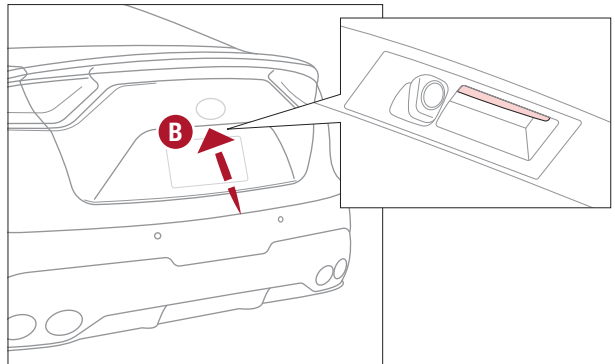 

### QR CODE

#### SMART POWER LIFTGATE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIP

- To cancel the Smart Power Liftgate while automatically opening or closing, press any button on the Smart Key fob

### REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when the following occurs:
  - Doors are recently closed and locked
  - The Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
  - A door is not locked or closed
  - The Smart Key is in the vehicle
- Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Smart Power Liftgate

See section 4 in the Owner's Manual for more information.



## Smart Power Liftgate\*†18 (Continued)

### Opening with no-touch activation:

When the Smart Key fob is on your person and you are within close proximity of the back of the vehicle, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

 
The Smart Power Liftgate feature is OFF by default. To enable the Smart Power Liftgate, go to User Settings in the LCD Instrument Cluster modes.

### Smart Key:

Using the Smart Key fob to automatically to open the Smart Power Liftgate\*, press and hold the Smart Key Liftgate button **A**. Press again and hold to close.

#### QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release button
- The Liftgate unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the back of the vehicle

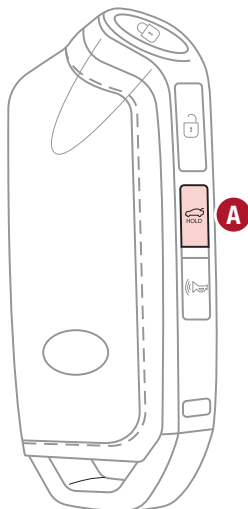

#### QR CODE

##### KIA KEY FOB VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### REMINDERS:

- Smart Power Liftgate may be damaged if attempting to open or close manually
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Smart Power Liftgate lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- When not in use, keep the Liftgate Lid Control button in the OFF position
- Ensure all obstacles are out of the way of the Liftgate lid when operating the Smart Power Liftgate

See section 4 in the Owner's Manual for more information.

## Map/Room Lamps

### Automatic Turn Off Function

The interior lights automatically turn off approximately 20 seconds after the Engine Start/Stop button is turned OFF.

### Map/Room Lamp Operation

 
**Map Lamps** – These lights produce spot beams for convenient use as map lamps or as personal lamps for the driver or the front passenger. Press the buttons **A** to turn the map lamps ON/OFF.

**Room button** – Press the button **B** to turn the front and rear lamps ON/OFF.

**Door button** – When the Door button **C** is pressed the front and rear lamps will turn ON as follows:

- When a door is opened or doors are unlocked with the Smart Key, the lamps will turn ON for approximately 30 seconds
- If the Engine Start/Stop button is in the ACC/OFF position and a door is open, the lamps will stay ON for approximately 20 minutes
- If the Engine Start/Stop button is in the ACC/ON position and a door is open, the lamps will stay ON

The lamps will turn OFF immediately if the Engine Start/Stop button is turned ON or all doors are locked.

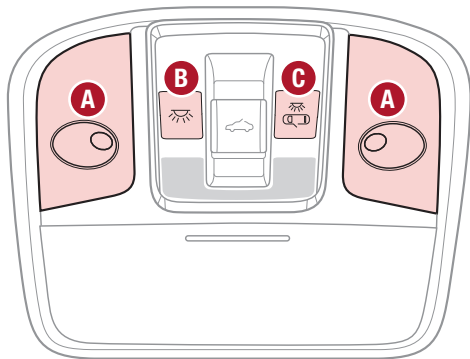

#### QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

**REMINDER:** When room lamp lens is pressed ON it will remain ON, even when the map lamp switch is in the OFF position.

See section 4 in the Owner's Manual for more information.

## Sunroof Operation\*

The sunroof and sunshade operation is controlled by a multi-directional switch/lever **A**. The ignition needs to be in the ON position to operate the sunroof/sunshade.

### To slide the sunshade and sunroof:

**Auto Open** – Push the lever **A** backward to the second detent position and release.

**Auto Close** – Push the lever **A** forward to the second detent position and release.

### To slide the sunshade only:

**Auto Open** – Push the lever **A** backward to the first detent position and release.

**Auto Close** – Push the lever **A** forward to the first detent position and release.

### Slide the sunroof (with sunshade open):

**Auto Open** – Push the lever **A** backward to the first detent position and release.

**Auto Close** – Push the lever **A** forward to the first detent position and release to close sunroof glass only. Push the lever **A** forward to the second detent position and release to close sunroof glass and sunshade.

### To tilt the sunroof:

**Raise:** Push and release lever **A** upward

**Lower:** Push and release lever **A** downward

### Auto-close sunroof and sunshade:

Slide the lever forward to the farthest position.

#### QUICK TIP

- To stop the sunroof/sunshade at any position, press or pull the sunroof control lever in any direction

#### REMINDERS:

- Sunshade must remain OPEN while sunroof is open
- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

See section 4 in the Owner's Manual for more information.

 
#### QR CODE

##### SUNROOF OPERATION VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

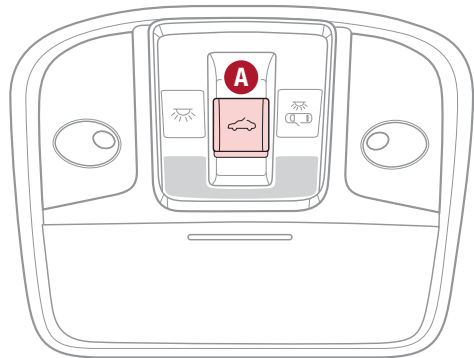

## HomeLink® with Auto-Dimming Rearview Mirror\*† 14

 - A** HomeLink® Channel 1 button 
- B** HomeLink® Channel 2 button 
- C** Status Indicator LED 
- D** HomeLink® Channel 3 button 
- E** Rear light sensor 
- F** Dimming ON/OFF button 
- G** Compass control button 
- H** Compass display 

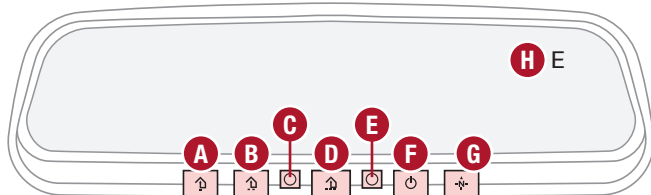

### Auto-Dimming Rearview Mirror

Designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location. Press the on/off button **F** to turn the auto-dimming function on or off.

**REMINDER:** Mirror indicator light will illuminate when automatic dimming is ON.

### How to Sync Transmitter

1. Press and release **A**, **B** or **D** button
  - If the indicator **C** flashes slowly in red, go to Step 3 (Programming)
  - If the indicator **C** is continuously turned ON or flashes rapidly in red several times, go to Step 2 (Erasing)
2. Press and hold the button you wish to erase the program for approximately 15-25 seconds until the LED flashes slowly in Red
3. Hold the Garage Door Opener Original Transmitter near the HomeLink Mirror
4. Press and hold the desired button (**A**, **B** or **D**) and the Original Transmitter button until the indicator **C** is turned on continuously or flashes rapidly in red. This indicates the programming is completed

### To complete programming of a Rolling Code garage door opener:

1. Firmly press and release the "Learn," "Smart," or "Program" button of the garage door opener while the indicator **C** flashes slowly in red. Once the button is pressed, you have approximately 30 seconds to initiate the next step
2. Return to the vehicle and firmly press and hold the HomeLink button for two seconds and release. Repeat this up to three times to complete the programming. Do not press the HomeLink button rapidly. At this point, programming is complete and your device should operate

**Operating HomeLink®:** Press one of the programmed HomeLink® buttons.

**Erasing programmed buttons:** Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, until the indicator light begins to flash, and then release both buttons within 30 seconds.

#### REMINDEERS:

- A ladder may be needed to access the garage door opener
- A second person may be needed to help
- Some of the steps are time sensitive

#### QR CODE

##### HOMELINK SUPPORT

To view this website on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

#### QUICK TIP

- If the indicator **C** flashes rapidly in red continuously, but if the garage door opener does not operate, please continue to follow Rolling Code Programming steps below

#### QUICK TIP

- Erasing programmed buttons will delete all trained transmitters

For more information, go to HomeLink.com or call (800) 355-3515.

See section 4 in the Owner's Manual for more information.

\*IF EQUIPPED  
†LEGAL DISCLAIMERS ON BACK INSIDE COVER

 
## Sunvisor<sup>†25</sup>

Use the sunvisor to shield direct light through the front or side windows.

Slide the sunvisor out and adjust as needed.

### REMINDERS:

- Sunvisor may not shield all direct light
- Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows
- Do not operate the vehicle if the sunvisor is impairing your visibility

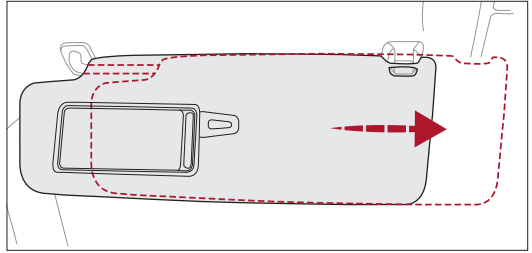

See section 4 in the Owner's Manual for more information.

## Hood Release Lever and Latch

### Opening the Hood:

 
1. Pull the hood release lever **A** to unlatch the hood
2. In the front of the vehicle, lift the hood slightly. Push the secondary latch **B** inside of the hood's center and lift the hood

### Closing the Hood:

Lower the hood about halfway and then press down to securely lock in place.



(Located on Driver side kick panel)

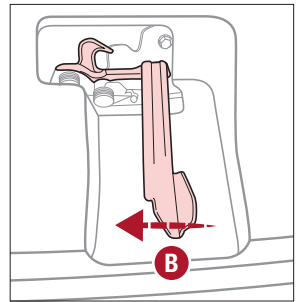

(Located inside of Hood's center)

See section 4 in the Owner's Manual for more information.

## Fuel Door Release Button


Press the Fuel Door Release button **C** to open the fuel door.

See section 4 in the Owner's Manual for more information.



 
(Button located on driver's panel, left of the steering wheel)

## Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent malfunction indicator  from illuminating.

### REMINDERS:

- The Fuel Filler Door Release button is located on the lower part of the driver's door sill
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

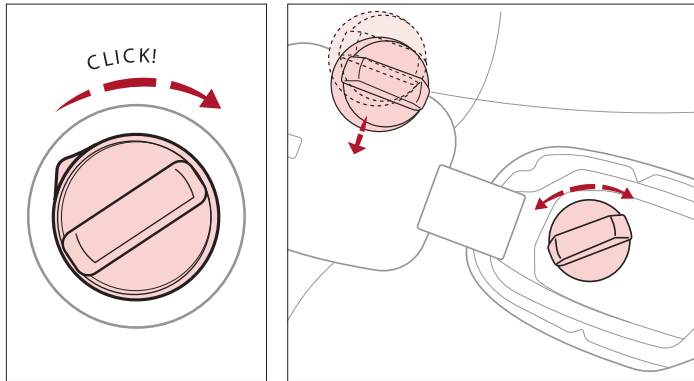

### QUICK TIP

- Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling

### QR CODE

#### ONE-CLICK FUEL CAP VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside cover for more information.

 


[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

See section 4 in the Owner's Manual for more information.

## Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors, move the Child-Protector Rear Door Lock located on the rear edge of the rear passenger doors to the lock position  to disable the inner door handles from opening the rear doors.

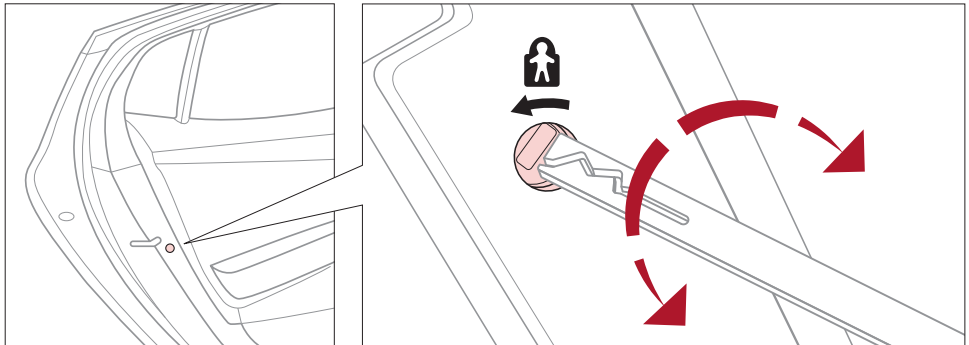

**REMINDER:** Child-Protector Rear Door Lock is located on rear passenger door jamb.

See section 4 in the Owner's Manual for more information.

## Seat Belts<sup>†2,20</sup>

 
### To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **B**

### Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

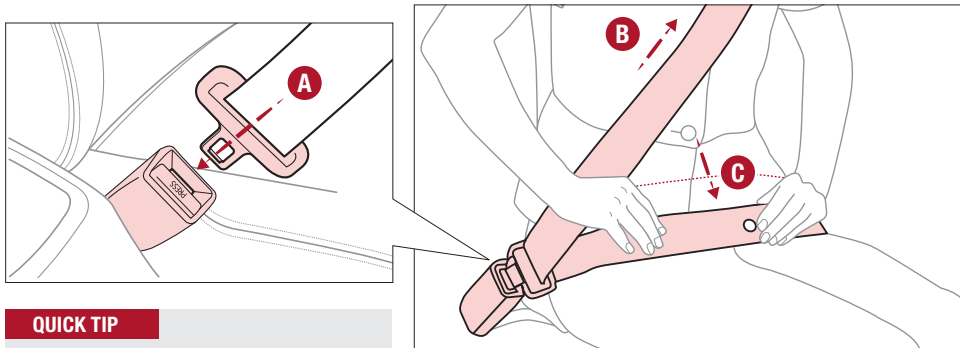

#### QUICK TIP

- The seat belt warning chime operates for the driver's seat only

**REMINDER:** For maximum protection, always wear your seatbelt

For more detailed information regarding your vehicle's safety belts, please refer to section 3 in the Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

 
## Occupant Detection System (ODS) / Passenger Airbag Off Indicator<sup>†2,17</sup>

ODS is designed to detect the presence and position of the front passenger and is designed to adjust or turn off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate **D**.

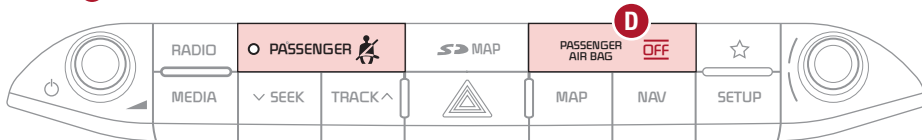

**REMINDER:** Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

See section 3 in the Owner's Manual for more information.

## STINGER NORMAL MAINTENANCE SCHEDULE TURBO

(up to 60,000 miles)<sup>A</sup>

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)			
	6,000	12,000	18,000	24,000
Add fuel additive <sup>C</sup>	P	P	P	P
Rotate tires	P	P	P	P
Engine oil and filter	R	R	R	R
Climate control air filter	R	R	R	R
Battery condition	I	I	I	I
Brake lines, hoses and connections	I	I	I	I
Disc brakes and pads	I	I	I	I
Vacuum hose	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I
Drive shafts and boots	I	I	I	I
Suspension mounting joints	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I
Propeller shaft	I	I	I	I
Exhaust pipe and muffler	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I
Air cleaner filter		I		R
Brake fluid		I		I
Fuel tank air filter <sup>†D</sup>		I		I
Parking brake		I		I
Vapor hose, fuel filler cap and fuel tank		I		I
Cooling System				I
Fuel lines, fuel hoses and connections				I
Differential oil, rear (without LSD) <sup>E</sup>				
Differential oil, rear (with LSD) <sup>E</sup>				
Differential oil, front (AWD) <sup>E</sup>				
Spark Plugs				
Valve clearance <sup>F</sup>				
Drive belts (First 60,000 miles, then every 12,000 miles) <sup>G</sup>				

† If equipped.

A. See the Owner's Manual for complete maintenance schedule.

B (next page). And, if necessary, adjust, correct, clean or replace

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depending on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

E. Front/rear differential oil should be changed anytime they have been submerged in water. When replacing differential oil with LSD, use only specified LSD oil.

F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.







## LEGAL DISCLAIMERS

**Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.**

**Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.**

 
**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. UVO eServices:** Purchase of certain new Kia vehicles includes complimentary access to UVO eServices (length of access period varies by vehicle model, trim and model year) starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary term of UVO eServices expires, your access to UVO eServices may immediately terminate. Use of UVO eServices is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO eServices transferrable to subsequent owner during the original UVO eServices service term. Only use UVO eServices when safe to do so. UVO eServices App is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO eServices at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO eServices features may vary by make, model year and trim level. Features and specifications are subject to change. For more on details and limitations, visit [owners.kia.com](https://owners.kia.com) or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply. Android Auto is a trademark of Google LLC.
- 4. Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Forward Collision-Avoidance Assist (FCA), Blind-Spot Collision Warning (BCW), Rear Cross-Traffic Collision Warning (RCCW), Lane Keeping Assist (LKA) / Lane Departure Warning (LDW), Rear View Monitor (RVM), Forward/Reverse Parking Distance Warning (PDW)\*, Smart Cruise Control (SCC) with Stop & Go:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 2 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 10. Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW):** These systems are not substitutes for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.
- 11. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 12. Google Play™ Store** is a trademark of Google, Inc. ©2020 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 13. Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 14. HomeLink®:** HomeLink® is a registered trademark of Genex Corporation.
- 15. iPhone®:** iPhone is a registered trademark of Apple Inc. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 16. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 17. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 18. Power Liftgate\* / Smart Liftgate®:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 19. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 20. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 21. Seat belts:** For maximum protection, always wear your seatbelt.
- 22. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 23. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2020 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 24. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 25. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 26. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 27. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.




# STINGER CUSTOMER DELIVERY CHECKLIST

## Key Feature Walkthrough

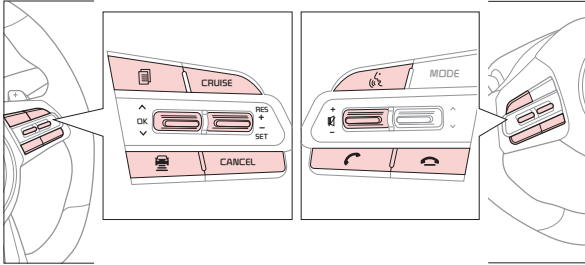


**Smart Cruise Control (SCC)\*** –  
page 24-25  
Demonstrate operation

 **Bluetooth® Wireless  
Technology** – pages 26-27  
Demonstrate operation

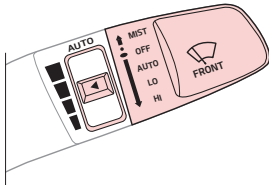

 **Windshield Wipers &  
Washers** – page 22

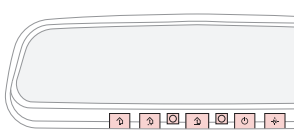

**Auto-Dimming Rearview Mirror  
with HomeLink®** – page 50

- Multimedia Ports, Power Outlets & USB Charger Port – page 32
- Blind-Spot Collision Warning (BCW)\* – page 12
- Digital Clock Setup – page 32
- Electric Parking Brake (EPB) / Auto Hold\* - pages 40-41
- Engine Start/Stop Button – page 19
- Head-Up Display (HUD)\* – page 09
- Sunroof Operation – page 49
- Forward/Reverse Parking Distance Warning (PDW)\* – page 37
- Passenger Air Bag Off Indicator – page 53
- Front Seat Headrest Adjustment\* – page 44
- Seat Warmers/Ventilated Seats – page 42
- Smart Key – page 45
- Sunvisor – page 51
- Tire Pressure Monitoring System (TPMS) – page 08

## During Delivery

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: \_\_\_\_\_

Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_

Date: \_\_\_\_\_

Customer: \_\_\_\_\_

Date: \_\_\_\_\_



# STINGER CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_

 
Mileage: \_\_\_\_\_ Dealership Name: \_\_\_\_\_

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_


## Before Delivery

- Confirm "Good Battery" with battery tester
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Smart Key\* lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio/video/navigation user's guides)


## Key Feature Walkthrough

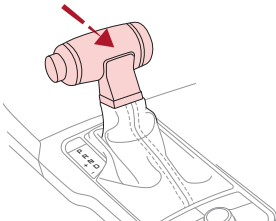

 - Automatic Transmission / Manual Shift Mode\* – page 36**



 - UVO eServices – page 30**  
For further system operation, refer to the Car Multimedia System User's Manual.
- UVO eServices Activation\* – page 28**



- Automatic Climate Control – page 35**  
Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed.



- UVO eServices with Premium Navigation System – page 31** For further system operation, refer to the Car Multimedia System User's Manual.
- Android Auto™ / Apple CarPlay® Setup\* – pages 29**

