

TELLURIDE

FEATURES & FUNCTIONS GUIDE



Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

Using this Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

Videos and QR Codes

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area - With some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app.

You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos.

QR CODE

ONE-CLICK FUEL CAP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to this page for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key	56
2	Fuel Filler Lid Release	62
3	Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	49
4	Seat Warmers / Ventilated Seats*	48
5	2nd & 3rd Row Seat / Folding	52-53
6	Wiper Service Mode	39
7	Front & Rear Windshield Wipers & Washers	39
8	Idle, Stop & Go (ISG) System	29
9	Smart Cruise Control (SCC) with Stop & Go	20
10	Highway Driving Assist (HDA)*	16
11	Rear Occupant Alert (ROA) with Ultrasonic Sensors*	51
12	Smart Power Liftgate*	54
13	Normal Maintenance Schedule	64
14	User Settings – Instrument Cluster	12
15	Vehicle Settings* – Audio Head Unit Screen	13
16	Bluetooth® Wireless Technology	40-41
17	UVO link Activation / UVO Assistance	45
18	UVO link* / UVO link with Navigation*	46-47
19	Android Auto™ / Apple CarPlay® Setup	44

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com

Consumer Affairs - Roadside Assistance¹¹⁸: 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

Instrument Cluster	04-10
Instrument Cluster Overview	04
Indicators & Warning Lights	05
Drive Mode Integrated Control System (AWD)*	06
All Wheel Drive (AWD) System*	07
Fuel Economy	08
Tire Pressure Monitoring System (TPMS)	09
Head-Up Display (HUD)*	10
Vehicle Settings	11-13
LCD Instrument Cluster Modes	11
Trip Information / Trip Computer	11
User Settings – Instrument Cluster	12
Service Interval Mode	13
Vehicle Settings* (Audio Head Unit Screen)	13
Advanced Driver Assistance Systems (ADAS)	14-22
Driver Attention Warning (DAW)	14
Safe Exit Assist (SEA)	14
Forward Collision-Avoidance Assist (FCA)	15
Highway Driving Assist (HDA)*	16
Blind-Spot Collision-Avoidance Assist (BCA)	17
Rear Cross-Traffic Collision-Avoidance Assist (RCCA)	18
Lane Keeping Assist (LKA)	19
Smart Cruise Control (SCC) with Stop & Go	20
Leading Vehicle Departure Alert (LVDA)*	21
Lane Follow Assist (LFA)	22
Driver's Panel	23-27
Instrument Cluster Control (Instrument Panel Dimmer)	23
Electronic Stability Control (ESC) / Traction Control System (TCS)	23
Hill-Start Assist Control (HAC)	23
Blind-Spot View Monitor (BVM) System*	24
Reverse Parking Aid Function	25
Power Liftgate Open/Close Button	25
Power Windows, Window Lock & Central Door Lock / Power Folding Outside Mirrors*	26
Electronic Child Safety Lock System	26
Heated Outside Mirrors / Auto Door Lock/Unlock	27
Engine Start/Stop Button	27
Center Panel	28-36
Clock / Multimedia USB Ports, Power Outlets & USB Charger Ports / AC Inverter*	28
Idle, Stop & Go (ISG) System	29
Automatic Climate Control System*	30
Manual Climate Control System*	31
Automatic Transmission / Manual Mode	32
Wireless Smartphone Charging System*	33

Center Panel (continued)

Parking Distance Warning-Reverse/Forward System*	33
Auto Hold	34
Electronic Parking Brake (EPB)	35
Surround View Monitor (SVM)*	36

Steering Wheel Controls 37-43

Cruise Control*	37
Headlights & High Beams / Turn Signals & Fog Lights*	38
Front & Rear Windshield Wipers & Washers / Lifting Wipers/Wiper Service Mode	39
Bluetooth® Wireless Technology	40
Tilt/Telescoping Steering Wheel / Heated Steering Wheel*	42
Audio Controls	43

Audio Systems 44-47

Android Auto™ / Apple CarPlay® Setup	44
UVO link Activation / UVO Assistance	45
UVO link*	46
UVO link with Navigation*	47

Seating 48-53

Seat Warmers / Ventilated Seats*	48
Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	49
Driver Position Memory System*	50
Rear Occupant Alert (ROA) with Ultrasonic Sensors*	51
2nd Row Seat / One-Touch Slide and Fold	52
3rd Row Seat - Folding	53
Unfastening Center Seat Belt	53

Other Key Features 54-62

 
 
Smart Power Liftgate*	54
Smart Key	56
Map/Room Lamps	57
Sunroof Operation*	58
Rear View Monitor System	59
HomeLink® with Auto-Dimming Rearview Mirror*	60
Sunvisor / Hood Release Lever and Latch	61
Fuel Cap/Malfunction Indicator (Check Engine Light)	62
Fuel Filler Lid Release	62

Safety Features 63

Seat Belts	63
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	63

Normal Maintenance Schedule 64**Legal Disclaimers** Inside Back Cover

Instrument Cluster Overview

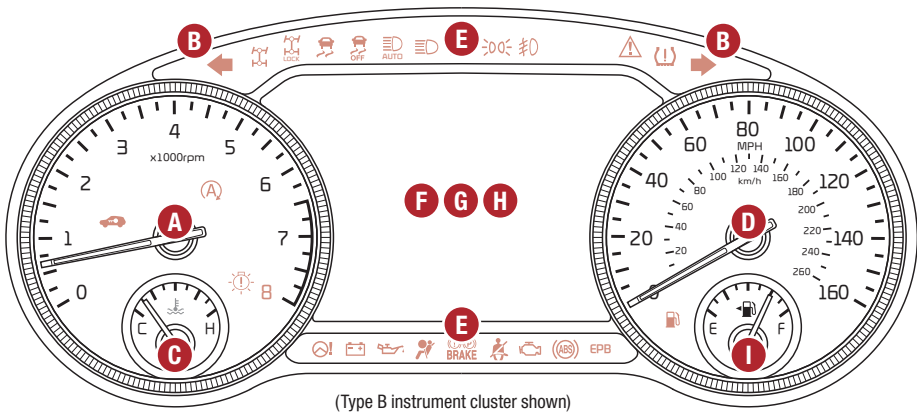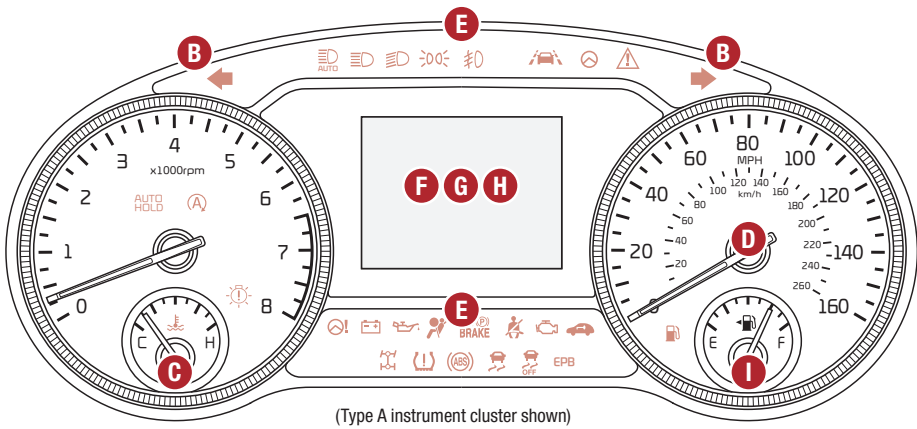

- A** Tachometer

B Turn Signal Indicators

C Temperature Gauge

D Speedometer

E Indicator & Warning Lights
- F** Gear Shift Position Indicator

G Odometer




































H Trip Computer

I Fuel Gauge

Arrow direction indicates the side of the vehicle the fuel door is located

See Section 4 in the Owner's Manual for more information.
 Your vehicle's instrument cluster & indicator lights may differ from those in the images.

Indicators & Warning Lights

	Headlight ON Indicator		Seat Belt Warning Light		Forward Collision-Avoidance Assist (FCA) Warning (or OFF) Indicator
	Parking Light ON Indicator		Parking Brake & Brake Fluid Warning Light		Electronic Brake Force Distribution (EBD) System Warning Light – (Two separate indicators on instrument cluster lit at same time)
	Cruise Indicator		Door Ajar Warning Light		ECO / SPORT / SMART / SNOW Mode Indicator
	Lane Keeping Assist (LKA) Indicator*		Airbag Warning Light		Master Warning Light
	Electronic Parking Brake Warning Light		Low Windshield Washer Fluid		High Beam Assist (HBA) Indicator*
	Immobilizer Indicator		Turn Signal Indicators		Front Fog Light Indicator*
	High Beam Indicator		Anti-Lock Braking System (ABS) Warning Light		Idle, Stop & Go (ISG)
	LED Headlamp Warning Light*		Auto Hold Indicator Light*		AWD System Warning Light*
	Electronic Stability Control (ESC) Warning Light		Charging System Warning Light		AWD LOCK Indicator Light*
	Electronic Stability Control (ESC) OFF Light		Cruise Set Indicator		
	Malfunction Indicator Light		Engine Oil Pressure Warning Light		
	Low Tire Pressure Indicator / Tire Pressure Monitoring System (TPMS) Malfunction Light		Engine Coolant Temperature Warning Light		
			Low Fuel Level Warning Light		
			Electric Power Steering (EPS) Warning Indicator		

See Section 4 in the Owner's Manual for more information.

Your vehicle's instrument cluster & indicator lights may differ from those in the images.

Drive Mode Integrated Control System (AWD)*

SMART, SPORT, COMFORT, ECO and SNOW drive modes may be changed according to the driver's preference or road conditions. To change the drive mode, rotate the DRIVE MODE knob **A**.

 
SMART Mode – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style. A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator* (green, white, red) depends on the current driving style. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

SPORT Mode – A red SPORT indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

COMFORT Mode – The system's default mode is COMFORT mode and is not displayed on the instrument cluster nor the audio system's screen.

ECO Mode – A green ECO indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

SNOW Mode – SNOW mode is designed to distribute the vehicle's traction forces to help reduce or prevent wheel slippage when driving on snowy or slippery roads. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

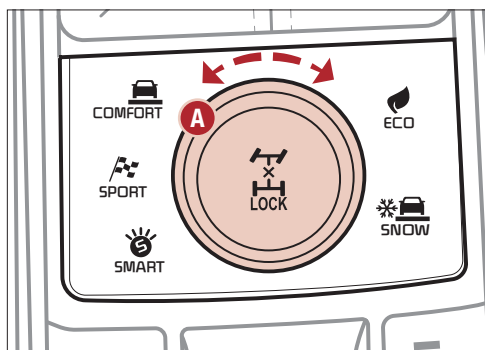

(Center Console below Gear Shift)



(Instrument Cluster LCD shown.
Actual images may vary)

QR CODE

DRIVE MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIP

When the Engine Start/Stop button is cycled off then on again, the system defaults to COMFORT mode from SPORT mode. When in other modes, it returns to its previous setting.

See section 5 in the Owner's Manual for more information.

REMINDERS:

 
- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- Steering effort may be slightly increased in SPORT mode

All Wheel Drive (AWD) System*

The AWD system helps the vehicle's performance by delivering engine power to the front and rear wheels.

AWD Auto – If the system determines AWD is needed, then it will automatically engage and distribute power to all the wheels (AWD Lock button NOT pressed).

AWD Lock – If the AWD Lock button is pressed **A**, then the AWD system will operate until the AWD Lock button is pressed again. When the AWD Lock is engaged, an equal amount of torque is transferred to the front and rear wheels.

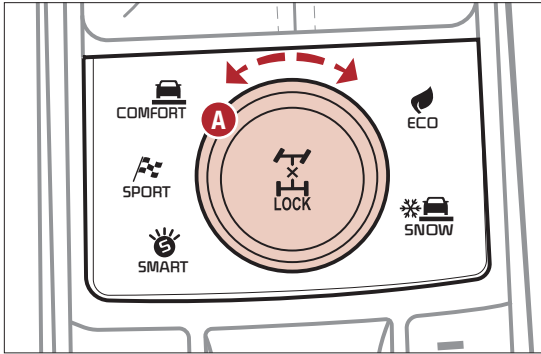

REMINDERS:

- AWD Lock Mode operates when the vehicle is traveling at 25 mph or less
- When the vehicle is traveling faster than 25 mph, the system will switch to AWD Auto mode. When the vehicle is at 20 mph or slower, the system will switch back to AWD Lock

See section 5 in the Owner's Manual for more information.

Fuel Economy

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to section 5 in the Owner's Manual.

QR CODE


FUEL ECONOMY VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
 
Tire Pressure Monitoring System (TPMS)^{†26}

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator **A**.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, if a spare tire has been installed that does not have a TPMS device, or when the outside temperature drops considerably.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator **B** showing which tire(s) is underinflated.

- Inflate tire(s) to specifications using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute and then illuminate. See dealer for service

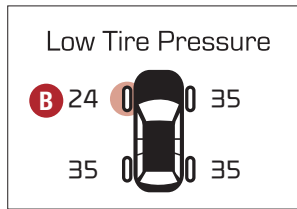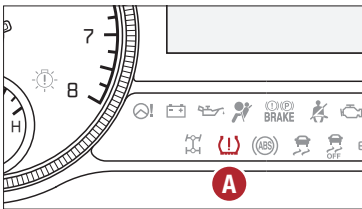

QR CODE

TIRE PRESSURE MONITORING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressure and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate


Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.

Head-Up Display (HUD)*†12

The Head-Up Display (HUD) is a semi-transparent display that projects a snippet of information from the instrument cluster and navigation system* onto the windshield glass. To turn the HUD ON or OFF, go to User Settings in the LCD Modes.

The HUD displays:

 - Turn By Turn (TBT) navigation information*
- Road signs*
- Speedometer
- Cruise setting speed*
- Smart Cruise Control (SCC) information*
- Blind-Spot Collision Warning (BCW) system information*
- Lane Keeping Assist (LKA) information*
- Highway Driving Assist (HDA) system information*
- HDA system steering control information*
- HDA system automatic speed setting information*
- Warning lights (low fuel)
- AV mode information

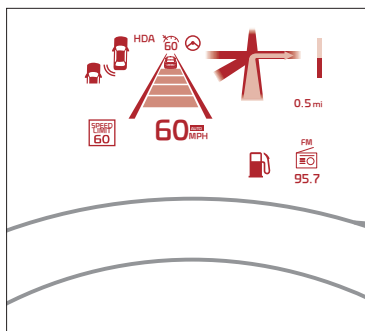

The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Head-Up Display (HUD) User Settings

Drivers can adjust the HUD settings from the LCD Instrument Cluster modes in User Settings. HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Selection: Activate or deactivate HUD content
- Speed Size: Choose the size of the HUD speedometer
- Speed Color: Choose the color of the HUD speedometer






REMINDERS:

 
- The HUD image on the windshield glass may not be visible in these cases:
 - The driver has poor sitting posture
 - The driver is wearing polarized sunglasses
 - There is an object covering the HUD
 - Driving on a wet road
 - Excessive lighting inside or outside the vehicle
- Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
- If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD

See section 4 in the Owner's Manual for more information.

LCD Instrument Cluster Modes*

The LCD Instrument Cluster modes can be changed by using the mode button **A** on the right side of the steering wheel.

-  **Trip Computer Mode:** Displays the fuel economy, drive and accumulated info, speedometer and drive mode
-  **Turn-by-Turn Mode*:** Displays the route guidance and destination info
-  **Assist Mode:** Displays the Lane Safety, Driver Attention Warning, AWD and TPMS info
-  **User Settings Mode:** Change settings of the Head-Up Display, Driver Assistance, doors, lights, sound, convenience, service interval, other features, language and reset
-  **Master Warning Mode:** Displays warning messages related to the vehicle when one or more systems is not operating normally

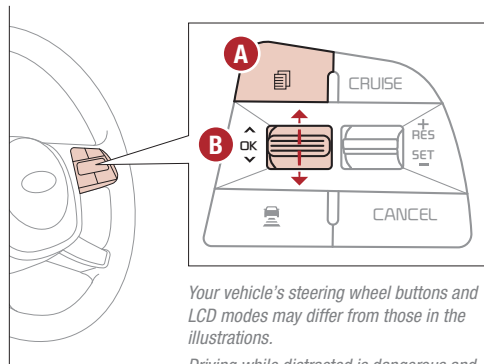

Your vehicle's steering wheel buttons and LCD modes may differ from those in the illustrations.


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

See section 4 in the Owner's Manual for more information.

Trip Information / Trip Computer

The Trip Computer is a driver information system that displays information related to driving when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A** on the right side of the steering wheel.

 
When in the Trip Computer mode , press the Select/Reset (OK) button **B** to cycle through the menu. When displaying TRIP A or TRIP B screens, press and hold the **OK** button **B** to reset the Tripmeter to zero.

REMINDERS:


- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

See section 4 in the Owner's Manual for more information.


Trip Computer modes:

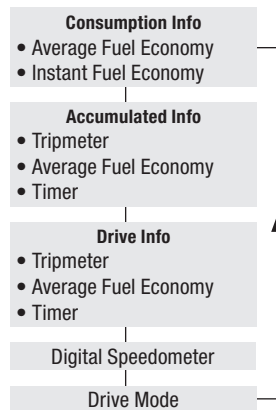

User Settings – Instrument Cluster

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill, shift lever in Park, and with the Engine Start/Stop button in the ON position and select User Settings .

 You can navigate the selections on the display by pressing the Select/Reset (OK) button **B** up or down, and then pressing again to enter.

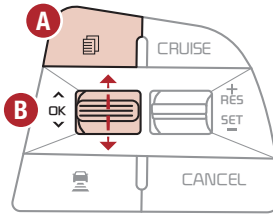

(Button layout on right of steering wheel)

User Settings Modes:

Head-Up Display (HUD)*: Enable HUD, Display Height, Rotation, Brightness, Contents Selection, Speedometer Size, Speedometer Color

Driver Assistance: Smart Cruise Control Response, Driver Assist, Driver Attention Warning, Warning Timing, Warning Volume, Lane Safety, Forward Safety, Blind-Spot Safety, Parking Safety

Door/Liftgate: Automatic Lock, Automatic Unlock, Two-press Unlock*, Power Liftgate*, Power Liftgate Speed*, Smart Power Liftgate*

Lights: One-Touch Turn Signal, Headlamp Delay

Sound: Welcome Sound*

Convenience: Seat Easy Access*, Rear Occupant Alert, Welcome Mirror/Light*, Wiper/Light Display*, Auto Rear Wiper, Gear Position Pop-Up, Icy Road Warning

Service Interval: Enable Service Interval, Adjust Service Interval, Reset

Other: Fuel Economy Auto Reset, Speed Unit, Fuel Economy Unit, Temperature Unit, Tire Pressure Unit

Language: Select the language

Reset: Reset User Settings to factory default

See section 4 in the Owner's Manual for more information.

QR CODE

LCD DISPLAY VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

Service Interval Mode

When Service Interval Mode is activated and set, and vehicle service is required, the LCD will display the message **Service Required** and the remaining days/miles until service is due.

Service Interval Mode ON and Interval Setting

To activate Service Interval Mode and set the interval, press the Mode button **A**, scroll to User Settings  and press Select/Reset (OK) button **B** to enter. Then press the **OK** button **B** up/down to scroll to Service Mode and again to enter. Press **OK** button **B** up/down to select the option to set the interval. Adjust interval and press **OK** button **B** to save. To reset the Service Mode system, press and hold the **OK** button **B** for more than 1 second.

Service Interval Mode Off

To turn Service Required OFF, go to User Settings and scroll to Service Interval Mode, press **OK** button **B** to enter. Select option to deactivate and press **OK** button **B** to save.

See section 4 in the Owner's Manual for more information.

QR CODE

LCD DISPLAY: MAINTENANCE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Vehicle Settings* (Audio Head Unit Screen)

To enter the Vehicle Settings mode in the audio head unit screen, press the SETUP key. Then press VEHICLE, which will take you to the Vehicle Settings screen. Use the touchscreen to navigate through the menus.

 


Vehicle Settings modes:

Drive Mode: Drive Mode Change Alert (Detailed Alert, Simple Alert, None)

Climate: Auto Defog System, Rear Climate Controls, Automatic Ventilation

Lights: Ambient Light – Brightness, Color

Seat/Steering Wheel: Seat Position Change Alert, Heated/Ventilated Features > Auto Comfort Control (Steering Wheel Warmer, Seat Warmer/Ventilation)

		Menu
 Vehicle Settings		
Drive Mode	Drive Mode Change Alert Detailed Alert	
Climate		
Lights		
Seats/Steering		

For more information, refer to the Car Infotainment System Quick Reference Guide.

Driver Attention Warning (DAW)^{†7}

The DAW system is designed to detect inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.


To turn the DAW system ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driver Assistance and select Driver Attention Warning. Set the DAW system to Normal or High Sensitivity.

Driver Attention Warning (DAW) System modes:

Normal Sensitivity: The Driver Attention Warning system alerts the driver if it detects driver fatigue or inattentive driving practices.

High Sensitivity: The Driver Attention Warning system alerts the driver if it detects driver fatigue or inattentive driving practices faster than Normal mode.

 
 
 
Off: The Driver Attention Warning system is deactivated **A**.

If the DAW system is activated, the DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below one bar **C**.

REMINDERS:

- The setup of the DAW system will be maintained, as selected, when the ignition is cycled
- When activated, the DAW system does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- The DAW system will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

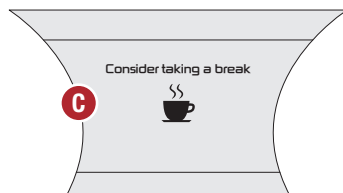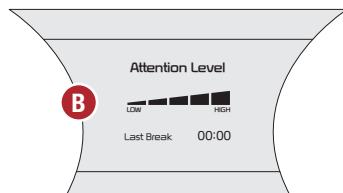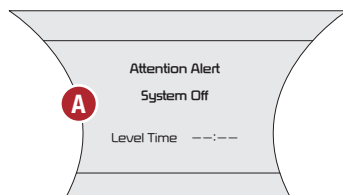


Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

See section 5 in the Owner’s Manual for more information.

Safe Exit Assist (SEA)^{†6}

The Safe Exit Assist (SEA) system can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped.

 To turn on the SEA system, go to User Settings menu, select Driver Assistance, then Blind-Spot, and select Safe Exit Assistance.

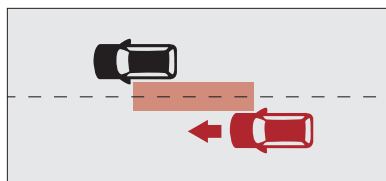

See section 4 in the Owner’s Manual for more information.

ADAS

Forward Collision-Avoidance Assist (FCA)^{†6}

FCA is designed to help alert the driver and, under certain conditions, apply emergency braking when rapidly approaching a vehicle that is slowing down, braking or stopped or if it detects a pedestrian in front of the vehicle. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front, emitting an audible warning and visual alert on the instrument cluster **A**.

If the system detects that the collision risk has increased, the FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

 
FCA can be enabled by going to the User Settings > Driver Assistance > Forward Safety and selecting Active Assist, Warning Only or Off.

The Warning Time can be adjusted by going to User Settings > Driver Assistance > Warning Time and Normal or Late.

FCA/FCW will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

Instrument Cluster LED Warning Messages:

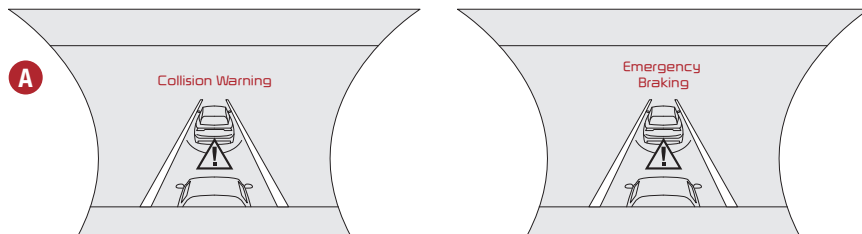

QR CODE

FORWARD COLLISION AVOIDANCE ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

QUICK TIP

The FCA Warning Volume can be adjusted in the Vehicle Settings* on the audio head unit.

REMEMINDERS:

- FCA/FCW will be activated by default when the ignition is cycled ON, even when the previous setting was OFF
- FCA/FCW will not operate when the vehicle is traveling faster than approximately 45/50 mph, respectively
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When the FCA system is off, the FCA warning indicator is on in the Instrument Cluster 

The Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW) systems are not substitutes for safe and proper driving. Always drive safely and use Caution.


FCA and FCW may not always alert the driver when the vehicle is approaching another vehicle.


Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

Highway Driving Assist (HDA)*†6

 The Highway Driving Assist (HDA) system is designed to adjust the speed of the vehicle when driving on limited/controlled access highways. The system can adjust the vehicle's speed based on available highway speed information. The automatic speed setting mode is designed to set the speed automatically by adjusting to the current speed limits of the highway vehicle is traveling on.

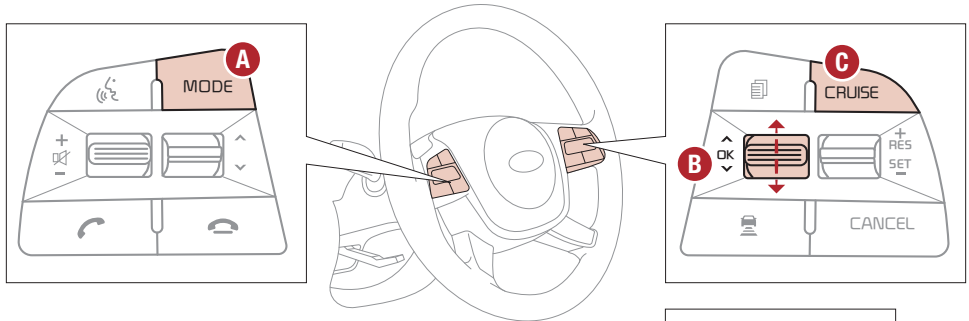

To turn the HDA system on, go to User Settings  **A** in the Instrument Cluster. Go to Driver Assistance > Driving Assist > Highway Driving Assist and press the OK button **B** on the Steering Wheel.

To activate the HDA, turn Smart Cruise Control (SCC) on by pressing the Cruise button on the Steering Wheel controls **C**.

The HDA system will operate only when these conditions are met:

- The vehicle is traveling slower than 95 mph
- When driving on federal highways
- When the SCC is on and operating
- When the SCC speed is set to current federal highway speed

 
When the HDA system is activated and the conditions are met, the Instrument Cluster indicator light **D** will illuminate green. If the conditions are not met, the HDA system will be in standby mode and the indicator light **D** will illuminate white.

When in operation, and if both lanes are recognized, a display **E** will show the lanes illuminated white and the steering wheel indicator illuminated green.

If HDA is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit or slower), the HDA system will enter the automatic speed setting mode. The set speed and AUTO will be displayed **F** in green and an audible alert will sound.

REMINDERS:

- Current highway speeds and controlled or limited access road information may vary. Future navigation updates may change this information
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode
- When the ignition is cycled, the system returns to its previous state, on or off

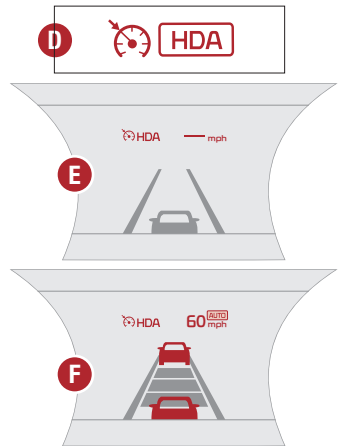

Images are for illustrative purposes only and may not reflect actual feature or operation.

Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. See the Owner's Manual for more detailed information, limitations and conditions.

See section 5 in the Owner's Manual for more information.

Blind-Spot Collision-Avoidance Assist (BCA)^{†6}

The BCA system is designed to help alert the driver before changing lanes. The BCA system uses a camera on the front windshield and rear radar sensors in the rear bumper to help alert the driver and temporarily apply braking in certain situations if it detects an approaching vehicle in the driver's blind spot area.

To activate the BCA system, go to User Settings by pressing the Mode button on the Steering Wheel. Select Driver Assistance > Blind Spot Safety and then press the OK button. Select Active Assist, Warning Only or Off.

Warning Only – The Warning Only setting will activate the 1st and 2nd stage alerts:

 
1st-stage: When another vehicle is detected within the BCA system warning boundary **B** a yellow indicator will illuminate on the outside rearview mirrors **C**.

2nd-stage: When the 1st stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.


To set the initial warning activation time, go to the settings > Driver Assistance > Warning Time. Then select the Normal or the Late option.

Active Assist – When Active Assist is selected in the settings, the BCA may activate the Electronic Stability Control (ESC) and temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle. A warning message may appear on the Instrument Cluster LCD.

Deactivate the BCA system by pressing the BCA off button **A** on the Driver's Panel.



 (Button located on driver's panel, left of the steering wheel)

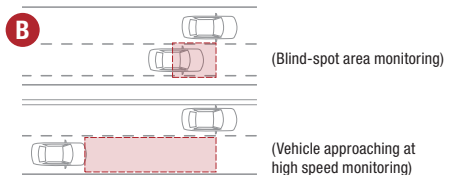

The BCA system is not a substitute for safe and proper driving. Always drive safely and use caution.

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

The images above are for illustrative purposes only and may not reflect actual feature or operation.

QUICK TIPS

- The BCA Warning Volume can be adjusted in the Vehicle Settings* on the audio head unit
- The BCA system will activate when:
 - The system is turned on
 - Warnings: When the vehicle is traveling faster than 20 mph
 - Active Assist: When the vehicle is traveling at least 40 mph
- Other vehicles are detected on the rear sides of the vehicle

QR CODE

BLIND-SPOT COLLISION-AVOIDANCE ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to the inside cover for more information.



www.youtube.com/KiaFeatureVideos

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)^{†6}

If the RCCA system sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster screen **B**.

RCCA may temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle.

RCCA is designed to operate under the following conditions:

 
 
- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

QUICK TIP

- The RCCA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit

REMINDERS:


- The RCCA feature can be turned OFF/ON in User Settings, under Driver Assistance, Parking Safety
- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling between 2.5 and 22 mph, the RCCA system will show a warning
- The RCCA system is a supplemental system. Do not solely rely on these systems and always pay attention to the road and its conditions

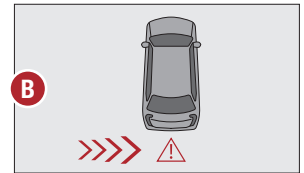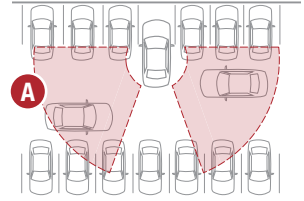

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

Lane Keeping Assist (LKA)^{†6}

With the Engine Start/Stop button* in the ON position, press the LKA button **A** to turn the system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning (LDA) alert on the instrument cluster **B**. If the vehicle continues to move outside of the lane, LKA may apply steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the LKA button is depressed to ON. To switch between LKA modes (Lane Keep Assist, Lane Departure Warning), go to User Settings in the instrument cluster.

All systems will operate under the following conditions:

 
- The vehicle speed exceeds approximately 40 mph
- The LKA system recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIP

- The LKA Warning Volume can be adjusted in the Vehicle Settings on the audio head unit

REMINDERS:

- LKA/LDW will not issue a warning if the turn signal or hazard signal is activated
- LKA/LDW will return to its previous state when the ignition is cycled
- LKA/LDW are not substitutes for safe and proper driving. Always drive safely and use caution
- LKA/LDW may not always alert the driver if the vehicle is about to be driven outside of its lane. Always drive safely and use caution.

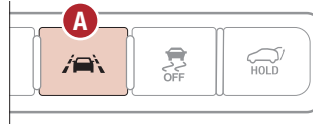

(Button located on driver's panel, left of the steering wheel)

 
QR CODE

LANE KEEPING ASSIST VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




www.youtube.com/KiaFeatureVideos

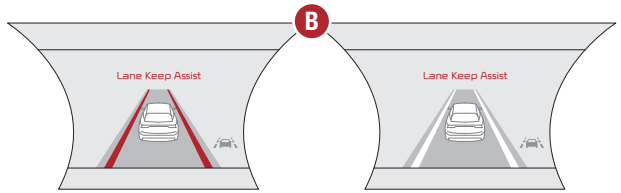

When the front camera detects the lane traveling in, both lanes are illuminated

 When the front camera does **not** detect the lane traveling in, the lanes are not illuminated

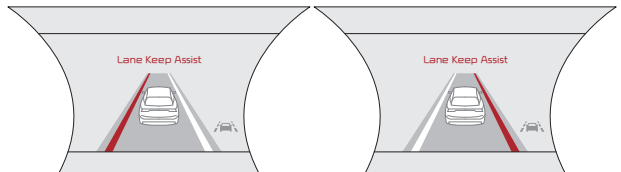

When the front camera detects the vehicle moving outside of the lane traveling in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 5 in the Owner's Manual for more information.

Smart Cruise Control (SCC) with Stop & Go^{†6}

The Smart Cruise Control (SCC) with Stop & Go system is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With SCC on and activated, the vehicle-to-vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

To set/adjust the SCC speed:

- Accelerate/decelerate to the desired speed
- Press the CRUISE button **A** to turn the system ON. The CRUISE indicator will illuminate on the instrument cluster
- Press the SET - button **B** to set the speed. Press the RES+/SET- button **B** up/down to increase/decrease the set speed

To set the vehicle-to-vehicle distance:

- Press the SCC button **C** on the steering wheel
- Each time you press **C** the vehicle-to-vehicle distance will change **D**, indicated by the number of bars that appear on the display **E**

To cancel SCC operation: Press the CANCEL button **F** or press the brake pedal. The LCD screen will display a message that the SCC operation is canceled.

To turn SCC system OFF: Press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

To adjust the sensitivity of the SCC system: Press the mode button **G** on the Steering Wheel. With the OK button **H**, select Drive Assistance, then SCC Response. Then select Fast, Normal or Slow.

 
 
QR CODE

SMART CRUISE CONTROL WITH STOP & GO VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

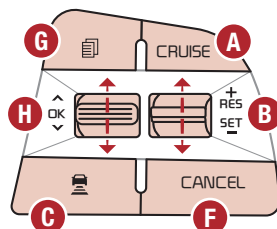

 (Distances are approximate and vary depending on vehicle speed)

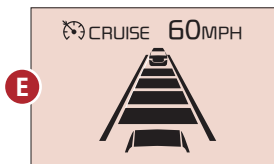

(Display on LCD screen)

QUICK TIPS

- The speed setting for the SCC can be adjusted under the following conditions:
 - You must be traveling at a minimum speed of 20 mph
 - When following a vehicle, there is no minimum speed requirement
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected ahead. If the vehicle detected remains at a standstill for more than 3 seconds, the system will disable
- To change the cruise control mode from SCC to standard cruise control, press and hold button **C**. Repeat to switch back to SCC mode (The SCC system must not be activated to change modes)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

See section 5 in the Owner's Manual for more information.

Smart Cruise Control (SCC) with Stop & Go^{†6} (Continued)

REMINDERS:


- CRUISE indicator must be ON in order to operate SCC
- The cruise control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starting
- The SCC system remains ON when ignition is cycled. The speed setting will need to be reset when ignition is cycled
- When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected in front
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

 
 
 
Leading Vehicle Departure Alert (LVDA)^{*†6}

If your vehicle comes to a stop while SCC is in operation, a message **A** will appear on the Instrument Cluster within three seconds.

When the vehicle detects that the leading vehicle is driving away, the LVDA system sounds an alert to let you know you can start driving. You can depress the accelerator or use the SCC RES+/SET- button **B** to start accelerating.

If no action is taken after the vehicle in front drives away, then a message **C** will appear on the Instrument Cluster.

To turn the system on, go to User Settings  in the Instrument Cluster. Press the MODE button **D** on the Steering Wheel, go to Drive Assistance > Driving Assist > Leading Vehicle Departure Alert and press the OK button **E** on the Steering Wheel.

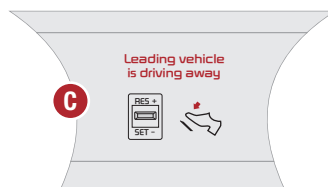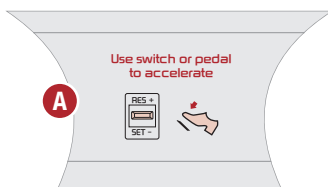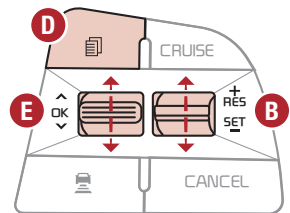

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

 
Lane Follow Assist (LFA)^{†6}

The Lane Follow Assist (LFA) system monitors lane lines and adjusts the steering to help position the vehicle in the center of the lane.


To activate or deactivate the LFA system, go to User Settings in the Instrument Cluster by pressing the Mode button on the Steering Wheel. Select Driver Assistance > Driving Assist > LFA (Lane Follow Assist) and press the OK button **A** on the Steering Wheel.

The LFA system will operate only when these conditions are met:

- When the SCC is on and operating
- The vehicle is traveling slower than 95 mph

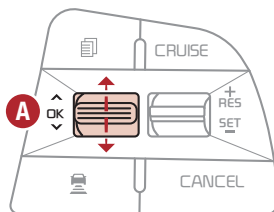

(Button on right of steering wheel)

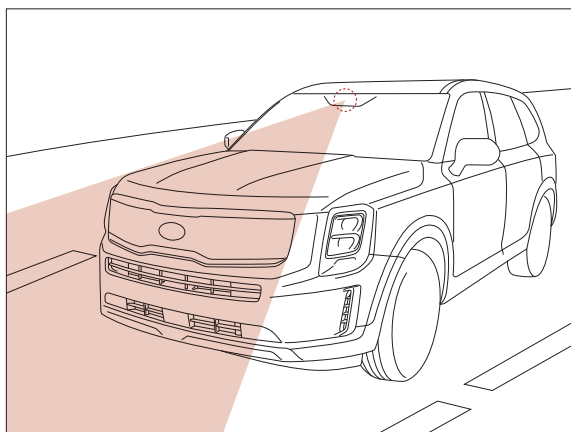 

REMINDERS:


- If the ignition is cycled, LFA returns to its previous state, on or off
- The LFA system is not a substitute for safe and proper driving. Always drive safely and use caution
- The LFA system recognizes the lane the vehicle is traveling in

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Instrument Cluster Control (Instrument Panel Dimmer)

 With the Engine Start/Stop button on or the parking lights/headlights on, press **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

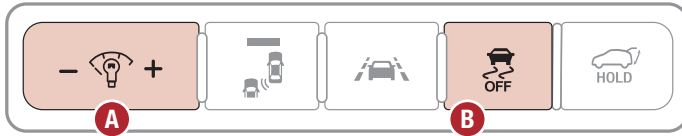

(Button located on driver's panel, left of the steering wheel)

See section 4 in the Owner's Manual for more information.

Electronic Stability Control (ESC)^{†8} / Traction Control System (TCS)^{†8}

Electronic Stability Control (ESC) is designed to help stabilize the vehicle during certain cornering maneuvers. The Traction Control System (TCS) can help improve traction. It is a good idea to keep both ESC and TCS turned on for daily driving whenever possible.

Press the ESC button **B** to turn the Traction Control System OFF/ON.

To turn both Electronic Stability Control and the Traction Control System OFF, press and hold the ESC button for more than 3 seconds. Press again to turn ON.

REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC indicator light in the instrument cluster will be lit momentarily whenever ESC is active

See section 5 in the Owner's Manual for more information.

QR CODE

ELECTRONIC STABILITY CONTROL (ESC) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Hill-Start Assist Control (HAC)^{†8}

Hill-Start Assist Control (HAC) is designed to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

HAC automatically activates whether ESC is OFF or ON but does NOT activate when ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a two-second delay before the vehicle may start rolling backwards


REMINDERS:

- HAC does not operate when the gear shift is in P (Park) or N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service

See section 5 in the Owner's Manual for more information.

Blind-Spot View Monitor (BVM) System*†6

 
The Blind-Spot View Monitor (BVM) system is designed to display the rear and side of the vehicle blind spot areas in the Instrument Cluster LCD when the system is activated.

To turn the BVM system on, go to User Settings  in the Instrument Cluster by pressing the Mode button **A** on the Steering Wheel. Select Driver Assistance > Blind-Spot Safety > Blind-Spot View and press the OK button **B**.


The BVM system will operate when the Engine Start/Stop button is on and the turn signal is activated.

The BVM system will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

See section 4 in the Owner's Manual for more information.

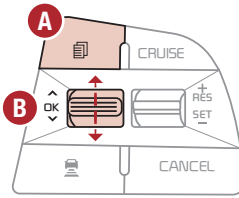

 (Buttons located on right side of the steering wheel)

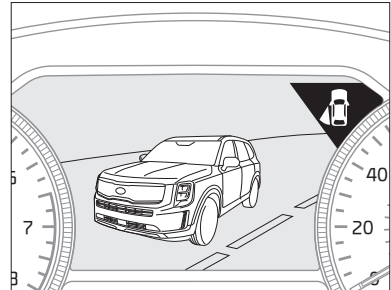

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
Reverse Parking Aid Function†6

When the gear shift lever is moved into R (Reverse) and the vehicle is moving backwards, the outside rearview mirrors will rotate downward to aid in reverse parking.


To turn the Reverse Parking Aid Function ON, move switch **A** to either the right or to the left. To turn OFF, move switch to the center position.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved out of R (Reverse)
- The outside rearview mirror switch is in the center position

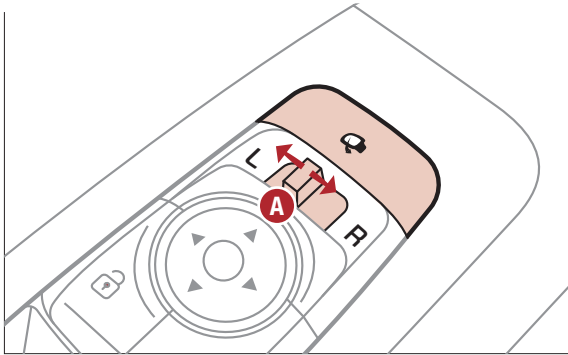

 
See section 4 in the Owner's Manual for more information.

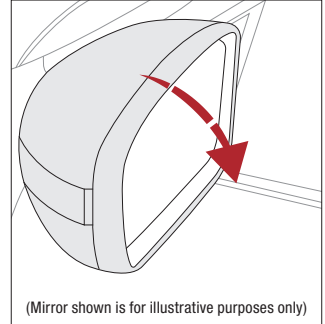

REMINDER: When the buttons are not pressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Power Liftgate Open/Close Button*

 Press and hold the Power Liftgate Open/Close button **B** to open or close the Liftgate automatically.

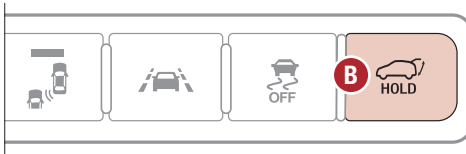


(Button located on driver's panel, left of the steering wheel)

REMINDEES:

- The Engine Start/Stop button needs to be on
- The Gear Shift needs to be in (P) Park

See section 4 in the Owner's Manual for more information.

 Power Windows, Window Lock & Central Door Lock

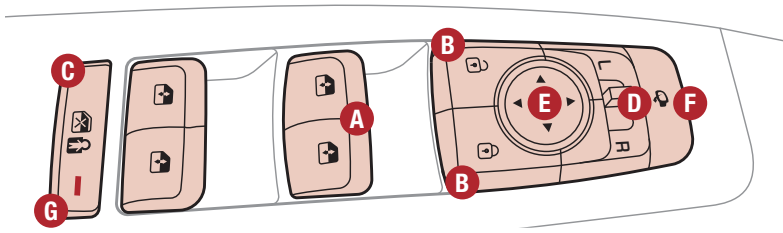

- A** Pull/Press to operate driver and front passenger's window auto up/down
- B** Press to unlock/lock all doors
- C** Press to disable the rear passenger window controls

QUICK TIPS

- Pull/Press button **A** again to stop Auto Up/Down function
- Auto Door Lock/Unlock* will engage when gear shift is moved into or out of the P (Park) position
- To turn Auto Door Lock/Unlock* OFF, go to User Settings* in the LCD Instrument Cluster Modes

REMINDER: When you press **C**, the rear window controls for the Rear Passenger Windows are disabled.

Button configuration may vary depending on vehicle model.

See section 4 in the Owner's Manual for more information.

Power Folding Outside Mirrors*

- D** Toggle switch **D** to the L or R to select the left or right mirrors
- E** Press button arrows left/right or up/down to adjust mirror position
- F** Toggle button left/right to unfold/fold the outside rearview mirrors
- F** Toggle button to center to automatically fold/unfold mirrors when:
 - Smart Key lock/unlock buttons are pressed
 - Outside door handle button is pressed
 - Driver approaches the vehicle with the Smart Key (if activated in User Settings)

QUICK TIP

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle (if activated in User Settings)

See section 4 in the Owner's Manual for more information.

REMINDERS:

- When the mirror toggle button is in the center, press the lock button twice on the Smart Key to automatically fold mirrors when exiting vehicle
- To lock the mirror position, toggle button to the neutral (center) position

Electronic Child Safety Lock System

Press **C** to lock the rear passenger doors. An indicator will illuminate **G** showing the system is active. This system is on by default, and then activated once the button **C** is pressed. To deactivate, press the button again.

REMINDER: When activated or button is pressed, the rear passenger windows will not operate from the rear controls.

See section 4 in the Owner's Manual for more information.

Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button is located on the climate control system panel.

See section 4 in the Owner's Manual for more information.

Auto Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

See section 4 in the Owner's Manual for more information.

 
Engine Start/Stop Button^{†9}

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while the gear shift is in P (Park) or N (Neutral)

To turn the engine OFF, press the ENGINE START/STOP button while the gear shift is in P (Park).

To use the ENGINE START/STOP button, you must have the Smart Key on your person or inside the vehicle.

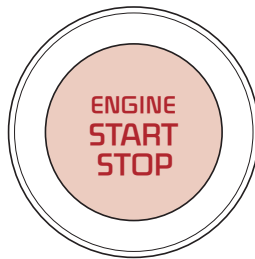

QR CODE

ENGINE START/STOP BUTTON AND SMART KEY VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- To use electrical accessories:
 - ACC position
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once
 - ON position
 - When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice
- Keeping the vehicle in the ACC or ON position too long can discharge the vehicle's battery

REMINDERS:

- If the Smart Key fob battery is dead, you can still start the engine by pressing the ENGINE START/STOP button with the Lock-button end of the Smart Key. The Smart Key must contact the ENGINE START/STOP button directly, at a right angle
- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds

See section 5 in the Owner's Manual for more information.

Clock

Select the SETUP key on audio head unit. Select General, then scroll to and select DATE/TIME, and adjust.

REMINDEERS:

- Daylight Savings must be enabled or disabled on the Clock Settings screen
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO link with Navigation*)

 
Refer to the Car Infotainment System Quick Reference Guide for more information.

Multimedia USB Ports, Power Outlets & USB Charger Ports

Power Outlets A: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

Multimedia USB Port B: Use the USB port to connect USB audio devices and smartphone devices.

USB Charger Ports C: Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger.

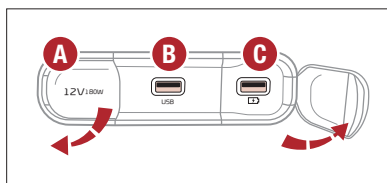

(Located in center panel in front of gearshift)

QUICK TIPS

- The power outlets are inactive when the ignition is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets A. USB Charger does not support data transfer

REMINDEERS:

 
- Using the power outlets (accessory plugs) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Only use manufacturer cables that came with your device as third party cables may cause damage to the device
- The Multimedia USB Port B in the center panel charges more slowly than the USB Chargers C throughout the vehicle

See section 4 in the Owner's Manual for more information.

AC Inverter*

The AC Inverter supplies 115V/100W electrical power to operate accessories or equipment. Press the AC Inverter button to activate.

See section 4 in the Owner's Manual for more information.

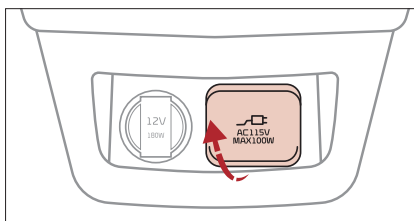

(Located behind center console)

 
Idle, Stop & Go (ISG) System

The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator (A) (A) on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When the engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG system, press the ISG OFF button (B). If you press it again, the system will be activated.

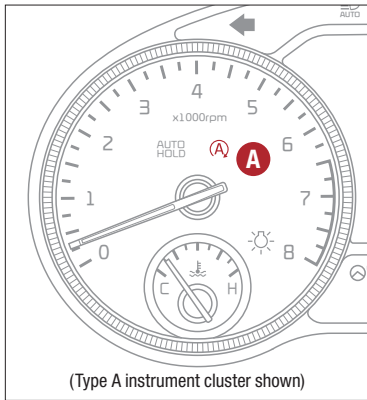

QR CODE

IDLE, STOP & GO VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope


REMINDERS:

- ISG is active by default at vehicle startup. When the ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator (A) is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 Automatic Climate Control System*

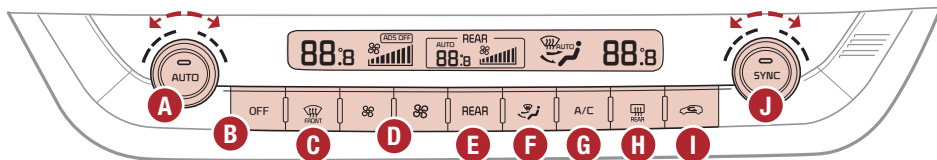



Front Climate Control

- A** AUTO (Automatic) Climate Control button
- B** System OFF button
- C** Front Windshield Defrost button
- D** Fan Speed Control buttons
- E** Rear Control Mode button
- F** Mode Select button
- G** Air Conditioning button
- H** Rear Window Defrost button
- I** Recirculated Air button
- J** SYNC (Synchronize All Zones) Temperature Control button

Auto Defogging System (ADS)

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

The ADS is set ON by default. To cancel ADS, press the Front Defrost button  **C** for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn ADS on again, press the Front Defrost button  **C** for three seconds.

QR CODE

AUTO DEFOGGING SYSTEM (ADS) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Climate Control Auto Function

Press AUTO **A** to select full auto operation. In AUTO mode the driver and front passenger have full control of their own temperature zones. The mode, fan speed, air intake and air conditioning will activate and adjust accordingly to achieve the temperature settings for each zone.

To set temperatures:

- Turn **A** to set the driver's zone temperature
- Turn **J** to set the front passenger's zone temperature

Tri-Zone Climate Control

Pressing the SYNC button **J** synchronizes all climate control zones (driver, passenger, and rear) to the driver's temperature control.

Air Flow Modes

To select air flow modes, press the Mode Select button **F**:

-  Face-Level
-  Floor-Level
-  Bi-Level
-  Floor/Defrost-Level

See section 4 in the Owner's Manual for more information.

Defrost Outside Windshield

1. Set **fan speed** to the highest position **D**
2. Set **temperature** to hot **A**
3. Press the **front defrost button** **C**

Defog Inside Windshield

1. Set **fan speed** to highest position **D**
2. Set **temperature** to highest position **A**
3. Press the **front defrost button** **C**

 
QUICK TIPS

When the Climate Control System's temperature is turned up to high heat or low cool, the Seat Warmers / Ventilated Seats turn on automatically.

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Manual Climate Control System*

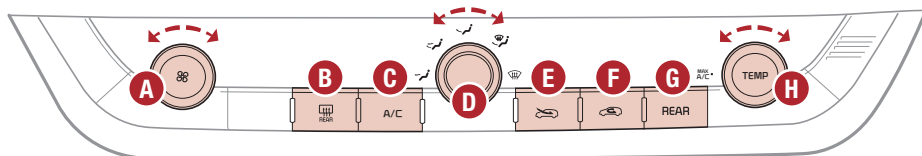

- A** Fan speed control knob
- B** Rear Window Defrost button
- C** Air Conditioning button
- D** Mode Select knob
- E** Fresh Air button
- F** Recirculated Air button
- G** Rear Climate Control Mode button
- H** Temperature Control Knob

Defrost Outside Windshield

1. Set **fan speed** to the highest position **A**
2. Set **temperature** to hot **H**
3. Set to **front defrost** **D**

Defog Inside Windshield

1. Set **fan speed** **A** to the desired position
2. Set desired **temperature** **H**
3. Set to **front defrost** **D**

Air Flow Modes

To select air flow modes, turn the Mode Select knob **D**:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- Keep inside glass as clean as possible to reduce window fogging
- MAX A/C mode automatically engages Recirculated Air

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

See section 4 in the Owner's Manual for more information. Your Manual Climate Control system may differ from those in the illustrations.

Automatic Transmission and Manual Mode

To shift into any gear from Park, depress the brake pedal, then press the Release button **A**, located on the side of the gear shift lever, and shift.

P: Park – To shift into Park from any gear, press the Release button **B** on the gear shift while the vehicle is stationary and the brake pedal is depressed, and shift.

R: Reverse – To shift into Reverse, depress the brake pedal, press the Release button **A**, and move the shift lever forward twice to skip over Neutral and into Reverse.

N: Neutral

 
 
D: Drive

[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode: To enter the Manual mode, move the shift lever from D to the left gate **B**.

To shift while in Manual mode, move the shift lever up **[+]** to upshift or down **[-]** to downshift **B**.

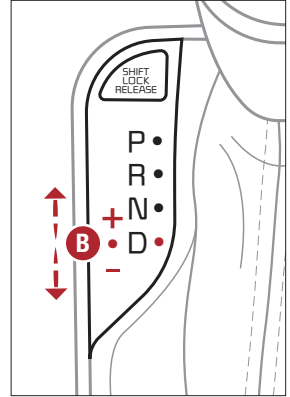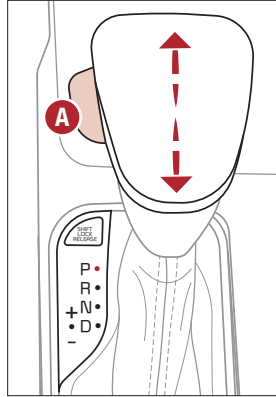

QUICK TIPS

- The instrument cluster and the light beside the shift lever identifies the gear the vehicle is currently in

See section 5 in the Owner's Manual for more information.

REMINDERS:

 
- When in P (Park), if the Release button is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

Wireless Smartphone Charging System*

1. Enable Wireless Charging in the User Settings
2. Lift open the tray cover (center console, in front of gear shift) **A**
3. Place a compatible smartphone on the center of the charging pad **B**
4. The indicator light **C** may change to amber once wireless charging begins
5. Once charging is complete, the amber light **C** may change to green

QUICK TIPS

- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area

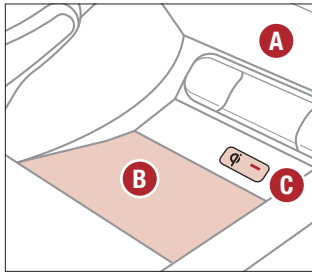

See section 4 in the Owner's Manual for more information.

REMEMINDERS:

- If any door is opened, charging will be disabled
- The smartphone must be a compatible phone with Qi function available
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See the Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Your device's position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness

QR CODE

WIRELESS CHARGING VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos


Parking Distance Warning - Reverse/Forward System*^{†6}

The Parking Distance Warning-Reverse /Forward System* **D** is a supplemental system that is designed to assist the driver by chiming if an object is detected within the sensing areas in the front or rear of the vehicle when parking or backing up.

When the Engine Start/Stop button is ON and the shift lever is in R (Reverse), the system is activated and the Parking Distance Warning-Reverse/Forward System* button indicator is illuminated.

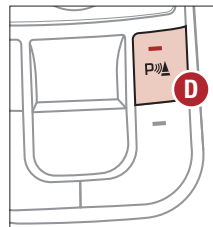

 (Button below gear shift on center console)

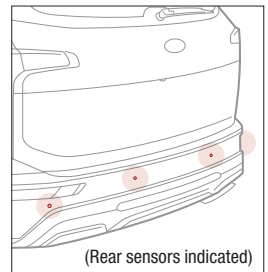

(Rear sensors indicated)

REMEMINDERS:

- If the vehicle is moving at speeds over 6 mph, the system may not activate
- When more than two objects are sensed at the same time, the closest one will be recognized first
- The Parking Distance Warning-Reverse/Forward System* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Assist System may not detect every object behind or in front of the vehicle

See section 4 in the Owner's Manual for more information.

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed and the driver's seat belt must be fastened.

Depress the brake pedal, start the engine and then press the AUTO HOLD button **A**. The white Auto Hold indicator will come on indicating the system is in standby.

The Auto Hold indicator, which is in the instrument cluster, has four states:

White: Standby – When the vehicle is in Park and at a standstill, and the AUTO HOLD button **A** is turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged – When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

OFF (not illuminated) – The indicator will turn OFF when the AUTO HOLD button **A** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction – When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold only operates when the vehicle is in Drive or Neutral
- Auto Hold turns off when the ignition is cycled

 
QR CODE

ELECTRONIC PARKING / AUTO HOLD VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

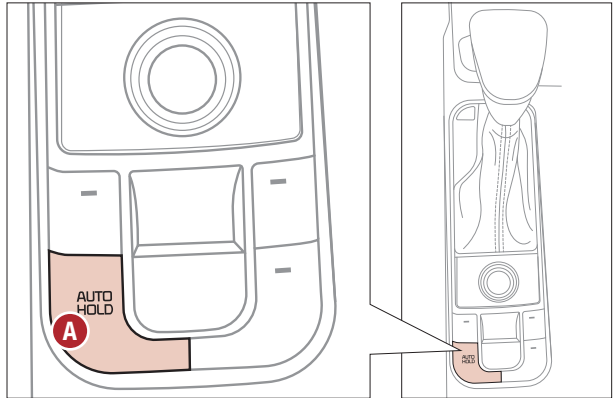

See section 5 in the Owner's Manual for more information.

Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

 
Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **(P) BRAKE** is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light **(P) BRAKE** is OFF.

QUICK TIPS

- Pull up and hold the EPB switch again to increase brake pressure if parked on a decline or incline
- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

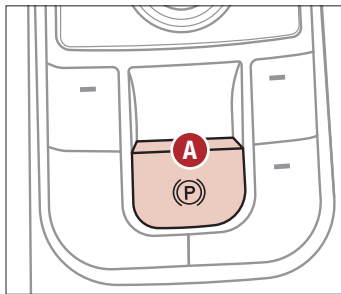

QR CODE

ELECTRONIC PARKING / AUTO HOLD VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily or remains continuously lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB. These conditions are normal and indicate that the EPB is functioning properly

 
See section 5 in the Owner's Manual for more information.

Surround View Monitor (SVM)*

The Surround View Monitor (SVM) system is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the audio head unit screen.

Press **A** to turn the SVM system ON/OFF.

- When OFF: The camera view will automatically display on the audio head unit screen when the vehicle is shifted into Reverse. The camera view will turn off when the vehicle is shifted out of Reverse
- When ON: The camera view will display on the audio head unit screen in both Drive and Reverse. In Drive, the camera view will continue to display until the vehicle is traveling at speeds above approximately 9 mph. If you keep the SVM system on, the camera view will reappear on the audio head unit screen whenever the vehicle speed drops below approximately 9 mph

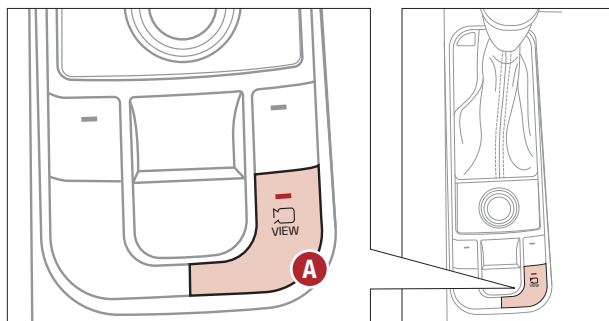

QR CODE

SURROUND VIEW MONITOR (SVM) VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.








www.youtube.com/KiaFeatureVideos

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. The Surround View Monitor system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.






Images are for illustrative purposes only and may not reflect actual feature or operation.

Camera View Modes – To change camera view modes, use the touch screen or rotate the controller and push to select the mode.

When in Drive & Neutral:

-  Displays the front wide view and top view (default)
-  Displays the zoom-in front top view and top view
-  Displays the front-side view and top view
-  Used to adjust the brightness and contrast of the camera images
-  Displays the surround view settings

When in Reverse:

-  Displays the rear wide view and top view (default)
-  Displays the zoom-in rear top view and top view
-  Displays the blind spot view and top view
-  Used to adjust the brightness and contrast of the camera images
-  Displays the surround view settings

 
See section 4 in the Owner's Manual for more information.

Cruise Control*

- A Cruise Control ON/OFF button:** Press to turn the cruise control ON/OFF
- B Resume Cruising Speed button:** Press up to resume or increase cruising speed
Set Cruising Speed button: Press down to set or decrease cruising speed
- C Cruise Control Cancel button:** To cancel cruise control setting, do one of the following:
 - Press the brake pedal
 - Press the CANCEL button

QUICK TIPS

- The standard cruise control system is designed to function at above approximately 20 mph only
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

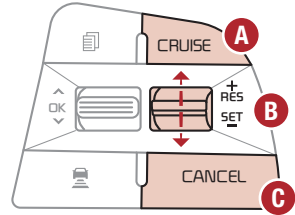


See section 5 in the Owner's Manual for more information.

Headlights & High Beams

AUTO Light – When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL) – DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

 - Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

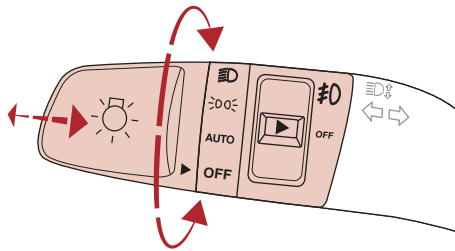

- Headlight position
- Parking Light position
- AUTO** Auto Light /DRL/ High Beam Assist*
- OFF** OFF position

Headlight / High Beam Lever Operation

- Rotate lever switch to change the headlight function:
- Press lever away from you to turn high beam headlights ON
- Pull lever to flash headlights/high beams or to turn off the high beams

High Beam Assist (HBA)* – High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When the HBA indicator illuminates on the instrument cluster, the HBA is not working properly. See an authorized Kia dealer for service

See section 4 in the Owner's Manual for more information.

Turn Signals & Fog Lights*

To operate Turn Signals: Move lever up/down for right/left turn signal.

One-touch lane change signal is activated by briefly pressing the turn signal lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the lane change signal blinks (3/5/7), go to User Settings in the LCD instrument cluster modes.

To operate Fog Lights: Rotate switch to turn Fog Lights ON/OFF.

REMINDER: Headlights must be ON for fog light operation.

See section 4 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Front & Rear Windshield Wipers & Washers

To operate front wipers & washers:

- Move lever up/down to change wiper modes
MIST: Single wipe **LO:** Slow wipe
OFF: Wiper off **HI:** Fast wipe
INT*/AUTO*: Intermittent*/Auto Rain Sensing*
- Pull to spray and wipe

 
To operate rear wipers & washers:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

Auto Rain Sensing*

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and control the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To turn ON the auto rain sensing wipers, move lever up/down to AUTO. To adjust the auto rain sensing wiper speed setting, move the speed control switch **A** up/down.

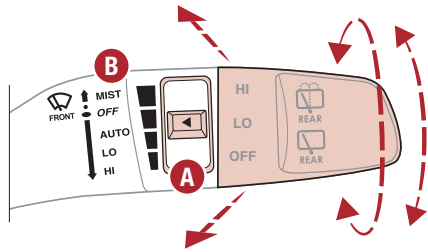

- MIST:** Single wipe
- OFF:** Wiper off
- INT*/AUTO:** Intermittent*/Auto Rain Sensing*
- LO:** Slow wipe
- HI:** Fast wipe

QUICK TIPS

- When the Engine Start/Stop button is in the ON position and the wiper switch is in AUTO mode, the wiper will automatically operate once to perform a self-check of the system
- Set the wiper to the OFF position when the wiper is not in use
- Moving lever to HI increases intermittent wipe frequency and wipe speed. Moving lever to LO decreases frequency of wipes
- Pressing button **A** up increases Intermittent wipe frequency and wipe speed. Pressing button **A** down decreases frequency of wipes
- On Rear Wipers, intermittent wipe function is not adjustable

See section 4 in the Owner's Manual for more information.

Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean the windshield, inspect or replace wiper blades or raise the wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **C**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch up to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to the normal position, turn the ignition ON, then activate MIST.

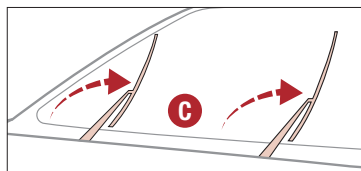 


Image for illustrative purposes only.

See section 7 in the Owner's Manual for more information.

QR CODE

 
WIPER SERVICE MODE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Bluetooth® Wireless Technology^{†5,23}

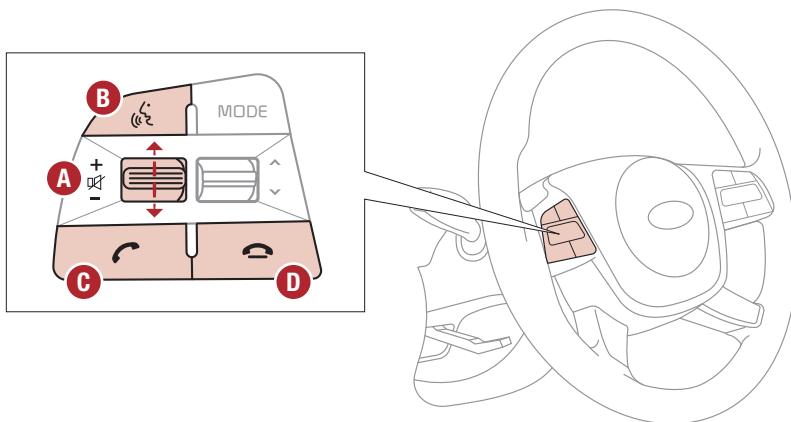

- A Volume button:** Press up/down to raise/lower speaker volume
- Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth®* streaming media
- B Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition
UVO link with Navigation system* – When enrolled with a UVO link subscription, press this button to activate the UVO Voice Assist to use navigation guidance and search destinations
- C Receive/Place Call button:** Press to place incoming calls. Press to pair a phone (If no phone is paired)
- D End Call button:** Press to end a call or cancel a function

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth®* wireless technology chip programming, functionality may differ from one phone to another
- The system can register or pair multiple Bluetooth devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

Your vehicle's steering wheel buttons may differ from those in the image. See the Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Infotainment System Quick Reference Guide. For *Bluetooth®* wireless technology FAQs, go to www.kia.com, Owners section.

Bluetooth® Wireless Technology^{†5,23} (Continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

How to Place a Call

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** to place a call using the touchscreen
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or "Dial {number}"

When using the voice command feature, wait for the system BEEP before speaking the command.

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- The system can register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C; open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands
- Bluetooth® Music Streaming: If the Bluetooth® music is inaudible or too low, turn up the volume on the connected phone

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® wireless technology FAQs, go to www.kia.com, Owners section.

QR CODE

VOICE RECOGNITION TIPS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Tilt/Telescoping Steering Wheel†25

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust to the desired angle **B** and distance **C**.

 
When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

QUICK TIP

- It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust to the desired distance.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

See section 4 in the Owner's Manual for more information.

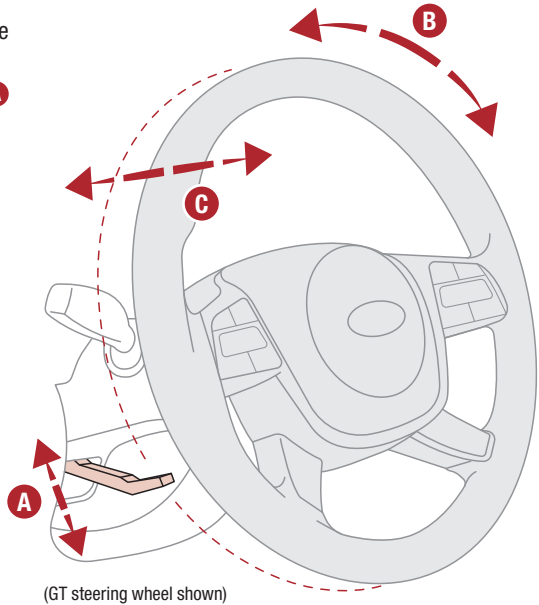


(GT steering wheel shown)

Heated Steering Wheel*

While the Engine Start/Stop button is in the ON position, press **D** to turn the steering wheel heater ON. The button indicator will illuminate.

 The steering wheel heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.


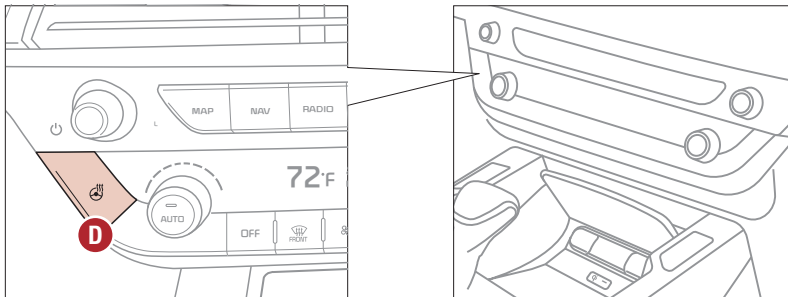


REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

See section 4 in the Owner's Manual for more information.

Audio Controls^{†23}

  - A Audio System MODE button:** Press to cycle through FM/AM/SiriusXM^{®†21}/USB Music/*Bluetooth*[®] Audio
Audio System ON: Press to turn power on
- B Seek/Preset buttons:**
 - FM/AM/SiriusXM[®] Mode: Press to advance through preset stations. Press and hold to auto seek
 - Media Modes: Press to move track up/down. Press and hold to fast forward/rewind (except for *Bluetooth*[®] Audio)
- C Volume buttons:** Press up/down arrows to raise/lower volume
Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)

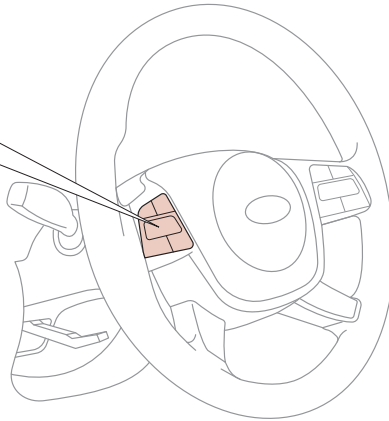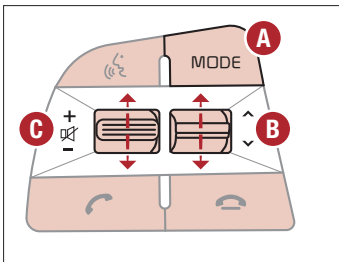

QUICK TIPS

- Surround Sound can be turned on or off
- Pressing the Audio System Mode button for more than 1 second will turn Audio Mode ON/OFF

REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the images. See the Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving
- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For more information, refer to the *Car Infotainment System Quick Reference Guide*.

For other audio system information, refer to pages 44-47.

Android Auto™+3 / Apple CarPlay® Setup†4

 
Android Auto™

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store†11
2. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device

How to start Android Auto™:

1. Press the SETUP key on your audio head unit's control panel
2. Press the PHONE PROJECTION or DEVICE CONNECTION button, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

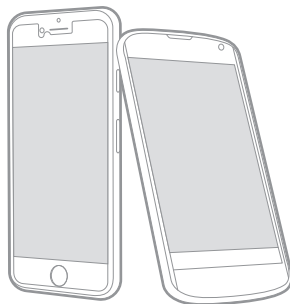

Apple CarPlay®

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key
2. Press the PHONE PROJECTION or DEVICE CONNECTION button, select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone®+14 with the vehicle's Multimedia USB port using the manufacturer's cable provided with your iPhone®
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s)
- Apple CarPlay® compatibility requirements: Apple Lightning® cable, latest iOS software (above iOS 10) and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Using an approved USB cable provided by your smartphone manufacture is recommended
- Using unapproved USB cables may cause a phone projection error or a system malfunction, black screen, no sound, disconnection, etc.
- Phone projection may not work due to a defect in the phone
- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle

For further information, refer to the Car Infotainment System Quick Reference Guide.

For audio system information, refer to pages 43-47.

UVO link Activation^{†1}

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press Activate UVO
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter smartphone number or email address to receive a verification code, then press SUBMIT

4a. Follow these steps if using your phone number to receive your verification code:

- a. Check your phone for an SMS (text message)
- b. Open the link in your SMS. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the phone number as your login ID, you will need to provide your password prior to receiving the verification code

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN." A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

4b. Follow these steps if using your email to receive your verification code:

- a. Check your email. The email will be from reset@notifications.myuvo.com
- b. Open link inside email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email as your login ID, you will need to provide your password prior to receiving the verification code

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN." A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 43-47.

 
UVO Assistance

Virtual Assistant  **A** - Press to connect to the UVO Center to hear information about the UVO features

UVO Voice Local Search  **B** - Press to connect to the search function to find points of interest or other locations, like "cafe"


Roadside Assist  **C** - Press to connect to the UVO Center where you can request vehicle towing services

REMINDER: These buttons may be located in the rearview mirror or the overhead console.

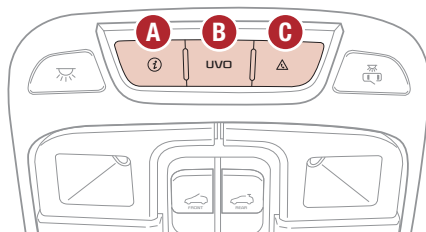

(Buttons on overhead console*)

 UVO link*†1 – FM/AM/SiriusXM®†21/Media (USB, Bluetooth® Audio, My Music)

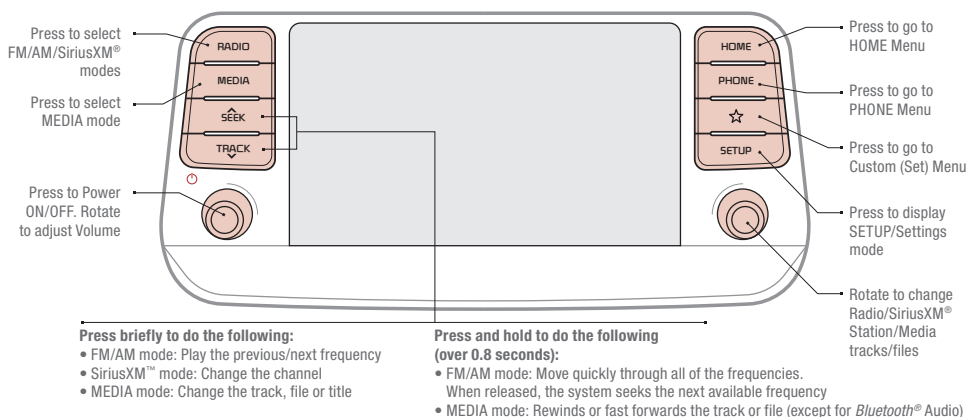

Sound Settings – To adjust the sound settings:

1. Press the SETUP key on the audio head unit or the onscreen MENU button, when in MEDIA mode. Select the onscreen SOUND button, or SOUND SETTINGS
2. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
3. Use the onscreen buttons to adjust settings. Press the return button \Rightarrow to save settings

Radio Presets – You can listen to FM, AM and SiriusXM® radio and save frequently used stations. **How to Save a Preset** – Press and hold the desired slot. This saves the current station in the selected slot.

SiriusXM® Smart Favorites – For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose **SiriusXM®**, then select any of the first ten favorites. During song or program play, tap the **Skip Backward** icon to start from the beginning of the song or program. Tap the **Play Live** icon to return to the live broadcast.

Custom Key ☆: A programmable key to provide quick access to one of several available system features.

To Program the Custom Key: Press and hold the Custom key. Select one of the available features you would like the Custom key to open.

QUICK TIPS

- The volume level for each source (FM, AM, SiriusXM®, USB, etc.) can be set individually in system sound settings. When the source is changed, the volume level will revert to the previously set volume for that source
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- When using the voice command feature, wait for the system to BEEP before speaking the command
- At any time, you can interrupt Command Feedback by pressing the TALK button
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO link should be operated when the engine is running to prevent battery discharge

QR CODE

UVO LINK VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.

 


www.youtube.com/KiaFeatureVideos

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For more information, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 43-47.

UVO link with Navigation^{†1,15} – FM/AM/SiriusXM^{®†21}/Media (USB, Bluetooth[®] Audio)

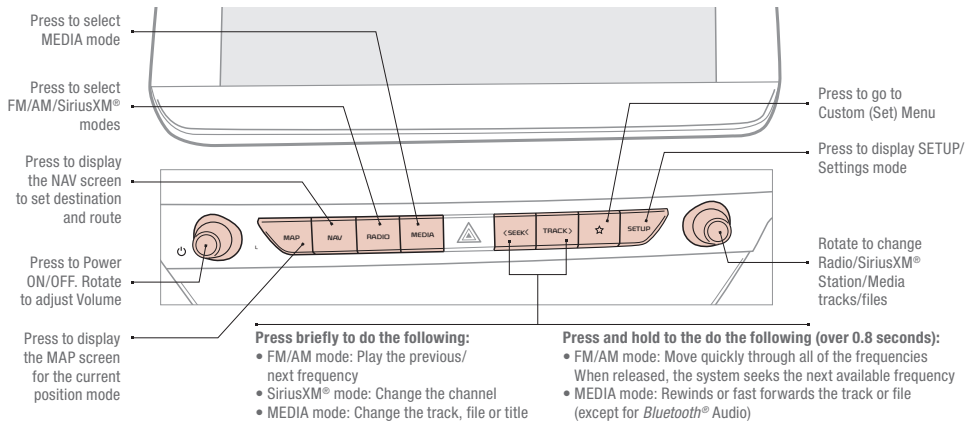

Sound Settings – To adjust the sound settings:

1. Press the SETUP key on the audio head unit. Select the onscreen SOUND button
2. Select the menu item (Position, Volume, Tone, Priority, Navigation, Advanced, Reset)
3. Use the onscreen buttons to adjust settings

Radio Presets – You can listen to FM, AM and SiriusXM[®] radio and save frequently used stations. **How to Save a Preset** – Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM[®] Smart Favorites – For the first ten favorite SiriusXM[®] channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose **SiriusXM[®]**, then select any of the first ten favorites. During song or program play, tap the **Skip Backward** icon to start from the beginning of the song or program. Tap the **Play Live** icon to return to the live broadcast.

Custom Key ☆: A programmable key to provide quick access to one of several available system features. **To Program the Custom Key**: Press and hold the Custom key. Select one of the available features you would like the Custom key to open.

QUICK TIPS

- The volume level for each source (FM, AM, SiriusXM[®], USB, etc.) will revert to the previously set volume for that source
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated with the engine running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command
- Surround Sound can be turned on or off
- At any time, you can interrupt UVO link System Command Feedback by pressing the TALK button on the steering wheel

QR CODE

UVO LINK WITH NAVIGATION VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Your vehicle's audio system may differ from that in the illustration. For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 43-46.

To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Seat Warmers^{†20} / Ventilated Seats

 
Front Seats

Seat Warmers:


- Press button **A** up once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Press and hold to turn off

Ventilated Seats:

- Press button **A** down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF
- Press and hold to turn off

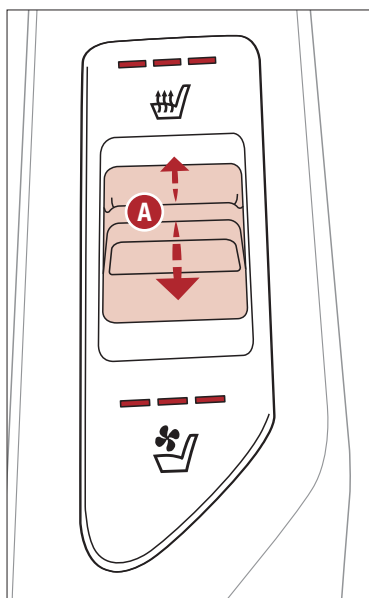

(Passenger controls shown)

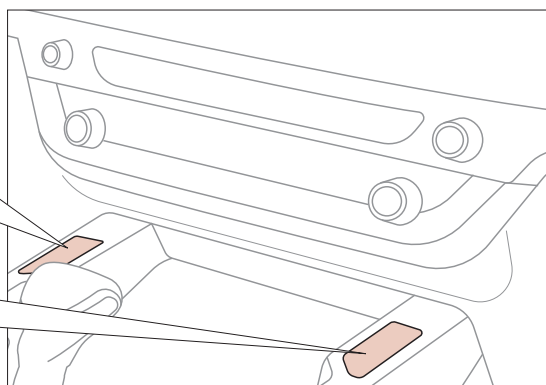 

(Buttons are located on center console in front of gear shift)

QR CODE

SEAT WARMERS AND VENTILATED SEATS VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

 
REMINDERS:

- Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information
- If the Auto Climate Control is on, the seat warmers or ventilated seats may turn on automatically based on the set temperature and ambient temperature

See section 4 in the Owner's Manual for more information.

Power Adjustable Driver's Seat*†18, 19


Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward, Lumbar up/down/forward/backward or Seat Cushion Extension forward/backward.

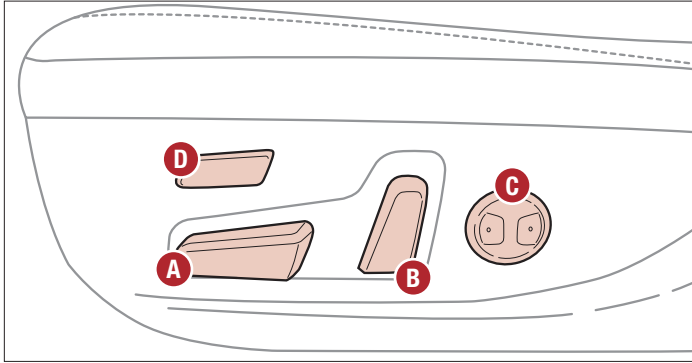

(Located on side of driver's seat)

REMEMBER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

 See section 3 in the Owner's Manual for more information.

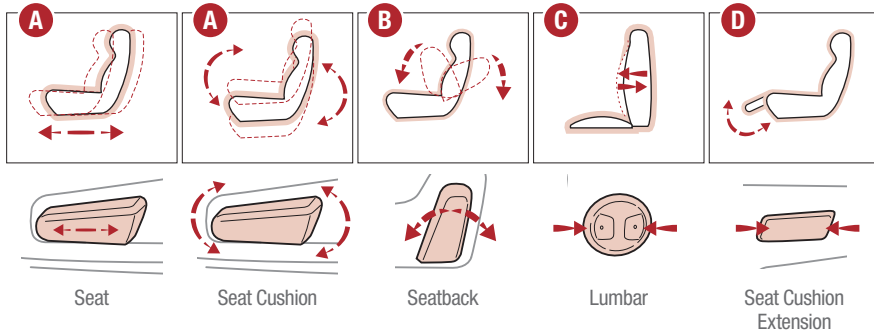

Front Seat Headrest Adjustment*†10

 
To raise headrest: Pull headrest up.

To lower headrest: Press lock **E**, then press the headrest down.

REMEMINDERS:

- Button may be hard to see if headrest is in its lowest position
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident


See section 3 in the Owner's Manual for more information.

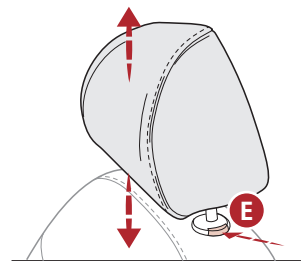

Driver Position Memory System*

The integrated system stores into memory the position of the driver's seat, outside rearview mirrors, and steering wheel positions. To store positions into memory, first place the gear shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

 1. Adjust the driver's seat, outside rearview mirrors, settings and steering wheel positions
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons 1 or 2 **B** within 4 seconds. The system will beep twice when memory has been stored

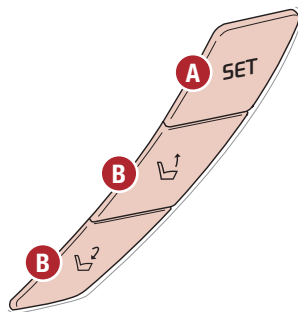

(Located on driver's door control panel)

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

See section 3 in the Owner's Manual for more information.

Rear Occupant Alert (ROA) with Ultrasonic Sensors*†6

The Rear Occupant Alert (ROA) with Ultrasonic Sensors can help alert the driver when rear passenger(s) are left in the rear seats using the ultrasonic sensors and door monitoring. The system is designed to provide three separate alerts:

- The 1st alert is a message on the Instrument Cluster, “Check Rear Seats” **A**, and a chime will sound

After the 1st alert, when the doors are locked and there is movement detected in the rear seats, the horn will sound for about 25 seconds. This alert may activate up to eight times within 24 hours, if movement is still detected and system has not been disabled

- If you have installed the Kia Access with UVO Link app on your smartphone, logged in and activated the Rear Occupant Alert notification, a third alert (notification) will be sent to your phone

To turn the system on or off, in the Instrument Cluster, go to User Settings, select Convenience, and then Rear Occupant Alert.

The Rear Occupant with Ultrasonic Sensors system activates under the following conditions:

- A rear passenger door is opened and closed
- The ignition has been turned off
- The driver's door has been opened, then closed
- The doors are locked with the Smart Key or the door lock button on the door handle



QR CODE

REAR OCCUPANT ALERT VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos


This system is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.

QUICK TIPS

 - The 1st alert message will not display on Instrument Cluster if the rear doors are never opened. Either rear doors must be opened after unlocking the vehicle before the system will activate.
- To temporarily disable alerts, press the OK button **B** on the Steering Wheel while the message is displayed
- To turn the alert off while sounding, press the unlock button on the Smart Key or press the door lock button on the door handle
- Must be enrolled in UVO services and Kia Access app installed on the phone to receive ROA alert notifications on your smartphone

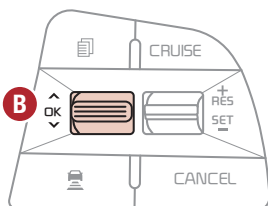

(Button layout on right of steering wheel)

REMINDERS:

- To avoid false alerts, make sure the vehicle's windows are rolled up
- If objects such as boxes are stacked in front of the ultrasonic sensors, the system may not detect any movement
- The ultrasonic Sensors may occasionally detect movement in the vehicle and cause false alerts, when there are no rear occupants present. False alerts can occur due to:
 - The presence of insects near the system sensor
 - Rushing air from a window that is rolled down
 - Movement around the exterior of the vehicle
 - Surrounding noise or vibration
 - Vehicle passing through a car wash
 - Movement in the driver or front passenger seat is detected
- The Rear Occupant Alert with Ultrasonic Sensors system may fail to detect movement and activate an alarm if:
 - Movement is subtle or does not continue
 - A small child sits directly in a seat without a car seat
 - A rear passenger is covered with an object such as a blanket, obstructing the sensor's view

2nd Row Seat†¹⁸

Folding 2nd Row Seat:

1. Set the front seatback to the most upright position, and slide the seat forward, if needed
2. Lower the 2nd Row Seat Headrest to the lowest position
3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
4. Pull up on the Seatback folding lever (2nd Row) or strap (3rd Row) and fold the Seatback down

 
QUICK TIPS

- When you return Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- For specific information on how to use the 2nd and 3rd Row Center Seat Belts, please refer to the Owner's Manual

REMINDERS:

- The lever must return to its original position for the Seatback to lock
- Make sure the heaters are off before folding the seats down for cargo

See section 3 in the Owner's Manual for more information.

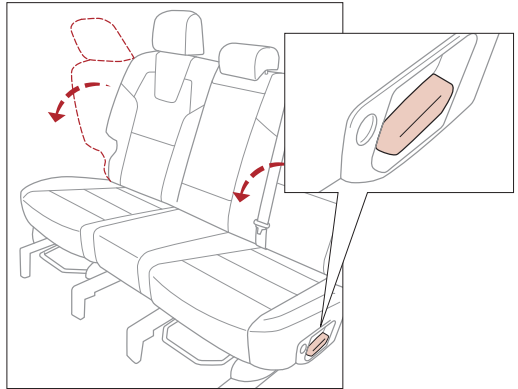

One-Touch Slide and Fold

 
 
 
To get in and out of the 3rd Row Seat, adjust the 2nd Row One-Touch Slide and Fold buttons:

1. Set the front seatback to the most upright position, and slide the seat forward, if needed
2. Lower the 2nd Row Seat Headrest to the lowest position
3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
4. Press the One-Touch Slide and Fold to slide forward and fold down the 2nd Row Seat

QUICK TIP

- The strap can be used in the back of the 2nd Row Seat to slide and fold the 2nd Row Seats.

See section 3 in the Owner's Manual for more information.

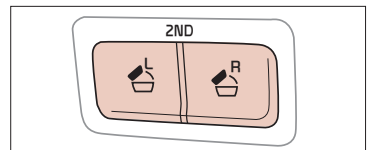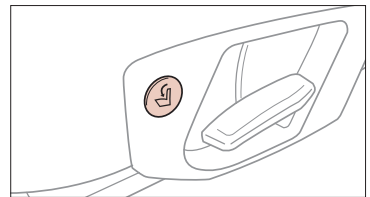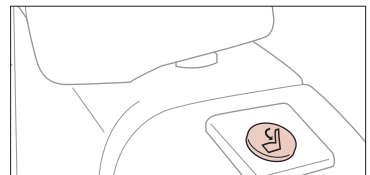


(Buttons located on the side of the cargo area)

Unfastening Center Seat Belt

If Seat Belt is buckled, press the release button on the buckle.

 To retract the 2nd-Row Center Seatbelt **C** into the headliner, press the “release button” on the buckle by inserting the seat belt tongue plate **D** in the small slot on the center buckle **E**.

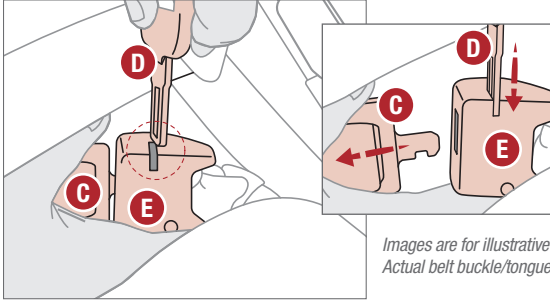

See section 3 in the Owner's Manual for more information.

QR CODE

UNFASTENING CENTER SEAT BELT VIDEO

 
To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

3rd Row Seat – Folding

1. Fully lower headrest **A**
2. Pull Seat folding strap located in the back of the Seatback **B**
3. Fold Seats down **C**

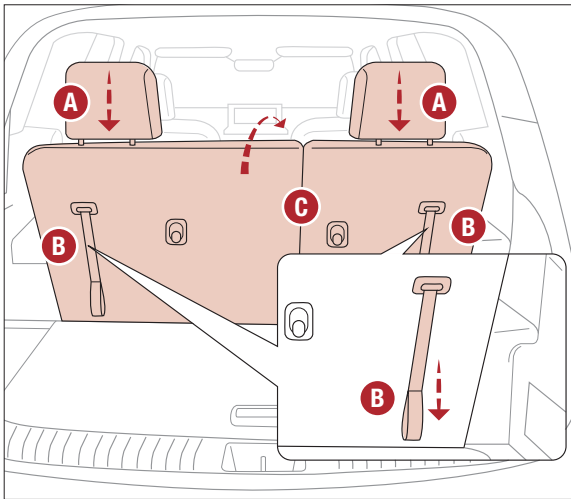

See section 3 in the Owner's Manual for more information.

Smart Power Liftgate*†22

The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate.

To turn the Smart Power Liftgate features ON, go to the User Setting mode in the LCD Instrument Cluster Modes and set to ON.

The Smart Power Liftgate will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

Opening from Inside the Vehicle:

Press and hold the Smart Power Liftgate Open/Close button* **A** to automatically open/close the Liftgate.

Opening from Outside the Vehicle:

To open the Smart Power Liftgate* automatically, press the Liftgate Release button **B** on the exterior of the Liftgate.

Automatically close by pressing the Smart Power Liftgate Close button* **C** located inside the Liftgate lid.

QR CODE

SMART POWER LIFTGATE VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

 
QUICK TIPS

- To cancel the Smart Power Liftgate while automatically opening or closing, press any button on the Smart Key fob



REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when the following occurs:
 - Doors are recently closed and locked
 - The Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Smart Power Liftgate

See section 4 in the Owner's Manual for more information.

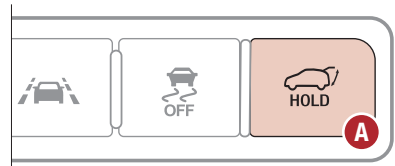

  (Button located on driver's panel, left of the steering wheel)

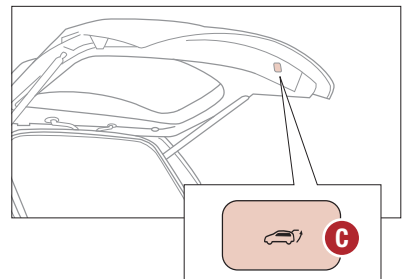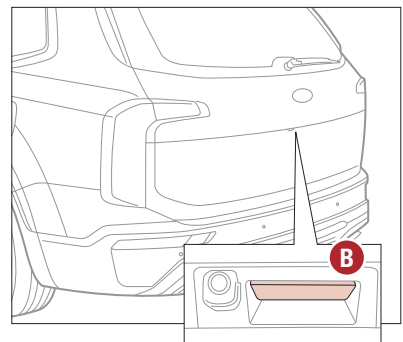

(located inside Liftgate lid)

Smart Power Liftgate* (Continued)

Opening with no-touch activation:

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate* is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate*.

The Smart Power Liftgate* feature is OFF by default. To enable the Smart Power Liftgate*, go to User Settings in the LCD Instrument Cluster modes.

Smart Key:

To open the Smart Power Liftgate*, press and hold the Smart Key Liftgate button **E** until the Liftgate begins opening. Press again and hold to close.

Power Liftgate Height Adjustment:

For your convenience, the liftgate opening height is adjustable. To program the opening height, perform the following:

1. Open liftgate and manually position the liftgate to your preferred opening height
2. Depress and hold the close button on the liftgate for 3 seconds or more
3. Once the system sounds the alert that the programming is complete, manually close the liftgate

Power Liftgate Opening/Closing Speed Setting:

Go to the User Settings  in the Instrument Cluster. Select Door, then Power Liftgate Speed, and select Fast or Normal.

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the liftgate Release button
- The liftgate unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle

REMINDERS:

- Smart Power Liftgate may be damaged if attempting to open or close manually
- When not in use, keep the Liftgate Lid Control button in the OFF position
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Smart Power Liftgate lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the liftgate lid when operating the Smart Power Liftgate
- The default liftgate opening/closing speed is set to fast
- The liftgate opening/closing speed setting cannot be changed when the Power Liftgate function is turned off or if the liftgate is not completely closed

See section 4 in the Owner's Manual for more information.

 
QR CODE

KIA KEY FOB VIDEO


To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

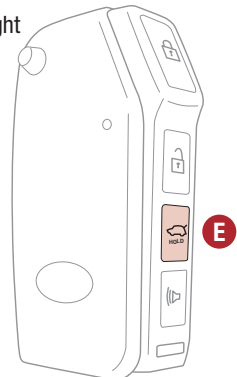

Smart Key

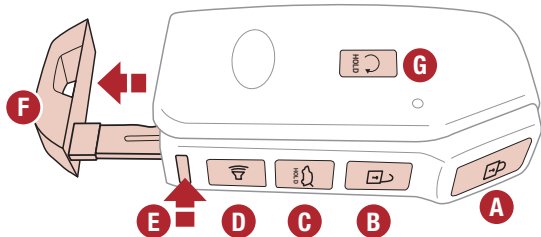 

- A** Press to lock all doors
- B** Press to unlock driver's door. Press twice within 4 seconds to unlock all doors
- C** Press and hold for more than 1 second to unlock the liftgate and open manually (or automatically if Smart Power Liftgate)
- D** Press and hold more than half a second for panic alarm. To turn off alarm, press any button
- E** Press to release mechanical key **F**
- G** **Remote Start:** Press for more than two (2) seconds within four (4) seconds after locking doors to start the vehicle. Press once to turn off

Driver's Door Lock/Unlock Button **H**:

To unlock door(s):

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors

 
 
To lock all doors:

- Press again to lock all doors



Mechanical Key:

- Use to unlock/lock driver's door:
 1. Remove door handle keyhole cover with mechanical key by pressing up into slot in the bottom of the handle as shown **I**
 2. Insert mechanical key **J** and turn left to unlock driver's door
 3. Insert mechanical key **J** and turn right to lock driver's door
 4. Return mechanical key to its original location
- Use to lock and unlock glove box

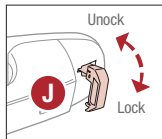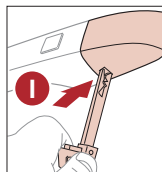

QR CODE

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to page 2 for more information.

KIA KEY FOB VIDEO



ENGINE START/STOP BUTTON & SMART KEY VIDEO



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

REMINDERS:

- The liftgate unlocks when the Smart Key is within close proximity of the vehicle
- Remote button configuration may vary depending on vehicle options

See section 4 in the Owner's Manual for more information.

These illustrations are for demonstration purposes only.

Map/Room Lamps

Automatic Turn Off Function

The interior lights automatically turn off approximately 20 seconds after the Engine Start/Stop button is turned OFF.

Map/Room Lamp Operation

 
Map Lamps – These lights produce spot beams for convenient use as map lamps or as personal lamps for the driver or the front passenger. Press the buttons **A** to turn the map lamps ON/OFF.

Room button – Press the button **B** to turn the front and rear lamps ON/OFF.

Door button – When the Door button **C** is pressed the front and rear lamps will turn ON as follows:

- When a door is opened or doors are unlocked with the Smart Key, the lamps will turn ON for approximately 30 seconds
- If the Engine Start/Stop button is in the ACC/OFF position and a door is open, the lamps will stay ON for approximately 20 minutes
- If the Engine Start/Stop button is in the ACC/ON position and a door is open, the lamps will stay ON

The lamps will turn OFF immediately if the Engine Start/Stop button is turned ON or all doors are locked.

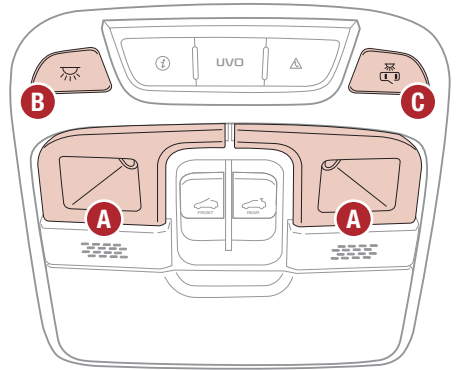

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

REMINDER: When room lamp lens is pressed ON it will remain ON, even when the map lamp switch is in the OFF position.

See section 4 in the Owner's Manual for more information.

Sunroof Operation*

The sunroof and sunshade operation is controlled by a multidirectional switch/lever for the front and rear sunroofs. The ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the front sunshade and sunroof **A**:

Auto Open – Slide lever backward to the farthest position and release.

Auto Close – Slide the lever forward to the farthest position and release (manually close the Sunshade).

Tilt the sunroof (front only) **A**:

 
Raise – Press lever upward

Lower – Push lever forward

Slide the rear sunshade **B**:

Auto Open – Slide the lever backward

Auto Close – Slide the lever forward

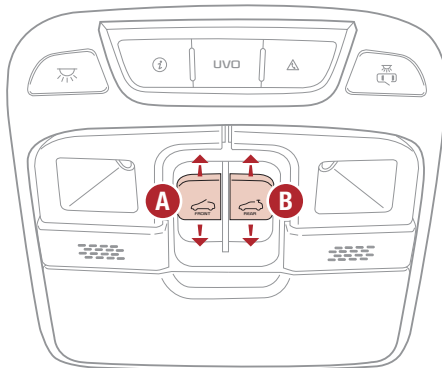

QR CODE

SUNROOF OPERATION VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIP

- To stop the sunroof/sunshade at any position, press or pull the sunroof control lever in any direction

See section 4 in the Owner's Manual for more information.

REMINDERS:

 
- Sunshade must remain OPEN while the sunroof is open and vehicle is moving
- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

Rear View Monitor (RVM) System†6

The Rear View Monitor system is a supplemental system that displays the view behind the vehicle through the Navigation screen* while the vehicle is in Reverse.

The Rear View Monitor activates when the:

- Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the R (Reverse) position

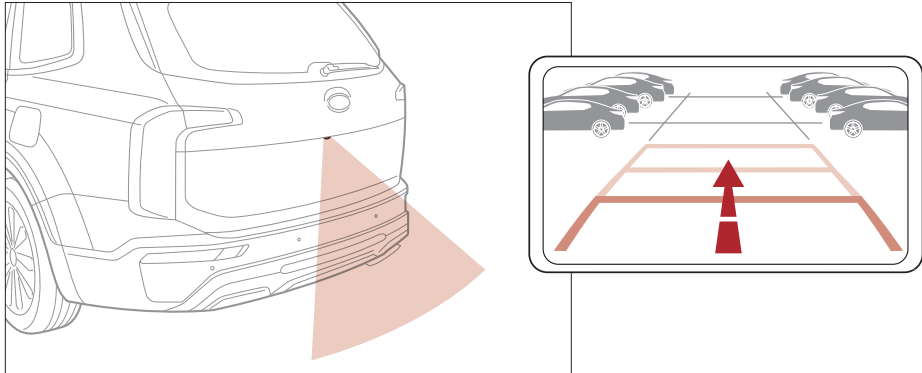


REMINDERS:

- The Rear View Monitor is not a substitute for proper and safe backing-up procedures
- The Rear View Monitor may not display every object behind the vehicle
- Always drive carefully and use caution when backing up

See section 4 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

 HomeLink® with Auto-Dimming Rearview Mirror†¹³

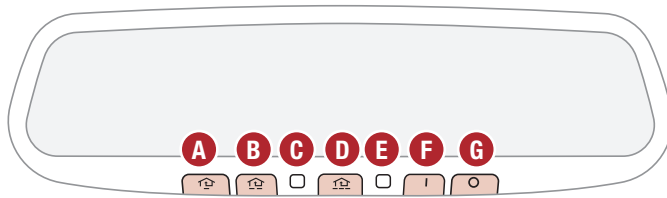

- | | |
|---------------------------|---------------------------------|
| A HomeLink® button | E Glare detection sensor |
| B HomeLink® button | F Automatic dimming ON |
| C Indicator light | G Automatic dimming OFF |
| D HomeLink® button | |

Auto-Dimming Rearview Mirror

Designed to help reduce glare from a vehicle's headlights located in the rear and also to connect up to three electronic transmitters in one location.

REMINDER: Mirror indicator light will illuminate when automatic dimming is ON.

HomeLink® Setup – How to Sync Transmitter

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B** or **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

QR CODE

HOMELINK REARVIEW MIRROR SETUP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

See section 4 in the Owner's Manual for more information.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Sunvisor†24

 
Use the sunvisor to shield direct light through the front or side windows.

Slide the sunvisor out and adjust as needed.

REMEMINDERS:

- Sunvisor may not shield all direct light
- Sunvisor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows
- Do not operate the vehicle if the sunvisor is impairing your visibility

See section 4 in the Owner's Manual for more information.

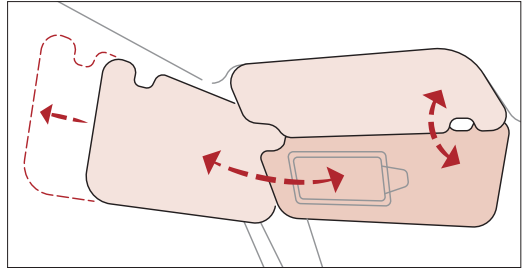


Hood Release Lever and Latch

Opening the Hood:


1. Pull the hood release lever **A** to unlatch the hood
2. In the front of the vehicle, lift the hood slightly, push the secondary latch **B** to the left inside of the hood's center and lift the hood

Closing the Hood:

 Lower the hood about halfway and then press down to securely lock in place.

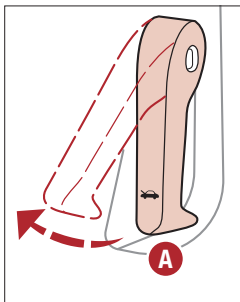

(Located on Driver side kick panel)

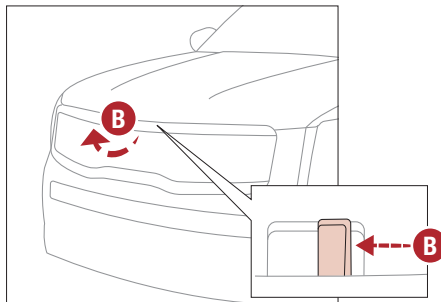 

(Located inside of Hood's center)

 
REMEMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

See section 4 in the Owner's Manual for more information.

Fuel Cap / Malfunction Indicator (Check Engine Light)

To access the Fuel Cap, press the Fuel Filler Lid to open. Tighten for ONE CLICK to prevent malfunction indicator  from illuminating.

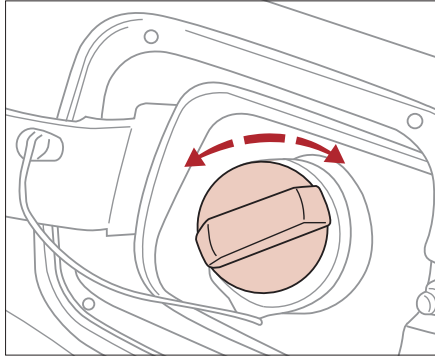

REMINDER: It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back.

See section 4 in the Owner's Manual for more information.

QR CODE

ONE-CLICK FUEL CAP VIDEO

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



www.youtube.com/KiaFeatureVideos

Fuel Filler Lid Release

To open the Fuel Filler lid:

 
 
1. Press the right edge of the Fuel Filler lid **A**
 2. Pull the Fuel Filler lid out to fully open **B**
- To open the Fuel Cap, turn it counterclockwise **C**

QUICK TIP

- Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **D**

REMINDER: The fuel filler lid lock will unlock/open only when driver's side door is unlocked.

See section 4 in the Owner's Manual for more information.

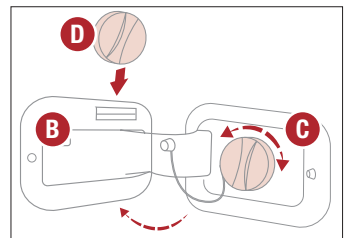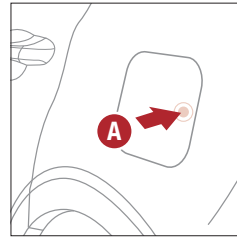

Seat Belts^{†2,19}

 
 
To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **B**

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

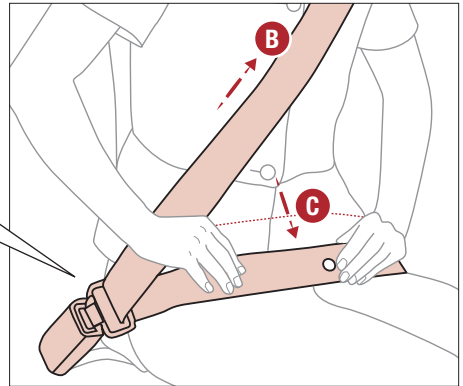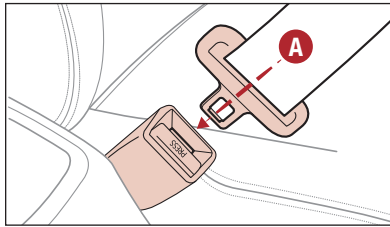

QUICK TIP

- The seat belt warning chime operates for the driver's seat only

REMINDER: For maximum protection, always wear your seatbelt.

For more detailed information regarding your vehicle's safety belts, please refer to section 3 in the Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

 
Occupant Detection System (ODS) / Passenger Airbag Off Indicator^{†2,16}

ODS is designed to detect the presence and position of the front passenger and is designed to adjust or turn off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate **D**.

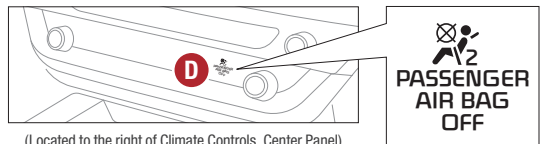

(Located to the right of Climate Controls, Center Panel)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

See section 3 in the Owner's Manual for more information.

TELLURIDE NORMAL MAINTENANCE SCHEDULE

P=Perform
R=Replace
I=Inspect[§]

(up to 60,000 miles)^A

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)							
	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Add fuel additives ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and oil filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Tire (pressure and tread wear)	I	I	I	I	I	I	I	I
Bolts/nuts on chassis and body	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R
Brake fluid	I	I	I	I	I	I	I	I
Parking brake	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Fuel tank air filter ^{†D}		I		I		I		I
Vapor hose, fuel filler cap		I		I		I		I
Fuel lines, fuel hoses and connections		I		I		I		I
Cooling System				I		I		I
Rear axle oil (AWD) ^E					I			
Transfer Case Oil (AWD) ^E					I			
Valve clearance ^F								I
Drive belts (First 60,000 miles, then every 15,000 miles) ^G								I

‡ If equipped.

- A. See the Owner's Manual for complete maintenance schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- E. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water.

- F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
- G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into your Kia Access with UVO App or your account on <https://owners.Kia.com> (Vehicles equipped with UVO link only – See page 45 for setup information)

See the Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

 
Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **UVO link:** Purchase/lease of certain 2020 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
2. **Airbags:** For maximum protection, always wear your seat belt.
3. **Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
4. **Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
5. **Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
6. **Driver Assist Features – Forward Collision-Avoidance Assist (FCA) / Forward Collision Warning (FCW), Blind-Spot Collision-Avoidance Assist (BCA), Blind-Spot View Monitor (BVM) System, Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Lane Keeping Assist (LKA) / Lane Departure Warning (LDW), Lane Follow Assist (LFA) System, Rear View Monitor System, Reverse Parking Aid Function, Parking Distance Warning-Reverse/Forward, Smart Cruise Control (SCC) with Stop & Go, Safe Exit Assist (SEA) System , Rear Occupant Alert (ROA) with Ultrasonic Sensors, Highway Driving Assist (HDA) System, Leading Vehicle Departure Alert (LVDA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
7. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
8. **Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
9. **Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
10. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
11. **Google Play™ Store** is a trademark of Google, Inc. ©2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
12. **Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
13. **HomeLink®:** HomeLink® is a registered trademark of Gentex Corporation.
14. **iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
15. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
16. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
17. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
18. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
19. **Seat belts:** For maximum protection, always wear your seatbelt.
20. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
21. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2020 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
22. **Smart Power Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle.
23. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
24. **Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
25. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
26. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.




TELLURIDE CUSTOMER DELIVERY CHECKLIST

Key Feature Walkthrough

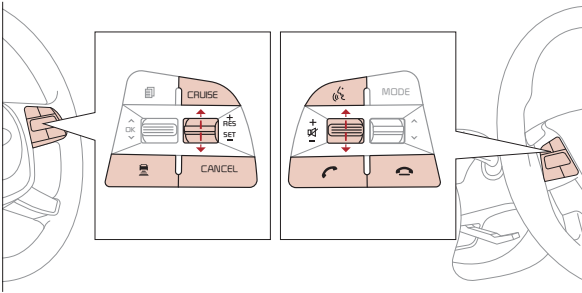


- Smart Cruise Control (SCC) with Stop & Go*** – page 20
Demonstrate operation

 - Bluetooth® Wireless Technology** – pages 40-41
Demonstrate operation

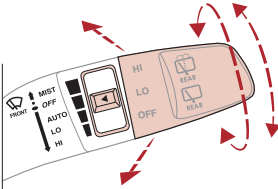

 - Front & Rear Windshield Wipers & Washers** – page 39

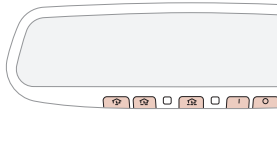

- Auto-Dimming Rearview Mirror with HomeLink®** – page 60

- Multimedia USB Ports, Power Outlets & USB Charger Ports – page 28
- Blind-Spot Collision-Avoidance Assist (BCA) – page 17
- Clock Setup – page 28
- Electronic Parking Brake (EPB) / Auto Hold* - pages 34-35
- Engine Start/Stop Button – page 27
- Head-Up Display (HUD)* – page 10
- Sunroof Operation – page 58
- Parking Distance Warning - Reverse/Forward* – page 33
- Passenger Air Bag Off Indicator – page 63
- Front Seat Headrest Adjustment* – page 49
- Seat Warmers/Ventilated Seats – page 48
- Smart Key – page 56
- Sunvisor – page 61
- Tire Pressure Monitoring System (TPMS) – page 9

During Delivery

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____

Date: _____

Sales Manager: _____

Date: _____

Customer: _____

Date: _____



TELLURIDE CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____

 
 
Mileage: _____ Dealership Name: _____

Sales Consultant: _____ Date: _____

Before Delivery


- Confirm "Good Battery" with battery tester
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Smart Key* lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio/video/navigation user's guides)

Key Feature Walkthrough

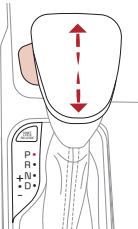

- Automatic Transmission / Manual Shift Mode* – page 32**

 - Automatic Climate Control – page 30**
Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed.

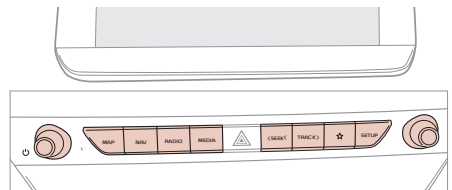

- UVO link* – pages 46**
For further system operation, refer to the Car Infotainment System Quick Reference Guide.

- UVO link with Navigation System* – page 47**
For further system operation, refer to the Car Infotainment System Quick Reference Guide.

- UVO link Activation – page 45**

- Android Auto™ / Apple CarPlay® Setup – page 44**

- UVO Assistance – page 45**

