

# SPORTAGE

## Features & Functions Guide



**Delivery First**  
The priority that delivers more

# GETTING TO KNOW YOUR **SPORTAGE**

## **Congratulations on Your New Kia Purchase!**

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

## **Using This Guide**

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)

Consumer - Roadside Assistance  
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

*Always check the Owner's Manual for complete operating information and safety warnings.*

## ESSENTIAL FEATURES

Air Conditioning / Climate Control . . . . .	25
Audio System — Standard Audio System* . . . . .	20
Audio System — UVO eServices System* . . . . .	22
Audio System — UVO eServices/Premium . . . . .	
Navigation System* . . . . .	23
Aux/USB/iPod® Port & Power Outlets . . . . .	24
Bluetooth® Wireless Technology . . . . .	18
Cruise Control . . . . .	17
Digital Clock . . . . .	24
ECO Mode (Active ECO) . . . . .	08
Front Seat Headrest Adjustment . . . . .	33
Passenger Airbag Off Indicator . . . . .	42
Reclining/Folding Rear Seats . . . . .	33
Tire Pressure Monitoring System (TPMS) . . . . .	05
Windshield/Rear Wipers & Washers . . . . .	16

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*



VIDEOS & QR CODES . . . . .	02
-----------------------------	----

## INSTRUMENT CLUSTER

Instrument Cluster Overview . . . . .	03
Indicators & Warning Lights . . . . .	04
Fuel Economy . . . . .	05
Tire Pressure Monitoring System (TPMS) . . . . .	05
LCD Instrument Cluster Modes . . . . .	06
Trip Modes / Trip Computer . . . . .	06
Instant Fuel Consumption Mode* . . . . .	06
User Settings Mode . . . . .	07
Service Mode . . . . .	07
Drive Mode Integrated Control System* . . . . .	08
ECO Mode (Active ECO) . . . . .	08

## DRIVER'S PANEL

Blind Spot Detection (BSD) System* . . . . .	09
Instrument Panel Dimmer . . . . .	10
Electronic Stability Control (ESC) . . . . .	10
Lane Departure Warning System (LDWS)* . . . . .	10
Hill-Start Assist Control (HAC) . . . . .	11
Autonomous Emergency Braking (AEB) / Power Liftgate Release Button* . . . . .	11
Power Windows, Window Lock & Central Door Lock . . . . .	12
Automatic Door Lock/Unlock . . . . .	12
Power-Folding Outside Mirrors* . . . . .	12
Heated Outside Mirrors* . . . . .	12
Engine Start/Stop Button* . . . . .	13

## STEERING WHEEL CONTROLS

Headlights & High Beams . . . . .	14
Turn Signals & Fog Lights* . . . . .	15
Daytime Running Lights (DRL)* . . . . .	15
Windshield Wipers & Washers / Auto Control (Rain Sensing)* . . . . .	16
Rear Wiper & Washer . . . . .	16
Tilt/Telescoping Steering Wheel . . . . .	16
Audio Controls . . . . .	17
Cruise Control . . . . .	17
Bluetooth® Wireless Technology . . . . .	18

## AUDIO SYSTEMS

Standard Audio System* . . . . .	20
UVO eServices / Android Auto™ / Apple CarPlay® Setup* . . . . .	21
UVO eServices System* . . . . .	22
UVO eServices with Premium Navigation System* . . . . .	23

## CENTER PANEL

Digital Clock . . . . .	24
Aux/USB/iPod® Port & Power Outlets . . . . .	24
Automatic Climate Control* . . . . .	25
Manual Climate Control* . . . . .	26
Automatic Gear Shift / Sportmatic® Shifting . . . . .	27
Paddle Shifters* . . . . .	27
Electronic Parking Brake (EPB)* . . . . .	28
Auto Hold* . . . . .	28
Downhill Brake Control . . . . .	29
AWD (All-Wheel Drive) Lock* . . . . .	29
Heated Steering Wheel* . . . . .	29
Parking Assist System* . . . . .	30

## SEATING

Seat Warmers / Ventilated Seats* . . . . .	31
Power Adjustable Driver's Seat* . . . . .	32
6-Way Manual Adjustable Driver's Seat* . . . . .	32
Reclining/Folding Rear Seats . . . . .	33
Front Seat Headrest Adjustment . . . . .	33
Unfastening Center Seat Belt . . . . .	33

## OTHER KEY FEATURES

Smart Key* . . . . .	34
Remote Keyless Entry (Folding Key)* . . . . .	35
Double-Turn Lock/Unlock All . . . . .	35
Fuel Door Release . . . . .	35
Fuel Cap / Malfunction Indicator . . . . .	35
HomeLink® with Auto-Dimming Rearview Mirror* . . . . .	36
Map/Room Lamps . . . . .	37
Panoramic Sunroof Operation* . . . . .	37
Power Liftgate* . . . . .	38
Smart Power Liftgate* . . . . .	39
Liftgate Release Button . . . . .	39
Rear-Camera Display* . . . . .	40
Child-Protector Rear Door Lock . . . . .	40
Sunvisor . . . . .	40
Hood Release Lever and Latch . . . . .	41
Tire Mobility Kit* . . . . .	41

## SAFETY FEATURES

Seat Belts . . . . .	42
Seat Belt Retractor Locks . . . . .	42
Occupant Detection System (ODS) / Passenger Airbag Off Indicator . . . . .	42

## NORMAL MAINTENANCE SCHEDULE . . . . . 43

## LEGAL DISCLAIMERS . . (See Back Inside Cover Page)

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: [www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos). Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

### What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

### How to use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

### How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
  - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
  - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
  - For operation specifics, refer to the instructions that come with the QR Code Reader App

### QR CODE

#### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

### QUICK TIPS

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code scanning
  - Try another QR Code Reader App; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet
3. When accessing videos on your mobile device, standard cellular data rates will apply

## Instrument Cluster Overview


- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicator & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer
- H** Trip Modes / Trip Computer\*
- I** Fuel Gauge

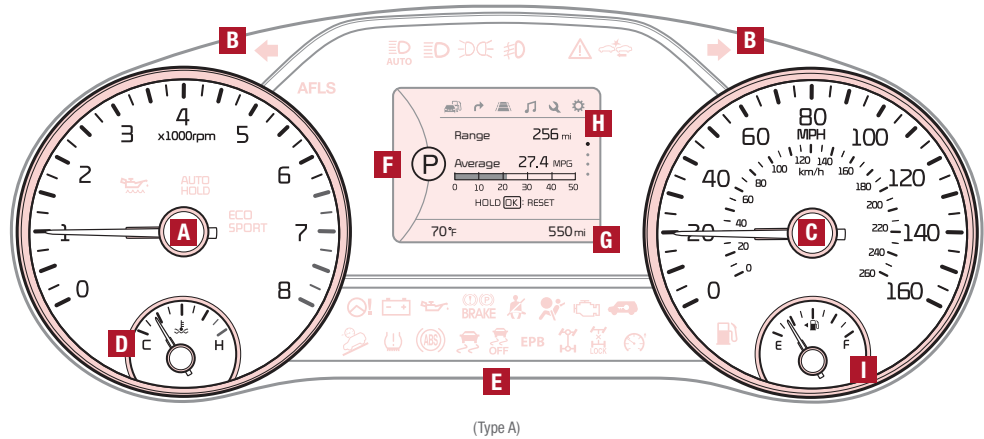

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations

For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual

## Indicators & Warning Lights

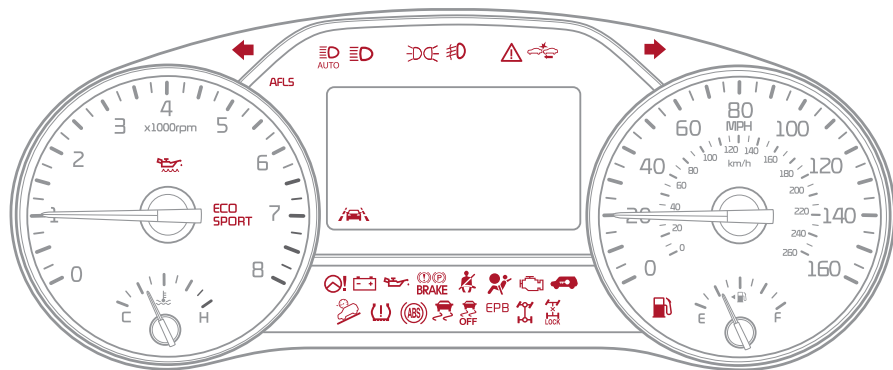

(Type B)


Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations

For more information on the instrument cluster and the function of all indicator and warning lights, please refer to the Owner's Manual


- |  |   |  |   |  |  |
|--|---|--|---|--|--|
|  | Low Engine Oil Level Warning Light                  |  | Autonomous Emergency Braking (AEB) Warning Light  |  | Downhill Brake Control (DBC) Indicator   |
|  | Active ECO ON/OFF Indicator                         |  | Lane Departure Warning System (LDWS) Indicator Light  |  | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |
|  | Sport Mode Indicator Light                          |  | Electric Power Steering Warning Indicator   |  | Anti-lock Braking System (ABS) Warning Light   |
|  | Adaptive Front Lighting System (AFLS) Warning Light |  | Charging System Warning Light   |  | Electronic Stability Control (ESC) Indicator   |
|  | High Beam Assist Indicator Light                    |  | Engine Oil Pressure Warning Light   |  | Electronic Stability Control (ESC) OFF Indicator                                       |
|  | High Beam Indicator                                 |  | Parking Brake & Brake Fluid Warning Light   |  | AWD System Warning Light   |
|  | Tail Light Indicator                                |  | Seat Belt Warning Light   |  | AWD LOCK Indicator   |
|  | Front Fog Light Indicator                           |  | Airbag Warning Light  |  | Low Fuel Level Warning Light   |
|  | Master Warning Light                                |  | Malfunction Indicator   |  | Auto Hold Indicator Light*   |
|  | Immobilizer Indicator                               |  | Cruise Indicator Light*   |  |  |
|  | Electric Parking Brake (EPB) Warning Light*         |  | Electronic Brakeforce Distribution (EBD) System Warning Light<br>(Two separate indicators on Instrument Cluster lit at same time) |  |  |


## Tire Pressure Monitoring System (TPMS)

 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.



Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Indicator . See front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) are underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

## Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

**REMINDER:** Driving range varies depending on a vehicle's fuel tank size, (e.g., 12-gal. vs. 24-gal). Even though the two vehicles MPG may be the same, the vehicle with the larger tank will have the greater range.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jam, visible when the door is opened.
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

### QR CODES

To view these videos on your mobile device, snap these QR codes or visit the listed website.

Refer to page 2 for more information.

#### Tire Pressure Monitoring System Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

#### Fuel Economy Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the Owner's Manual.

## LCD Instrument Cluster Modes

Press the Mode button **A** to change LCD Instrument Cluster Modes:



**Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.



**Turn-by-Turn Mode\*:** Displays the state of the navigation system



**Lane Departure Warning System (LDWS)\*:** Displays the state of the LDWS system



**A/V Mode:** Displays the state of the A/V System



**Service Modes / Master Warning:** Informs on upcoming service intervals and warning messages related to TPMS, BSD\* and others



**User Settings Mode:** Change the settings of the doors, lamps and other features

## Instant Fuel Consumption Mode\*


Press the Mode button **A** and cycle to the Fuel Economy screen in the Trip Computer to display Instant Fuel Consumption, which calculates fuel consumption during the past few seconds.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicles
3. Don't let the engine idle longer than necessary

## Trip Modes / Trip Computer


The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the Engine Start/ Stop button\* is in the ON position.

To cycle through the different LCD Instrument Cluster modes, press the Mode button **A**.


When in Trip Computer mode , press the Move switch **B** to cycle through the screens. When displaying TRIP A or TRIP B screens, press and hold the OK button **C** to reset the Tripmeter to zero.

### REMINDERS:

- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

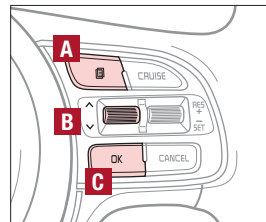

(Type A; Controls located on Steering Wheel)

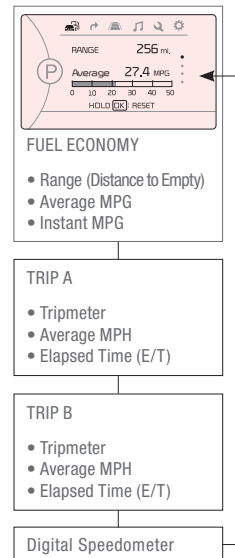


(Type B cluster)

### REMINDERS:

- Instant Fuel Consumption Mode is not to be used in calculation or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 MPH (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (---)



## User Settings Mode

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill and with the Engine Start/Stop button in the ON position and select User Settings .

You can navigate the selections on the display by toggling the Move switch **B**. Select the item by pressing the OK button **C**.

### User Settings Modes:

#### Door/Liftgate

- Automatic Lock
- Automatic Unlock
- Two Press Unlock\*
- Power Liftgate\*
- Smart Liftgate\*

#### Lights

- One-Touch Turn Signal
- Head Lamp Delay
- Welcome Light\*

#### Sound

- Park Assist System Volume\*
- Blind Spot Detection Sound\*
- Welcome Sound\*

#### Driving Assist\*

- Rear Cross Traffic Alert\*
- Autonomous Emergency Braking (AEB)\*
- Forward Collision Warning (FCW)\*

#### Service Interval

- ON/OFF
- Set mileage/months


#### Convenience

- Steering Position
- Wiper/Light Display\*

#### Other Features

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit

## Service Mode

To enter Service Mode, press the Mode button **A** and cycle to Service Mode . Then press the OK button **C** to enter. System will display tire pressure status, number of miles remaining until next service is due, as well as the type of service due.

When service is required, the following will be displayed: Service Required.


To reset the Service Mode system, press and hold the OK button **C** for more than 1 second.

To turn Service In OFF, go to User Settings.

### Service Interval Setting

To set the service interval in User Settings mode:

- Press the Mode button **A** to cycle to User Settings
- If Service Interval is OFF, press the OK button **C** to turn ON
- Use the Move switch **B** to select/change the interval setting
- Press the OK button **C** to select the interval

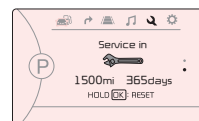

## QR CODES

To view these videos on your mobile device, snap these QR codes or visit the listed website.

Refer to page 2 for more information.

### LCD Display Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### LCD Display: Maintenance Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


## Drive Mode Integrated Control System\*

The Drive Mode may be selected based on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The instrument cluster will display SPORT or ECO when selected. When in NORMAL mode, it will not display in the instrument cluster.

### REMINDER:

- The system is turned ON and in NORMAL mode when ignition is in the ON position
- When ECO mode is selected, the indicator will display and system remains on, even when ignition is cycled. Otherwise the system will default to NORMAL.
- Steering effort may be slightly increased in Sport mode

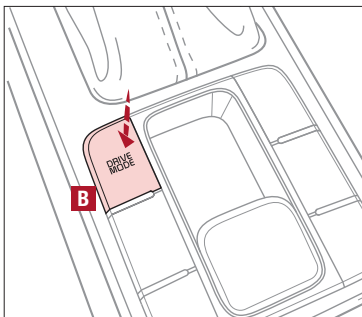

(Type A shown. Located below gear shift)

## ECO Mode (Active ECO)

Active ECO helps improve fuel economy by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B** and scroll through options until in the ECO mode. The green ECO indicator light **C** in the instrument cluster will illuminate, indicating that Active ECO is operating. Active ECO will remain on even when the ignition is cycled.

To turn Active ECO OFF, press the DRIVE MODE button **B** again and change to another mode.



(Located in instrument cluster)

### QUICK TIPS

#### To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

### QR CODE

#### Drive Mode Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*For more information on the Active ECO indicator, refer to your Owner's Manual or contact your local dealership.*

## Blind Spot Detection (BSD) System\*

The BSD system uses radar sensors to help alert the driver before changing lanes. The light on the BSD button **A** will illuminate when turned ON. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than 20 mph and will alert the driver if another vehicle is detected by the radar sensor, up to 230 feet away.

### Blind Spot Detection (BSD)\* / Lane Change Assist (LCA)\*

**1st-stage alert:** When another vehicle is detected within the BSD System boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors.

**2nd-stage alert:** When 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

### RCTA (Rear Cross Traffic Alert)




If the RCTA system sensors detect approaching vehicles from the left or right side **C**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen, with these conditions:

- When the gear shift is in Reverse
- When the vehicle moves in reverse from a parked position
- When the vehicle is moving less than 6 mph

#### REMINDERS:

- When the BSD is ON and the vehicle power is cycled to OFF then ON again, the BSD system returns to ON
- The RCTA feature can be turned OFF/ON in User Settings

For more information on the BSD System, refer to your Owner's Manual.

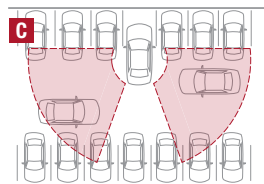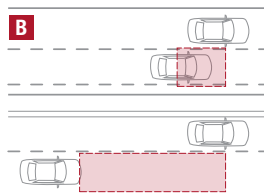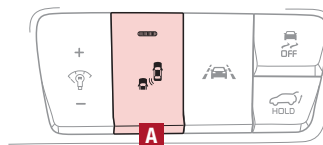

#### QR CODE

#### Blind Spot Detection System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Instrument Panel Dimmer

With parking lights/headlights ON, toggle switch **A** up (+) or down (-) to adjust the brightness of the instrument panel illumination.

**REMINDER:** The Instrument Panel Dimmer does not adjust brightness on the audio/navigation system\* screens; use SETUP to adjust brightness on the screens.

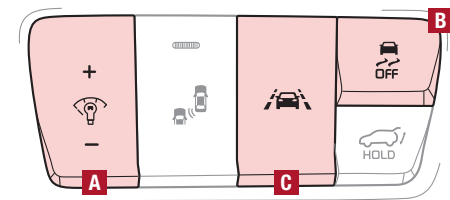

(Buttons located on left of Steering Wheel)

## Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.


Press ESC button **B** to turn ESC OFF/ON.

### REMINDEES:

- ESC is turned ON by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will illuminate whenever the ESC is in operation

For more information on Electronic Stability Control (ESC) and its specific features and operations, please refer to your Owner's Manual.

## Lane Departure Warning System (LDWS)\*

With the Engine Start/Stop button in the ON position, press the LDWS button **C** to turn system ON. The instrument cluster indicator  will illuminate green.

If the LDWS detects that you are veering outside of your lane, the system may issue a warning on the LCD screen and an alert may sound, under these conditions:

- The vehicle exceeds approximately 37 mph
- The LDWS system recognizes the lane the vehicle is traveling in


If the LDWS button is ON and ignition is cycled, the system will turn ON again. If the LDWS button is OFF, the system remains OFF.

### REMINDER:


LDWS will not issue a warning if the turn signal is activated



When the LDWS sensor does not detect the lane traveling in the lanes are not illuminated

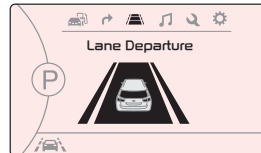

When the LDWS sensor detects the lane traveling in, both lanes are illuminated

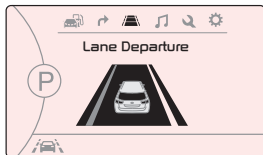

When the LDWS sensor detects the vehicle veering outside of the lane traveling in, a yellow indicator will illuminate either on the left or right lane (shown in both images above)

### QR CODE

#### Lane Departure Warning System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

The Lane Departure Warning System (LDWS) is not a substitute for safe and proper driving. Always drive safely and use caution. LDWS may not always alert the driver if the vehicle is driven outside of its lane.

## Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.


**REMINDER:** The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

### QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal operation.
- HAC provides a 2-second delay before the vehicle may start rolling backward

## Power Liftgate Release Button\*

Press the **A** button for approximately one second to open the liftgate.

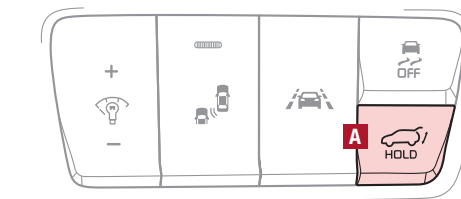

(Buttons located on left of Steering Wheel)

## Autonomous Emergency Braking (AEB) / Forward Collision Warning (FCW)\*

The FCWS helps to alert the driver when rapidly approaching a vehicle that is slowing down, braking or stopped. A warning message will appear on the LCD screen and a chime will sound. The FCWS will become active when the vehicle is traveling more than 25 mph. The AEB will become active when the vehicle is traveling more than 6 mph.



To turn the FCWS off, go to User Settings in the LCD Instrument Cluster modes.

### REMINDEERS:

- The FCWS and AEB will be activated by default when vehicle power is cycled on, even when previous setting is off
- The FCWS will not operate when the vehicle is traveling more than approximately 50 mph

*The Forward Collision Warning System (FCWS) and Autonomous Emergency Braking (AEB) are not substitutes for safe and proper driving. Always drive safely and use caution. FCWS may not always alert the driver when the vehicle is approaching another vehicle.*

## Power Windows, Window Lock & Central Door Lock

**A** Pull/Press to operate Driver's Window Auto Up/Down\*


### QUICK TIP

Press button again to stop Auto Up/Down function

**B** Press to Lock/Unlock All Doors (also unlocks Fuel Door)

**C** Press to disable Rear Passenger Windows

**REMINDER:** When pressed **C**, window controls for all Rear Windows are disabled, including from driver's controls.

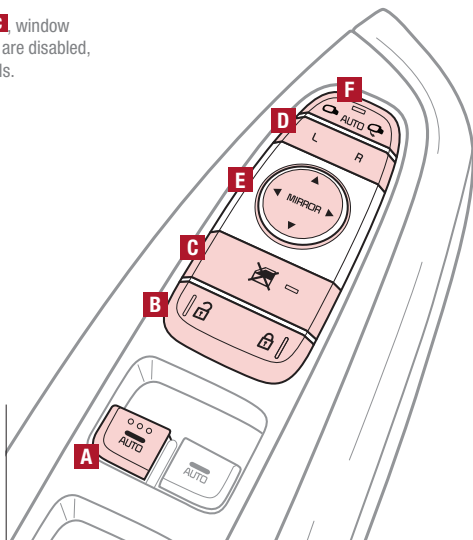

## Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved in to or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

## Power Folding Outside Mirrors\*

**D** Press the L or R buttons to select the mirror to adjust

**E** Press button arrows left/right or up/down to adjust mirror position

**F** Toggle button left/right to unfold/fold the outside rearview mirrors

Toggle button to center to automatically fold/unfold mirrors when:

- Smart Key\* lock/unlock buttons are pressed
- Outside door handle button is pressed
- Driver approaches the vehicle with the Smart Key\*

**REMINDER:** To lock position of mirrors, toggle switch to the neutral (center) position.

## Heated Outside Mirrors\*

Mirror heaters controlled with Rear Defroster.

## Engine Start/Stop Button\*

### To start the engine:


1. Depress the brake pedal
2. Press the Engine Start/Stop button while in Park or Neutral

To turn the engine OFF, press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob on your person or inside the vehicle.

### REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the Engine Start/Stop button, hold the fob up against the Engine Start/Stop button and press

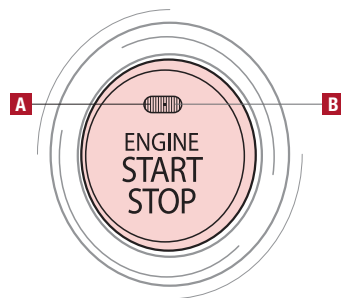

### QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once (Amber light **A**)

On position

- When already in the ACC position (Amber light **A**) and without depressing the brake pedal, press the Engine Start/Stop button again (Green light **B**)
- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice (not illuminated **B**)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning engine on may discharge the vehicle's battery

### QR CODE

#### Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

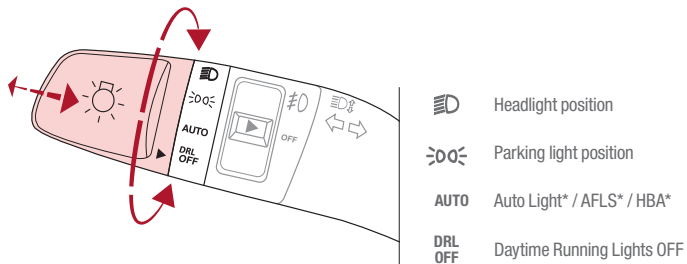

**AUTO Light\*** — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

## Adaptive Front Lighting System (AFLS)\*


The Adaptive Front Lighting System helps improve visibility during nighttime driving by aiming the low beam headlights in the direction the vehicle is moving. AFLS controls the aiming direction based on steering angle and speed.

When the light switch is in the AUTO Light position, the AFLS will activate.

**REMINDER:** When the AFLS indicator illuminates on the instrument cluster, the AFLS is not working properly. See authorized Kia dealer for service.

## High Beam Assist (HBA)\*

High Beam Assist automatically adjusts the headlight range by switching between high and low beams based on light from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

### REMINERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off low beams will be on continuously




### Turn Signals & Fog Lights\*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

**REMINDER:** Headlights must be ON for fog light operation.

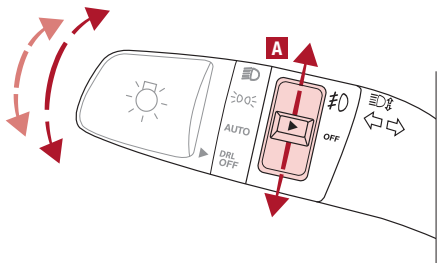

**One-Touch Lane Change Signal** is activated by moving the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to User Settings Mode in the LCD Instrument Cluster modes.

*For more information on the User Settings Mode, please refer to your Owner's Manual.*

### Daytime Running Lights (DRL)\*

DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Engine is turned off
- Switch is in the OFF position

**REMINDER:** DRL only operates during the daytime.

#### QR CODE

##### Sportage Daytime Running Lights Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Windshield Wipers & Washers

### To operate:

- Move lever Up/Down to change Wiper modes
- Press INT switch **A** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

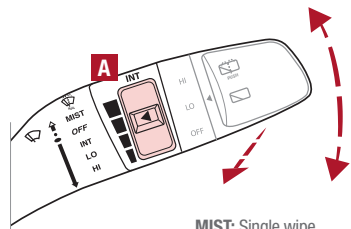

**MIST:** Single wipe  
**OFF:** Wiper off  
**INT/AUTO\*:** Intermittent Wipe/Rain Sensing\*  
**LO:** Slow wipe  
**HI:** Fast wipe

### QUICK TIP

Moving switch **A** up increases intermittent wipe frequency and wipe speed. Moving switch **A** down decreases frequency of wipes.

### Auto Control (Rain Sensing)\*


The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To adjust the Auto Rain Sensing speed setting, move the speed control switch **A** up/down.

## Rear Wiper & Washer

### To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

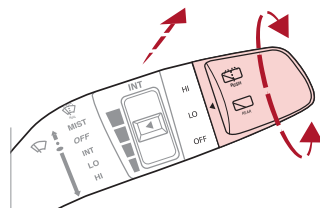

**HI:** Fast wipe  
**LO:** Slow wipe  
**OFF:** Wiper off


### QUICK TIP

LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers.

## Tilt/Telescoping Steering Wheel


To adjust the Steering Wheel, press the lock-release lever **B** down and adjust to the desired angle **C** and then the distance **D**.

When finished, pull the lock-release lever **B** up to lock Steering Wheel in place.

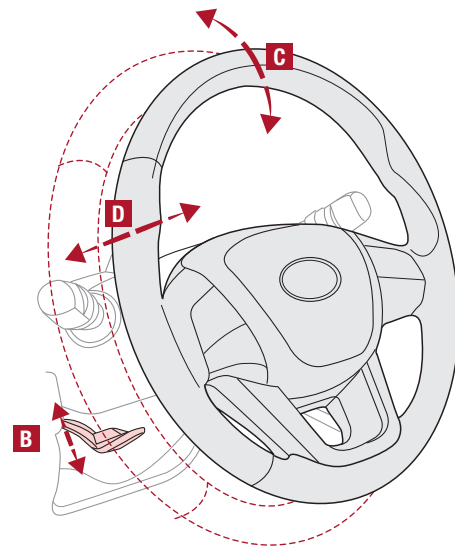

## Audio Controls

## Cruise Control

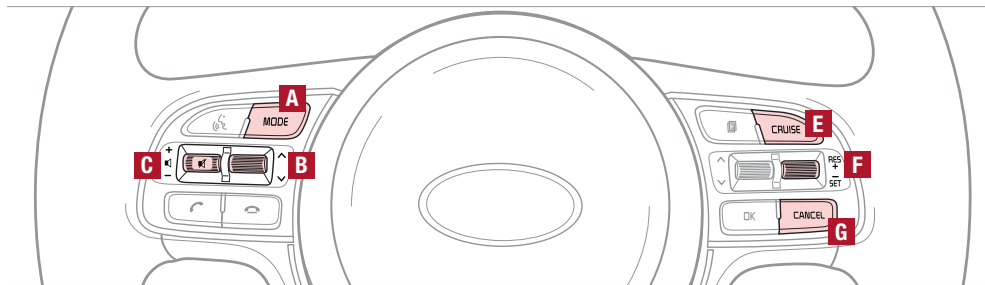

**A Audio Mode button:** Press to cycle through FM/AM/SiriusXM®/Media modes

**B Seek/Preset button**  
*FM/AM/SiriusXM® Modes:* Press to advance through Preset Stations. Press and hold to Auto Seek  
*Media Modes:* Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind

**C Volume button:** Press up/down to raise/lower volume  
**Mute button:** Press to mute all audio

### QUICK TIP

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

*Your vehicle's steering wheel buttons may differ from those in the illustrations. For further audio system operations, refer to pages 20-23. See your Owner's Manual for more details.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

**E Cruise Control button:** Press to turn the Cruise Control ON/OFF

**F Resume Cruising Speed button:** Press up to resume or increase cruising speed

**SET Cruising Speed button:** Press down to set or decrease Cruising Speed


**G Cruise Control CANCEL button:** To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

### QUICK TIPS

- Cruise Control is designed to function above approximately 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

## Bluetooth® Wireless Technology

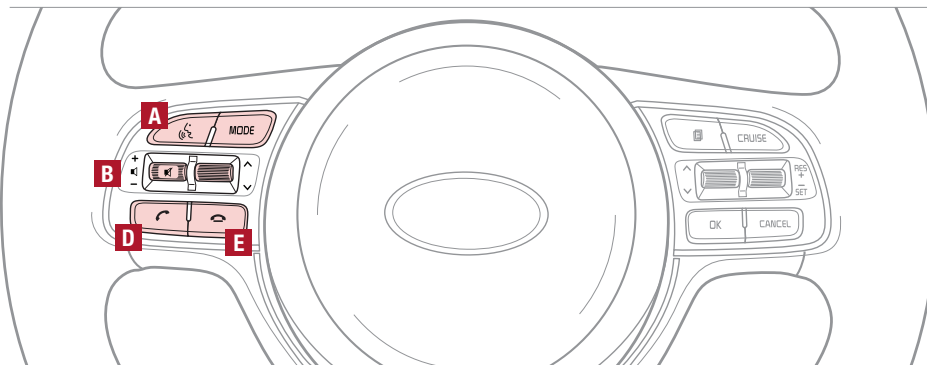

**A Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system

**B Volume button:** Press up/down to raise/lower speaker volume

**Mute button:** Press to mute the microphone during a call

**D Call button:** (Standard Audio System): Press the button to display the Dial Number screen. Press again to display the most recently made call number. Press a third time to initiate making the call to the number displayed

**Call button:** (UVO eServices Systems): Press to receive/place/transfer calls. Press to place a call using voice command prompts from the system, or to answer an incoming call

**E End Call button:** Press to turn the Cruise Control ON/OFF

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language setting may delete paired phones

For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

## Bluetooth® Wireless Technology

### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

#### QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth*® connection requests.

### How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

#### Standard Audio System\*

- Option 1: Press the Receive/Place Call button **D** (system displays the call history with the most recent calls)
- Option 2: Press the Talk button **A** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

#### UVO eServices System/UVO eServices with Premium Navigation\*

- Option 1: Press the Receive/Place Call button **D** (displays the call history with the most recent calls)
- Option 2: Press the Talk button **A**. Then say the command "Call {name}" or "Dial {number}"

## Voice Recognition and Phone Contact Tips

To help optimize the Bluetooth® Wireless Technology Voice Recognition system, below are some tips and reminders. Improve the performance by making a few simple changes to your phone contacts:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters and hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

The system may have difficulty understanding some accents or uncommon names. Below are other tips to optimize using the voice recognition.

#### QUICK TIPS

- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too soft or too loud
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C. Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

#### QR CODE

##### Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Standard Audio System\*

FM/AM/SiriusXM®/Media (CD, MP3, USB, iPod, Aux, My Music, *Bluetooth*® Audio)\*

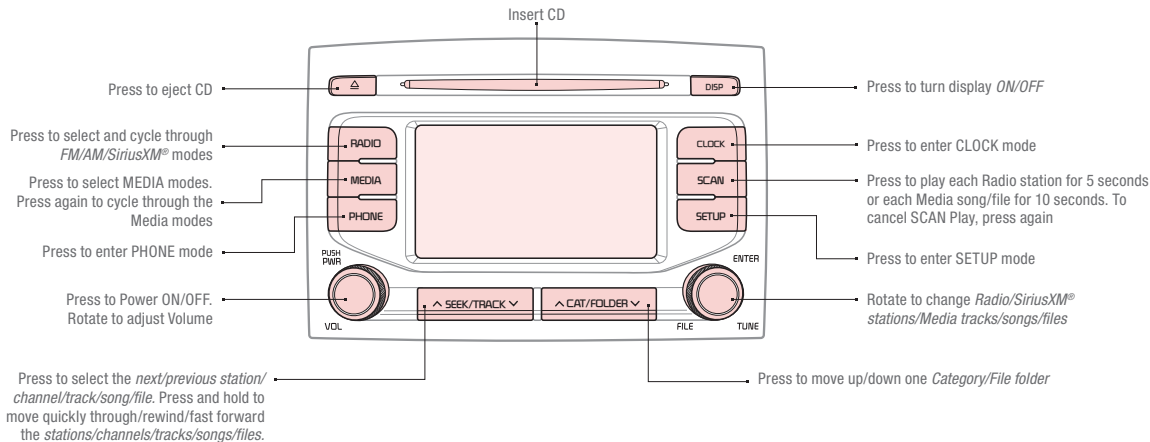

### Audio System Setup Options

Press the SETUP key, then using the touchscreen, press the menu item to enter (Display, Sound, Clock/Calendar, Phone, System). Adjust the available settings for each equipped audio system setup option by pressing the onscreen buttons/arrows. Audio system setup options may include the following:

- **Display settings** - Adjusting the Brightness, Mode Popup, Media Display
- **Sound settings** - Sound Settings, Speed Dependent Volume Control, Voice Recognition Volume, Touchscreen Beep
- **Clock/Calendar settings** - Clock Settings, Calendar Settings, Time Format, Clock Display
- **Phone settings** - Pair Phone, Paired Phone List, Contacts Download, Outgoing Volume, Bluetooth® System Off
- **System settings** - Memory Information, Prompt Feedback, Language

### QR CODE


#### Standard Audio System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**To adjust the Sound settings** (bass, middle, treble, fader, balance) – When in the SETUP menu, select Sound and then Sound Setting. Adjust the settings by pressing the onscreen arrows and then Return  to exit.

For further audio system operations, refer to pages 21-23. Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

**REMINDER:** To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

## UVO eServices/Android Auto™/Apple CarPlay® Setup

### UVO eServices Registration/Activation – To use UVO eServices:

1. On your Smartphone, go to an app store or marketplace to download the free Kia UVO eServices app.
2. Open the UVO eServices app and create an account by clicking on REGISTER. After entering your information and following the prompts to complete registration, go to your email and click on the confirmation link (You can also register an account by logging into MyUVO.com).
3. In the app, click CONTINUE, accept the terms and click CONTINUE once again.
4. Follow the app's IN-CAR SETUP instructions to connect your smartphone and complete UVO eServices activation.

### Android Auto™\*

#### Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

#### How to start Android Auto™:

1. Press the SETUP key on your UVO eServices system's control panel.
2. Press the CONNECTIVITY button, select Android Auto™ then select ENABLE ANDROID AUTO.
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

### Apple CarPlay®\*

#### Setting up and starting Apple CarPlay®:

1. Connect the Apple CarPlay® compatible iPhone with the vehicle's USB port using the manufacturer's cable provided with your iPhone.
2. On the UVO eServices System audio control unit, press the SETUP key.
3. Press the CONNECTIVITY button on the screen and select Apple CarPlay®.
4. Select ENABLE APPLE CARPLAY.
5. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps


#### REMINDERS:

- Android Auto compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay compatibility requirements: Apple Lightning® cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)

*For further UVO eServices System operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 20-23.*

## UVO eServices System\*

FM/AM/SiriusXM®/Media (USB, iPod®, My Music, Aux, *Bluetooth®* Audio)

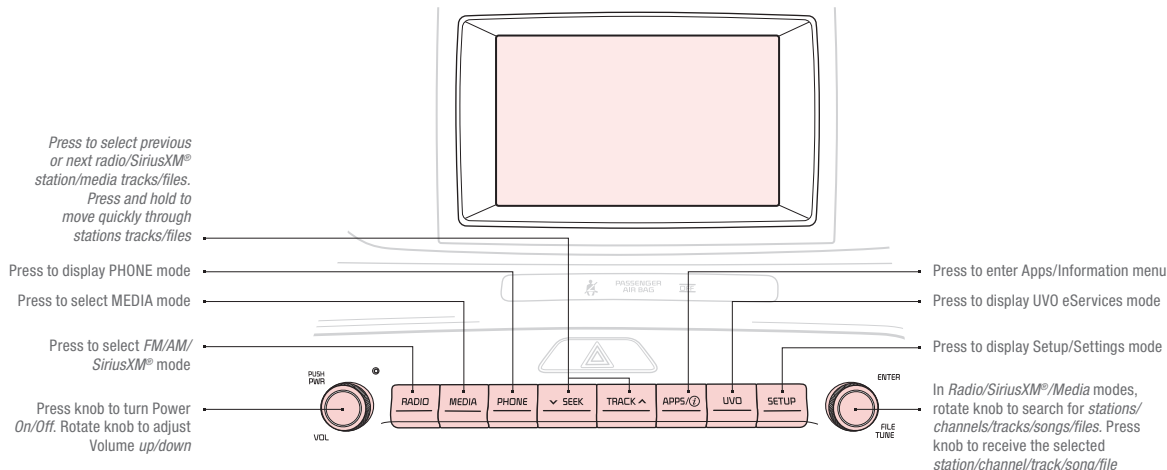

**Sound settings:** To adjust the UVO eServices System sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Tone, Advanced, Default)
4. Use the on-screen buttons to adjust settings
5. Press the return button to save settings

**REMINDER:** To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Navigation may be available when connected to Android Auto or Apple CarPlay® supported smartphones
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the Steering Wheel
- Prolonged use of the UVO eServices System in ACC mode may drain the vehicle's battery

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 20-23. For further UVO eServices System operations, refer to the Car Multimedia System User's Manual.

### QR CODE

#### UVO eServices System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)



## UVO eServices with Premium Navigation System\* – FM/AM/SiriusXM®/Media (USB, iPod, Aux, Bluetooth® Audio)

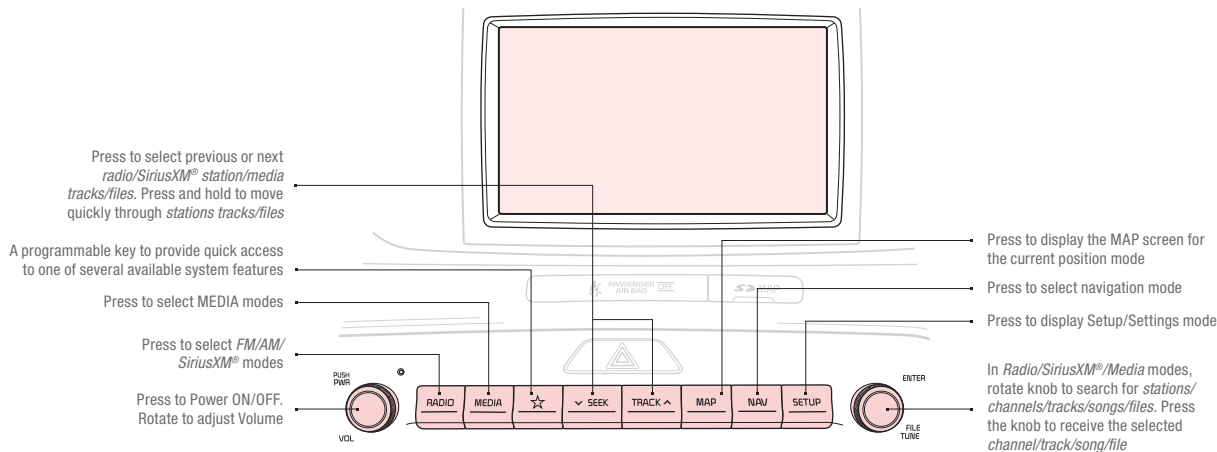

### Sound settings:

**To adjust the sound settings** (Position, Tone, Priority, Advanced, Default, Beep) from any audio mode:

1. Press the SETUP button on the Audio Control Unit
2. Select the on-screen SOUND button
3. Select the menu item to change settings
4. Use the on-screen buttons to adjust settings
5. Press the Return button to save settings

**REMINDER:** To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Prolonged use of the UVO eServices with Premium Navigation System in ACC mode may drain the vehicle's battery.
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO eServices System Command Feedback by pressing the TALK button on the steering wheel

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to pages 20-22. For more information on the UVO eServices with Premium Navigation System, refer to the Car Multimedia System User's Manual.

## Digital Clock

### Standard Audio System\*:

Press SETUP button on Audio system, then press on-screen instructions to change clock settings.

### UVO eServices System Clock Setup\*:

Press the SETUP button, then press the on-screen Clock icon to enter clock settings.


### UVO eServices with Premium Navigation System Clock Setup\*:

Press the SETUP button, then press the on-screen Clock icon to enter clock settings.


#### QUICK TIP

- Press the RETURN button on the navigation screen to ensure changes are saved.
- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (UVO eServices with Premium Navigation System\*)

## Aux/USB/iPod® Port & Power Outlets

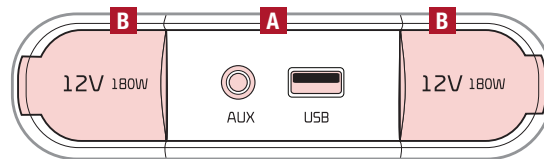

(Located on center panel)

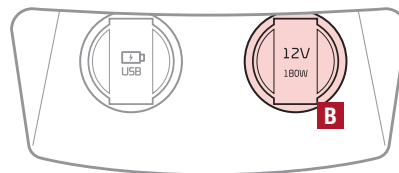

(Located on back of center console)

Use the Aux port **A** to connect audio devices and the USB port to connect USB audio devices, smartphones and iPod® devices.

**B** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.


#### QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

**REMINDER:** Using the power outlets, USB/Aux ports for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) could cause the battery to discharge.

*For more information on the Aux/USB/iPod® Ports and Power Outlets, refer to the Owner's Manual.*

## Automatic Climate Control\*

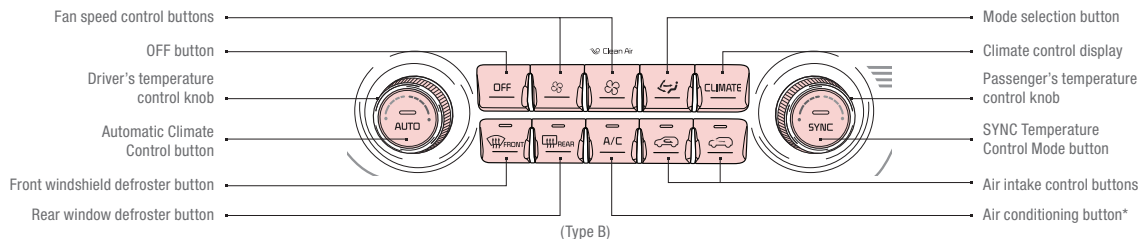

### Climate Control Auto Function

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Press **SYNC** to select Sync Temperature Control Operation

### Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

### Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

### QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

### Air Flow Modes

To select Air Flow Modes, press the mode selection button:




### REMINDERS:

- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control

Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.


## Manual Climate Control\*

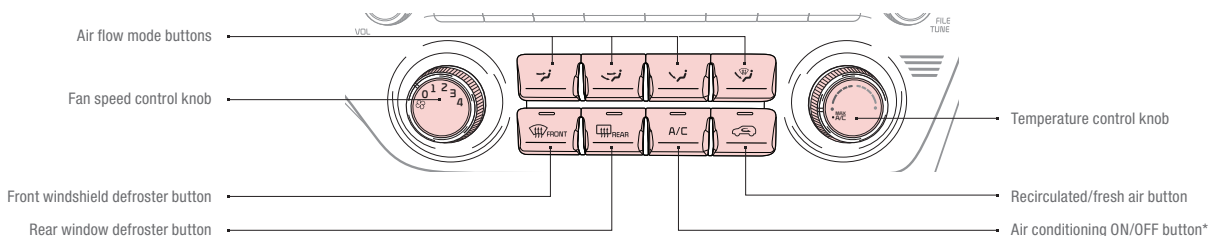

### Defrost Outside Windshield:


1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button 

### Defog Inside Windshield:


1. Set **Fan Speed** to desired position
2. Set **Temperature** to desired position
3. Press the **Front Defrost** button 

### Air Flow Modes

To select Air Flow modes, press the Mode selection buttons:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

### QUICK TIPS

- Defrost  mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- MAX A/C mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

**REMINDER:** Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.


## Automatic Gear Shift with Sportmatic® Shifting

- P:** Park                                    **[+]:** Sport Mode Upshift
- R:** Reverse                                **[-]:** Sport Mode Downshift
- N:** Neutral
- D:** Drive

### Sport Mode:

To enter Sport mode, move shift lever from D to left gate

To shift while in Sport mode, move shift lever up [+] to upshift or down [-] to downshift.

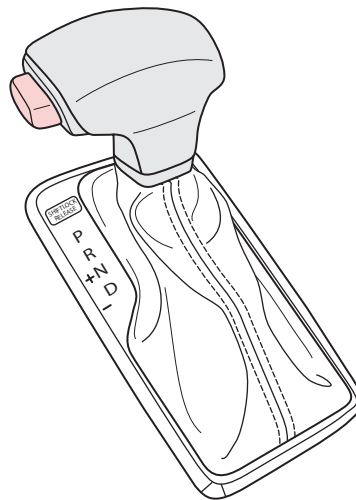

### QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected


## Paddle Shifters\*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Sport mode).

**Paddle Shifting:** Pull the [+] or [-] paddle shifter once to shift up or down one gear.

### REMINDERS:

- The paddle shifters can be operated when the vehicle speed is more than 6 mph
- When in Sport mode, pulling the left and right paddle shifters at the same time will NOT shift gears

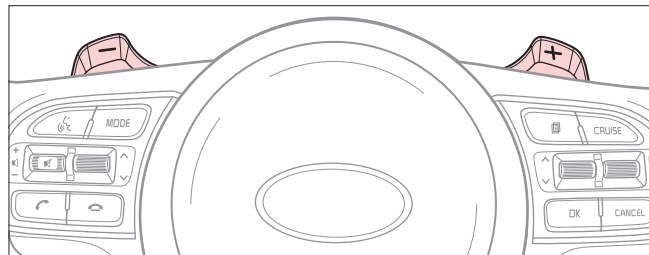

### QR CODE

#### Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Electronic Parking Brake (EPB)\*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

### Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the instrument cluster.

If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application.

### Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

#### REMINDERS:

- EPB will not release unless the hood, tailgate and all doors are closed and seat belts are fastened
- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

#### QUICK TIP

When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB

## Auto Hold\*


The Auto Hold maintains the vehicle in a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal.

Depress the brake pedal, start the engine and then press the AUTO HOLD button **B**. The white Auto Hold indicator will come on indicating the system is in standby.

Before the Auto Hold will engage, the driver's door, engine hood and tailgate must be closed and the driver's seat belt must be fastened.

When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green indicating the Auto Hold is engaged and EPB is applied. The vehicle will remain at a standstill even if you release the brake pedal.

If EPB is applied, Auto Hold will be released.

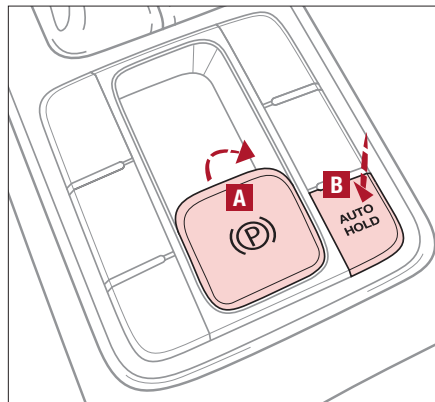


(Type B shown. Located below gear shift)

## Downhill Brake Control (DBC)

DBC helps drivers maneuver down steep hills by automatically braking for them, allowing drivers to concentrate on steering.

Press button **A** to turn DBC ON/OFF.

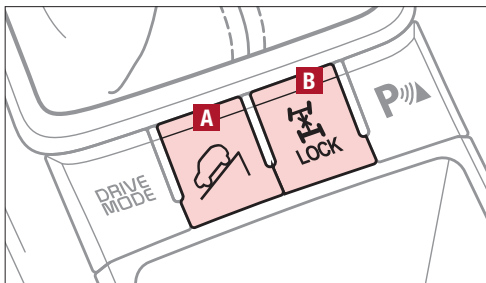

(Type A shown. Located below gear shift)

### QUICK TIPS

- When on, the DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

**REMINDER:** The DBC defaults to OFF when ignition is cycled.

## AWD (All-Wheel Drive) Lock\*


When you select AWD Lock mode by pressing the AWD LOCK button **B**, the AWD LOCK mode increases the drive power when driving on wet pavement, snow-covered roads and/or off-road.

- This mode is used for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to maximize traction
- This mode automatically begins to deactivate at speeds above 19 mph (30 km/h) and is shifted to AWD AUTO mode at speeds above 25 mph (40 km/h). If the vehicle decelerates to speeds below approximately 25 mph (40 km/h), however, the transfer mode is shifted into AWD LOCK mode again

When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.

## Heated Steering Wheel\*

While the Engine Start/Stop button is in the ON position, press the Heated Steering Wheel button A to turn the steering wheel heater ON/OFF. The steering wheel heater will turn off automatically in 30 minutes, or when button **C** is pressed again to deactivate.

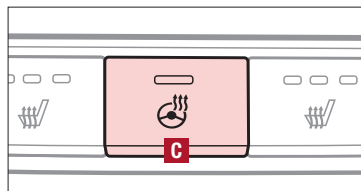

(Located on center panel)



### QUICK TIPS

- If the ignition is turned OFF then ON again within 30 minutes of the steering wheel heater being turned ON, the system will remain in the ON position
- System does NOT turn off when the ignition is cycled. To turn the system off, press the Heated Steering Wheel button **C**

## Parking Assist System\*

The Parking Assist System\* is not a safety device. The Parking Assist System\* is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the front, rear and side of the vehicle when moving forward or backing up.

The system is activated when the ignition is ON and the vehicle is in R (Reverse). To deactivate the system, press the Parking Assist System\* button **A** (LED illuminated).

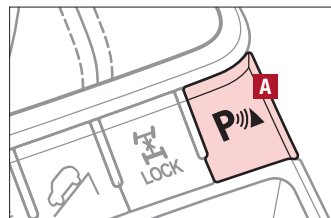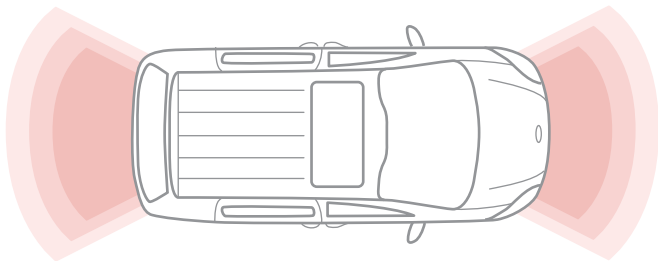

(Type A shown. Located below gear shift)

### REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

*The Parking Assist System\* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Assist System\* may not detect every object in front of or behind the vehicle.*



## Seat Warmers / Ventilated Seats\*

### A Seat Warmers:


- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

### B Ventilated Seats:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

### QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature

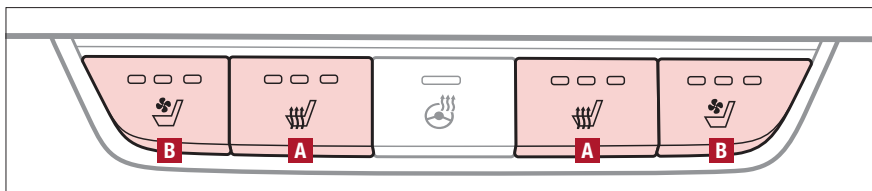

(Buttons located on center panel)

### QR CODE

#### Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Power Adjustable Driver's Seat\*

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar forward/backward.

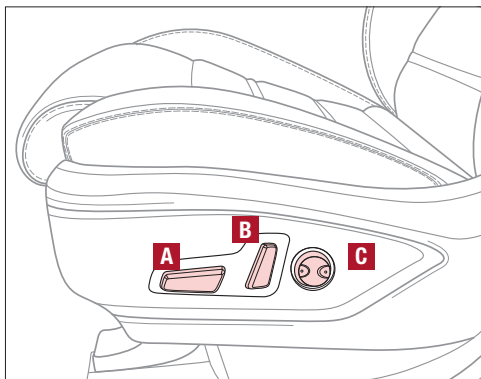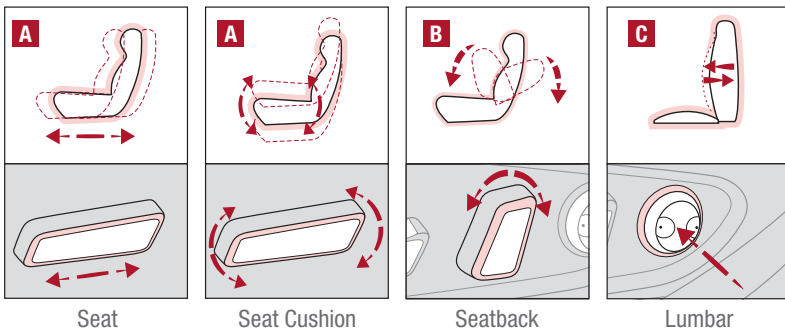


## 6-Way Manual Adjustable Driver's Seat\*

Pull lever **D** to slide seat forward/backward.

Pull/press lever **E** to adjust seat height.

Pull lever **F** to adjust seatback recline.

Press **G** to adjust lumbar support

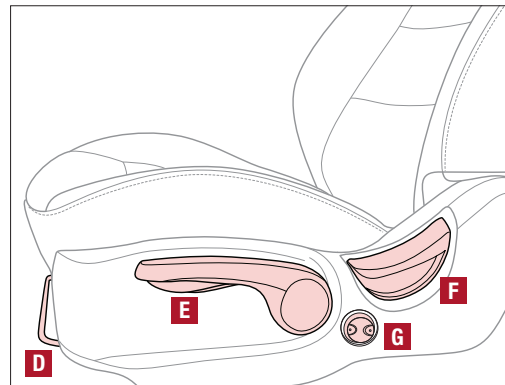

### QUICK TIPS

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

## Reclining/Folding Rear Seats

(Seat type with lever in front)


To recline the Rear Seatback:

1. Pull lever **E** up to unlock seat
2. Holding the lever **E** up, adjust Seatback to desired position **F**
3. Release the lever **E** and ensure the Seatback is locked in place

To fold the Rear Seatback:

1. Pull lever **E** up to unlock seat
2. Fold Seatback flat **F**

**REMINDER:** The lever must return to its original position for the Seatback to lock.

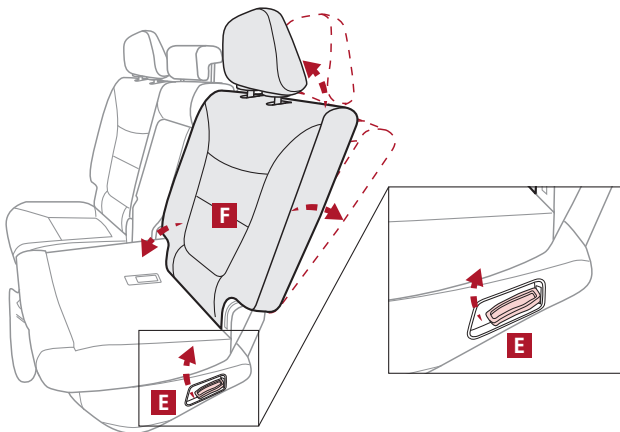


### QUICK TIP

When adjusting seat forward or backwards, ensure seat clicks or locks into place before driving the vehicle.

## Front Seat Headrest Adjustment

**To raise headrest** — Pull headrest up to the desired position.

**To lower headrest** — Press lock **A**, then press the headrest down.

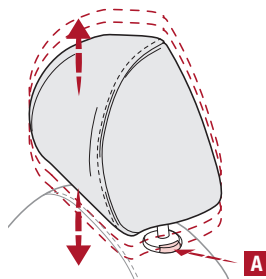

### QR CODE

#### Second and Third Row Center Seatbelt Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Unfastening Center Seat Belt

1. If Seat Belt is buckled, press the release button on the buckle.
2. To retract the center seatbelt webbing **G** in 2nd and/or 3rd rows, use the lap belt tongue plate **H** to push the “release button” in the small slot on the center belt buckle **J**.

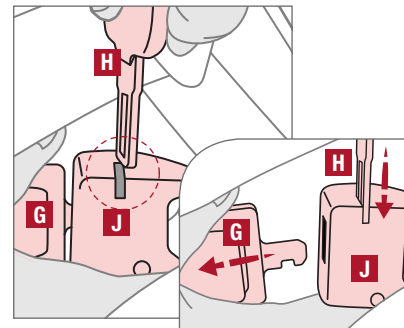

## Smart Key\*

### Smart Key Fob:

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Liftgate
- C** **Manual Liftgate\***: Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate.

#### REMINDERS:

- The Liftgate does not automatically open when the C button is pressed.
- The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle

**Power Liftgate\***: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close.

- D** Press and hold for more than a half-second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key (Button on reverse side of fob)

#### REMINDERS:

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- Remote button configuration may vary depending on vehicle options

### Driver's Door Lock/Unlock button **F**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors




### Mechanical Key **G**:

Use to unlock/lock Driver's Door:

1. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **H**
2. Insert Mechanical Key and turn right to Unlock Driver's Door. Turn twice within 4 seconds to Unlock all doors
3. Insert Mechanical Key and turn left to Lock Driver's Door
4. Return keyhole cover to its original position

Use to lock glove box and to turn Child-Protector Rear Door Lock

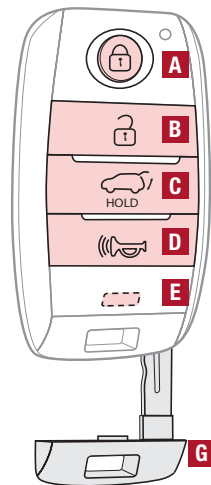

## QR CODE

### Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## QUICK TIP


The Smart Key's signal can be blocked by the normal operation of a cell or smartphone. To help prevent this, store each device separately.

**REMINDER:** Remote button configuration may vary depending on vehicle options.

For more information on the Mechanical Key, please refer to your Owner's Manual

### Remote Keyless Entry (Folding Key)\*

- A** Press the release button to unfold the key
- B** Press to lock all doors
- C** Press to unlock driver's door. Press twice in 4 seconds to unlock all doors and liftgate
- D** Press and hold to unlock liftgate and manually open
- E** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

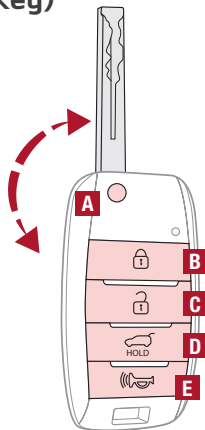


#### REMINDER:

- The liftgate does not automatically open when the **D** button is pressed
- The liftgate unlocks when the Smart Key is within close proximity of the vehicle
- Remote button configuration may vary depending on vehicle options

### Double-Turn Lock/Unlock All

- Turn clockwise once to unlock driver's door
- Turn clockwise again within 4 seconds to unlock all doors
- Turn counterclockwise once to lock all doors

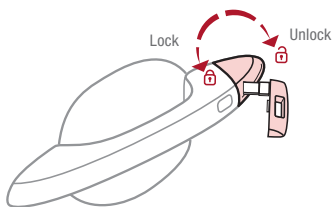


### Fuel Door Release

To open the fuel door, press the right edge of the fuel door.

#### REMINDER:


The fuel door lock will unlock/open only when driver's side door is unlocked.

### Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for **ONE CLICK** to prevent Malfunction Indicator  from illuminating.

#### REMINERS:

- To open the fuel door, press the right edge of the fuel door.
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back.

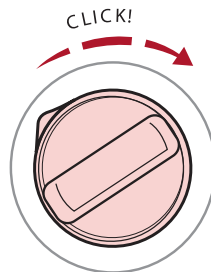

## QR CODE

### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## HomeLink® with Auto-Dimming Rearview Mirror\*

- |                           |                                 |
|---------------------------|---------------------------------|
| <b>A</b> HomeLink® button | <b>E</b> Glare detection sensor |
| <b>B</b> HomeLink® button | <b>F</b> Automatic dimming ON   |
| <b>C</b> Indicator light  | <b>G</b> Automatic dimming OFF  |
| <b>D</b> HomeLink® button |                                 |

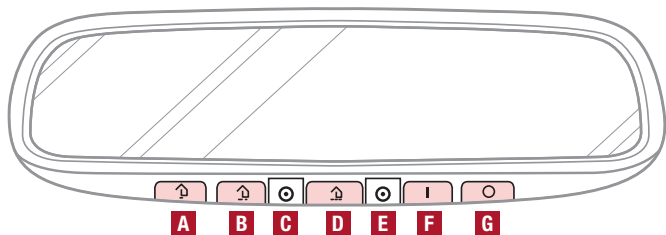

The HomeLink®/Auto-Dimming Rearview Mirror\* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press **[F]** button **F**
- To turn automatic dimming OFF, press **[G]** button **G**

**REMINDER:** Mirror indicator light **C** will illuminate when automatic dimming is ON.

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*

## How to Sync Transmitter with HomeLink®\*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B** or **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds.
4. Firmly press and release the programmed HomeLink® button up to three times.

### QUICK TIP

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

## Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

## Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

## Map/Room Lamps

### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button\* is OFF.


### Map Lamp/Room Lamp Operation

Push the lens **A** to turn the map lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

**Map/Room Lamp Button** – Press button **B**, to turn the front and rear room lamps on and off.

**Door Mode Button** – Press button **C** to enable or disable Door Mode. In Door Mode, the map and room lamps turn on when any door is opened. When all doors are locked or the ignition is on, the map and room lamp will turn off immediately.

**Rear Room Lamps** – Press the button **D** to turn the rear passenger lamp ON/OFF.

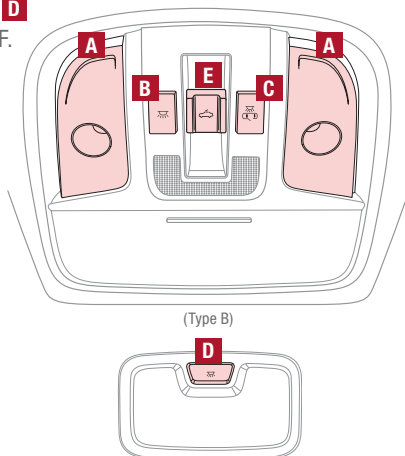

### QUICK TIP

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

## Panoramic Sunroof Operation\*

The sunroof operation is controlled through a multi-directional switch/lever. The ignition or Engine Start/Stop button\* needs to be in the ON position to operate the sunroof.

### To slide the sunshade and sunroof:

- Auto Open: Slide the lever **E** backward to the farthest position and release
- Auto Close (sunroof only): Slide the lever **E** forward to the farthest position and release

### To slide the sunshade only:

- Open: Slide the lever **E** partially backward to the first detent position and release
- Auto Close: Slide the lever **E** partially forward to the first detent position and release

### To slide the sunroof (with sunshade open):

- Open: Slide the lever **E** backward to the first detent position and release
- Close: Slide the lever **E** forward to the first detent position and release to close sunroof glass only. Slide the lever backward to the farthest position and release to close sunroof glass and sunshade

### To tilt the sunroof:

- Raise: Push lever **E** upward.
- Lower: Push lever **E** upward again or slide the lever forward to the first detent position and release

### QUICK TIP

To stop the sunroof/sunshade at any position, push or pull the sunroof control lever in any direction.

### REMINDERS:

- Sunshade needs to remain OPEN while sunroof is open and vehicle is moving
- Sunshade cannot slide when it is in the tilt position or tilt while in an open or slide position

### Power Liftgate\*

#### Opening from Inside the Vehicle:

Press and hold the Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.

#### Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins opening. Press again to close.

**REMINDER:** Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

#### Opening from Outside the Vehicle:

To open Power Liftgate automatically, press the Rear Hatch Release button **C** on exterior of the Liftgate.


Automatically close by pressing the Power Liftgate Close button **D**.

#### Power Liftgate Opening Height Adjustment




Adjust the liftgate height opening to suit user's preference. The height setting of a fully opened liftgate can be adjusted by the following steps:

1. Position the liftgate manually to the preferred height
2. Press Power Liftgate Close button **D** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.

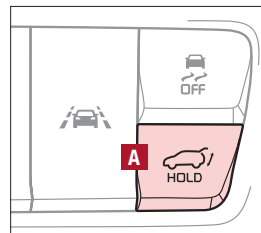

(Buttons located on Driver's Panel)

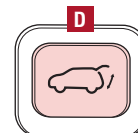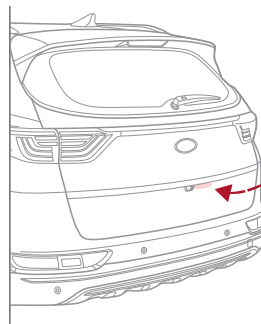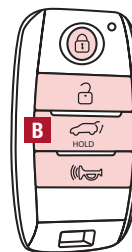

(Located on Liftgate inside lip near latch)

#### QR CODE

##### Power Liftgate Opening Height Adjustment Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](https://www.youtube.com/KiaFeatureVideos)



### Smart Power Liftgate\*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to User Settings in the LCD Instrument Cluster modes.

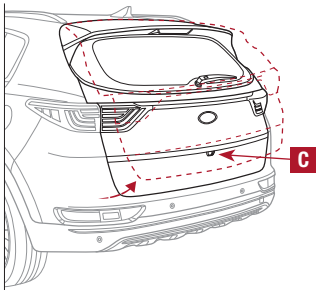

#### QUICK TIPS

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob.
- The open height can be adjusted. For information on how to set open height, see your owner's manual

#### REMINDERS:


- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when:
  - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
  - A door is not locked or closed
  - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

### Liftgate Release Button

Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button

**A** and pull the liftgate up by the handle to open.

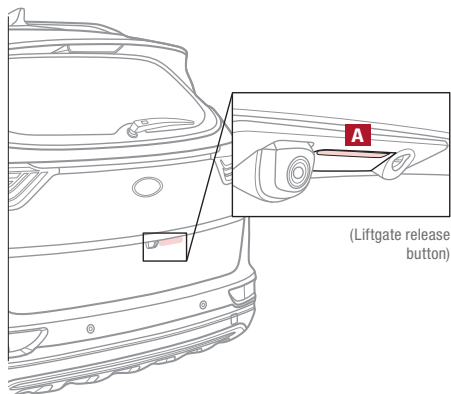

#### QUICK TIPS

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button
- aThe liftgate unlocks automatically, and can then be opened, when the Smart Key fob\* is within close proximity to the vehicle

#### QR CODE

##### Smart Power Liftgate Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Rear-Camera Display\*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Standard Audio System, UVO eServices System\* or UVO eServices with Premium Navigation\* screens while the vehicle is in Reverse.

**The Rear-Camera Display activates when the:**

1. Engine Start/Stop\* button is in the ON position (Green Light)
2. Gear Shift Lever is in the R (Reverse) position

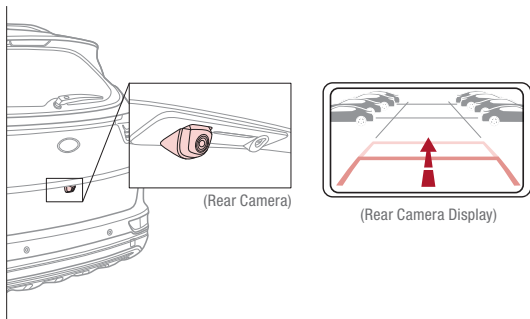

**REMINDER:**


While camera is active, only the volume controls on the Audio System can be operated

*The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display may not detect every object behind the vehicle.*

## Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.


**REMINDER:** Child-Protector Rear Door Lock is located on rear passenger's door jamb.

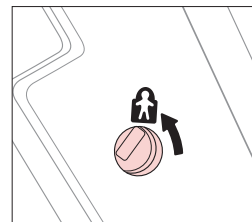

(Located on rear edge of rear passenger doors)

## Sunvisor

Use the sunvisor to shield direct light through the front or side windows. To adjust, move sunvisor left or right.

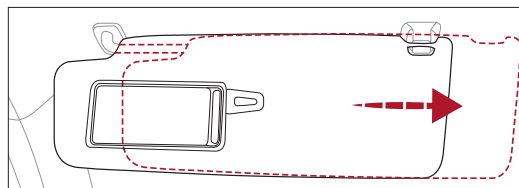

**REMINDEES:**

- Sunvisor may not shield all direct light
- The sunvisor may impair visibility if not adjusted properly
- Do not operate the vehicle if the sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows


## Hood Release Lever and Latch

### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

### Closing the Hood:

Lower the Hood and then press down to securely lock in place.

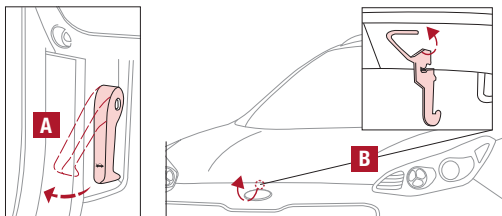

## Tire Mobility Kit\*


The Tire Mobility Kit may temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.

**A** Sealant Bottle

**B** Compressor

**REMINDER:** After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for a maximum distance of up to 120 miles.

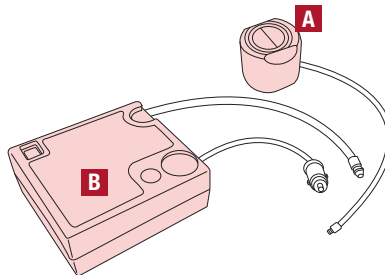

### QR CODE

#### Tire Mobility Kit Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS


- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

## Seat Belts

To properly fasten your seat belts:

1. Insert the belt tongue plate **C** into the buckle **D** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **E**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **F**.

**REMINDER:** For maximum protection, always wear your seat belt.

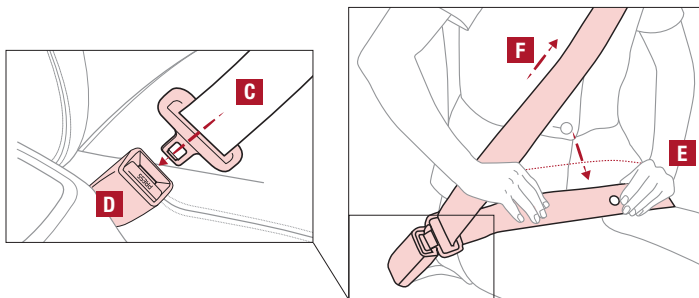

### QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

## Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.


## Occupant Detection System (ODS) / Passenger Airbag Off Indicator

ODS detects the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" indicator will illuminate.

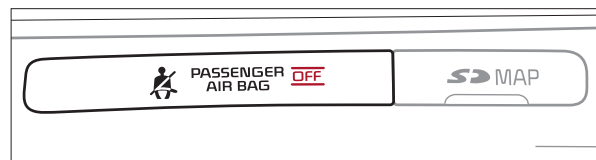

(Type B)

## Normal Maintenance Schedule

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

### 7,500 miles

#### PERFORM:

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE:

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)

#### INSPECT\*:

- Air cleaner filter
- Vacuum hose
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

\*And, if necessary, adjust, correct, clean or replace  
<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended.  
 Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

### 15,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)
- Climate control air filter (for evaporator and blower unit)

#### INSPECT\*

- Air cleaner filter
- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Propeller shaft (AWD)
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

\*And, if necessary, adjust, correct, clean or replace  
<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

### QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your UVO App or your account on MyUVO.com (Vehicles equipped with UVO eServices only – See page 21 for setup information)

## Normal Maintenance Schedule (Continued)

### 22,500 miles

#### PERFORM

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)

#### INSPECT

- Air cleaner filter
- Vacuum hose
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

### 30,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)
- Climate control air filter (for evaporator and blower unit)
- Air cleaner filter

#### INSPECT\*

- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Propeller shaft (AWD)
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Brake fluid
- Fuel cap, fuel lines, fuel hoses and connections
- Fuel tank air filter (if equipped)<sup>2</sup>
- Parking brake
- Vapor hose, fuel filler cap
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles )

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

\*And, if necessary, adjust, correct, clean or replace

<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives. <sup>2</sup>Fuel tank and air filter are considered to be maintenance free surging, loss of power, hard starting problem etc, replace the fuel filter immediately, but periodic inspection is recommended for this maintenance schedule depending on fuel quality.

## Normal Maintenance Schedule (Continued)

### 37,500 miles

#### PERFORM

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)

#### INSPECT\*

- Air cleaner filter
- Vacuum hose
- Rear axle oil (AWD)<sup>2</sup>
- Transfer case oil (AWD)<sup>2</sup>
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

### 45,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)
- Climate control air filter (For evaporator and blower unit)
- Spark plugs (Iridium coated – 2.0 Turbo GDI)

#### INSPECT\*

- Air cleaner filter
- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Propeller shaft (AWD)
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

\*And, if necessary, adjust, correct, clean or replace  
<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

<sup>2</sup>Transfer case oil and rear axle oil should be changed any time they have been submerged in water.

\*And, if necessary, adjust, correct, clean or replace  
<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

## Normal Maintenance Schedule (Continued)

### 52,500 miles

#### PERFORM:

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE:

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)

#### INSPECT\*:

- Air cleaner filter
- Vacuum hose
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

<sup>\*</sup>And, if necessary, adjust, correct, clean or replace  
<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

### 60,000 miles

#### PERFORM

- Add fuel additive<sup>1</sup>
- Rotate tire position

#### REPLACE

- Engine oil and filter (2.0 Turbo GDI, replace every 6,500 miles; 2.4 GDI, replace every 7,500 miles)
- Climate control air filter (for evaporator and blower unit)
- Air cleaner filter

#### INSPECT\*:

- Vacuum hose
- Air conditioning refrigerant
- Brake hoses and lines
- Drive shafts and boots
- Exhaust pipe and muffler
- Front brake disc/pads, calipers
- Propeller shaft (AWD)
- Rear brake disc/pads
- Steering gear box, linkage and boots/lower arm ball joint, upper arm ball joint
- Suspension mounting bolts
- Brake fluid
- Fuel cap, fuel lines, fuel hoses and connections
- Fuel tank air filter (if equipped)<sup>2</sup>
- Parking brake
- Vapor hose and fuel filler cap
- Valve clearance (if equipped)<sup>3</sup> (First 60,000 miles)
- Drive belts (First 60,000 miles and after every 15,000 miles)
- Intercooler, in/out hose, air intake hose (2.0 Turbo GDI, every 7,500 miles)

<sup>\*</sup>And, if necessary, adjust, correct, clean or replace  
<sup>1</sup> If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.  
<sup>2</sup>Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depending on fuel quality. <sup>3</sup>Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.





---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

**Airbags:** For maximum protection, always wear your seat belt.

**Android Auto:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**Apps:** All information contained herein was based upon the latest available information at the time of appstore registration. Descriptions are believed to be correct, and Kia Motors Corporation (KMC) makes every effort to ensure accuracy, however, accuracy cannot be guaranteed. From time to time, KMC may need to update or make changes to the vehicle features and other vehicle information reported in this app. KMC, by the publication and dissemination of this material, does not create any warranties, either express or implied, to any Kia products. Contact your local Kia dealer for the most current information.

**Autonomous Emergency Braking System (AEB) / Forward Collision Warning System:** These systems are not substitutes for safe driving, and may not detect all objects in front of vehicle. Always drive safely and use caution.

**Bluetooth® Wireless Technology:** A compatible *Bluetooth®* wireless technology-enabled cell phone is required to use *Bluetooth®* wireless technology. The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

**Driver Assist Features - Parking Assist System, Blind Spot Detection (BSD) with Lane Change Assist, Rear Cross Traffic Alert (RCTA), Lane Departure Warning System, Rear-Camera Display:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

**Electronic Stability Control (ESC)/Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

**Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.

**Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

**Google Play™ Store** is a trademark of Google, Inc. ©2017 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.

**HomeLink®:** Homelink® is a registered trademark of Gentex Corporation.

**iPhone®/iPod®, Apple CarPlay™:** Apple CarPlay, iPhone, iPod are registered trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

**Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.

**Pandora® internet radio:** Pandora® is a registered trademark of Pandora Media, Inc.

**Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

**Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.

**Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

**SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2017 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

**Power Liftgate/Smart Power Liftgate:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

**Sportmatic®** is a registered trademark of Kia Motors America.

**Steering Wheel Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

**Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if Sunvisor is impairing your visibility.

**Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

**Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on regular basis.

**UVO eServices:** Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.

**UVO eServices app:** App uses your smartphone data service. Normal cellular service rates will apply.

**UVO eServices with Premium Navigation:** Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**Vehicle Diagnostics:** Vehicle Diagnostics checks powertrain, chassis and air bag systems, and is not a substitute for maintenance. See UVO eServices Maintenance Feature or Owner's Manual for maintenance schedule.




## SPORTAGE CUSTOMER DELIVERY CHECKLIST

### KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


Standard Audio System\* – page 20  
For more information, refer to the Owner's Manual.

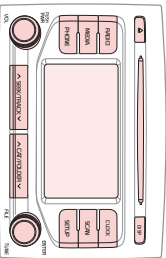


UVO eServices / Android Auto™ / Apple CarPlay® Setup\* – page 21

For further UVO eServices System operations, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 20-23.


UVO eServices System\* – page 22  
For more information, refer to the Car Multimedia System User's Manual.

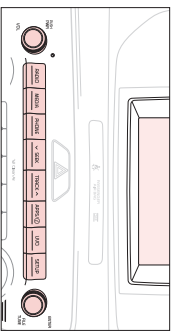


UVO eServices System with Premium Navigation\* – page 23  
For more information, refer to the Car Multimedia System User's Manual.

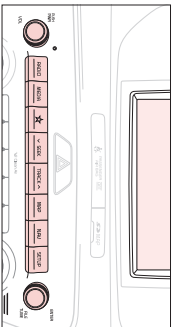

Cruise Control – page 17  
Demonstrate operation

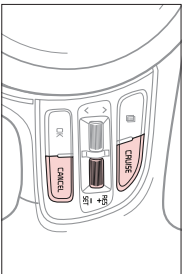

Bluetooth® Wireless Technology – pages 18-19  
Demonstrate operation

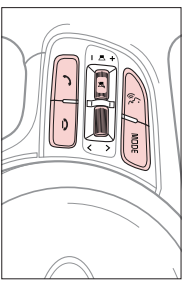

- ECO Mode (Active ECO) – page 8
- Parking Assist System\* – page 30
- Digital Clock – page 24
- Engine Start/Stop Button\* – page 13
- HomeLink® with Auto-Dimming Rearview Mirror\* – page 36
- Panoramic Sunroof Operation\* – page 37
- Passenger Airbag Off Indicator – page 42
- Rear-Camera Display\* – page 40

- Reclining/Folding Rear Seats – page 33
- Seat Warmers / Ventilated Seats\* – page 31
- Smart Key\* – page 34
- Sunvisor – page 40
- Tire Pressure Monitoring System (TPMS) – page 5
- Aux/USB/PdG® Port & Power Outlets – page 24

### DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours & Customer 360° Care
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

\*If equipped

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_ Date: \_\_\_\_\_

Customer: \_\_\_\_\_ Date: \_\_\_\_\_



## SPORTAGE CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_ Mileage: \_\_\_\_\_

Dealership Name: \_\_\_\_\_ Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_


### BEFORE DELIVERY

- Test and confirm "Good Battery" using the Kia GR8-1299 battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)


### KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control – pages 25-26  
Demonstrate Air Flow modes, Defogging and Defrosting Windshield

Automatic\*

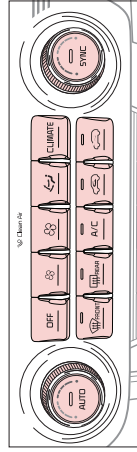


Manual\*

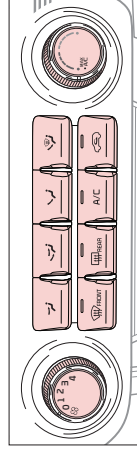

- Windshield Wipers & Washers – page 16

To operate:

- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

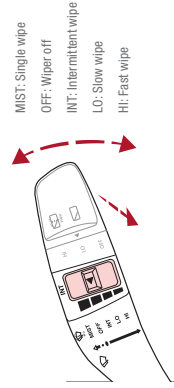


MIST: Single wipe  
 OFF: Wiper off  
 INT: Intermittent wipe  
 LO: Slow wipe  
 HI: Fast wipe

- Rear Wiper & Washer – page 16

To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

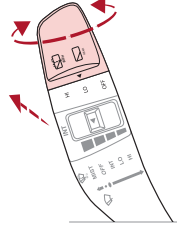

ON: Normal wipe  
 INT: Intermittent wipe\*  
 OFF: Wiper off



© 2017 Kia Motors America, Inc. All rights reserved.

Part Number: UL180-PS-004

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)